


# PRODUCT INSTRUCTIONS

D2 ENCLOSURE SERIES

(CE-0920 CE-0921 CE-0922 CE-0923)

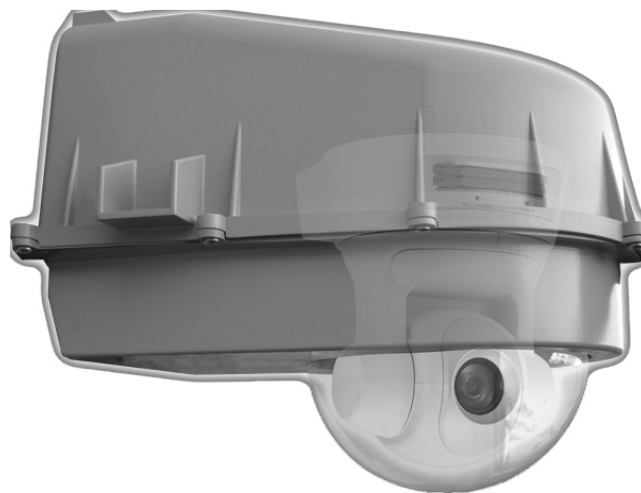

Rev. 110807

## Table of Contents

<b>Limited Warranty Info</b> .....	<b>1</b>
<b>Product Installation Precautions and Warnings</b> .....	<b>2</b>
<b>D2 Component Checklist for camera installation</b> .....	<b>3</b>
Axis 231D/232D Special Bracket .....	4
Recommended Tools.....	4
<b>IP Camera Installation (Mounting Brackets)</b> .....	<b>5-20</b>
Generic Camera.....	5
Axis 213 & Canon VB-C50i-R .....	6
Axis 214 .....	7
Axis 231D/232D .....	8-9
Axis 233D .....	10-11
Canon VB-C300.....	12
Panasonic NS-202 .....	13
Panasonic HCM381/580/581 & HMC280 .....	14
Sony RZ25N .....	15
Sony RZ30N .....	16
Sony RZ50N .....	17
Sony RX-550N.....	18
Toshiba WB-21A .....	19-20
<b>Camera Power Setup</b> .....	<b>21-23</b>
Standard 12VDC Connector .....	21
NON-STANDARD 12VDC CONNECTOR .....	22
24VAC and 24VDC.....	23
<b>Dome Power Setup</b> .....	<b>24-28</b>
12VDC .....	24
24VAC .....	24
110VAC & 220VAC .....	25
Cooldome Installation .....	26-28
<b>D2 Exploded View</b> .....	<b>29</b>
<b>D2 Mounting Template</b> .....	<b>30</b>

**LIMITED WARRANTY FOR DOTWORKZ SYSTEMS INC. PRODUCTS DOTWORKZ SYSTEMS INC.** warrants this Product to be free from defects in material or workmanship, as follows:

PRODUCT CATEGORY	PARTS	LABOR
All Enclosures and Electronics	One (1) Year	One (1) Year
Power Supplies	One (1) Year	One (1) Year
Accessory Brackets	One (1) Year	One (1) Year



During the labor warranty period, to repair the Product, Purchaser will either return the defective product; freight prepaid, or deliver it to Dotworkz Systems Inc. San Diego, CA. The Product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection with a RMA # (Return Materials Authorization number) displayed on the outer box or packing slip. To obtain a RMA# you must contact our Technical Support Team at **866-575-4689**, Dotworkz Systems will return the repaired Product freight prepaid to Purchaser, Dotworkz Systems is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time. After the applicable warranty period, Purchaser must pay all labor and/or parts charges.

**The limited warranty stated in these product instructions is subject to all of the following terms and conditions:**

- 1. NOTIFICATION OF CLAIMS: WARRANTY SERVICE:** If Purchaser believes that the Product is defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to Dotworkz Systems but all claims for warranty service must be made within the warranty period. If after investigation Dotworkz Systems determines that the reported problem was not covered by the warranty, Purchaser shall pay Dotworkz Systems for the cost of investigating the problem at its then prevailing per incident billable rate. No repair or replacement of any Product or part thereof shall extend the warranty period as to the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product parts warranty, whichever is greater
  - 2. EXCLUSIVE REMEDY: ACCEPTANCE:** Purchaser's exclusive remedy and Dotworkz System's sole obligation is to supply (or pay for) all labor necessary to repair any Product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts
  - 3. EXCEPTIONS TO LIMITED WARRANTY:** Dotworkz Systems shall have no liability or obligation to Purchaser with respect to any Product requiring service during the warranty period which is subjected to any of the following: abuse, improper use; negligence, accident, lightning damage or other acts of God (i.e., hurricanes, earthquakes), modification, failure of the end-user to follow the directions outlined in the product instructions, failure of the end-user to follow the maintenance procedures recommended by the International Security Industry Organization, written in product instructions, or recommended in the service manual for the Product. Furthermore, Dotworkz Systems shall have no liability where a schedule is specified for regular replacement or maintenance or cleaning of certain parts (based on usage) and the end-user has failed to follow such schedule; attempted repair by non-qualified personnel; operation of the Product outside of the published environmental and electrical parameters, or if such Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. Dotworkz Systems excludes from warranty coverage Products sold AS IS and/or WITH ALL FAULTS and excludes used Products which have not been sold by Dotworkz Systems to the Purchaser. All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product.
  - 4. PROOF OF PURCHASE:** The purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.
- DISCLAIMER OF WARRANTY EXCEPT FOR THE FOREGOING WARRANTIES, DOTWORKZ SYSTEMS HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY OTHER COMPARABLE STATE STATUTE. DOTWORKZ SYSTEMS HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-VIDEO LARM PRODUCTS OR NON-DOTWORKZ SYSTEMS RECOMMENDED PRODUCTS PURCHASER CHOOSES TO CONNECT TO PRODUCT.**
- LIMITATION OF LIABILITY** THE LIABILITY OF DOTWORKZ SYSTEMS, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL DOTWORKZ SYSTEMS BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.

**IMPORTANT SAFEGUARDS**

- 1. Read Instructions** - All the safety and operating instructions should be read before the unit is operated.
- 2. Retain Instructions** -The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** - All warnings on the unit and in the operating instructions should be adhered to.
- 4. Follow Instructions** -All operating & user instructions should be followed.
- 5. Electrical Connections** - Only a qualified electrician should make electrical connections.
- 6. Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards
- 7. Cable Runs** - All cable runs must be within permissible distance
- 8. Mounting** -This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit. Accordingly:
  - a. Installation should be made by a qualified installer.
  - b. Installation should be in compliance with local codes
  - c. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit. Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit,

<b>CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE COMPONENTS TO WATER OR MOISTURE</b>	
	The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

**SERVICE**

If the unit ever needs repair service, customer should contact Dotworkz Systems +1 (619) 224-LIVE (5483) for return authorization & shipping instructions

**UNPACKING**


- Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper. **Be sure to save**
1. The shipping carton and packaging material. They are the safest material in which to make future shipments of the equipment.
  2. These Installation and Operating Instructions.



## PRODUCT INSTALLATION PRECAUTIONS – WARNINGS – ADDITIONAL INFORMATION (RETAIN THIS DOCUMENT)


- ✓ For technical questions or product returns – call Dotworkz Customer Service (866-575-4689) 7:30 AM to 4:30 PM (PST). The proper technician will contact you as soon as possible.
- The External Nut on All electrical wire feed Glands must be tightened to create a weather tight seal prior to putting D2 in service. Failure to create this seal may result in water incursion into enclosure. This may lead to electrical shock, product failure and damage to electrical systems installed within enclosure, including but not limited to damage to camera, heater and blower circuitry, cooling circuitry and other systems installed in unit.
- All screws on hinged lower must be tightened to create seal on enclosure. Failure to create this seal may result in water incursion into enclosure. This may lead to electrical shock, failure and damage to electrical systems installed within enclosure, including but not limited to damage to camera, heater and blower circuitry, cooling circuitry and other systems installed in unit.
- Do not over tighten any Screws, Stand Offs, or other fasteners on this unit. Failure to heed this warning will cause damage or failure of the D2 enclosure.
- Be sure to take extra care to Protect Lens of unit prior to and during installation, and during service. Suspension packaging box is a handy platform to protect lens and enclosure, while installing camera and accessory electronics before installation. Failure to protect lens will adversely affect product performance.

# D2 Component Checklist

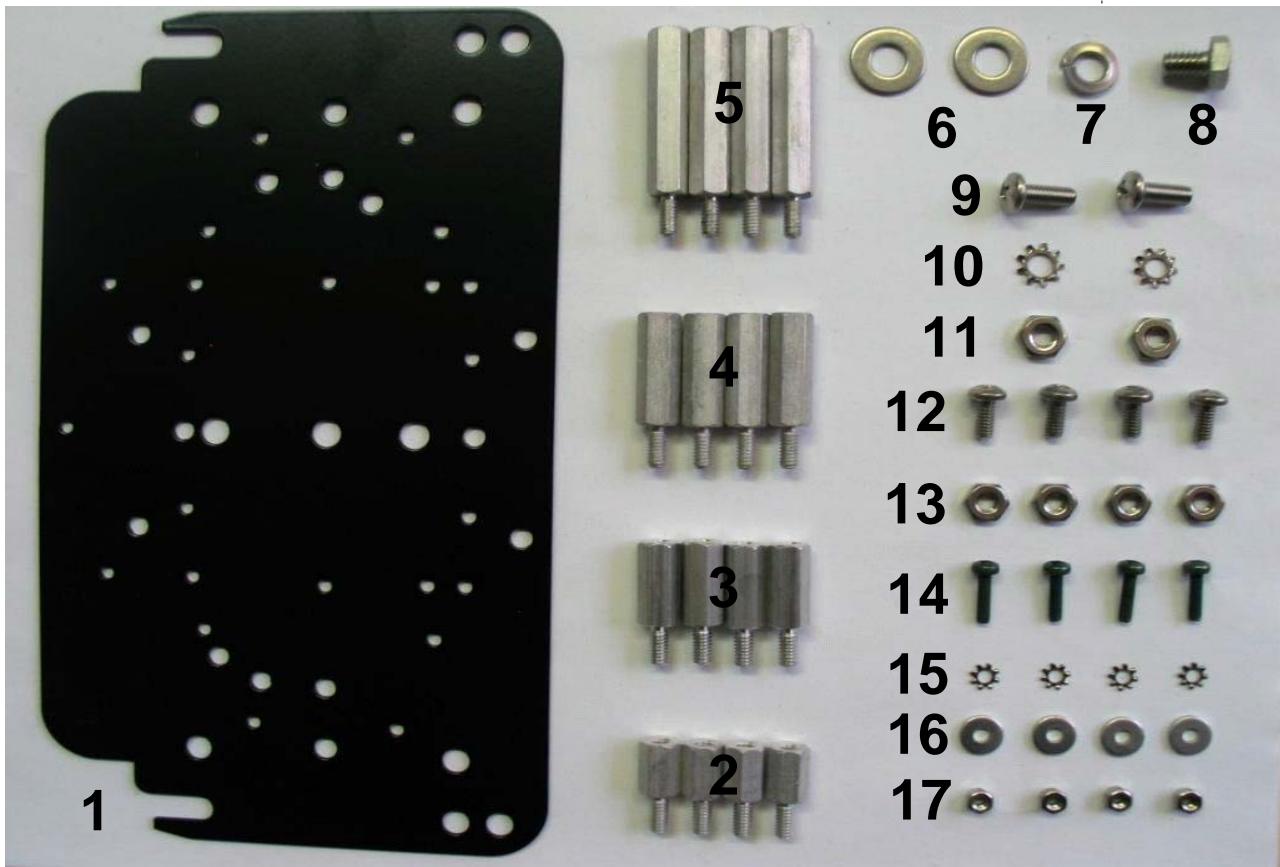



Number	QTY	Description	Type
1	1	Camera Bracket Mount Plate	Aluminum
2	4	.5" Standoffs (8-32)	Aluminum
3	4	.75" Standoffs (8-32)	Aluminum
4	4	1.0" Standoffs (8-32)	Aluminum
5	4	1.5" Standoffs (8-32)	Aluminum
6	2	.25" Washer	Stainless Steel
7	1	.25" Lock Washer	Stainless Steel
8	1	.25"-20 3/8" Long Bolt (7/16 socket/wrench)	Stainless Steel
9	2	#10-32 1/2" Long Screw (Phillips Head)	Stainless Steel
10	2	#10 External Lock Washer	Stainless Steel
11	2	#10-32 Hexnut	Stainless Steel
12	4	#8-32 3/8" Long Screw (Phillips Head)	Stainless Steel
13	4	#8-32 Hexnut	Stainless Steel
14	4	m3-.5 1/2" Long Screw	Aluminum
15	4	m3 External Lock Washer	Stainless Steel
16	4	m3 1/8" Washer	Aluminum
17	4	m3 Locknut	Stainless Steel
Next Page	1	Axis231/ 232 Camera mount Plate*	Aluminum
		* ONLY for Axis 231/ 232 Specific D2 Enclosure	
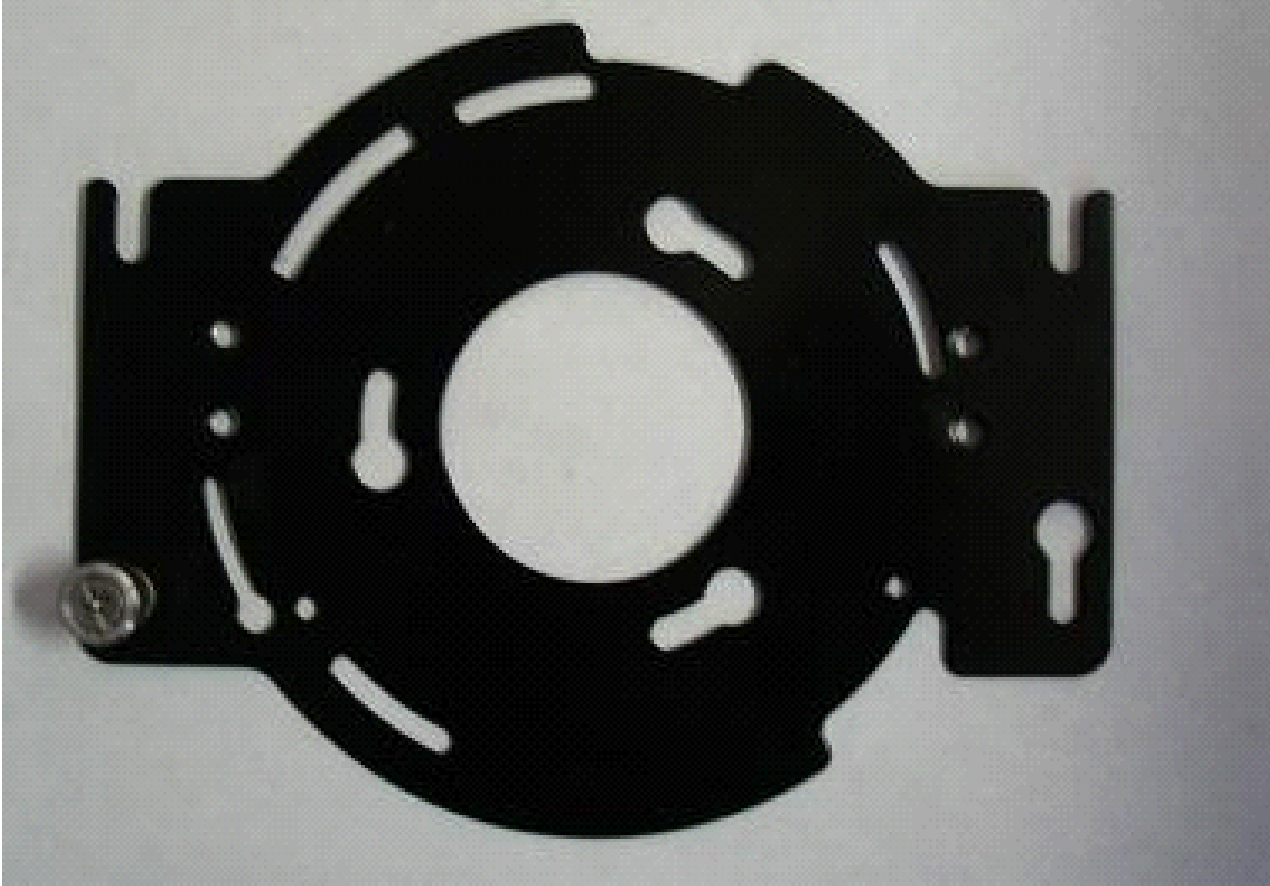
## D2 Component Checklist



**Axis 231D/232D Special Camera Bracket**


### **Tools recommended for mounting camera**

- #1 & #2 Phillips head screw driver 
- #1 or smaller flat head screw driver 
- 3/8 Socket wrench, nut driver, or adjustable wrench
- 5/16 Socket wrench, nut driver, or adjustable wrench
- 7/16 Socket wrench, nut driver, or adjustable wrench
- 7/32 Socket wrench, nut driver, or adjustable wrench
- 11/32 Socket wrench, nut driver, or adjustable wrench




## Generic Camera Installation

### Height Example

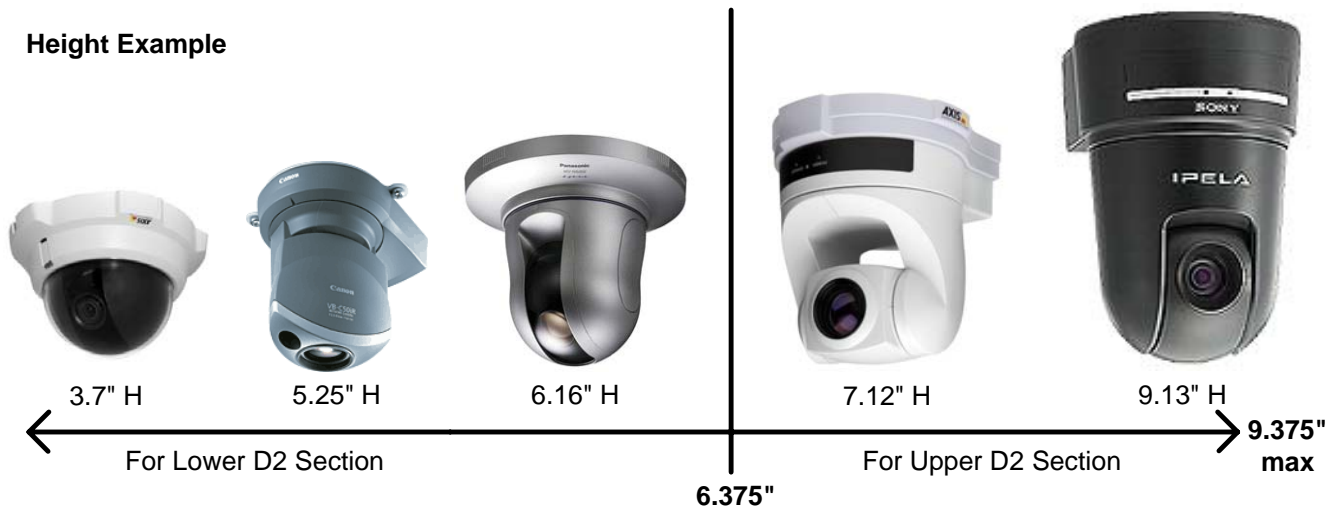

The D2 Enclosure series are designed and engineered for today's most popular standard IP based PTZ cameras. The combination of standoff spacing and camera bracket allows our customers to tailor the D2 Enclosure series to their specific camera needs. We have provided the necessary tools for customization with all of our D2 Enclosure series.


The D2 Enclosure series can accommodate mini-domes and PTZ cameras as tall as 9.375 inches in height. Our standoff combination includes supported heights of **0.50", 0.75", 1.00", 1.25", 1.50", 1.75", 2.00", 2.25", 2.50", 2.75", 3.00", and 3.75"**. These standoff heights can be applied to upper and lower mount locations based on the height of your camera. Most cameras will often utilize a center screw hole for securing the camera onto the plate.

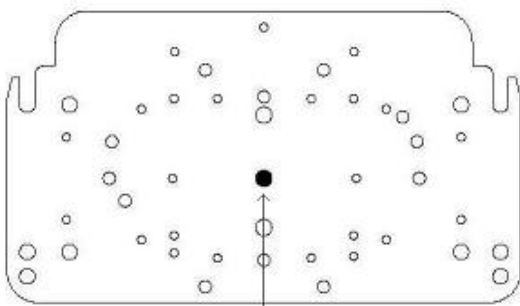

Attach Camera using this hole

If your camera has other mounting capabilities, then center the camera on our camera bracket and check to see if it aligns with any of the pre-made holes on the camera bracket. If it does, great you can use the pre-made holes. If it doesn't, you can mark the holes needed and drill them into the camera plate (steel plate).

*For power, all of our D2 Environmental Enclosure Series come standard with a **12VDC Barrel plug with a center pin**. If your camera does not support this, then check our section on **Camera Power Setup (NON-STANDARD CONNECTOR)** for details.*

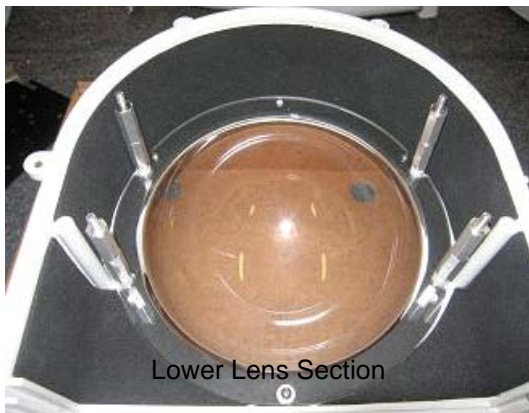

Lower Lens Section



Upper D2 Dome Section


## Installing Camera Bracket

Axis 213 PTZ


Canon VB-C50iR



Required components (see component checklist): Part# 1,2,3,5,6,9,10,& 11

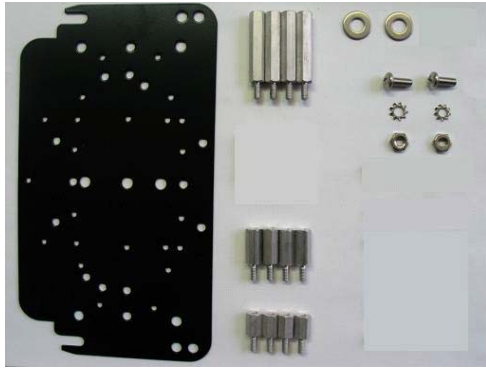

This edge nests in arch at front of D2

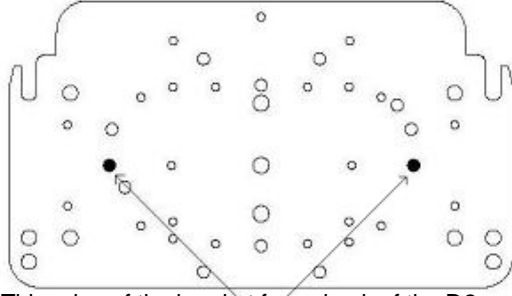


This edge of the bracket faces back of the D2 enclosure


Attach Camera using these 2 holes

1. Install the Axis 213 PTZ or Canon VB-C50iR camera onto the D2 Camera Bracket with (2) #10-32 screws, (2) #10 Lock Washers, and (2) #10 Locknut that are included.

 2. The Axis 213 PTZ or Canon VB-C50iR camera requires a 2" spacing for optimal fit and operation. Use (1) 1.5" standoffs and (1) .5" standoffs that are provided to create a 2" standoff. You will need to create 4 of these with the included hardware.




3. The 2" standoffs will be inserted on the lower lens portion of the D2.

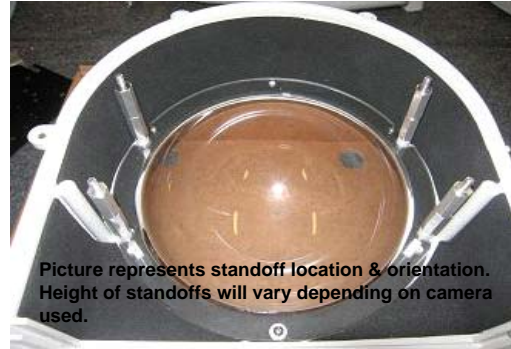

Picture represents standoff location & orientation. Height of standoffs will vary depending on camera used.

4. Now slide the camera bracket with the camera into place to line up with 4 screws from the standoffs.

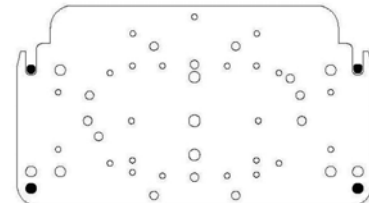

5. Secure the plate by using (4) .75" standoffs to lock the bracket in place. The two front location will require the use of (2) .25" washer.



Picture represents camera orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.




## Installing Camera Bracket


Axis 214 PTZ



Required components (see component checklist): Part # 1,3,5,12,14,15,& 16

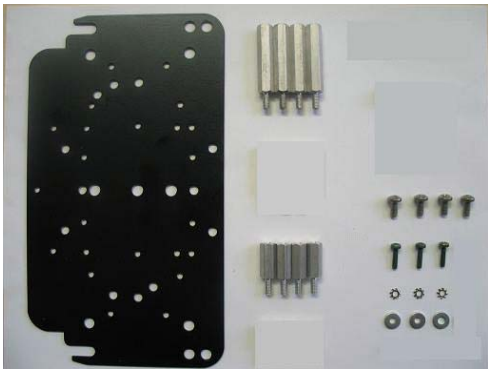


This edge nests in arch at front of D2

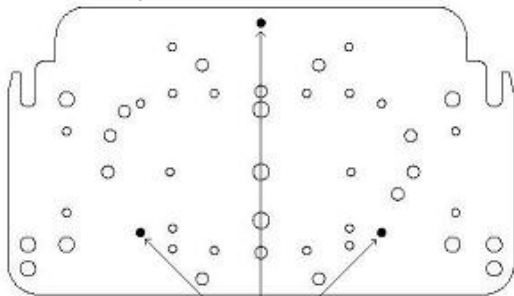

This edge of the bracket faces back of the D2 enclosure  
Attach Camera using these 3 holes

1. Install the Axis 214 PTZ camera onto the D2 Camera Bracket with (3) m3-.5 screws, (3) m3 external lock washers, and (3) m3 1/8" washer that are included.

 2. The Axis 214 PTZ camera requires a **2.25"** spacing for optimal fit and operation. Use (1) 1.5" standoffs and (1) .75" standoffs that are provided to create a **2.25"** standoff. You will need to create 4 of these with the included hardware.



3. The 2.25" standoffs will be inserted on the upper portion of the D2.



Picture represents standoff location & orientation. Height of standoffs will vary depending on camera used.

4. Now slide the camera bracket with the camera into place to line up with 4 screws holes from the standoffs.

5. Use (4) #8-32 screws (Phillips head) to secure the bracket into place.



Tip: Insert (2) #8-32 screws in the front two standoffs to provide a guide to slide the camera bracket into. The last two corner holes should line up and be secured last.




Again, make sure the camera bracket is facing the right direction.


Picture represents camera bracket orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.

## Installing Camera Bracket

**Axis 231D/232D**

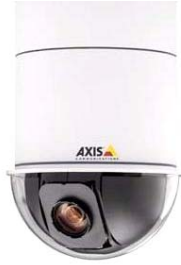


**Required components (see component checklist): Part # 1,2,4,12,13, & Axis 231D/232D Bracket.**

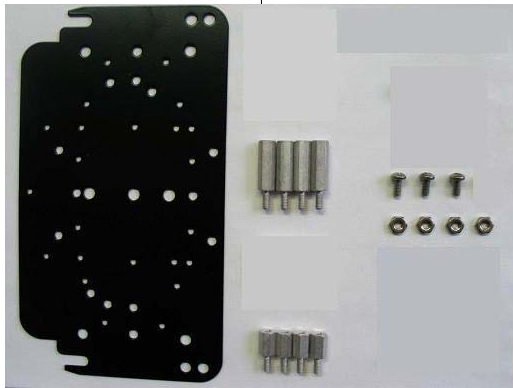

Axis 231D/232D Special Bracket


This edge nests in arch at front of D2

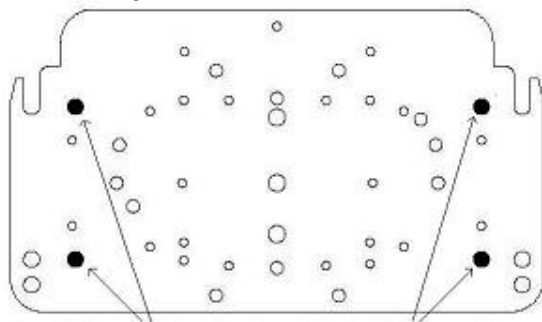

Install 1" standoffs into the selected 4 holes. Secure standoffs with 4 x ( 8/32 nuts). Attach 2nd Bracket on top.

This edge of the bracket faces back of the D2 enclosure

1. To install the Axis 231D/232D PTZ camera onto the D2 Camera Bracket, you must first install (4) 1.0" standoffs in each of the four designated holes. Secure the standoffs with (4) #8-32 hexnuts.

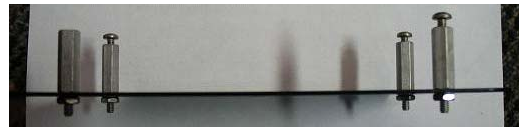

2. Next place the Axis 231D/232D Special Bracket to make sure it lines up. Adjust the hex nut and standoffs when applicable to line up the bracket.



Top View




Side View

3. Then tighten lightly (3) #8-32 3/8" Long screw into three of the corner standoffs about half way. See Picture above. With the bracket holes verified with the standoffs, remove the special Axis 231D/232D bracket from the D2 Bracket.


## Installing Camera Bracket

Axis 231D/232D

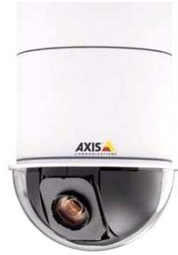


Continued . . . . .

4. Now slide the D2 bracket into place to line up with 4 screws holes from the D2 Enclosure.

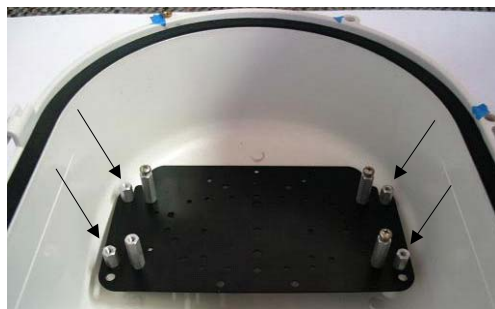

5. Use (4) .5" standoffs to secure the bracket into place. See above picture.

6. Now secure the special Axis 231D/232D bracket to the camera itself. Align the pattern and turn the bracket clockwise to lock. Make sure to connect the Cat5 and terminal block connector before mounting the bracket into the D2 bracket.

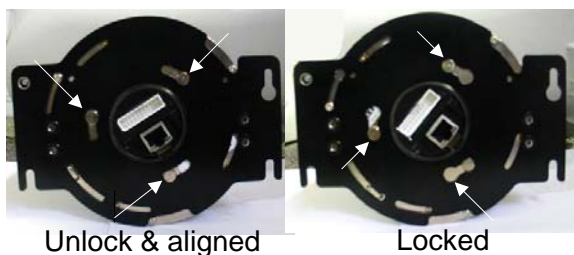

7. Now slide the Special Axis 231D/232D bracket with camera into place to line up with 4 standoffs from the D2 Bracket and tighten the (3)#8-32 screws and then push down and tighten thumb screw.

**\*A new and improved Mounting Bracket Design for the Axis 231D/232D will be coming soon in Q1 of 2008.\***


**Contact Dotworkz at (619) 224-LIVE (5483) for more details or visit us at [www.dotworkz.com](http://www.dotworkz.com)**

## Installing Camera Bracket


Axis 233D PTZ



Required components (see component checklist): Part # 1,2,3,9,10,11,& 12

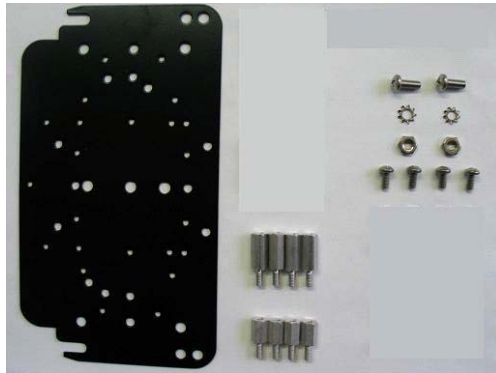


This edge nests in arch at front of D2

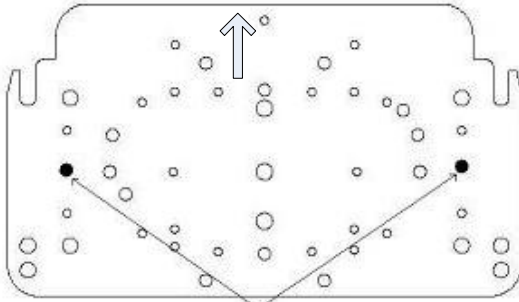


Attach Camera using these 2 holes

This edge of the bracket faces back of the D2 enclosure

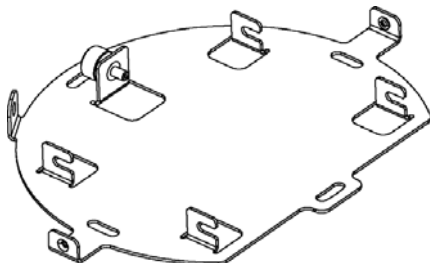

Axis 233D Ceiling bracket that came with the camera.  
**\*This is a required item for installation\***

1. To install the Axis 233D in the D2 Enclosure we must first install the Axis 233D ceiling bracket adapter that came with the camera onto the D2 camera mounting plate.

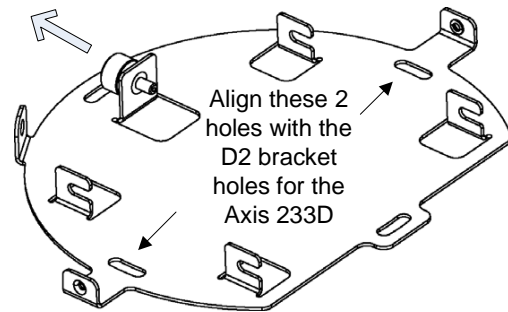


Axis 233D Ceiling bracket that came with the camera. **\*This is a required item for installation\***

2. Do this by aligning the two holes on the D2 camera bracket with the Axis ceiling bracket adapter. Use (2) #10-32 1/2" long screws, (2) #10 lock washers, and (2) #10-32 hex nuts that are included to secure the axis ceiling adapter to the D2 camera bracket.

3. Next follow the Axis 233D installation instruction to secure the camera to the ceiling bracket adapter that is now attached to the D2 Camera Bracket.

 4. The Axis 233D PTZ camera requires a **1.25"** spacing for optimal fit and operation. Use (1) .75" standoffs and (1) .5" standoffs that are provided to create a **1.25"** standoff. You will need to create 4 of these with the included hardware.



5. The 1.25" standoffs will be inserted on the upper portion of the D2.



Picture represents standoff location & orientation. Height of standoffs will vary depending on camera used.

## Installing Camera Bracket

Axis 233D PTZ



Continued . . . . .

6. Now slide the camera bracket with the camera into place to line up with 4 screws holes from the standoffs.

7. Use (4) #8-32 screws (Phillips head) to secure the bracket into place.



Picture represents standoff location & camera bracket orientation. Height of standoffs will vary depending on camera used.

Tip: Insert (2) #8-32 screws in the front two standoffs to provide a guide to slide the camera bracket into. The last two corner holes should line up and be secured last.




Picture represents camera bracket orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.

## Installing Camera Bracket


Canon VB-C300



Required components (see component checklist): Part# 1,2,3,5,6,7,& 8

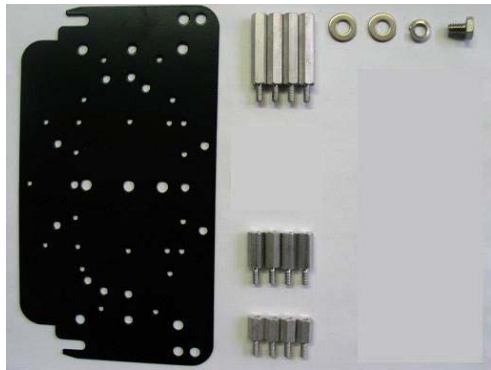

This edge nests in arch at front of D2

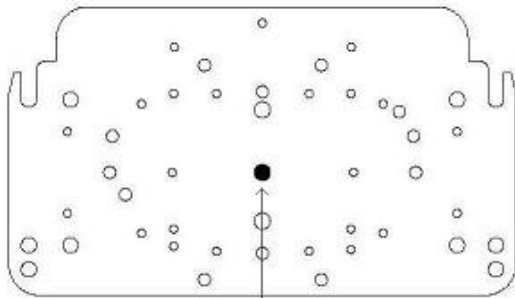


Attach Camera using this hole

This edge of the bracket faces back of the D2 enclosure

1. Install the Canon VB-C300 camera onto the D2 Camera Bracket center hole with (1) .25"-20 3/8" Long Bolt, and (1) .25" Lock Washer that are included.

 2. The Canon VB-C300 camera requires a 2" spacing for optimal fit and operation. Use (1) 1.5" standoffs and (1) .5" standoffs that are provided to create a 2" standoff. You will need to create 4 of these with the included hardware.




3. The 2" standoffs will be inserted on the lower lens portion of the D2.



Picture represents standoff location & orientation. Height of standoffs will vary depending on camera used.

4. Now slide the camera bracket with the camera into place to line up with 4 screws from the standoffs.

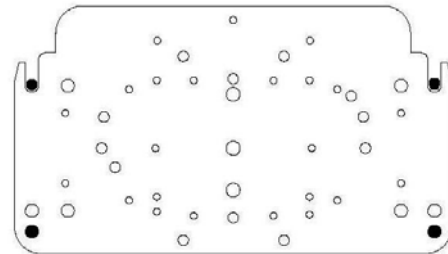

5. Secure the plate by using (4) .75" standoffs to lock the bracket in place. The two front location will require the use of (2) .25" washer.




Picture represents camera orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.

## Installing Camera Bracket


Panasonic NS-202



Required components (see component checklist): Part# 1,2,4,5,6,7,& 8

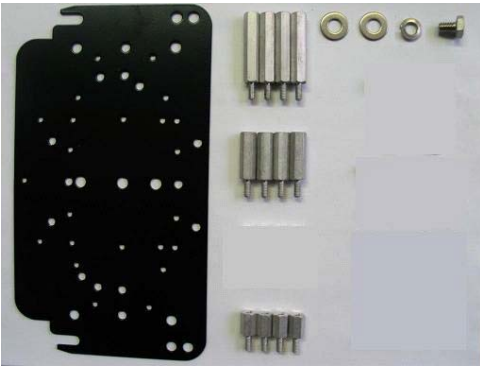

This edge nests in arch at front of D2

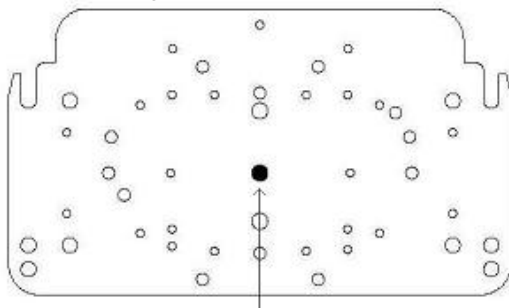


Attach Camera using this hole

This edge of the bracket faces back of the D2 enclosure

1. Install the Panasonic NS-202 camera onto the D2 Camera Bracket center hole with (1) .25"-20 3/8" Long Bolt, and (1) .25" Lock Washer that are included.

 2. The Panasonic NS-202 camera requires a **2.5"** spacing for optimal fit and operation. Use (1) 1.5" standoff and (1) 1.0" standoff that are provided to create a **2.5"** standoff. You will need to create 4 of these with the included hardware.




3. The 2.5" standoffs will be inserted on the lower lens portion of the D2.



Picture represents standoff location & orientation. Height of standoffs will vary depending on camera used.

4. Now slide the camera bracket with the camera into place to line up with 4 screws from the standoffs.

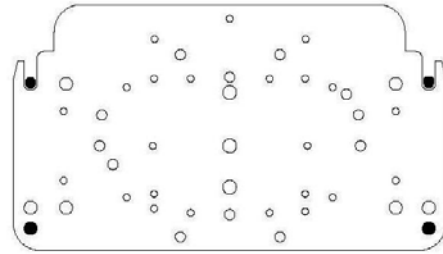

5. Secure the plate by using (4) .5" standoffs to lock the bracket in place. The two front location will require the use of (2) .25" washer.




Picture represents camera orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.

## Installing Camera Bracket


**Panasonic BB-HCM381/  
580/581 & KX-HMC280**



**Required components (see component checklist): Part# 1,2,3,5,6,7,& 8**

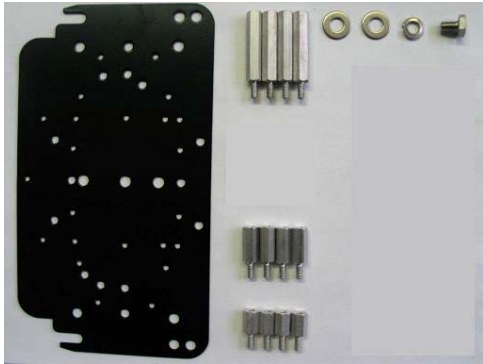

This edge nests in arch at front of D2

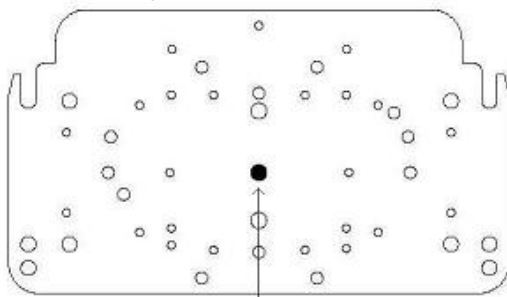


Attach Camera using this hole

This edge of the bracket faces back of the D2 enclosure

1. Install the Panasonic camera onto the D2 Camera Bracket center hole with (1) .25"-20 3/8" Long Bolt, and (1) .25" Lock Washer that are included.

 2. The Panasonic camera requires a **2.0"** spacing for optimal fit and operation. Use (1) 1.5" standoff and (1) .5" standoff that are provided to create a **2.0"** standoff. You will need to create 4 of these with the included hardware.




3. The 2.0" standoffs will be inserted on the lower lens portion of the D2.



Picture represents standoff location & orientation. Height of standoffs will vary depending on camera used.

4. Now slide the camera bracket with the camera into place to line up with 4 screws from the standoffs.

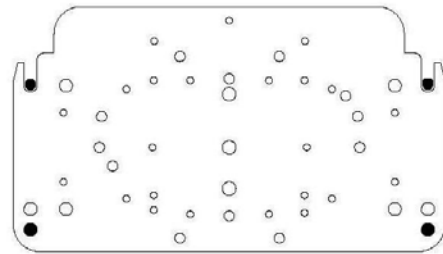

5. Secure the plate by using (4) .75" standoffs to lock the bracket in place. The two front location will require the use of (2) .25" washer.



Picture represents camera orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.




## Installing Camera Bracket


**Sony RZ25N**



**Required components (see component checklist): Part # 1,2,3,12,14,15,& 16**

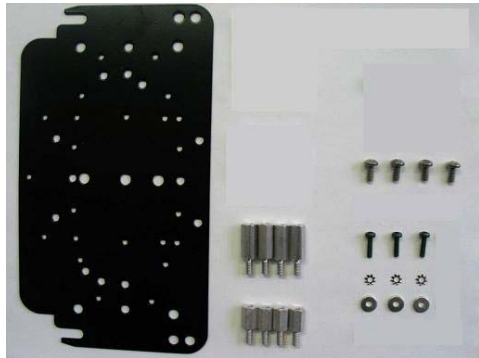

This edge nests in arch at front of D2

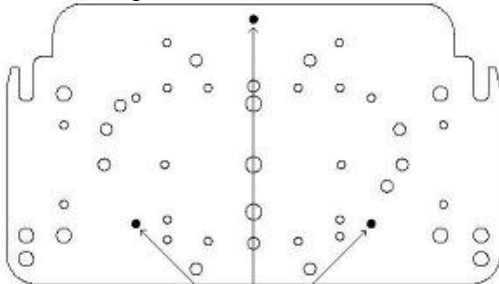


This edge of the bracket faces back of the D2 enclosure  
Attach Camera using these 3 holes

1. Install the Sony RZ25N camera onto the D2 Camera Bracket with (3) m3-.5 1/2" Long screw (3) m3 External Lock Washer, and (3) m3 1/8" Washer that are included.



Tip: Do not screw all the way through. Screw them in enough to catch some thread on all three screw locations. Once all three screw catch enough thread, begin tightening one at a time.

 2. The Sony RZ25N camera requires a **1.25"** spacing for optimal fit and operation. Use (1) .75" standoffs and (1) .5" standoffs that are provided to create a **1.25"** standoff. You will need to create 4 of these with the included hardware.



3. The 1.25" standoffs will be inserted on the upper portion of the D2.




4. Now slide the camera bracket with the camera into place to line up with 4 screws holes from the standoffs.

5. Use (4) #8-32 screws (Phillips head) to secure the bracket into place.



Tip: Insert (2) #8-32 screws in the front two standoffs to provide a guide to slide the camera bracket into. The last two corner holes should line up and be secured last.

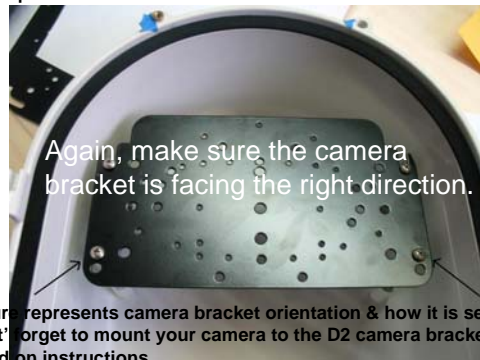


## Installing Camera Bracket


**Sony RZ30N**



**Required components (see component checklist): Part # 1,2,3,6,7,8,12, & 14**

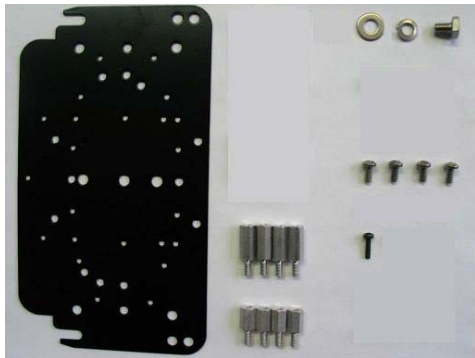

This edge nests in arch at front of D2

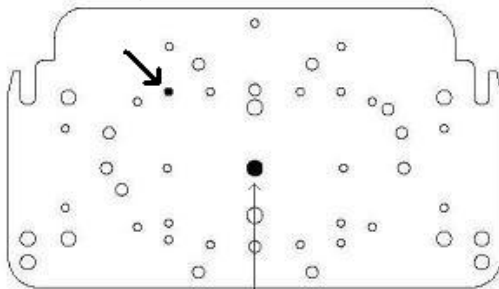

Attach Camera using this hole

 
This edge of the bracket faces back of the D2 enclosure

1. Install the Sony RZ30N camera onto the D2 Camera Bracket center hole with (1) .25"-20 3/8" Long Bolt, (1) .25" Lock Washer, and (1) .25" Washer that are included.

2. Use (1) m3-.5 1/2" long screw in the second corner hole to prevent the Sony RZ30N from moving left and right. The screw will protrude out from the bracket about 1/4". The Sony RZ30 should have a threaded hole that will align with the second corner hole.



3. The Sony RZ30N camera requires a **2.25"** spacing for optimal fit and operation. Use (1) 1.5" standoffs and (1) .75" standoffs that are provided to create a **2.25"** standoff. You will need to create 4 of these with the included hardware.



4. The 2.25" standoffs will be inserted on the upper portion of the D2.



Picture represents standoff location & orientation. Height of standoffs will vary depending on camera used.

5. Now slide the camera bracket with the camera into place to line up with 4 screws holes from the standoffs.

6. Use (4) #8-32 screws (Phillips head) to secure the bracket into place.



Tip: Insert (2) #8-32 screws in the front two standoffs to provide a guide to slide the camera bracket into. The last two corner holes should line up and be secured last.



Again, make sure the camera bracket is facing the right direction.


Picture represents camera bracket orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.

## Installing Camera Bracket


**Sony RZ50N**



**Required components (see component checklist): Part # 1,4,5,6,7,8,& 12**

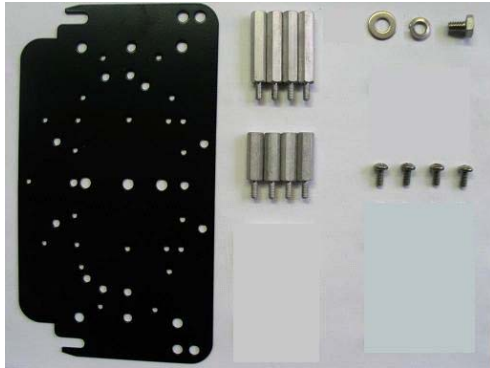

This edge nests in arch at front of D2

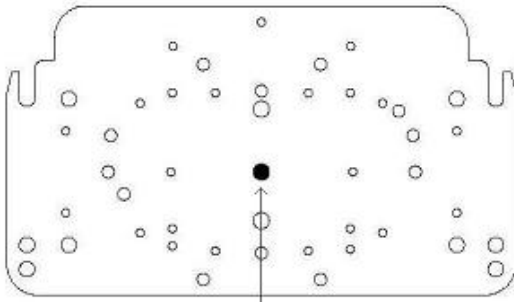


Attach Camera using this hole

This edge of the bracket faces back of the D2 enclosure

1. Install the Sony RZ50N camera onto the D2 Camera Bracket center hole with (1) .25"-20 3/8" Long Bolt, (1) .25" Lock Washer, and (1) .25" Washer that are included.

 2. The Sony RZ50N camera requires a **2.5"** spacing for optimal fit and operation. Use (1) 1.5" standoffs and (1) 1" standoffs that are provided to create a **2.5"** standoff. You will need to create 4 of these with the included hardware.



3. The 2.5" standoffs will be inserted on the upper portion of the D2.



Picture represents standoff location & orientation.  
Height of standoffs will vary depending on camera used.

4. Now slide the camera bracket with the camera into place to line up with 4 screws holes from the standoffs.

5. Use (4) #8-32 screws (Phillips head) to secure the bracket into place.



Tip: Insert (2) #8-32 screws in the front two standoffs to provide a guide to slide the camera bracket into. The last two corner holes should line up and be secured last.



Again, make sure the camera bracket is facing the right direction.


Picture represents camera bracket orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.

## Installing Camera Bracket


**Sony RX550N**



**Required components (see component checklist): Part # 1,2,12,14,15, & 16**

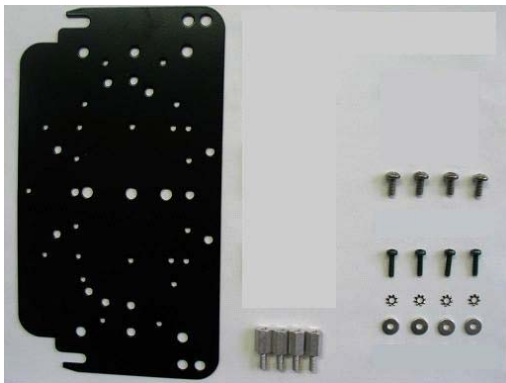

This edge nests in arch at front of D2

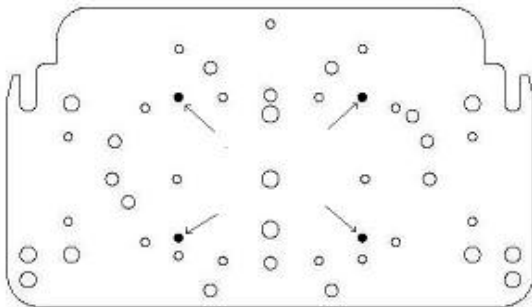

Attach Camera using these 4 holes.

This edge of the bracket faces back of the D2 enclosure

1. Install the Sony RX550N camera onto the D2 Camera Bracket with (4) m3-.5 1/2" long screws, (4) m3 external lock washer, and (4) m3 1/8" washer that are included.

2. The Sony RX550N camera requires a .5" spacing for optimal fit and operation. Use (4) .5" standoffs that are included.



.5"

3. The .5" standoffs will be inserted on the upper portion of the D2.



Picture represents standoff location & orientation.  
Height of standoffs will vary depending on camera used.

4. Now slide the camera bracket with the camera into place to line up with 4 screws holes from the standoffs.

5. Use (4) #8-32 screws (Phillips head) to secure the bracket into place.



Tip: Insert (2) #8-32 screws in the front two standoffs to provide a guide to slide the camera bracket into. The last two corner holes should line up and be secured last.



Again, make sure the camera bracket is facing the right direction.


Picture represents camera bracket orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.

## Installing Camera Bracket


Toshiba WB21A



**Required components (see component checklist): Part # 1,2,3,4,5,6,14,15,16,& 17**

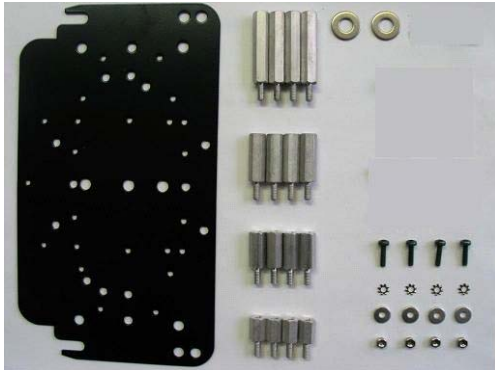


This edge nests in arch at front of D2

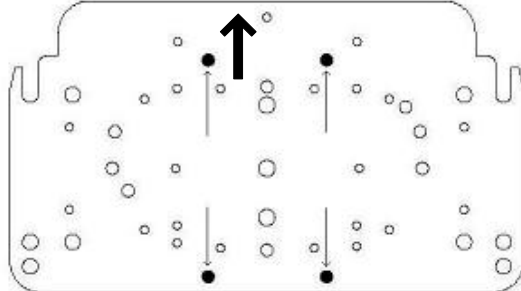


Attach Camera using these 4 holes.

This edge of the bracket faces back of the D2 enclosure

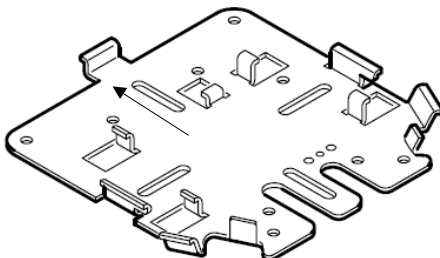

Toshiba WB21A Ceiling bracket that came with the camera.  
**\*This is a required item for installation\***

1. To install the Toshiba WB21A in the D2 Enclosure we must first install the Toshiba WB21A ceiling bracket adapter that came with the camera onto the D2 camera mounting plate.

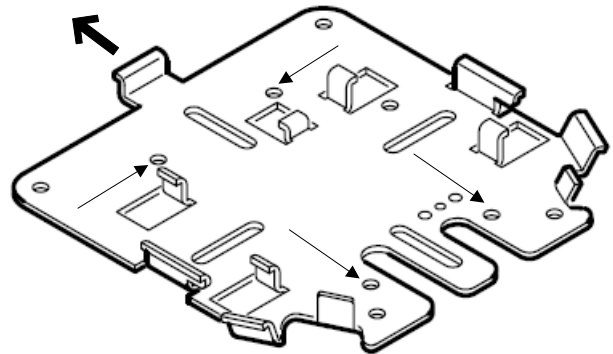


Align these 4 holes with the D2 bracket holes for the Toshiba WB21A

2. Do this by aligning the four holes on the D2 camera bracket with the Toshiba ceiling bracket adapter. Use (4) m3-.5 1/2" long screws, (4) m3 external lock washer, (4) m3 1/8" washers, and (4) m3 lock nuts that are included to secure the toshiba ceiling adapter to the D2 camera bracket.



3. Next follow the Toshiba WB21A installation instruction to secure the camera to the ceiling bracket adapter that is now attached to the D2 Camera Bracket.

 4. The Toshiba WB21A PTZ camera requires a **2.75"** spacing for optimal fit and operation. Use (1) 1.5" standoff, (1) .75" standoff, and (1) .5" standoffs that are provided to create a **2.75"** standoff. You will need to create 4 of these with the included hardware.




## Installing Camera Bracket

Toshiba WB21A



Continued . . . . .

5. The 2.75" standoffs will be inserted on the lower portion of the D2.

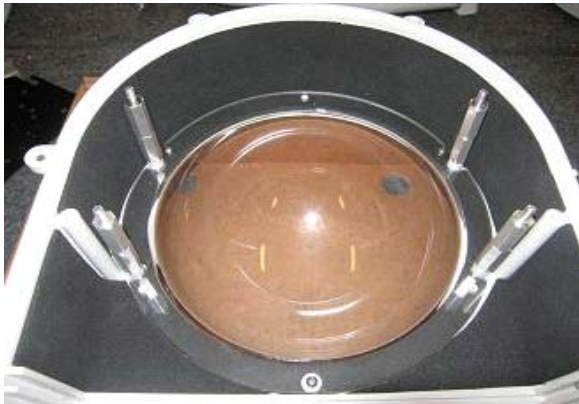


Picture represents standoff location & orientation.  
Height of standoffs will vary depending on camera used.



Picture represents camera bracket orientation & how it is secured. Don't forget to mount your camera to the D2 camera bracket based on instructions.


6. Now slide the camera bracket with the camera into place to line up with 4 screws from the standoffs.

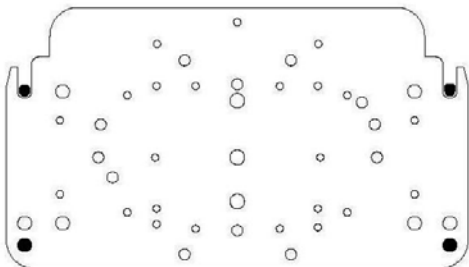


7. Secure the plate by using (4) 1.0" standoffs to lock the bracket in place. The two front location will require the use of (2) .25" washer. See picture.

## Camera Power Setup (STANDARD 12VDC CONNECTOR)

All D2 environmental enclosures come standard with a **12VDC Right Angle Barrel Plug (3.3mm x 5.5mm with a 1mm center pin)** for majority of the IP cameras on the market.

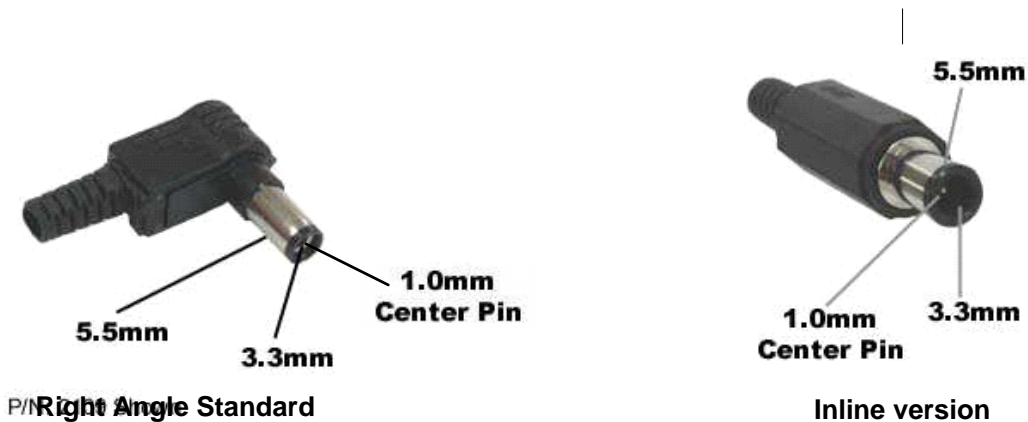

If your IP camera's power connector is different but still accepts up to ~ **13VDC** for power, please see our section on **Camera Power Setup (NON-STANDARD CONNECTOR)** for instructions on how to power your camera. Below are pictures of typical NON-STANDARD CONNECTORS.

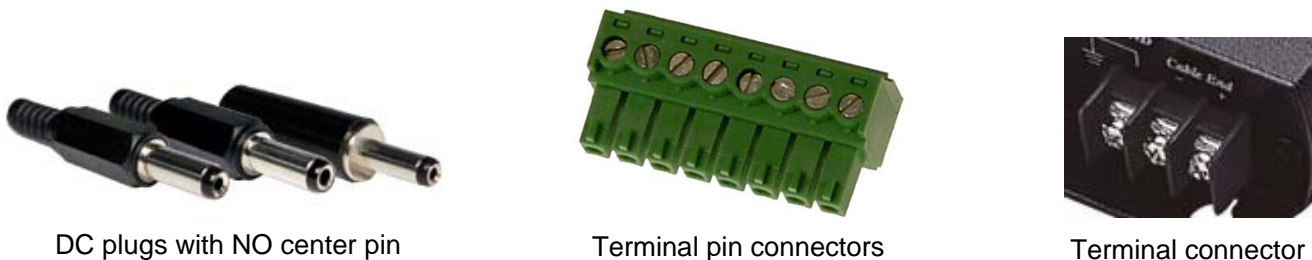

If your IP camera's power requirements are for **24 VAC ONLY**, please make sure that the D2 Environmental dome that you purchased is a **24VAC version**. Cameras that run on **24VAC** will not work with the **12VDC** and **110-240VAC** versions of our D2 Environmental domes.

**\*NOTE:** *The only way a 24VAC camera will work on our 12VDC and 110-240VAC dome is if you, the customer, provide a **separate power lead** into the dome for your camera. We have designed our domes to be simple and efficient when it comes to powering our environmental component and camera. So when it comes to cameras with 24VAC power requirements, we **–RECOMMEND–** the **24VAC versions** of our **Environmental domes** for proper installation.*


## Camera Power Setup (NON-STANDARD 12VDC CONNECTOR)

Below are the pictures of the PCB board for the following D2 Environmental Enclosures. The picture identifies where the 12VDC output terminals are. All D2 environmental enclosures come standard with a **12VDC Right Angle Barrel Plug (3.3mm x 5.5mm with a 1mm center pin)** for majority of the IP cameras on the market. For the **Sony RZ25N** and **RX550N** that uses terminal connectors for their power, you will need to remove the included camera plug and replace it with the 18 AWG gauge wire lead that was provided. Use a mini-flat head screw driver to loosen or tighten the terminals. The positive and negative terminals are printed on the PCB.


*For 12VDC IP cameras that utilizes non-standard barrel plugs without a center pin, cut approximately 18-24 inches from the camera power supply. Use a multi-meter to determine the positive and negative leads and attach it to the proper terminals.*

**\*This process is only for cameras that DO NOT take a standard 12VDC Right Angle Barrel Plug (3.3mm x 5.5mm with a 1mm center pin).**

**D2 Heater-Blower PCB**

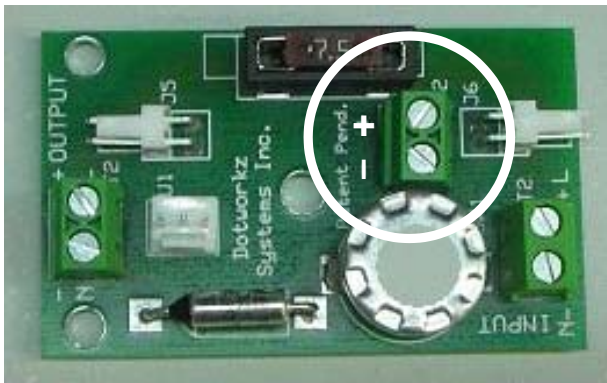

**D2 Tornado PCB**

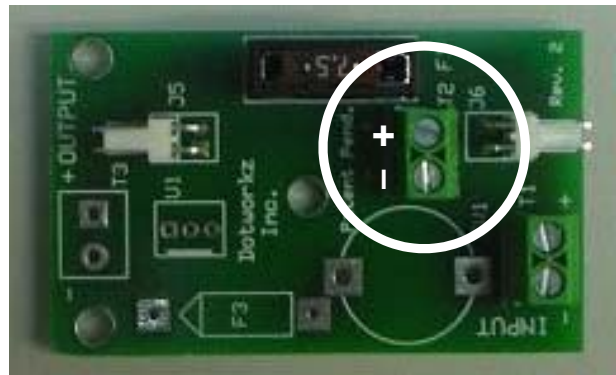

**D2 Ring of Fire PCB**




**D2 CoolDome PCB**





## Camera Power Setup (24VAC)

Below is a picture of the PCB board for all 24VAC versions of the D2 Environmental Enclosures. The picture identifies where the 24VAC output terminal is and power lead. All of our 24VAC versions of the D2 Environmental Enclosures also have a 12VDC plug if needed.

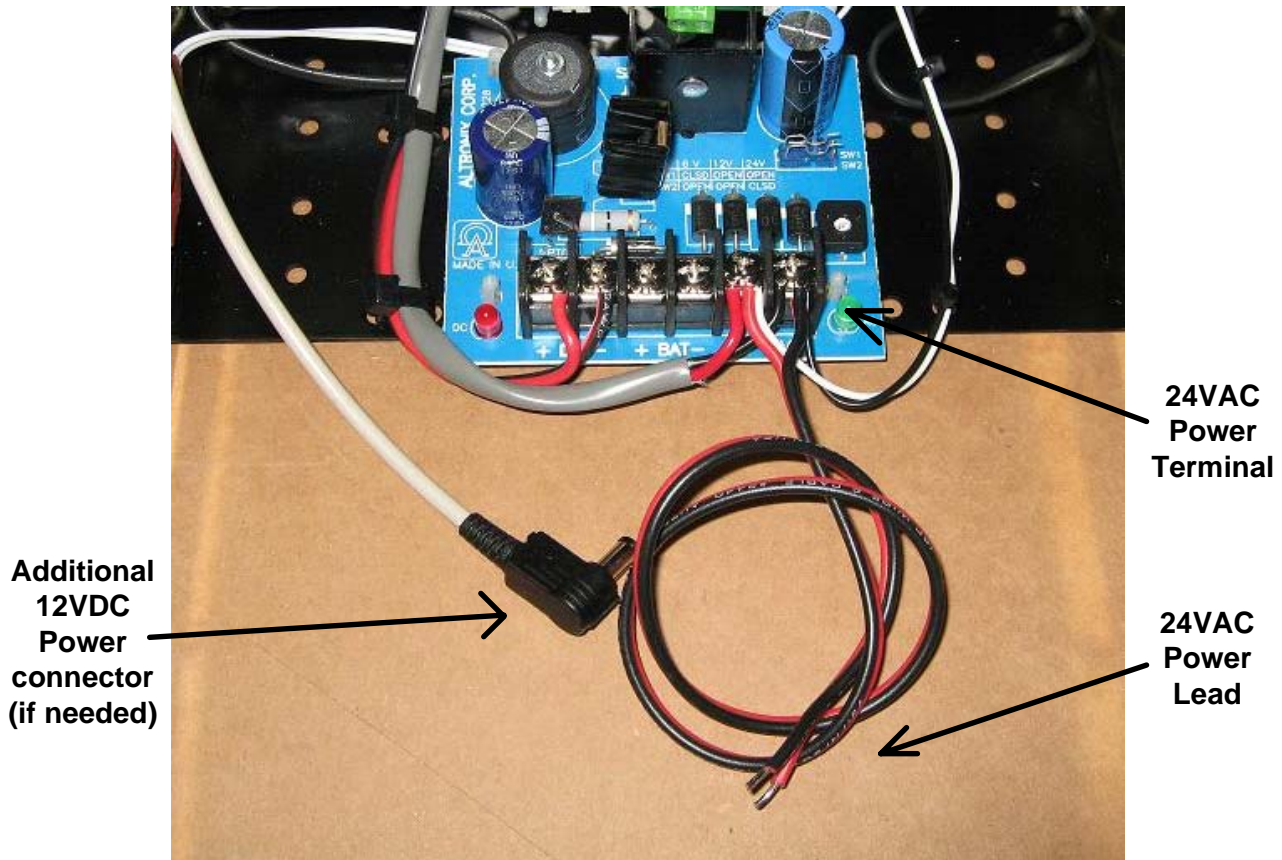


## Camera Power Setup (24VDC)

24VDC power for an IP camera is available in our 110VAC versions of the Heater Blower, Tornado, and Ring of Fire. This special versions work great for cameras that take 24VDC such as the Axis 233D PTZ camera. The enclosure will have a power lead labeled with the 24VDC on it for easy installation. \*Note these enclosures still need 110VAC power going into it. We have a step down converter in the dome that outputs out 24VDC for the IP camera. Please visit [www.dotworkz.com](http://www.dotworkz.com) for more details.


## 12 VDC Dome Systems

Dotworkz does NOT provide an integrated Power Supply in our 12 VDC Heater Blower, Dual Blower, and Ring of Fire Systems

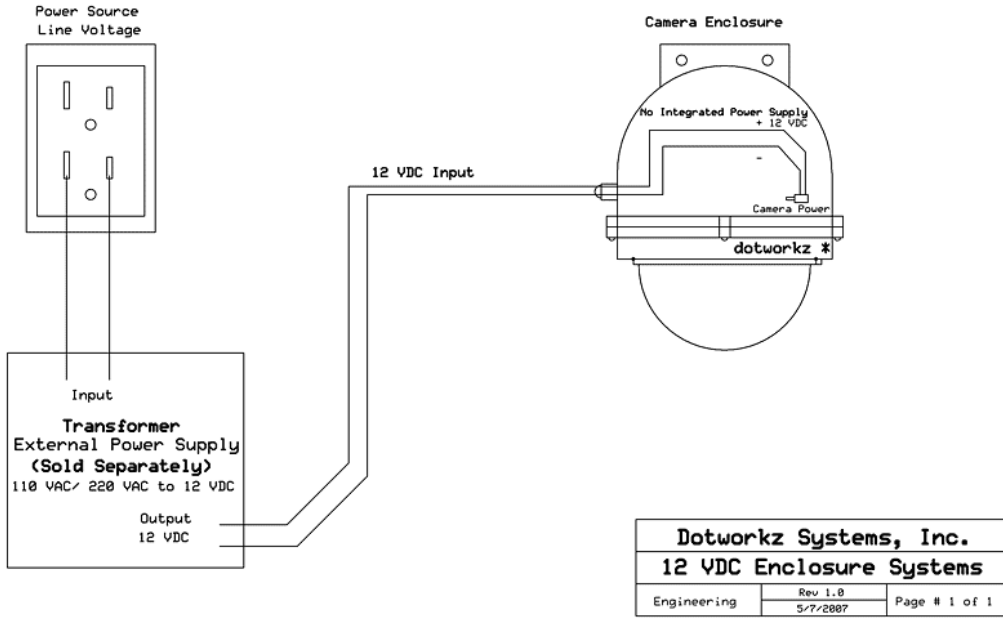


## 24 VAC Dome Systems

Dotworkz provides an integrated Stepdown Power Supply in our Heater Blower, Dual Blower, and Ring of Fire Systems

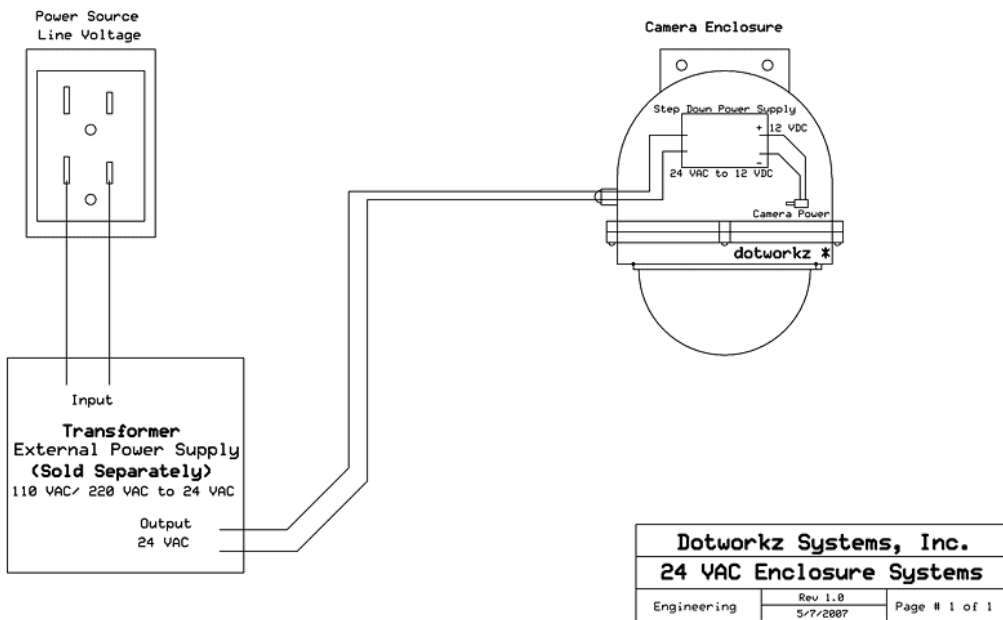

## 110 VAC Dome Systems

Dotworkz provides an integrated Stepdown Power Supply in our Heater Blower, Dual Blower, and Ring of Fire Systems

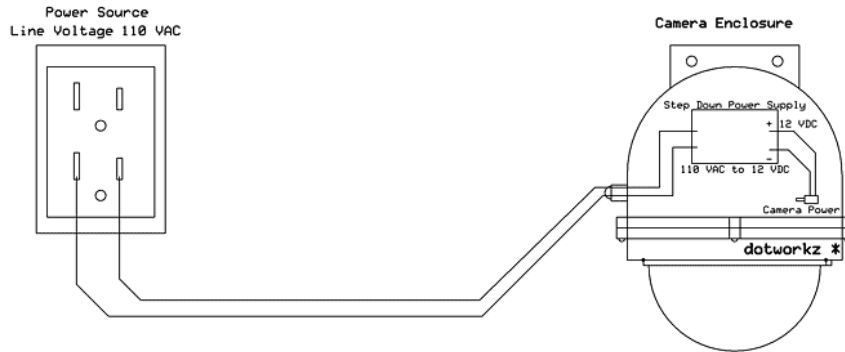


Note: All Dotworkz High Voltage Systems provide Ground wire for safety  
Not shown in this drawing

<b>Dotworkz Systems, Inc.</b>		
<b>110 VAC Dome Systems</b>		
Engineering	Rev 1.8 5/7/2007	Page # 1 of 1

## 220 VAC Dome Systems


Dotworkz provides an integrated Stepdown Power Supply in our Heater Blower, Dual Blower, and Ring of Fire Systems

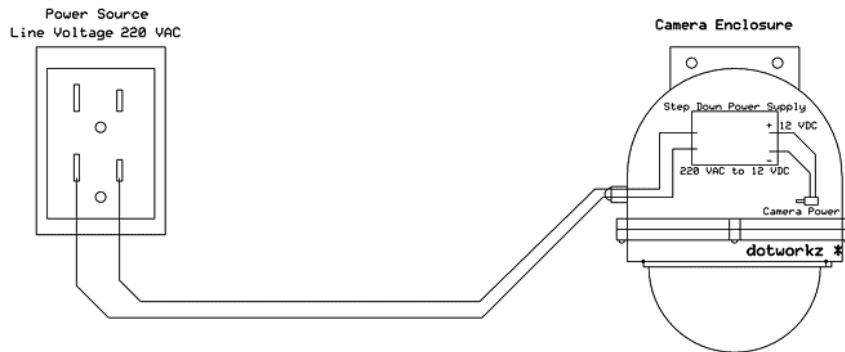

Note: All Dotworkz High Voltage Systems provide Ground wire for safety  
Not shown in this drawing

<b>Dotworkz Systems, Inc.</b>		
<b>220 VAC Dome Systems</b>		
Engineering	Rev 1.8 5/7/2007	Page # 1 of 1

## Cool Dome Installation Guidelines: The 400 BTU - D2

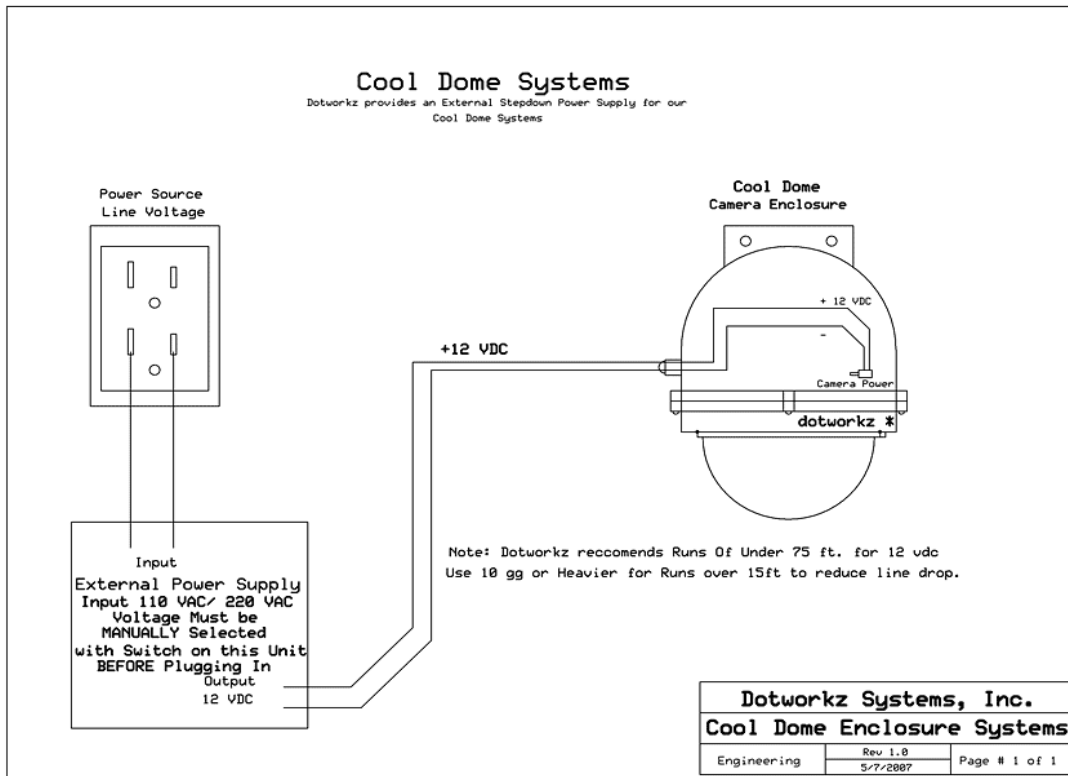

**Never apply high voltage power directly to the D2 Cool Dome inputs.**

 
The internal circuitry of the D2 was engineered for 12 VDC input ONLY.

But, we do supply each Cool Dome with an external high voltage power supply, the Dotworkz/ MeanWell S-250-12 Power supply, which converts the power to a low voltage 12 VDC output. This allows you to use high voltage to indirectly power the Cool Dome. It is a highly durable, heat tolerant, A/C to D/C Power converter. The input to the provided external power supply follows standard A/C wiring conventions, and is to be mounted nearby indoors, or outdoors in a weather rated enclosure. . It can be powered by single phase 110 VAC, or 220 VAC. It must be manually set to the correct input voltage range (110 VAC or 220 VAC), by moving and setting the slide switch on the side of the power supply, *before* powering up. **The S-250-12 is pictured below on the side of its Terminal Block.**



Please **do not** attempt to mount the S-250-12 within the Cool Dome itself, due to the large amount of heat created by the power supply, will greatly reduce the cooling effect of the D2 Cool Dome's heat pump.

**High Voltage A/C Typical Conventions, single phase:**

<u>Color</u>	<u>Symbol</u>	<u>Description</u>
Black	L	Line Conductor, aka: "Hot" wire
White	N	Neutral Conductor
Green	G 	Ground Wire, Chassis Ground

**Low Voltage conventions, D/C, direct current:**

<u>Color</u>	<u>Symbol</u>	<u>Description</u>
Red	V+	Positive conductor
Black	V-	Negative conductor

The output of the S-250-12 external power supply can be adjusted up and down 10%. It is recommended to keep the voltage at the D2 adjusted to at least 11.5 VDC, but no more than 13.0 VDC. By running the enclosure higher than 13.0 VDC may cause premature component failure. It is best to check and tune the voltage at the Cool Dome with a voltage meter at the time of installation, and use the adjustment screw, located on the S-250-12, to the right side of the terminal screws, to raise or lower the output voltage.

For all outdoor wiring, always use an outdoor rated wiring, or wiring in weather rated conduit, out from power supply, into the Cool Dome. Follow all local and applicable wiring and safety standards.

Please **keep D/C wire runs short**, to reduce low voltage line drop. Also, the suggested wiring gauge table is provided to further prevent low voltage line drop, and to guide you in selecting the proper wire gauge for the dc run from the power supply to the cool dome.

It is always advisable to use a drip loop on all wiring going directly into the D2 enclosure, to reduce the risk of water entering and damaging internal components. All fittings and seals must be firmly tightened and sealed, before placing the D2 in service.

Inside the D2 we have provided a convenient Screw cage clamp style terminal blocks to wire the 12 VDC positive (V+), and the 12 VDC Negative (V-) terminal. Please strip the insulation off the last 3/8" of the wires and fasten wiring securely to terminal, using a small blade screwdriver to tighten the caging mechanism on the terminal blocks. **Please be especially attentive to wire using the Proper Polarity, so as not to damage the internal components, or damage your camera within.**

**12 amps**  
**12 Volts D/C Voltage Drop for Dotworkz D2 Cool Dome**

Wire gauge In AWG	Distances in ft.						
	1.0 ft	10.0	20.0	30.0	40.0	50.0	100.0
4.0	0.006	0.062	0.124	0.186	0.248	0.310	0.620
6.0	0.010	0.098	0.196	0.294	0.392	0.490	0.980
AWG 8.0	0.016	0.156	0.312	0.468	0.624	0.780	1.560
10.0	0.025	0.248	0.496	0.744	0.992	1.240	2.480
12.0	0.040	0.400	0.800	1.200	1.600	2.000	4.000
14.0	0.063	0.628	1.256	1.884	2.512	3.140	6.280

**Gauge Multiplier  
Vdc drop/ft**

**Voltage drop (vdc)/ distance (ft)**



Acceptable line drop for Wire Gauge and Distance



Excessive line drop for Wire Gauge and Distance

Above includes 9 amps @ 12 vdc for D2 Cool Dome typical current draw, with 3 amps for max. camera & accessory draw.

**Voltage Drop Equation to Determine Minimum Wire Gauge to be Used on DC run Between the S-250-12 Power Supply to D2 Cool Dome.**

**Vd = voltage drop for 12vdc run (nominal)**

**D = distance of run (ft)**

**Vgm = gauge multiplier (vdc drop, per foot)**

$$\mathbf{Vd = D \times Vgm}$$

Where we conservatively try to keep the voltage drop under 1.2 vdc over the low voltage direct current run. These multipliers are approximate, and voltage drop (Vd) is maximum at full 12 amp load at 12 vdc. This voltage drop is under fully loaded condition, when the cooling unit is engaged, and camera and all accessories are on. Voltage drop will be much less, if the current is not at full load.

**Reusable Desiccant Canister**

The reusable desiccant canister contains forty grams of silica gel. This will prevent moisture buildup inside the Cool Dome. Make sure to remove the canister, located below the camera mount, from its packaging before the Cool Dome is put to use. There is a small window on the canister (white circle). Ensure that the crystals are blue. Occasionally, especially in humid environments, the canister may need to be serviced. If so, the crystals in the window turn pink, and the silica gel is saturated with moisture and can be reactivated by being placed in an oven at 300 °F for three hours or until the crystals turn blue again. The gel can be reactivated virtually an infinite number of times.



**Humidity control/ Dessicant cannister should be removed from its foil packaging and secured within enclosure out of the way. The clear window shown in the white circle should be blue when completely dry.**

**Exploded View**

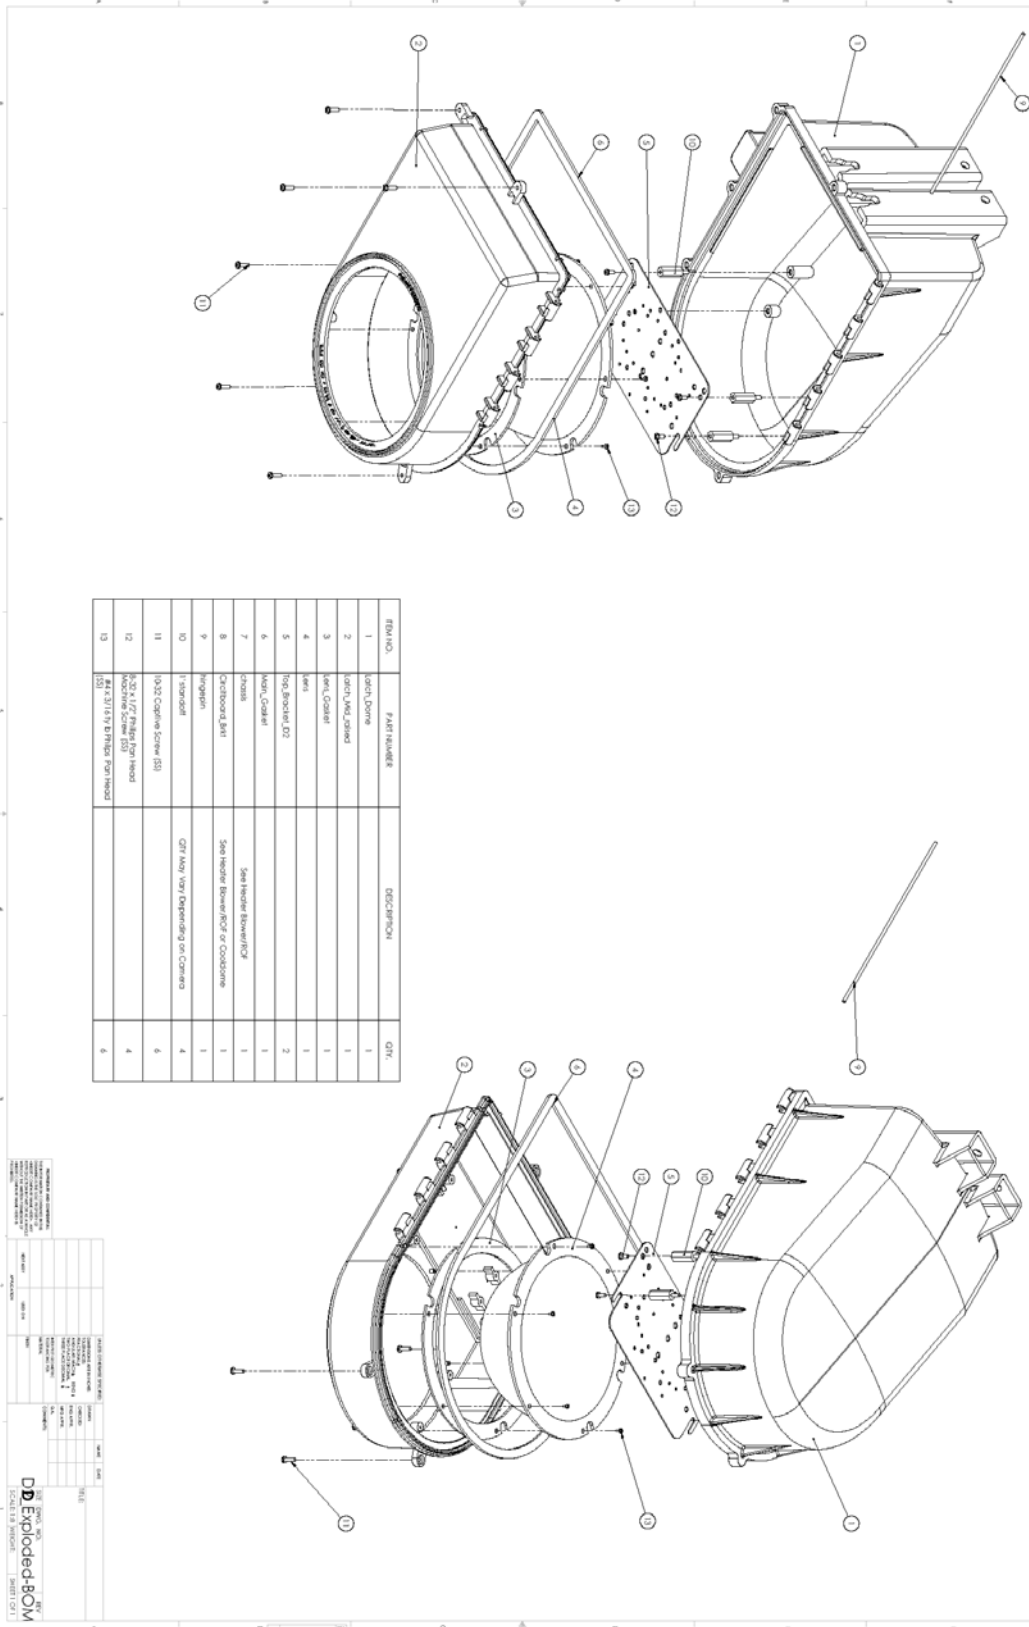


FIG. NO.	PART NUMBER	DESCRIPTION	QTY.
1	dotw_Cover	dotw_Cover	1
2	dotw_Mid_Strand	dotw_Mid_Strand	1
3	dotw_L_Cover	dotw_L_Cover	1
4	Lens	Lens	1
5	Top_Bumper_D2	Top_Bumper_D2	2
6	dotw_Cover	dotw_Cover	1
7	chassis	See Header Below/ICM	1
8	Orthogonal_Bolt	See Header Below/ICM or Conditions	1
9	OrthoPin	OrthoPin	1
10	OrthoPin	OrthoPin	1
11	10-32 CapScrew (2)	QTY Vary Vary Depending on Camera	4
12	10-32 x 1/2" Flat Head SCW (2)		4
13	10-32 x 1/2" Flat Head SCW (2)		4

**REV** | **DATE** | **DESCRIPTION** | **BY** | **CHKD** | **APP** | **DATE**

1					
---	--	--	--	--	--

**DB EXPLODED-BOM**  
Dotworkz Systems, Inc. | 10000 15th Street, Suite 100 | Denver, CO 80202 | Phone: 303.440.1234 | Email: info@dotworkz.com

**Mounting Template**

