



User manual



Bosch Solution 16+

Manual includes

Turning the system on
Turning the system off
Change Own PIN
Change Other PIN
Add PIN
Add User Name
Delete PIN

Testing External Siren
Testing Internal Siren
Testing the Strobe Light
Testing the battery
Set date and time

Turning the system on

1 Enter your PIN then press the [ON] key.

Turning the system off


1 Enter your PIN then press the [OFF] key.

Change Own PIN

This menu lets you change your own PIN. The new PIN must have the same number of digits as the old PIN.


1 Ensure the system is turned off.

2 Enter your PIN and then press [MENU] + [1] + [1] + [0]. The keypad will prompt you to enter a new PIN.

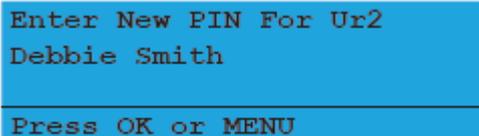

```
Enter New PIN For Ur2
Debbie Smith
-----
Press OK or MENU
```

3 Enter your new PIN and then press [OK]. If an error tone sounds, try and different PIN. The keypad will now prompt you to enter your new PIN again.

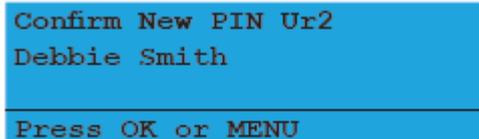

```
Confirm New PIN Ur2
Debbie Smith
-----
Press OK or MENU
```

4 Enter your new PIN again.


5 Press [OK] to save and exit or press [MENU] to exit without saving.

6 Your PIN has now been changed.

Change Other PIN


If you have a master PIN, this allows you to change somebody else's PIN. The new PIN must have the same number of digits as the old PIN.

- 1 Ensure the system is turned off.
- 2 Enter your PIN and then press [MENU] + [1] + [1] + [1]. The keypad will display a list of available users that you can change their PIN.

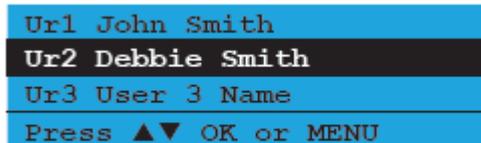

```
Ur1 John Smith
Ur2 Debbie Smith
Ur3 User 3 Name
Press ▲▼ OK or MENU
```

- 3 Use the [UP] and [DOWN] keys to select the user that you want to change the PIN then press [OK] to select. Alternatively you can enter the user number you want to change the press [OK].

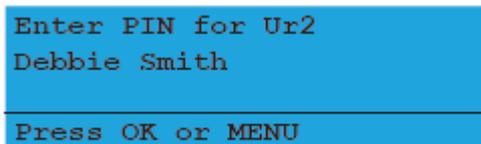


```
Enter PIN for Ur2
Debbie Smith
Press OK or MENU
```

- 4 Enter the new PIN. If an error tone sounds, try and different PIN.
- 5 Press [OK] to save and exit or press [MENU] to exit without saving.
- 6 Your PIN has now been changed.

Add PIN

This menu allows a master user to add a PIN to a new user.

- 1 Enter your PIN and then press [MENU] + [1] + [1] + [2]. A list of users will display on the keypad.

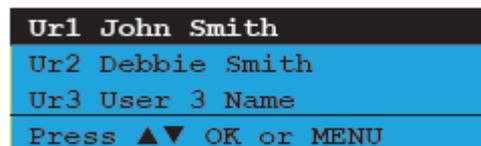

```
Ur1 John Smith
Ur2 Debbie Smith
Ur3 User 3 Name
Press ▲▼ OK or MENU
```

- 2 Use the [UP] and [DOWN] keys to select the user that you want to add a PIN then press [OK] to select. The keypad will prompt you to enter the new pin.




```
Enter New PIN For Ur3
User 3 Name
Press OK or MENU
```

- 3 Enter the new PIN for the user you have selected. If an error tone sounds try a different PIN.

4 Press [OK] to save and exit or press [MENU] to exit without saving.

Add User Name

1 Enter your PIN and then press [MENU] + [1] + [4] + [0]. A list of users will display on the keypad.

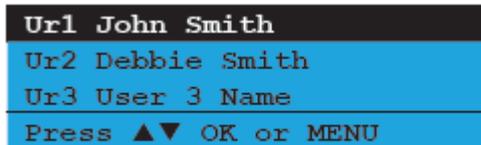

```
Ur1 John Smith
Ur2 Debbie Smith
Ur3 User 3 Name
Press ▲▼ OK or MENU
```

2 To program the user name use the [UP] and [DOWN] keys to select the user that you want to program, then press [OK] to select.

3 The keypad will display the current user name.

4 Use the [LEFT] and [RIGHT] keys to scroll the cursor left and right across the user name text. Use the [UP] and [DOWN] keys to scroll through the different characters available. To clear all text from the cursor position, press the [OFF] key.


5 When the user name is complete press [OK] to save and exit or press [MENU] to exit without saving.

Delete PIN

This menu allows a master user to delete other users PIN.


1 Ensure the system is turned off.

2 Enter your PIN and then press [MENU] + [1] + [1] + [3]. The keypad will list all users that you can delete.

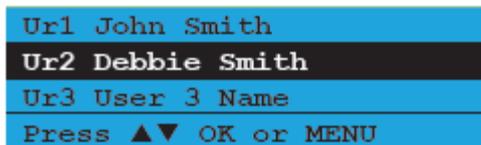

```
Ur1 John Smith
Ur2 Debbie Smith
Ur3 User 3 Name
Press ▲▼ OK or MENU
```

3 Use the [UP] and [DOWN] keys to highlight the user who's PIN you want to delete, then press [OK] to select.

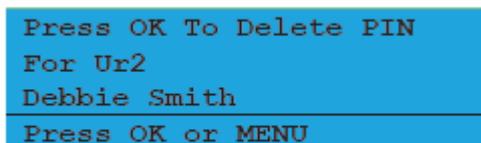

```
Press OK To Delete PIN
For Ur2
Debbie Smith
Press OK or MENU
```

4 Press [OK] again to delete the PIN, or press [MENU] to cancel.

Testing External Siren

1 Press [MENU] + [4] + [9] + [0].

The keypad will display the following during the siren test:

```
External Audible Testing
Press any key to abort

Press OK or MENU
```

When the siren test is complete the keypad will display the following:

```
Testing Complete. Press
OK to continue

Press OK or MENU
```

2 Press [OK] to exit.

Testing Internal Siren

1 Press [MENU] + [4] + [9] + [1].

The keypad will display the following during the internal siren test:

```
Internal Audible Testing
Press any key to abort

Press OK or MENU
```

When the test is complete the keypad will display the following:

```
Testing Complete. Press
OK to continue

Press OK or MENU
```

2 Press [OK] to exit.

Testing the Strobe Light

1 Press [MENU] + [4] + [9] + [2].

The keypad will display the following during the strobe light test:

```
Strobe Activated. Will  
Reset on exit
```

```
Press OK or MENU
```

Check and verify that the strobe light is on.

2 Press [OK] to exit.

Testing the battery

1 Press [MENU] + [7] + [9] + [1].

The keypad will display the current voltage whilst under test:

```
Battery test in progress.  
Please wait..
```

```
Voltage = 13.4V
```

```
To Go Back Press OK
```

If the battery has passed the test they keypad will display:

```
Battery Test Passed  
Press OK To Continue
```

```
To Go Back Press OK
```

Set date and time

This menu allows you to program and or adjust the date and time stored in the system. The time is entered in 24Hr format.

1 Press [MENU] + [7] + [1] + [0].

The keypad will display the current date and time.

```
Set Date And Time
```

```
01-Jan-2012 20:37
```

```
Press ◀▶▲▼ OK to SAVE
```

2 Use the [UP] and [DOWN] keys to program the month, day, year, hour and minute. Use [LEFT] and [RIGHT] keys to scroll cursor left and right between the month, day, year, hour and minute.

3 Press [OK] to save and exit or press [MENU] to exit without saving.