

ENJOYTONE™ ROBUST W83

USER MANUAL



Table of Contents

SAFETY NOTES	4
1. Understand your mobile phone	5
1.1 Install/Remove the SIM Card	6
1.2 Install/Remove the Memory Card	7
2. Battery Charging, Battery Use	8
2.1 Battery Charging	8
2.2 Battery Use	9
3. Power on/off the Mobile Phone	10
4. Getting to Know the Home Screen	11
5. Using the Touch Screen	12
5.1 Gestures	12
5.2 Locking the screen	12
5.3 Unlocking the screen	12
5.4 Notification Panel	13
5.5 Shortcuts and widgets	13
6. Phone	14
7. People	15
8. Messaging	16
9. Email	16
10. Connectivity	17
10.1 Wi-Fi	17
10.2 GPRS/3G	17
10.3 Bluetooth	17
11. Entertainment	18
11.1 Camera	18
11.2 Gallery	18
11.3 Music	18
12. Google Services	19
12.1 Google Account	19
12.2 Maps	19
12.3 Play Store	19
13. Applications	20

14. Settings	20
15. Rugged Feature	21
16. Declaration of Conformity	22

Dear Friend:

Welcome to join the **EnjoyTone™**
Family!

We hope that you will like your
IP68 rugged Android Smartphone.

Please follow our instructions to
get familiar with your EnjoyTone
phone.

We wish you will **ENJOY** it.

 
SAFETY NOTES

Safety Precaution

This section includes some important notes for safety and effective operation, Please read the safety precautions carefully to ensure the correct use of your mobile phone.

1. If conditions permit, please stop the car to make/answer calls while driving.
2. Although the phone is a rugged device, avoid dropping, crushing, bending or hitting your mobile phone.
3. In some places with special requirements, such as hospitals or health care places, please note restrictions on the use of mobile phone, and turn off the mobile phone when required.
4. Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.
5. Only qualified personnel are allowed to repair or disassemble the mobile phone.
6. Do not carry your mobile phone in any area with risk of potential explosion, such as gas, fuel stations or any places storing or transferring chemicals.
7. Some electronic equipment may produce electromagnetic interference or shield to the cell phone signal, such as electronic vehicle system; if necessary, please consult the equipment's manufacturer before using them.
8. Keep your mobile phone and its accessories away from young children. Do not allow children to use your mobile phone without guidance.
9. Avoid battery short-circuit, Do not dismantle or modify the battery, or put the battery in any high-radiation or high temperature environment.
10. The operating temperature of this mobile phone is between -10°C and 55°C.

1. Understand your mobile phone

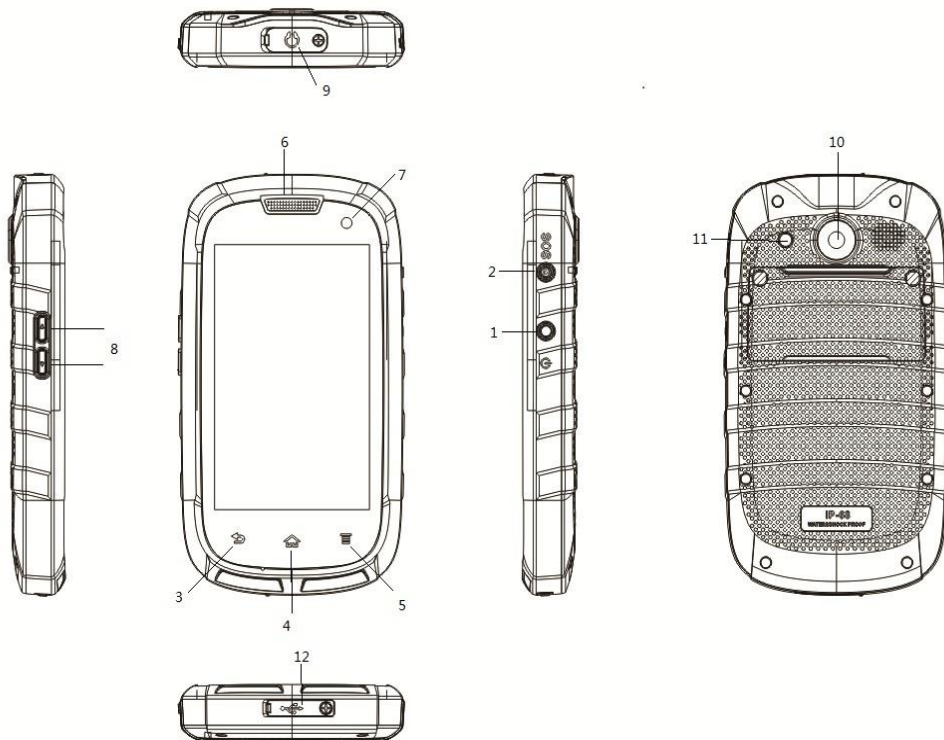

1. Power button
2. Reset button
3. Back key
4. Home key
5. Menu key
6. Earpiece
7. Front camera
8. Volume control key
9. Earphone port
10. Rear camera
11. Flashlight
12. Micro USB port

 
Note:

Home Key: Return to home screen. To view recent application, press and hold the home key.


Reset Key: Pressing reset key will immediately shut down the phone. Then, press power button to restart the phone.

1.1 Install/Remove the SIM Card


1. Remove the back cover: Loosen the screws on the back side – to rotate both the screws anti-clockwise until open the back cover.

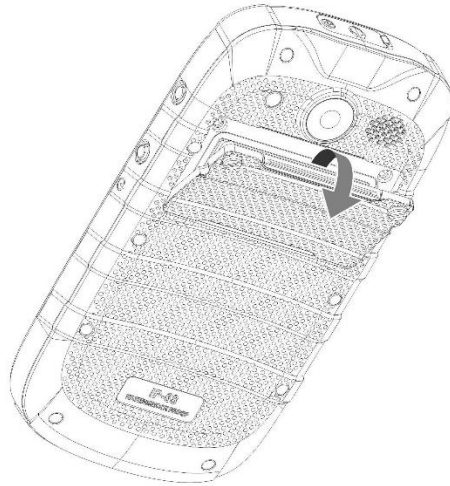

 2. The phone supports Dual SIM cards. Put the SIM card into the slot “circuit side” down and align the notch on the card with the notch on the receptacle.
3. Both slots support GSM/WCDMA. But only one SIM can work under 3G network environment at a time.

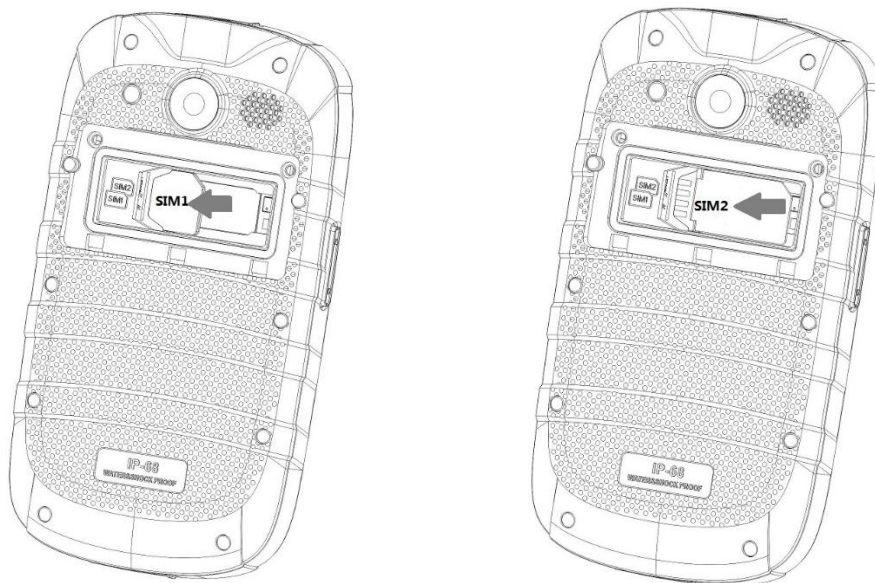


 4. Replacing the back cover: Insert the back cover and rotate two screws clockwise to lock the back cover.

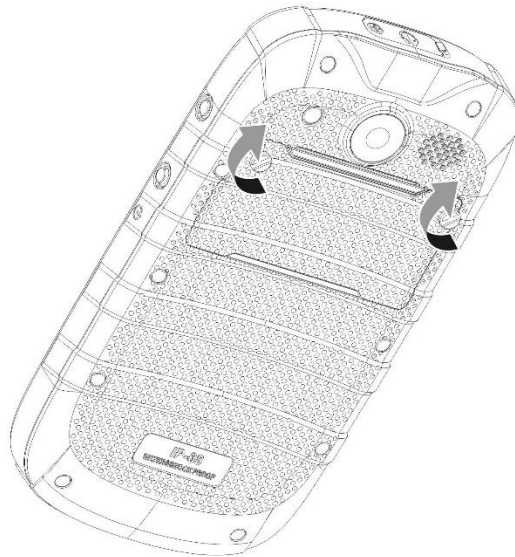

1.2 Install/Remove the Memory Card

 1. If extra storage capacity is required, you can install a memory card. This device uses micro SD or TF memory card.
2. Push the TF card into the card slot.
Note: Please power off the phone before install or remove the SIM card and memory card.

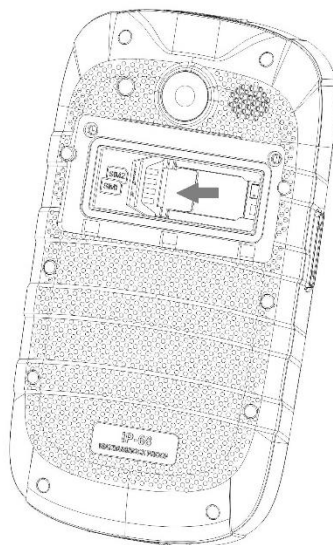


2. Battery Charging, Battery Use

The battery is integrated in the body of the phone.

2.1 Battery Charging

 1. Connect the USB cable that came with your mobile phone to the charger.
2. Open the USB port cover. Connect the USB cable to the USB port of your phone.
3. Insert the other end of the cable into the wall charger and insert into an electrical socket.
4. When charging is complete, remove the cable from the device and then remove the wall charger.

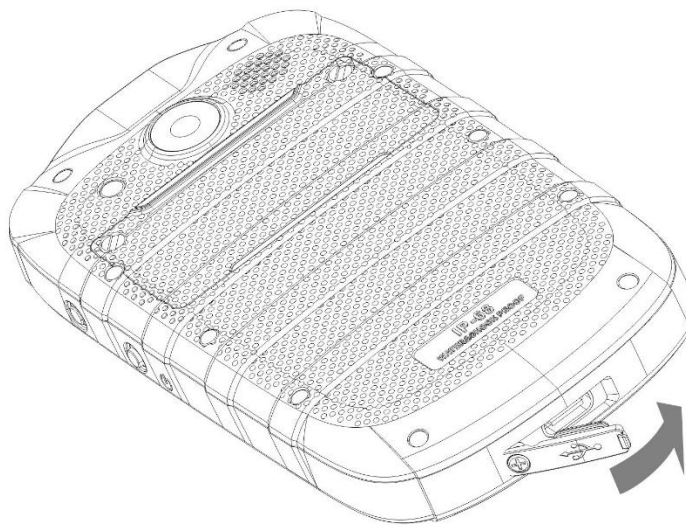

2.2 Battery Use

Battery performance is influenced by many factors, including your carrier network configuration, signal strength, the temperature while using the device; the functions you choose and use, accessories and voice, data or other application mode.

If the battery has not been used for a long period of time or the power is very low, it may take some time to show it is charging.

Over time, the battery will not hold a charge for as long as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.

Warning: Any kind of battery short circuit may cause explosion, fire or personal injury and other serious consequence!

3. Power on/off the Mobile Phone

Long press the key for 2 - 3 seconds to switch on/off the phone.

If you have activated the PIN code, when switching on, the screen will display "Enter PIN".

You get the PIN code together with the SIM card from the network operator. If you input the wrong PIN code three times, SIM card will be blocked, please contact the network operator for help decoding.



4. Getting to Know the Home Screen

When you power on the phone, the Home screen appears.

The Home screen is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other functions. You can customize the Home screen with different wallpaper and organize applications in a way you want.

5. Using the Touch Screen

5.1 Gestures

Single Click: To select an icon. For example, click dial to open the keypad which will be displayed on the screen.

Double Click: To zoom-in or zoom-out. For example, to zoom-in or out of a photo, click twice when viewing a photo or browsing on the internet.

Hold: Click and hold the screen, icon or input box to get more operation options.

Swipe: Move your finger across the screen vertically or horizontally to switch between pictures or pages.

Drag: Touch and hold the desired item with your finger. Drag the item to any part of the screen. You may drag an icon to move or delete it.

5.2 Locking the screen

When your mobile phone is on, press the Power button to lock the screen.

When the screen is locked, you can still receive messages and calls. If you leave your mobile phone undisturbed for a while, the screen will lock automatically.

5.3 Unlocking the screen

Press the Power button to wake up the screen. Then follow the instruction on the screen and swipe to unlock the screen.


5.4 Notification Panel

On the home screen, swipe down from top of the screen to show the notification panel.










Your phone will notify you when there is a new event (call, message, application update, application notification, etc.) Touch related bar of notification will direct you to the related application.

You can also access Settings (including Airplane mode, Wi-Fi, Bluetooth, GPS, Data Connection, Brightness, etc.) from notification panel.






5.5 Shortcuts and widgets

1. Create shortcuts and widgets: Press and hold the APPS, and drag on the desk. Select create shortcuts or widgets.
2. Delete the shortcuts and widgets. To delete an object, tap and hold the object, then drag it towards the bottom of the screen “”. When the object turns red let go of it and the selected object will be deleted.







6. Phone

1. **Making a call:** enter a number and dial “”, or select a number from Call Log or Contacts.
2. **Call log:** it stores your call history. You can view calls by All, Incoming, Outgoing and Unanswered.
3. **Answering a call:** When you receive a call, the incoming call screen opens with the phone number and information about the caller that you have entered in People. Touch and drag “” to the right to “” answer.
4. **Reject a call:** Touch and drag “” to the left “” to reject a call.
5. **End a call:** During a call touch “” to end a call.
6. **Conference call:** When you are on a call, you can add multiple person into the conversation by touching “”, adding contacts, and then touching “”.
7. **Switching between calls:** While you are on two calls, you can switch between them by touching “”.




7. People

- 1. Add a contact:** touch “” to add a new contact. — Select the location (SIM1, SIM2 or Phone) you want to save the contact to. — Enter the contact’s name, phone number, email, address or other information. — Touch ‘Done’ to save.
- 2. Search a contact:** Touch “” to search for a contact. —Enter the name of the contact to perform the search.
- 3. Communicate with a contact:** Touch the contact that you want to communicate with. — Touch the phone number to make a call. — Touch “” to send a message. — Touch “” to make a video call.
- 4. Copy a contact:** Contacts can be copied to and from the SIM card, the device, memory card or USB storage. In the contacts list, touch the Menu key, and touch Import/export. — Select the source location and destination location of the contact. —Then select the contacts you want to copy and touch “”.
- 5. Delete a contact:** In the contact list, touch the contact that you want to delete. — Touch the Menu key and Delete.

8. Messaging

- 1. SMS:** Touch “” to create a new message. — Enter a phone number or touch “” to select a contact from People. — Type your message in the text box below. Touch “” to send.
- 2. MMS:** Touch “” to create a new message. — Enter a phone number or touch “” to select a contact from People. — Type your message in the text box below. Touch options to attach picture, video, etc. to the message. Touch “” to send.
- 3. Reply a message:** In the message list, touch the message thread to open it. — Touch the text box to compose the reply and send.

9. Email

- 1. Add an Email Account:** When using the Email application for the first time, you must configure your email account. Enter your Email address and Password and follow the instructions to set up your email account. Then you can manage your email on your phone.
- 2. Add another Email Account:** After configuring your first email account, touch the Menu key and then select Settings. — Select Add Account to create another email account.
- 3. Send an Email:** On the inbox screen touch “”. Enter the email address of recipient in the ‘To’ field. — Enter subject. — Type your email content. — Touch “” when you finish.
- 4. Reply an Email:** Touch the email you want to view and reply. — Touch “” to reply.

10. Connectivity

10.1 Wi-Fi

1. Connect to Wi-Fi through Settings — Wi-Fi. Turn Wi-Fi on to see available networks.
2. Touch a Wi-Fi network to connect. If the network is secured, enter the password and then connect.
3. If you have connected to a network before, it will be automatically connected when you enter the zone of that network again.

10.2 GPRS/3G


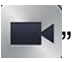 

1. In Settings — WIRELESS & NETWORKS, touch 'More' — Mobile networks and touch 3G service to check the network connection.
2. In Mobile networks — Data connection, touch the desired network operator to enable data connection.

10.3 Bluetooth

1. In Settings — WIRELESS & NETWORKS, touch Bluetooth. —Turn on Bluetooth feature. When the Bluetooth is turned on, your phone detects other Bluetooth devices. To make your phone visible to others, touch your phone model name to make this device visible to other Bluetooth devices.
2. Pair with another device: When you turn on Bluetooth, it will search for nearby devices. Touch the device you want to pair with by entering the password.

11. Entertainment

11.1 Camera

1. Access Camera from Apps screen.
2. Touch “” to take a photo, or “” to take a video. To switch between front and rear cameras, touch “”.
3. Touch anywhere on the screen to set the focus.

11.2 Gallery

1. View your picture and video in the Gallery.
2. In the view of a picture, you can edit or share the picture via Messaging, Email, Bluetooth, etc.

11.3 Music

1. Add music: Connect the phone to your computer with a USB cable (with the memory card inserted). — Open the phone USB storage on your computer. — Copy the music from your computer to a folder you have created under the root directory of the memory card. — Safely eject the mobile phone storage and remove the mobile phone from computer.
2. Play music: Select a category on the music library. Then touch a song you want to play.

12. Google Services

12.1 Google Account

1. Create an account: In Settings — ACCOUNTS — Add Account. Enter your name, username and password.
2. Google+: You can choose to join Google+ with your Google account.
3. Gmail: You can manage your Emails in Gmail application.

12.2 Maps

1. Google Maps help you find your location or search for other locations. Location service has to be enabled in order to use Maps.
2. Touch Settings — Location services, and tick “Google’s location service” or “GPS satellites” check box.

12.3 Play Store

1. Play Store is the place which you can download and install applications on your phone.
2. When you open Play Store for the first time, the Terms of Service window will appear. You have to accept it in order to continue.
3. Search application: You can browse application by category, or type a keyword to search.
4. Download and install: Touch the app in the Play Store. — On the details page, touch Install. The screen will show requested permissions, then Accept & download.
5. To install a non-Play Store application, you have to touch Settings — Security and select the “Unknown sources” check box.
6. Uninstall application: On the touch the Menu key, and choose My Apps. — Touch the application, and select Uninstall.
7. Another way to manage applications is through Settings — Apps.

13. Applications

Here is a brief introduction of some pre-installed applications.

Browser: Access Internet web pages and surf Internet.

Calculator: Solve arithmetic problems.

Calendar: View month and date. You can add and edit you event here.

Clock: Set Alarm, and stopwatch.

Compass: The Compass indicates direction with the help of GPS.

Flashlight: It can be used as torch light.

FM Radio: FM Radio receiver.

Navigation: Direct you to a certain location with the help of GPS function.

Sound Recorder: Record and play the sound.

14. Settings

We have already mentioned some items in the Settings. This is a brief introduction of some other Settings.

SIM management: The phone supports dual SIMs. You can manage these two SIM cards here.

Audio profiles: Set the preferred profiles from General, Silent, Meeting, Outdoor, or customize it.

Display: Manage Wallpaper, Brightness of the screen, Font size, Sleep time of the screen.

Storage: Keep track of the storage of the phone and memory card.

Language & input: Select preferred language and input method.

Backup & reset: Back up phone data, or put the phone to Factory data reset. Factory data reset will erase all data on your phone.

Date & time: adjust date and time on the phone.

15. Rugged Feature

This phone is **IP68** graded. This product is designed as shockproof, waterproof and dustproof. However, please don't hit, drop the phone or immerse the phone in water intentionally. The brutal manipulation may bring damages to the performance of your phone, and it will be no longer under warranty if not properly used. Make sure all covers and screws are fitted. Your careful usage can extend the life of the phone.

EnjoyTone Robust series IP68 grade explanation: The phone is rated as "dust tight" and protected against immersion above 1.5 meter depth in water for 30 minutes, and free fall below 1.2 meter.

16. Declaration of Conformity

Complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use and that the following standards have been applied:

EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011

EN 62209-1:2006

EN 62209-2:2010

EN 50360:2001

EN 62311:2008

EN 62479:2010

EN 62471:2008

EN 301 489-1 V1.9.2

EN 301 489-3 V1.4.1

EN 301 489-7 V1.3.1

EN 301 489-17 V2.1.1

EN 301 489-24 V1.5.1

EN 301 489-1 V1.8.1

EN 301 489-34 V1.1.1

EN 301 511 V9.0.2

EN 301 908-1 V5.2.1

EN 301 908-2 V5.2.1

EN 300 328 V1.7.1

EN 300 440-1 V1.6.1

EN 300 440-2 V1.4.1

Health and Safety: Conform

Electromagnetic Compatibility: Conform

Effective Use of the Radio Spectrum: Conform

CE Compliance: Conform

SAR Compliance: Conform

RoHS Compliance: Conform

The product is tested and conformed to all the above mentioned requirements.