 



Portable Evaporative Air Cooler

User Manual

Read and save these instructions before use

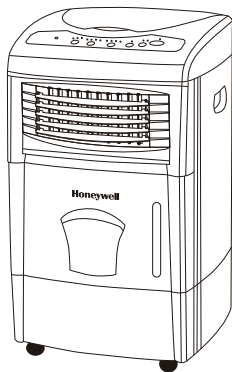

 PARTS DESCRIPTION

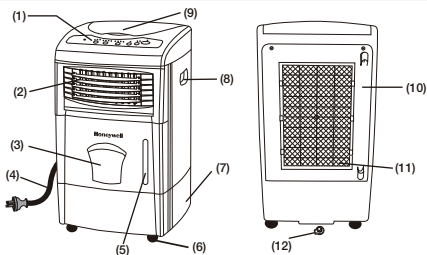


- | | | |
|----------------------|--------------------------|-----------------------------|
| 1) Control Panel | 5) Water Level Indicator | 9) Ice Compartment Lid |
| 2) Louvers | 6) Casters | 10) Rear grill |
| 3) Water Fill Door | 7) Water Tank | 11) Honeycomb Cooling Media |
| 4) Power Cord & Plug | 8) Handle | 12) Drain Plug |

WARNING -- READ AND SAVE THE AIR COOLER SAFETY & MAINTENANCE GUIDE AND USER MANUAL BEFORE USING THIS PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY DAMAGE AND/ OR IMPAIR ITS OPERATION AND VOID THE WARRANTY.


USE & OPERATION

 CONTROL PANEL

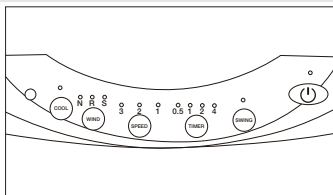

FUNCTION BUTTONS

 
POWER

Press the  button to turn the unit on. The cooler will start automatically at medium speed. After a few seconds the speed will switch to low.

SWING

Press the SWING button until the SWING indicator light is illuminated on the control panel. The louvers will begin to move left to right automatically.

Vertical Air Flow - You can manually adjust the louvers to change vertical air flow.



TIMER

Press the TIMER button until the desired time duration setting is selected. When the set time has passed, the unit will automatically turn off (unit remains in Standby mode until power cord is unplugged from electrical socket). The TIMER function allows you to program the unit for up to 7.5 hours of use.

FUNCTION BUTTONS (CONTINUED)

SPEED

Press the SPEED button repeatedly to change the speed between 3 - 2 - 1.
The indicator light will show the selected speed:



WIND

Press the MODE button to select your desired wind type: N - R - S.

NORMAL (N) : You can select either High, Medium or Low fan speeds.

RANDOM (R) : The fan speed alternates between High, Medium and Low and off to mimic a natural breeze.

 
SLEEP (S) : This mode is for comfort during the night. When SLEEP mode is selected, the airflow will start at a higher speed for 30 minutes and reduce to a lower speed for 30 minutes. When the speed reaches Low speed, the fan will run in low speed continuously until you switch OFF the unit. You may set the starting speed to be High, Medium or Low. If you start the SLEEP mode with High speed, the fan will run for 30 minutes in High speed, then 30 minutes in Medium speed and finally switch to Low speed continuously. If you start the SLEEP mode with Medium speed, then the fan will run for 30 minutes in this speed before changing to a continuous Low speed.

COOL

Press the COOL button until the COOL indicator light is illuminated on the control panel. This activates evaporative cooling. The water pump will operate and you will feel the cooler air after the Honeycomb Cooling Media is completely wet.

Note: When the COOL indicator light is switched OFF, the unit can still function in a fan only mode (without evaporative cooling).

REMOTE CONTROL

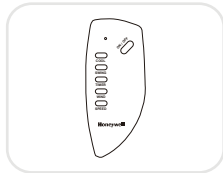

POWER: ON / OFF

COOL : Controls cooling or fan option

SWING : Controls the motion of the louvers

TIMER : Controls the Timer function for automatic shut off

WIND : Switch between Normal, Random & Sleep

SPEED : Low / Medium / High

Note:

- The remote control requires AAA (2 x 1.5V) batteries for replacement.
- Open the battery compartment at the back of the remote control and insert the batteries inside. Care must be taken to insert the batteries according to the correct polarity (+ / -) markings shown inside the battery compartment.
- Always point the remote control signal transmitter towards the unit when operating. Make sure that the signal path is not obstructed.
- Remove the batteries if the unit is not going to be used for an extended period of time.
- Do not drop the remote control.
- Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries.
- Do not mix old and new batteries.
- Exhausted batteries are to be removed from the product.

COOLER LOCATION

Make sure to position the air cooler correctly before you set up and start using the product. Please refer to the COOLER LOCATION section of the separate Safety & Maintenance Guide.

FILLING WITH WATER

CAUTION:

Unplug the unit from the electrical power outlet before emptying or refilling the water tank.

Open the Water Fill Door.

The Water Level Indicator is located at the front of the unit. Refill the water tank when water level is low. Do not fill water above the "Max." water level mark. Check the water level in the tank before running the COOL function. Make sure that the water in the tank is above the minimum water level mark. Running the unit in COOL mode with inadequate water may cause pump failure.

Note: If ice is available, you may add ice in the top ice compartment to enhance the cooling performance.



CLEANING & DRAINING THE WATER TANK

Below are instructions on how to clean and maintain your air cooler. If the cooler will not be used for a long period of time, please refer to the STORAGE & MAINTENANCE GUIDELINES located in the separate Safety & Maintenance Guide.

WARNING:


Before cleaning the unit, switch the unit OFF and disconnect from the electrical socket.

- Move the unit to a location where the water can be drained. Remove the cap from the Drain plug located at the bottom of the unit. Allow the tank to empty.
- Refill the water tank with clean water and drain it completely.
- Refill the water tank with clean water, up to the maximum level.
- Use a damp cloth to remove the dirt and dust from the surface of the unit. Never use corrosive elements or chemicals to clean this product.
- When the product is not in use, store the unit in a dry place out of direct sunlight.

CLEANING THE CARBON DUST FILTER* AND HONEYCOMB COOLING MEDIA

- The appliance is supplied with a Carbon Dust Filter* and Honeycomb Cooling Media.
- The Carbon Filter and Honeycomb Cooling Media are located inside the Rear Grill. See Figure 1 for instructions on how to remove them from the unit for cleaning and maintenance.
- Do not run the unit in COOL mode with stale water in the tank. You must empty the water tank and refill with fresh water, especially if the tank has not been cleaned in a long time.
- The cleaning frequency for the Honeycomb media depends on local air and water conditions. In areas where the mineral content of water is high, mineral deposits may build up on the Honeycomb Cooling Media and restrict air flow. Draining the water tank and refilling with fresh water at least once a week will help reduce mineral deposits. If mineral deposits remain on the Honeycomb Cooling Media, the media should be removed and washed under fresh water. The media should be cleaned every two months or sooner, depending on your needs.
- For best results allow the Honeycomb Cooling Media to dry after each use by turning off the cool function 15 minutes before turning the unit off.

 Figure 1:

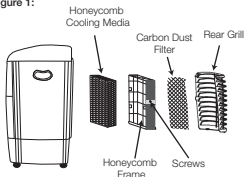

Removing the Carbon Dust Filter*/Honeycomb Cooling Media:

1. Remove all the screws from the Rear Grill of the Air Cooler.
2. Carefully pull out the rear grill from the cooler.
3. Slide out the Carbon Filter* and clean with water.
4. To release the Honeycomb Media, remove the Honeycomb Frame screws and pull the Honeycomb Frame out of the unit.
5. Remove the screws on the base of the Honeycomb Frame and slide out the Honeycomb Cooling Media. Replace or clean media with water and a damp cloth as needed.

WARNING: DO NOT operate the Air Cooler when the Rear Grill is removed from the Air Cooler, or if there is a loose-fitting Rear Grill. Doing so can cause serious injury or dangerous electrical shock.


*Applicable for models with Carbon Dust Filter only.

TECHNICAL SPECIFICATIONS

Model	CL151
Voltage	220 ~ 240V
Frequency	50Hz
Wattage	126 W
Water Tank Capacity	15 Liters / 3.96 Gallons
Cooling Media	Honeycomb
Product Dimension	380 (W) x 365 (D) x 680 (H) mm 14.9 (W) x 14.4 (D) x 26.7 (H) in
Net Weight	8.2 kg / 18.1 lbs

ELECTRICAL WIRING DIAGRAM

 Version: 220-240V/50Hz

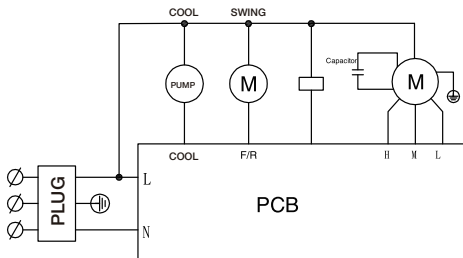

Sole Distributor in Malaysia:
KHIND ALLIANCES SDN. BHD. (811092-W)
No. 2, Jalan Astaka U8/82, Bukit Jelutong
40150 Shah Alam, Selangor, Malaysia.

Service Center: 1 800 88 0032
Email: kas.inquiry@khind.com
Website: <http://www.khindalliances.com>

AirTek International Corporation Limited.
(JMATEK International Group of Companies)
Manulife Financial Centre, Kwun Tong, Hong Kong
Phone: 852-2559-5522
Email: info@honeywellaircoolers.com
Web: www.honeywellaircoolers.com

Made in China
© 2015 AirTek Int'l Corp. Ltd. All rights reserved.
The Honeywell Trademark is used under license from
Honeywell International Inc.
Honeywell International Inc. makes no representations
or warranties with respect to this product.
This product is manufactured by Airtek Int'l Corp. Ltd.

Honeywell