

 
**PREMIA**

---

# Wine Cooler

*Instruction Manual*

PWC-32DWX

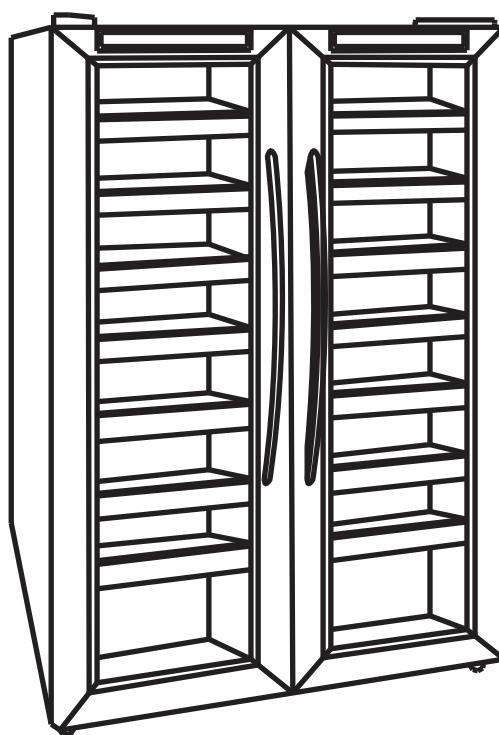

## YOUR WINE CELLAR

This unit can be used for Storage and/or Service. The unit has a glass door and soft interior light that you can leave on to elegantly display your wine.

## SERVING WINES

Storing wines at the proper temperature is important. To preserve them as long as possible wine should be stored at approximately 55° Fahrenheit. However, the chart below suggests the optimal drinking temperature for the different styles of wine.

| °C | °F   | Wine Style                     |
|----|------|--------------------------------|
| 19 | 66   | Armagnac, Brandy, Cognac       |
| 18 | 64.5 | Full Bodied Red wines, Shiraz  |
| 17 | 62   | Tawny Port                     |
| 15 | 59   | Medium Bodied Red Wines        |
| 14 | 57   | Amontillado Sherry             |
| 13 | 55.5 | Light Bodied Red Wines         |
| 12 | 53.5 | Full Bodied White Wines        |
| 11 | 52   | Medium Bodied White Wines      |
| 10 | 50   | Rosé, Light Bodied White Wines |
| 9  | 48   | Vintage Sparkling              |
| 8  | 53.5 | Fino Sherry                    |
| 7  | 44.5 | Non Vintage Sparkling          |

## **General Operating Instructions**

Remove all packaging and labels from your wine cellar. Be sure that all parts have been included before discarding any packaging materials. You may want to keep the box and packing materials for use at a later date.

Upon receipt and inspection of unit, the supply cord must be replaced if it is damaged.

 
Please fully read the instruction manual.

**Please read and follow all safety rules  
and operating instructions before using.**

# Table of Contents


|   |    |
|---|----|
| Cabinet and Circuit Diagram .....                           | 5  |
| Technical Data .....  | 6  |
| Important Safety Instructions.....                          | 7  |
| Installing Your Wine Cellar .....                           | 8  |
| Electrical Connection .....                                 | 9  |
| Important Safeguards.....                                   | 9  |
| Operating Your Wine Cellar .....                            | 10 |
| Care and Maintenance .....                                  | 10 |
| Maintenance Of Your Wine Cellar .....                       | 10 |
| Problems With Your Wine Cellar: Troubleshooting Guide ..... | 11 |
| Service & Important Notice .....                            | 12 |

## Cabinet Diagram

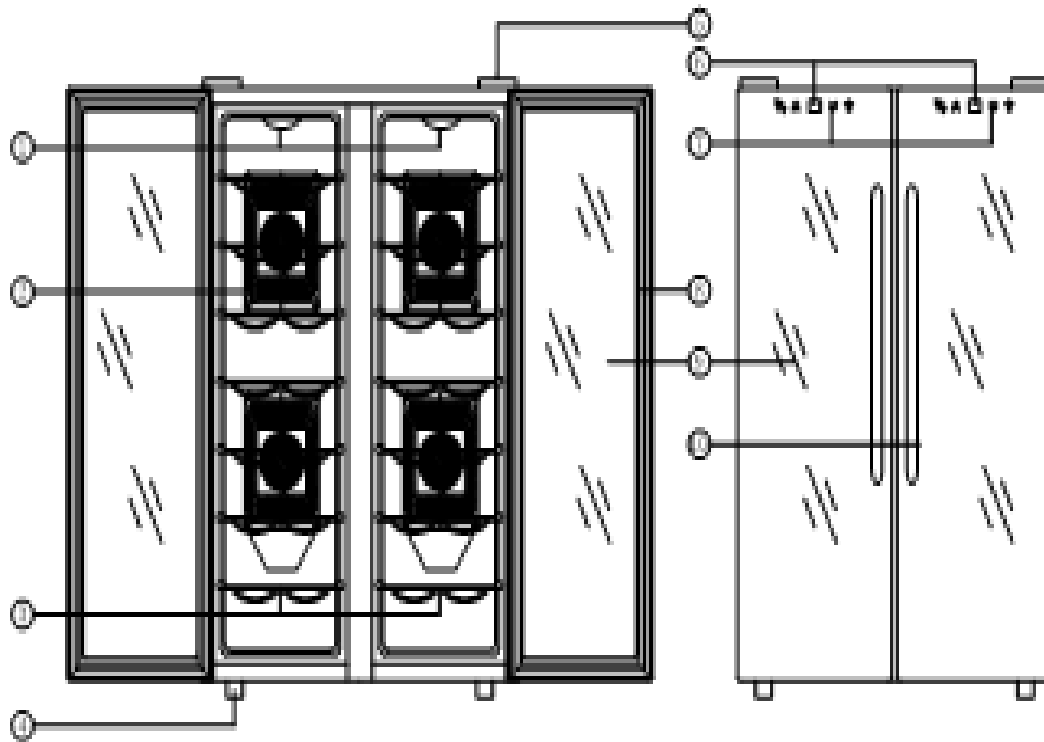

- |               |                        |                           |         |
|---------------|------------------------|---------------------------|---------|
| 1. LIGHT      | 2. FAN MASK            | 3. SHELF                  | 4. FOOT |
| 5. HINGE      | 6. TEMPERATURE DISPLAY | 7. TEMPERATURE CONTROLLER |         |
| 8. DOOR FRAME | 9. GLASS               | 10. HANDLE                |         |

## Circuit Diagram

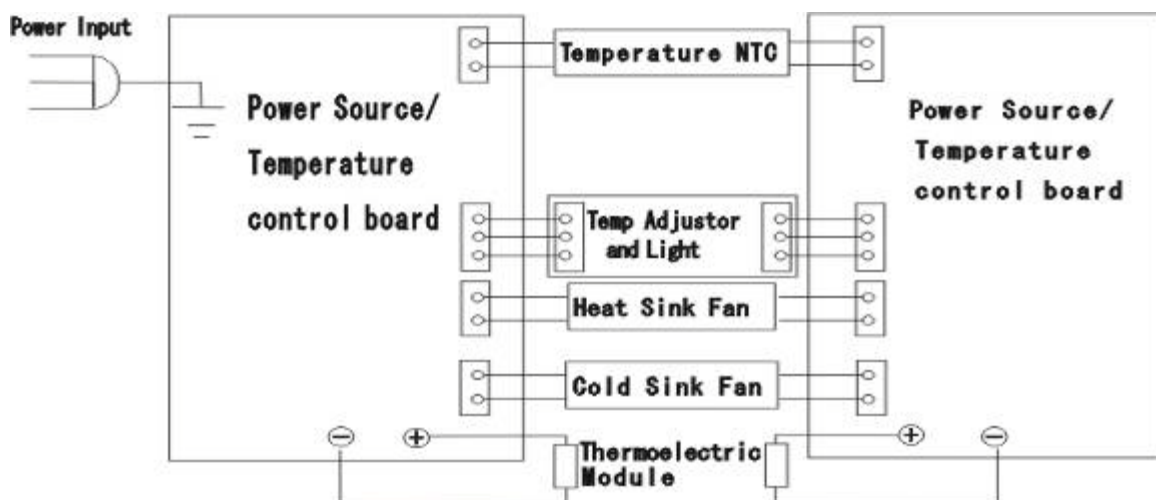 

## Technical Data

|                              |                                       |
|------------------------------|---------------------------------------|
| Model no.                    | PWC-32DWX                             |
| Capacity                     | 32Bottles                             |
| Voltage                      | 100-120V AC                           |
| Current                      | 3.0A (77°F/25°C)                      |
| Protection class             | I                                     |
| Frequency                    | 60HZ                                  |
| Climate class                | SN;N                                  |
| Input power                  | 210W (77°F/25°C)                      |
| Power Consumption<br>kWh/24h | 1.5(59°F/15°C)                        |
| Temperature Control<br>Range | 46-66°F (8-18°C)                      |
| Net weight                   | 31.5Kgs (69.4 Lbs)                    |
| Gross weight                 | 34.2Kgs (75.4 Lbs)                    |
| Unit size<br>(W×H×D)         | 525x820x510mm<br>20.67"x32.28"x20.08" |
| Packing size<br>(W×H×D)      | 613x890x598mm<br>24.13"x35.04"x23.54" |

# IMPORTANT SAFETY INSTRUCTIONS



To reduce the risk of fire, electrical shock or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the wine cellar.
- **DANGER** or **WARNING**: Risk of child entrapment.
- Junked or abandoned appliances are dangerous...even if they "just sit in the garage a few days."
- **Before you throw away your old wine cellar**: Take off the door and leave the shelves in place so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.

-Save these instructions-

# **INSTALLATION INSTRUCTIONS**

Before using your wine cellar

- Remove the exterior and interior packing
- Check to be sure the following parts are included:
  - For PWC-32DWX, 14 wooden shelves
  - 1 Instruction manual
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.

## **INSTALLING YOUR WINE CELLAR**

- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded. To level your appliance, adjust the front legs at the bottom of the appliance.
- Unit must be placed as a freestanding unit—not to be built in.
- For proper installation, keep away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the coating and heat sources may increase electrical consumption. Extreme cold or hot ambient temperatures may also cause the appliances not to perform properly.
- Not designed for placement in garage or basement. Designed for use inside the home.



## ELECTRICAL CONNECTION

**⚡ WARNING ⚡**

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized products service center.

This unit should be properly grounded for your safety. The power cord of this unit is equipped with a 3-pin plug which mates with 3-pin wall outlets to minimize the possibility of electrical shock. Do not under any circumstances cut or remove the ground wire from the power cord supplied.

Don't use extension cords.

This unit requires a standard 100-120V—60HZ electrical outlet with 3-pin plug.

The cord should be secured behind the wine cellar and not exposed or dangling to prevent accidental injury.

## IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING THIS WINE COOLER**

- Do not use if supply cord is damaged. If damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid hazard.
- This wine cooler is not intended for use by young children or infirm persons, without supervision. Young children must be supervised to ensure they do not play with the appliance.
- Ensure the cooler is unplugged before cleaning.
- To clean the cooler, use only mild detergents or glass cleaning products. Do not use harsh detergents or solvents.
- It is not recommended to use this wine cooler with an extension cord or power board. Please ensure that the appliance is plugged directly into the electrical outlet.

- When positioning the wine cooler, ensure that there is at least a 5cm (2 inch) clearance at the sides and a 10cm (4 inch) clearance at the back of the cooler as this is the main outlet for heat. This will allow for adequate ventilation.
- Unit must be freestanding; cannot be used as a built-in cooler.
- This cooler is designed to store wine bottles. It is not intended for food.
- Do not place hot food or drink into the wine cooler before it cools down to room temperature.
- Close the cooler door immediately after putting in any items so the inside temperature will not rise dramatically.
- Keep appliance away from any heat source or direct sunlight.
- For stability, the appliance must be placed on a solid, flat surface. It should not be laid on any soft material.
- Do not place any other appliance on top of the wine cooler.
- The wine cooler is an electrical appliance. To avoid injury or death from electrical shock, do not operate the wine cooler with wet hands, while standing on a wet surface or while standing in water.
- Do not use outdoors or in wet conditions.
- When positioned or if moving the appliance, ensure that it is not set horizontally, positioned at an angle of more than 45°, or turned upside down.
- Never lift or carry the wine cooler by the cord.
- Keep the cord away from heated surfaces.
- This wine cooler is for household use only. Any other use will void the warranty.
- Do not plug into the power socket before set up is completed.
- Always unplug an appliance from outlet when not in use. Never pull cord to remove plug from outlet. Grasp plug and pull to disconnect.
- An empty cooler can be a dangerous attraction to children. If disposing of the cooler, remove gaskets, latches, lids or the entire door from your unused appliance, or take other action to ensure the cooler is harmless.

# **OPERATING YOUR WINE CELLAR**

It is recommended that you install the wine cellar in a place where the ambient temperature is between 50°F and 80°F. If the ambient temperature is above or below recommended temperature, the performance of the unit may be affected. For example, placing in extreme cold or hot conditions may cause interior temperature to fluctuate. Internal range of 46-66°F may not be reached. The temperature may fluctuate depending on whether or not the interior light is on or off or whether the bottles are located on the upper, middle or lower section.

## **How to use the buttons on the Display Panel:**

You can set the temperature as your desire by pressing the control panel buttons. There are two buttons on the panel "▲" and "▼" to adjust the temperature by 1°F between 46-66 °F. You can turn the interior light on or off by pressing the "💡" button.

# **CARE AND MAINTENANCE**

## **Cleaning your wine cellar**

- Unplug the wine cellar and remove the bottles and shelves.
- Wash the inside with warm water or a baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- The outside of the wine cellar should be cleaned with mild detergent and warm water.

# **MAINTENANCE OF YOUR WINE CELLAR**

## **Moving your wine cellar**

- Remove all the bottles and shelves.
- Securely tape down all loose items inside your wine cellar.
- Turn the leveling legs up to the base to avoid damage.
- Tape the door shut.
- Be sure the wine cellar stays in the upright position during transportation.

# PROBLEMS WITH YOUR WINE CELLAR

You can solve many common wine cellar problems easily, saving you the cost of a possible service call. Try the suggestion below to see if you can solve the problem before contacting Premia at [help@mineausa.com](mailto:help@mineausa.com)

## TROUBLESHOOTING GUIDE

| PROBLEM                                  | POSSIBLE CAUSE  |
|--|---|
| Wine cellar does not operate             | <ul style="list-style-type: none"><li>• Not plugged in</li><li>• Using wrong voltage</li><li>• The circuit breaker tripped</li><li>• Blown fuse.</li></ul>  |
| Wine cellar is not cold enough           | <ul style="list-style-type: none"><li>• Check the temperature control setting, external environment may require a cooler setting.</li><li>• The door is open too often.</li><li>• The door is not closed completely.</li><li>• The door seal does not seal properly.</li><li>• The wine cellar does not have the correct clearance at the back and two sides.</li></ul> |
| Light does not work                      | <ul style="list-style-type: none"><li>• Call the service center.</li></ul>  |
| Vibrations                               | <ul style="list-style-type: none"><li>• Check to see that the wine cellar is level.</li></ul>   |
| Wine cellar seems to make too much noise | <ul style="list-style-type: none"><li>• The wine cellar is not level.</li><li>• Check the fans inside the cabinet and at the back of the unit</li></ul>   |
| Door will not close properly             | <ul style="list-style-type: none"><li>• The wine cellar is not level.</li><li>• The seal is weak.</li><li>• The shelves are out of position.</li></ul>  |
| Temperature LED does not display         | <ul style="list-style-type: none"><li>• Main control board does not work.</li><li>• Temperature controller problem.</li><li>• There is some problem with the plug (no power supply)</li></ul>   |
| Temperature LED display error            | <ul style="list-style-type: none"><li>• Temperature sensor is cut off.</li></ul>  |
| Buttons are not functional               | <ul style="list-style-type: none"><li>• Temperature controller panel is damaged.</li></ul>  |
| Supply cord is damaged                   | <ul style="list-style-type: none"><li>• Cord must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard</li></ul>   |

## **SERVICE & IMPORTANT NOTICE**

Upon receipt and inspection of unit, the supply cord must be replaced if it is damaged.

The Manufacturer has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice.

## **WARNING**

**Please do not place the unit within reach of children.  
For adult use only.**