



4-Way Stereo A/V Selector

15-1983

Thank you for buying the RadioShack 4-Way Stereo A/V Selector. It can connect up to four audio/video devices, such as direct-to-home satellite systems, VCRs, DVD players, laserdisc players, cable boxes, or video game systems to a single TV, sound system, or home theater. You can connect S-Video cables for optimum picture quality

Choosing a Location

You can place the selector on almost any flat surface. For the best results, do not place it on top of a TV or other electrical appliance. If you place the selector on the top of your TV, electromagnetic interference from the TV might distort the sound from any devices connected to the selector. If this happens, move the selector away from the TV.

Limited 90-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102


12/99

©2004 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

Cat. No.15-1983 Printed in China 01A04

Connections

Use stereo audio/video cables with phono plugs (available at your local RadioShack store and online at RadioShack.com) to make all connections. For the best performance, use high-quality audio/video cables. Do not use audio cables for video. The selector's color-coded jacks make it easy to connect devices to the selector. Yellow jacks are for video, red jacks are for right audio, and white jacks are for left audio.

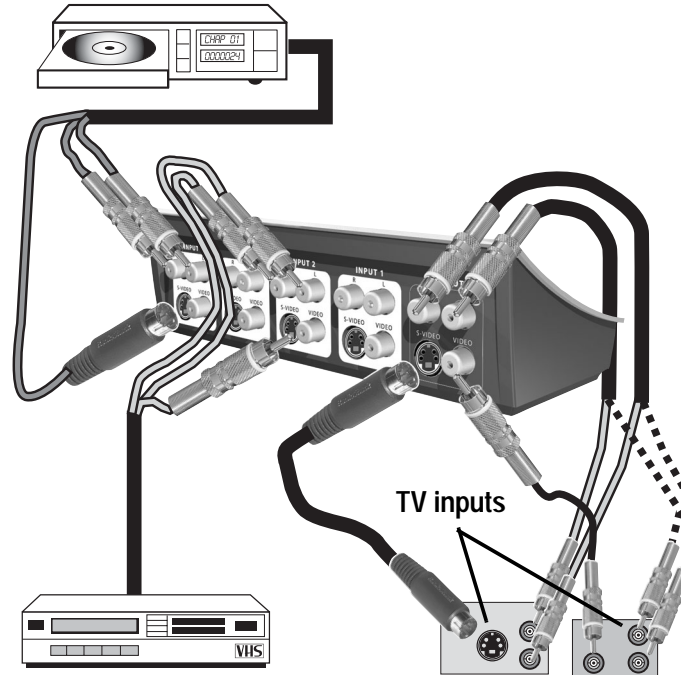


1. Connect the audio/video outputs for each device to a set of INPUT(1, 2, 3, or 4) VIDEO/L/R jacks on the back of the selector. If the device has S-Video output you may connect the S-Video cable to the S-VIDEO INPUT for that device. DO NOT CONNECT BOTH the S-VIDEO INPUT and VIDEO INPUT for any device.
2. Connect your TV or monitor's audio / video inputs to the selector's OUTPUT VIDEO/L/ R jacks, or S-VIDEO jack. DO NOT CONNECT BOTH VIDEO OUTPUT and S-VIDEO OUTPUT to the TV or monitor's input.

Care

Keep the selector dry; if it gets wet, wipe it dry immediately. Use and store the selector only in room temperature environments. Handle the selector carefully; do not drop it. Keep the selector away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Operation

Turn on the TV and the device you want to view. To view material from the device connected to the INPUT 1, press **dvd** on the front of the selector. Likewise, for INPUT 2, press **vcr**. For INPUT 3, press **game**. For INPUT 4, press **aux**. Operate the TV and devices as you usually do.

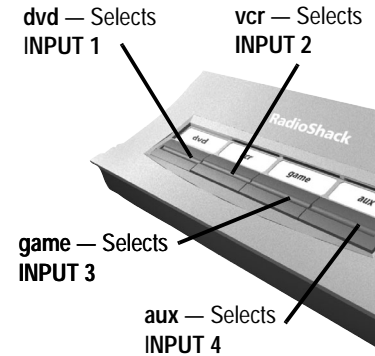

Using the Stickers

Your selector comes with two sheets of wire stickers and one sheet of device stickers to give your hookups identities. You can use the printed stickers or write down the connected device name on the blank sticker. To use the wire sticker, peel off the desired sticker, paste and fold up the sticker to the corresponding wire. To note which devices are connected to which set of jacks, peel off the desired device sticker and paste it above the corresponding button.

Service and Repair

If your selector is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the selector's internal components can cause a malfunction and might invalidate its warranty.