LEGAL INFORMATION

Copyright © 2013 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE N799D

Quick Start Guide

NOTE: Your home screen extends beyond the

initial screen, providing more space for shortcuts,

widgets, and folders. Simply swipe left or right to

1. Touch the Home Key if the current screen is

3. Slide left or right on the screen and touch an

2. If you want to add a widget, touch Widgets.

Removing Shortcuts or Widgets

3. Touch and hold a widget or an app icon and

1. Touch and hold a widget or shortcut on the

Organizing Shortcuts With Folders

1. Touch and hold the shortcut on the Home

2. Drag the shortcut to Folder and release it.

Screen you want to add into a folder until

A new folder will be created and the shortcut

Adding Shortcuts or Widgets

1. Touch the Home Key >

drag it to the home screen.

2. Drag it to m Remove to remove it.

see the extended home screens.

Opening Applications

not the home screen.

app to open it.

home screen

Folder appears.

is added into the folder

2. Touch 📲

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of the **ZTF** Corporation

Google and Android are trademarks of Google. Inc

The Bluetooth® trademark and logos are owned by the Bluetooth SIG. Inc. and any use of such trademarks by ZTE Corporation is under license. microSD logo Misso is a trademark of SD-3C, ПC

Other trademarks and trade names are the property of their respective owners.

Version No. : R1.0 Edition Time : 201310 Manual No.

Getting to Know Your Phone





Power Kev

- · Press and hold to power on, select phone modes, turn on/off airplane mode, Restart your phone or power off
- · Press to turn off or on the screen display.

Home Kev

· Touch to return to the home screen from any application or screen.

Touch and hold to active search application.

- Menu Key • Touch to get the options for the current screen
- · Touch and hold to see recently used applications.

Touch to go to the previous screen.

Press or hold to turn the volume up or down.

Sound

Sound

4. Touch OK

Sound.

you do not need.

Adjusting Volumes

notification.

3. Select the ringtone you want to use.

Setting System Sounds

Switch off your phone before installing or replacing the battery or the SIM card. The microSD card is optional and can be installed and removed while the phone is turned on. Unmount the microSD card before removing it.

5

holder

and then touch Phone ringtone or Default

- ► Touch Long press to enable unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding at the center of the display.
- sic, video, games, and other media, the ringtone and notification volume, and the alarm volume

Applying New Wallpapers

You can set the wallpaper for the home screen or lock screen

2

- 1. Touch the Home Key > Menu Key > Customization
- 2. Touch Wallpaper for home screen or Wallpaper for lock screen.
- 3. Select a wallpaper source from Gallery, Live Wallpapers or Wallpapers and touch the image or animation you want to use as the wallpaper.
- 4. For Gallery images, touch Done at the top of the screen. For Live wallpapers or Wallpapers, touch SET WALPAPER.

Checking the Phone Status

The status bar at the top of the screen displays phone and service status with various icons on the right side. Below are some of the icons and their meanings.

anon moaningo.				
G	GPRS con-		No signal	
U	nected			
E	EDGE con-		Signal strength	
	nected			
30	3G connected	* ₽ 3G	Mobile data in	
150	SG connected		use	
?	No SIM card installed	X	Flight mode	
	Inicialica			

1X	CDMA EVDO connected	*	Bluetooth on	
\$	Ringer off		Connected to a Wi-Fi network	
Di	Vibrate mode		Wi-Fi in use	
	Battery low	C)	Speaker on	
î.	Battery partially drained	ŗ	Phone micro- phone off	
	Battery full	\bigcirc	Alarm set	
5/5	Battery charging	Q	Wired headset connected	

3

Managing Notifications

The status bar at the top of the screen provides notification alerts with different icons on the left side. Below are some of the icons and their meanings.

The notifications depend on the apps installed and you can touch and drag the status bar down to see more information.

् र/ <mark>प्</mark> र	New SMS	at da	microSD card unmounted
몇/몇	New MMS	!	microSD card removed

\geq	New Email	1	Upcoming event
Μ	New Gmail message	٩.	Call on hold
₿	New Hangouts instant mes- sage	(%-	New Wi-Fi net- work detected
Ģ.	Problem with SMS/MMS de- livery	Ŧ	Downloading data
š	Missed call	<u>†</u>	Sending data
¢,	Call in progress	Ŷ	USB tethering is on
ţ	USB connected	(((0)))	Portable Wi-Fi hotspot
	Song is playing	۲	GPS on
Ê	Updates avail- able		

	sage	•	work detected
P	Problem with SMS/MMS de- livery	<u>+</u>	Downloading data
ř	Missed call	<u>†</u>	Sending data
¢,	Call in progress	Ŷ	USB tethering is on
Ŷ	USB connected	(((0)))	Portable Wi-Fi hotspot
	Song is playing	Ó	GPS on
Ê	Updates avail- able		

10

12

Volume Up/Volume Down

Starting Up

installed or otherwise

Setting Ringtone and Sounds Setting Ringtone or Notification

1. Touch the Home Key > - > Settings > the silent mode.

Setting a Screen Lock

2. Touch Card 1 ringtone or Card 2 ringtone

kevs. 1. Touch the Home Key > - > Settings >

- 1. Touch the Home Key > Menu Key > System settings > Security > Screen lock. 2. Touch Long press, Pattern, PIN or Pass-
- word.

To adjust call volume, press the Volume Key while on a call. To adjust other volumes, follow the steps below.

1. Touch the Home Key > P > Settings > Sound > Volumes

2. Scroll to the SYSTEM section and check the

sounds you want to hear or uncheck those

2. Drag the sliders to adjust the volume for mu-

Back Key - Back Cover

1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.



2. Hold the UIM/SIM card with its cut corner oriented as shown and slip it into the card



3. Hold your microSD card with the metal contacts facing down and slide it into the microSD card slot.



NOTE: Your phone may come with a pre-installed microSD card. Some applications may not function normally after you remove the card, pre-

6

- 3 Touch OK to save
- TIP: Press and hold the Power Key and then touch 🌠 to enable the silent mode, touch 🖏 to enable the vibration mode, or touch 🚺 to disable
- You can protect your phone by creating a screen lock. When enabled, you need to touch and hold an icon, draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and

- Touch Pattern to create a pattern that you must draw to unlock the screen.
- Touch PIN or Password to set a numeric PIN or a password you must enter to unlock your screen

4. Align the connectors on the phone and the battery and slide the battery into the compartment. Then gently press the battery down until it is secured.



5. Press the cover gently back into place until you hear a click

Charging the Battery

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



- 2. Connect the charger to a standard AC power outlet
- 3. Disconnect the charger when the battery is fully charged.

Checking Voicemail

- 1. Touch the Home Key > 📞
- 2. In the dialer tab 🔣 , touch and hold 🔒 . If prompted, enter your voicemail password.
- 3. Follow the voice prompts to listen to and manage your voicemail messages.

Making a Call

- 1. Touch the Home Key >
- 2. In the dialer tab 🔣, enter the phone number with the on-screen keypad. Touch 🔨 to delete incorrect diaits.
- 3. Touch the 🔇 or 🔇 below the keypad to place the call.

NOTE: To call a contact, touch the Home Key > Image: Second a contact or a number.

Adding Contacts

Creating a New Contact

- 1. Touch the Home Key > S and touch the all contacts tab
- 2. Touch a, or Create a new contact (if there are no contacts).
- 3. Enter the contact name, phone numbers. email addresses, and other information, as shown. Touch Done to save the contact.

Powering On/Off Your Phone

Make sure the battery is charged before powering on

- Press and hold the **Power Kev** to turn on vour phone.
- · To turn it off, press and hold the Power Key to open the options menu. Touch Power off > OK.

ZTE Mobile Phone Registration

Dear customer, in order to provide you better service, one registration message will sent to ZTE service database. This message is free from ZTE, You will be charged one normal SMS rate by your operator.

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application shortcuts, folders, widgets, and more.



- Importing Contacts in Batches
- 1. Touch the Home Key > 🖤 > 🛄
- 2. Touch the Menu Key > Import/export > Import from UIM1 card or Import from SIM 2 card or Import from SD card.
- 3. If prompted, select an account in which to save the contacts.
- 4. For importing from the UIM/SIM card, touch all the UIM/SIM contacts you want to import and touch 🗸 .

For importing from the microSD card, select the vCard file(s) on the microSD card and touch OK to begin importing.

Sending a Message

- 1. Touch 📲 in the home screen and select Messaging, then touch 🖳
- 2. Enter the recipient(s) and message text. If you want to send an MMS, add subject and attachments.
- 3. Touch C Send or G Send to send the message.

Setting Up Email Accounts

Setting Up Gmail

- 1. Touch 📲 in the home screen and select Gmail
- NOTE: If another Gmail account is already set up, touch the Menu Key > System settings > Add account.
- 2. Touch Existing to sign in to your existing Google Account. If you have no Google Accounts, touch New to create one.
- 3. Follow the instructions on the screen to set up the account.

Setting Up Email

- 1. Touch 📲 in the home screen and select Fmail NOTE: If another email account is already
- set up, touch the Menu Key > System settings > Add account.
- 2. Enter the email address and password.
- 3. Touch Next and follow the onscreen instructions

Setting Up Corporate Exchange

Email

- 1. Touch 📲 in the home screen and select Fmail
 - 17
- Camera (PTP): Transfer photos using camera software, and transfer any files on computers that don't support MTP.
- Share mobile network: Turn on USB tethering and share your phone's mobile data with the PC.
- ► Install driver: Install the driver needed for connecting your phone to your PC. To disconnect the device from the computer, simply unplug the USB cable when you're finished.

Connecting to the Internet

Connecting via Wi-Fi

- 1. Touch the Home Key > Menu Key > System settings > Wi-Fi.
- 2. Slide the ON/OFF switch if Wi-Fi is off. Your phone automatically searches for Wi-Fi networks in range and displays their names and security settings. Your phone also connects to previously linked networks when they are in range.
- 3. Touch a network name to connect to it. If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

Connecting via Mobile Network

To connect to the Internet via mobile network you

- NOTE: If another email account is already set up, touch the Menu Key > System settings > Add account.
- 2. Enter the email address and password.
- Touch Manual setup > Exchange.
- 4. If necessary, edit Domain\Username, Password, and Server information.
- 5. Read the onscreen activation disclaimer and, if prompted, touch Next.
- 6. If prompted, touch **OK** to allow the server to remotely control some of your phone's security features.
- 7. Configure the settings on the screen, such as Days to sync, and then touch Next.
- 8. If prompted, touch Activate to activate the Email app as a device administrator.
- 9. Identify your new account with a unique name and then touch Next.
- Contact your server administrator for more help.

Connecting With a Bluetooth

Headset

- 1. Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more information.
- 2. Touch and the home screen and select Settings > Bluetooth.

18

can use the default Access Point Names (APN).

If you want to add a new APN, please contact the

service provider to get the necessary informa-

tion. Do not change the default settings unless

instructed by the service provider. Otherwise the

tem settings > More > Mobile networks >

CDMA Network Settings > Access Point

3. Touch each item to enter the information you

Touch the Menu Key > Save to complete.

Connecting via Bluetooth Tethering

You can connect to a device that supports Blue-

tooth tethering to share the device's Wi-Fi or

1. Enable the device's Bluetooth and Bluetooth

2. Touch and the home screen and select Set-

3. Turn Bluetooth on and touch the device's ID

to pair the phone with the device. Enter a

tethering capabilities. Make sure the device

is 'visible'. Refer to the device's user guide

1. Touch the Home Key > Menu Key > Sys-

2. Touch the Menu Key > New APN.

get from your service provider.

mobile data service with your phone.

for more information.

tings > Bluetooth

passcode if prompted.

service might stop working.

Names.

3. Slide the ON/OFF switch if Bluetooth is off. When Bluetooth is on, the 🚯 icon appears in the status bar

NOTE: Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch SEARCH FOR DEVICES if you wanted to scan again.

- 4. Touch the ID of the headset, or any other device you want to pair with your phone. Enter a passcode if prompted.
- 5. If necessary, touch the ID of the paired headset to connect with it. Once connected, the icon in the status bar turns blue.
- TIP: Touch the ID again to end the connection.

Installing Apps From the Google **Play Store**

There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application.

Before you begin, make sure that you have signed in to your Google account.

NOTE: The content you can access in the Play Store depends on your region and your service provider

19

4. Touch the ID of the paired device to connect

tion shared by the device.

Extending Battery Life

Lower the screen brightness.

your battery last longer.

with it. As the 🛞 icon in the status bar turns

blue, your phone is able to use data connec-

There are several things you can do to make

(when you have a cable) instead of portable

Wi-Fi hotspot to share your phone's data ser-

Manager and close the apps you do not

From the home screen, touch "> Task

From the home screen, touch = > Settings

> Sound and uncheck Vibrate on touch.

Use Task Manager to free up memory space

From the home screen, touch "> Task

2. Touch the TASKS tab and touch the x next

need but still run in the background.

Freeing Up Memory Space

and optimize system speed.

Manager.

auto-sync only when you need to.

- Touch the Home Key > Play Store. The first time you launch Play Store, accept the Google Play Terms of Service.
- 2. Find the apps you need either by category or by touching 🔍
- 3. Touch the app to see detailed description.
- 4. Touch INSTALL (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet account and select a payment method.

CAUTION: Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch ACCEPT to proceed, or touch the Back Key to cancel.

5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the icon appears in the status bar. You can find the new app after touching the Home Key > = ?

Taking a Photo

- 1. Touch 📲 in the home screen and select Camera
- 2. Aim the camera at the subject and make any necessary adjustment.

20

You can also touch CLOSE ALL to stop all run-

Managing the Phone Storage

You can manually delete old messages to free up some storage space. You may also set up auto deletion of the oldest messages when the limits are reached.

- From the home screen, touch Second Sec
- 3. Check Delete old messages to enable auto deletior
- message limit to set the maximum limit.

Clearing Browser's Local Content

- 2. Touch the Menu Key > Settings > Privacy
- 3. Touch Clear cache, Clear history, and Clear all cookie data.

Product Safety Information

A Do not use hand-held while driving

28



	0 0 0	
Number	Function	
1	View photos and videos you have captured.	
2	Capture a photo.	
3	Switch to the camcorder or pan- orama camera.	
4	Set color effect.	
5	Set scene mode.	
6	Change the camera settings.	
7	Hold the dot and slide to zoom in or out.	

3. Lightly touch a or press either end of the Volume Keys to take a photo.

1. Touch 📲 in the home screen and select

21

Camera, or switch to the camcorder from the

Recording a Video

photo.

Number

1

2

3

4

- *
- Do not use while re-fuelling For body-worn operation maintain a separation of 15 mm This device may produce a bright or flashing light Small parts may cause a choking hazard Do not dispose of it in a fire This device may produce a loud ¶. € sound To prevent possible hearing damage 19 do not listen at high volume levels for long periods. Ċ Avoid contact with magnetic media Avoid Extreme Temperatures Keep away from pacemakers and other personal medical devices Avoid any contact with liquid, keep it dry Switch off when instructed in hospi æ tals and medical facilities

Do not attempt to disassemble

29

ning applications.

to the application you do not need.

Deleting Old Messages

· Turn on Wi-Fi, Bluetooth, GPS, mobile data, Use Bluetooth tethering or USB tethering

2. Touch the Menu Key > Settings.

4. Touch Text message limit or Multimedia

5. Touch Set.

- From the home screen, touch = > Browser. & security.

camera screen.

2. Aim the camera at the subject and make any necessary adjustment.



Function
Change the camcorder settings.
View photos and videos you
have captured.
Start or stop recording a video.
Switch to the camera or pan-
orama camera.

3. Touch is to start and is to stop recording. You can also press either end of the Volume Keys to start and stop.

TIP: While the recording is in progress, you can touch the preview screen to save the frame as a

Switch off when	instructed in	n aircrafts
ind airports		

Only use approved accessories

Switch off in explosive environments

Do not rely on this device for emergency communications

Playing Music

- 1. Touch Touch in the home screen and select Mu. sic
- 2. Touch a category, such as Artists or Albums, to find the song you want to play.
- 3. Touch the song to play it back. When the song is playing, touch the album artwork to display more options



- 2. Choose one of the following options:
- USB mass storage: Transfer files between PC and internal virtual SD card and external SD card on your phone.
- Connect to PC software: Connect to PC to sync data and install apps via PC software.
- Media device (MTP): Transfer media files on Windows, or using Android File Transfer on Mac.

23

SAR

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by inter national guidelines. These guidelines were devel oped by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested was 0.293 W/kg. As mobile devices offer a range of func tions, they can be used in other positions, such as on the body.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

This equipment may be operated in:			AT	BE	
CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT
SK	SI	ES	SE	GB	IS
LI	NO	СН	BG	RO	TR

Number	Function
1	Song and artist information.
2	Touch to toggle repeat mode: Repeating all songs, Repeating current song, Repeat is off.
3	Playback control. Skip songs or pause and resume playback. Drag the slider to jump to any part of the song.
4	Touch to open the current playl- ist.
5	Touch to add the song to the Fa- vorite.
6	Touch to play the current playlist in shuffle mode, where tracks are played in random order.
7	Album artwork.

Connecting to PC

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in either direction. Your device stores these files in internal storage or on a removable microSD card.

1. Connect your phone to a computer with a USB cable and then the Connect to PC screen pops up.

24

E-Waste Management What is E-waste?

'E-waste' means waste electrical and electronic equipment (WEEE)



How harmful is e-waste?

E-wastes are considered dangerous, as certain components of some electronic products contain materials that are hazardous, depending on their condition and density. If improperly disposed, they can leach lead and other harmful substances into soil and groundwater.

Govt. of India vide notification dated May 12, 2011 has announced E-waste (Management and Handling) Rules, 2011 ("Rules").

According to these Rules, the consumer now has the legal responsibility to dispose of the waste electrical and electronic equipment (popularly known as "WEEE") in the prescribed manner and not by just throwing it into a dustbin or giving/selling it to scrap dealer.

V RECYCLE, is an initiative by ZTE where we recycle your old and no longer useful phones.

There are 3 easy steps to begin playing your part: Step 1: Grab your old and useless phone (or its accessories)

Step 2: Locate a ZTE Collection Point near you. available at www.ztedevice.com

Step 3: Drop your old phone into the designated collection boxes.

Lets join hands today to celebrate the glory of nature earth & help in making it a better & healthier place for all of us.