

AC LIGHT

ON = AC power
OFF = Power failure

STATUS LIGHT

Green:

ON = Zones closed
OFF = Zone(s) open
FLASH = Exit Delay

Red:

ON = System armed
FLASH = Stay Armed
FAST FLASH = Alarm



1641

Messages on the LCD screen will guide you through the operations

Use arrow buttons to scroll menu or choices

ARMING AND DISARMING

To arm when leaving:



To Regular Arm
(Arms entire Area)

Enter your [ACCESS CODE]*

One-touch Button, ✓ if enabled: ☐

To Force Arm

(Arms Area without waiting for all zones to close)

[FORCE] + Enter your [ACCESS CODE]*

One-touch Button, ✓ if enabled: ☐

To arm when staying:



To Stay Arm
(Arms Area's perimeter)

[STAY] + Enter your [ACCESS CODE]*

One-touch Button, ✓ if enabled: ☐

To Instant Arm

(Stay Arms Area, but if any armed zones are breached, it will instantly cause an alarm)

Stay Arm + press [STAY] for 3 seconds during the exit delay.

To Disarm: enter your [ACCESS CODE]

* If needed, press button(s) corresponding to desired partition(s).

FNC1 BUTTON

Your system may have one or more home automation options. One of these options may be triggered directly from the keypad (i.e. reset smoke detector, activate lights, etc).

Press **[FNC1]** for 3 seconds to activate.

BYPASS PROGRAMMING

Bypassed zones remain unarmed when the area is armed.

One-touch Button, ✓ if enabled: ☐

- 1) Press **[BYP]**
- 2) Enter **[ACCESS CODE]**
If needed, press button(s) to choose partition(s).
- 3) Enter the zone number or scroll the list and press **[BYP]** when the desired zone appears on the screen.

OR

Press **[BYP]** for Bypass Recall

To re-bypass the zones bypassed during last armed period.

- 4) Press **[ENTER]** to exit

KEYPAD SETTINGS

You can modify the keypad's settings to suit your needs.

- 1) Press & hold **[6]** for 3 seconds
- 2) Choose one. Press:
 - [1]** Backlight: keypad's light (7 is brightest)
 - [2]** Contrast: character intensity (7 is lightest)
 - [3]** Scroll Speed: time between messages (7 is slowest)
- 3) Press **[▲]** or **[▼]** to modify
- 4) Press **[ENTER]** to save
- 5) Return to step 2 or **[CLEAR]** to exit

CHIME PROGRAMMING

Keypad beeps when the zone opens.

- 1) Press **[9]** for 3 seconds
- 2) Enter the zone number or scroll the list and press **[FNC1]** when the desired zone appears on the screen.
- 3) Press **[CLEAR]** to exit

In Step 3 of Bypass or Step 2 of Chime Programming, re-enter the zone number or press the button indicated to disable the feature.

ALARM MEMORY DISPLAY

To view the alarms that occurred last armed period.

1) Press **[MEM]**

Use the arrow buttons to view the zones that were breached during the last armed period.

2) Press **[CLEAR]** to exit

Made a mistake?

Press **[CLEAR]** to erase entry or revert to last step

TROUBLE DISPLAY

When a trouble condition occurs, “System Trouble *[TRBL]* to view” will appear on the screen.

1) Press **[TRBL]**

2) Use **[▲]** or **[▼]** to view the occurring trouble(s) (see Trouble List). Consult the User Manual or contact your Security Company for repairs.

3) Press **[CLEAR]** to exit

TROUBLE LIST

No or Low Battery

Wireless Transmitter Battery Low

Power Failure

Bell/PGM2 Disconnected

Bell Current Failure

Auxiliary Current Failure

Communication Failure

Timer Loss

Press **[8]** and enter time (HH:MM)

Tamper/Zone Wiring Failure

Press **[9]** to view which zone(s)

Telephone Line Monitoring Failure

Fire Zone Trouble

Module Loss

Wireless Transmitter Supervision Loss

Press **[MEM]** to view which zone(s)

Keypad Fault

ACCESS CODES

To program Access Codes:

- 1) Press **[ENTER]**
- 2) Enter your **[MASTER CODE]**
- 3) Enter three-digit section (see Table)
- 4) Enter new 4- or 6-digit **[CODE]**
- 5) Press **[CLEAR]** to exit

Section:

Codes:

| | |
|----------------|-------------------------|
| [001] | System Master Code |
| [002] | Master Code 1 |
| [003] | Master Code 2 |
| [004] to [047] | User codes 004 to 047 |
| [048] | Duress or User code 048 |

To delete Access Codes:

- 1) Repeat steps 1 to 3
- 2) Press **[FORCE]** for each digit
- 3) Press **[CLEAR]** to exit

Web site: www.paradox.ca



Security Company:

ONE-TOUCH BUTTONS

Press & hold a button for **3 seconds** without entering your Access Code.

The installer must enable each One-touch Button.

To Regular Arm: Press **[ENTER]**

To Stay Arm: Press **[STAY]**

To Force Arm: Press **[FORCE]**

To Bypass: Press **[BYP]**

PANIC BUTTONS

To send a silent or audible alarm to your Security Company, press and hold one of the button combinations listed in the table below for 3 seconds.

Panic Alarm Type

Button Combinations

| | |
|---------|--------------------|
| Police | [1] and [3] |
| Medical | [4] and [6] |
| Fire | [7] and [9] |

FAST EXIT

When the system is **already** Stay Armed, press and hold the button for 3 seconds to start the Exit Delay.

Press & hold:

[STAY]: Stay Armed after Exit Delay

[FORCE]: Force Armed after Exit Delay

[ENTER]: Regular Armed after Exit Delay