

TWO LINES ALPHA NUMERIC PAGER

USER'S MANUAL

Model - AL-812 / AL-612R



CONTENTS



Control Buttons.....	1
Features and Functions.....	2-3
LCD Display	4
Receiving and Reading Your Message	5
Out of Service Range	6
How to Move the Cursor	7
Setting the Alert Mode	8-9
Turning Your Message Receiver Off / On	11
Setting the Alarm Mode	12
Setting the Time and Date	13
Setting the Auto Scroll	14
Locking and Unlocking Messages	15
Deleting Message from Memory	16
Deleting All Message from Memory	17
Move to Memo	18
Full Message / Mail Drop	19
Set Mail Drop Alert	20
FM Radio Function	21




FM Radio Operation Features

(AL-612R Only)

To utilize your FM radio, simply insert the earphones into the slot provided. Once the red light is illuminated you can start tuning the radio to desired station. The radio tuner has auto scan capability; therefore it will automatically search for any available station. Unplugging your earphone will automatically turn off your radio. The FM radio function and the paging function are operated on 2 separate bandwidths; therefore utilizing one will not cause interference to the other. Please note that using the FM radio will dramatically decrease battery life; therefore for best paging reception, please always change your battery whenever the low-battery indicator appears.


Set Mail Drop Alert

1. To move the cursor to the Mail Drop.
2. Press **||** , to display the function menu. Press **▶** , to move the cursor to set mail drop alert ().
3. Press **||** , to activate the function .Or press  , to exit the function .

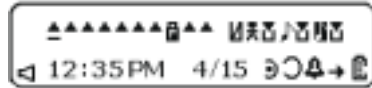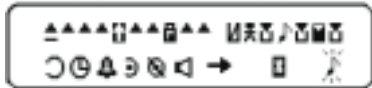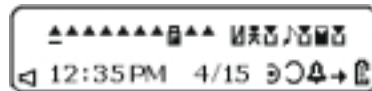



Control Buttons


Model: AL-812

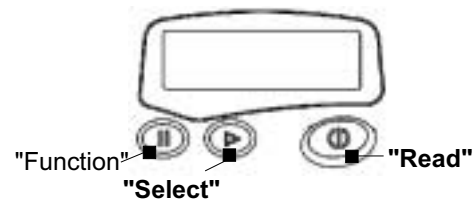


Model: AL-612R

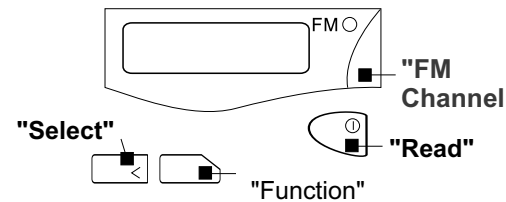

-  Read button
 - to read message
 - to turn the back-light on
 - to turn the power on
 - to activate the function

-  Select button
 - to move the cursor
 - to read message by cycles

-  Function button
 - to display the function menu
 - to adjust the time and date change
 - to enable the function mode



-  FM button
 - to change the FM channel

Features and Functions

- Two lines Total 36 English Alpha Letters Display
- Display Black Light
- 10 Memory Slots + Message Full 10 sets
- Personal Message Memory : 10 sets
- Mail Drop : 5 Slots, Total 25 sets
- Time / Month / Date / Year Display
- User Selectable 12 / 24 Hour Clock
- Message Date And Time Stamping
- Incomplete Message-In Indication
- Manual On / Off operation
- Unread Message Indicator
- Duplicate Message Indicator
- Message Lock
- All or Individual Message Delete
- Low Battery Alert / Display
- Message Preview For A Quick Look At Each Message



Full Message

To move the cursor to the symbol of Full message index , up to 10 messages can be stored . Press () , to enter Full message to read messages.() is displays the symbol of Full message .

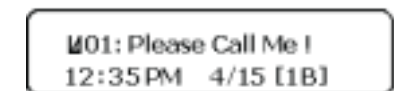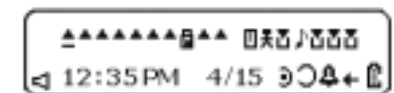



Mail Drop

To move the cursor to the () or () symbol of Mail Drop , up to 25 messages (5 sets, each set for 5 messages) are available .Press () , to read the message of Mail Drop . () is displays the symbol of Mail Drop

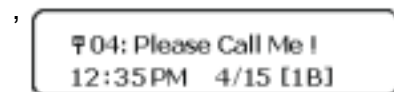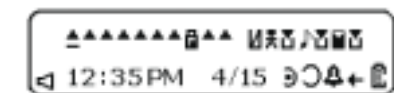



Moving to Memo

1. Press **||**, to display the function menu .
2. Press **▶**, to move the cursor to memo (**☎**) .
3. Press **||**, to move the message into your personal memo.

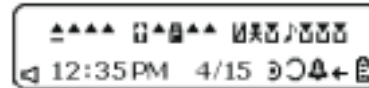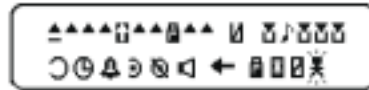



Memo

Up to 10 Personal Memo are available to store . (**☎**) is displays the symbol of Memo .

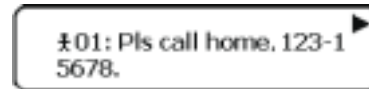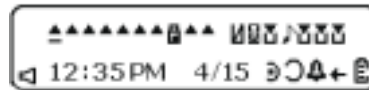

- Reminder Alerts
- Message Full Indication
- Message Full Auto Storage
- Message Auto Storage to Mail Drop (User selectable)
- Display Out Of Service Area
- Auto-Sleep Mode
- Display 5 Daily Alarms Sets
- 4 Beep Alert / Silent Vibration and Vibration then Beep / 8 Musical / Sleep Mode
- Mail Drop Alerts
- Save Message When Off And When Changing The Battery

LCD Display

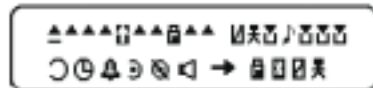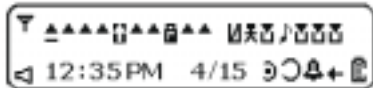

LCD DISPLAY

- BEEP ALERT
- MUSIC ALERT
- ALARM
- AUTO SCROLL
- MESSAGE RECEIVING
- OUT OF SERVICE AREA
- MESSAGE CONTINUED
- BATTERY GAUGE

Message Status Symbols



- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- MAILDROP
- ERROR MESSAGE
- DUPLICATE MESSAGE

Function Menu Symbols

- CURSOR MOVE DIRECT
- SET ALERT
- PAGER OFF
- SET AUTO-SLEEP
- SET ALARM
- SET TIME
- SET SCROLL
- LOCK MESSAGE
- UNLOCK MESSAGE
- DELETE
- DELETE ALL
- MOVE TO MEMO



Deleting All Messages from Memory

1. Press **||** , to display the function menu.
2. Press **▶** , to move the cursor to delete all ().
3. Press **||** , to display the "DELETE ALL ?" screen.
4. Press **▶** , to receive confirmation of the delete all request (except the message is locked). Or press **⏻** , to exit the delete all request .

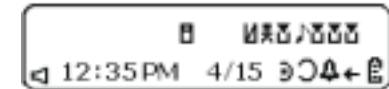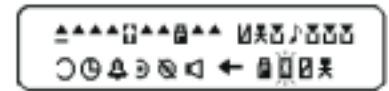

Deleting Messages from Memory

1. Press **||** , to display the function menu.
2. Press **▶** , to move the cursor to delete (**☒**).
3. Press **||** , to display the "DELETE ?" screen .
4. Press **▶** , to receive confirmation of the delete request .Or press **⏏** to exit the delete request.



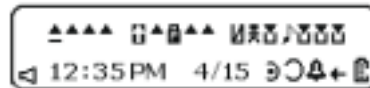
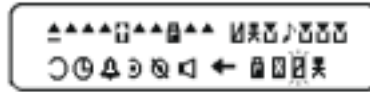


Receiving and Reading Your Message


When a message is received and has not been read ,your message receiver alerts and displays a flashing (**☒**) symbol.

1. Press **▶** , to preview all your messages.
2. Move the cursor to the desired message , press **⏏** , to display the message.

*A (**▶**) symbol at the right corner of the screen indicates the message you are reading continues beyond the two lines of the display. Press **⏏** , to advance to the next screen of the message.

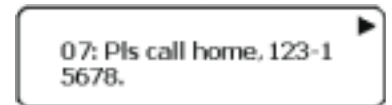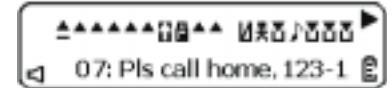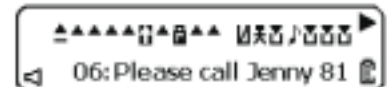
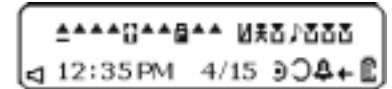


Or if you have set up the auto scroll function ,you can read your message screen by screen by rapidly scrolling .

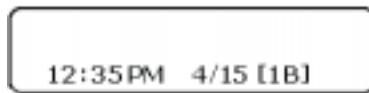





Out of Service Range

With this option enabled ,(F) is displayed whenever you are out of range of the paging transmitter. The symbol (F), is no longer displayed when you return to your transmitting area .

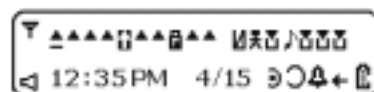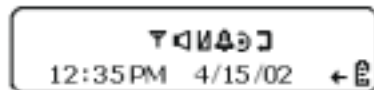



Locking and Unlocking Messages

1. Press **||** , to display the function menu.
2. Press **▶** , to move the cursor to lock (■).
3. Press **||** , to lock the message in memory , and the symbol (■) replaces to (■) .
4. Press **▶** , to move the cursor to unlock (■).
5. Press **||** , to unlock the message in memory , the symbol (■) replaces to (■) .

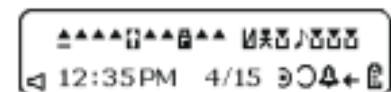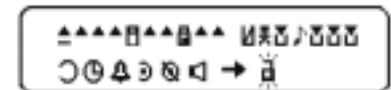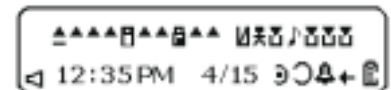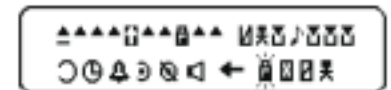




Setting the Auto Scroll

1. Press **||** , to display the function menu.
2. Press **▶** , to move the cursor to auto scroll (**○**) .
3. Press **||** , to display the " **SET SCROLL** " screen .
4. Press **||** , to select disable auto scroll (**X**) , or the speed of the auto scroll , slow (**■**) , medium (**■■**) , and fast (**■■■■**) .
5. Press **▶** , to activate the auto scroll function , and the symbol (**○**) shows of the screen .

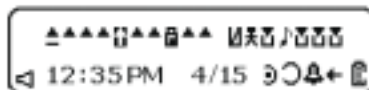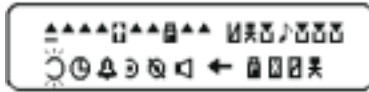

How To Move the Cursor





1. Press **||** , to display the function menu. The function menu gives you access to the many features of your message receiver through a series of symbols and prompts . When the function menu screen is first displayed , the (**→**) symbol flashes , indicating the present position of the cursor.
2. Press **||** once , to change the (**←**) symbol direction .
3. Press (**⏸**) , to activate the function . Or press **||** , to exit the function .

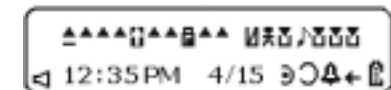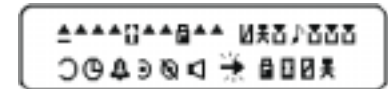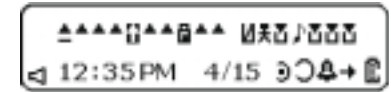

Setting the Alert Mode




1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to (**□**).
3. Press **||**, to display the alert screen, your message receiver is in the audible alert mode to select the alert pattern.(See the Example of Alert Pattern Screen II, your message receiver is in the Beep Mode/ Tone 2)

***Your message receiver has a **Beep Mode** (**□**) 4 tones , **Music Mode** (**♫**) 8 music , allowing you to select and change the alert .

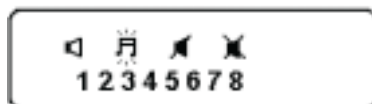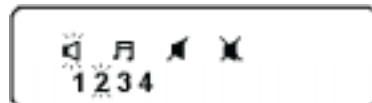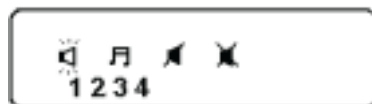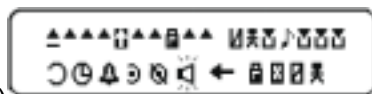


Setting the Time and Date

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to set time (**⌚**).
3. Press **||**, to display the " **SET TIME** " screen.
4. Press **▶**, to move the cursor, Press **||**, to adjust the digit value .
5. Press **⏻**, to activate the time and date change and the screen turns to stand-by mode .

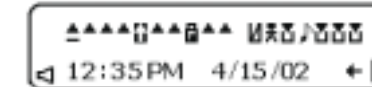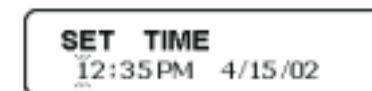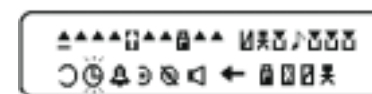

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to set alarm (🔔).
3. Press **||**, to display the "SET ALARM" screen.
4. Press **||**, to move the cursor. Press **▶**, to figure the digit value or defines the alarm status ---either alarm enabled (🔔) or alarm disabled (🔕).
5. Press **⏻**, to turn to stand-by mode, (🔔) the symbol shows of the screen.

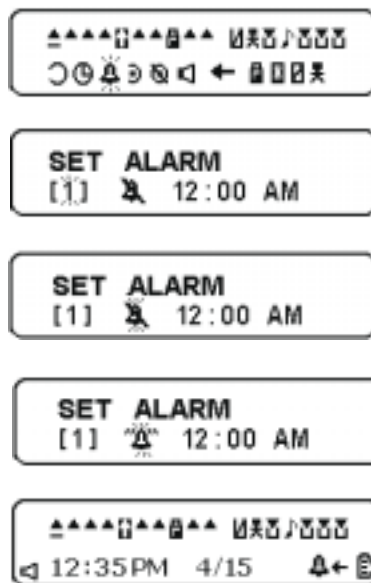

You can also select **Silent Mode** (🔕) a vibrator alert or vibrator then beep, or **Sleep Mode** (🔕) no alert.

To change your alert :


- a. Press **||**, to display 4 kinds of alert mode. The message receiver gives a sample of each alert when scrolling through the selections.
- b. Press **▶**, to move the cursor to the desired alert.
- c. Press **⏻**, to activate the alert.

***With is option enable, the message receiver has 4 symbols show of the display. (🔔) Beep mode, (🎵) Music mode, (🔕) Silent mode and (🔕) Sleep mode.



Turning Your Message Receiver Off

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to pager off (☒).
3. Press **||**, to display the "PAGER OFF ?" screen.
4. Press **▶**, to turn the message receiver off.

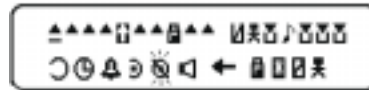

Turning Your Message Receiver On

Press **⏻**, your message receiver alerts and shows the time and date are shown at the bottom of the display.

Setting the Auto Sleep

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to set auto sleep (☒).
3. Press **||**, to display the "SET AUTO SLEEP" screen.
4. Press **||**, to move the cursor. Press **▶**, to figure the digit value or defines the alarm status ---either auto sleep enabled (☒) or auto sleep disabled (-).
5. Press **⏻**, to turn to stand-by mode, (☒) the symbol shows of the screen.

