



create possibilities

Discover 135s



User Manual

User Manual

Discover 135s

Contents

1 . WELCOME	3
2 .LAVA SUPPORT AND CONTACT INFORMATION	4
3 . INTRODUCTION	5
3.1 PHONE DISPLAY	5
3.2 KEY	6
3.3 ICONS & SYMBOLS.....	6
4 GETTING STARTED	8
4.1 INSERTING THE SIM CARD, MEMORY CARD AND THE BATTERY	8
4.2 TURNING THE PHONE ON	9
4.3 CHARGING THE BATTERY.....	10
4.4 IMPORTANT PASSWORD	10
4.5 KEYPAD LOCK AND UNLOCK.....	10
5 . TEXT ENTRY	11
5.1 INPUT METHOD	11
5.2 MULTI- ABC INPUT	11
5.3 NUMERIC INPUT.....	11
6 . CALLING.....	12
6.1 MAKING A CALL	12
6.2 ANSWERING A CALL	12
7 . MENU FUNCTIONS	13
7.1 How To Use.....	13
7.2 DIALLER	13
7.3 MESSAGE	13

7.4 CONTACTS.....	13
7.5 MUSIC.....	14
7.6 CALL LOG	14
7.7 CALENDAR.....	14
7.8 CAMERA	15
7.9 SETTINGS	16
7.10 CLOCK	18
7.11 BROWSER.....	18
7.12 DOWNLOAD	19
7.13 GALLERY	19
7.14 CALCULATOR	19
7.15 FILE MANAGER.	19
7.16 APP. MGR.	19
7.17 RECORDER.....	19
7.18 NOTES	19
7.19 TO DO LIST	20
7.20 FM RADIO.....	20
7.21 STK.....	20
7.22 E-BOOK	20
7.23 FUN	20
7.24 GOOGLE SEARCH	20
7.25 LAVA ZONE.....	21
7.26 LOCKS.....	21
7.27 MOVIE.....	21
7.28 YOUTUBE	21
7.29 FACEBOOK.....	21

8 . FREQUENTLY ASKED QUESTIONS AND TROUBLESHOOTING.....	22
--	-----------

9. SAFETY INFORMATION AND NOTICES	24
--	-----------

10 . SAR DECLARATION	27
-----------------------------------	-----------

© 2013. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all the contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.





Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.








Note: User Manual is just to guide the user about the functionality of the phone. This does not seem any certificate of technology. Some functions may vary due to modifications and upgrade of software, or due to print mistake.

For your safety

Read these simple guideline. Not following them may be dangerous or illegal.

Read the complete user manual for further information.

	Do not switch your phone on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your phone while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your phone off near medical devices.
	Switch your phone off in aircraft. The radio signal from it may cause interference in signals of the aircraft.

	Switch your phone off near high-precision electronic devices. It may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel may service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a petrol pumps.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Observe any laws or regulations on the use of phone. Respect others' privacy and legal rights when using your phone.

1. Welcome

Congratulations on your purchase of the LAVA Discover 135S mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, Ultra clear video

You can read the manual to understand how to use Discover 135S mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. Lava shall not be responsible for any damage in machinery due to use of non-original components.

2.LAVA support and contact Information

 
Check www.Lavamobiles.com web site for additional information downloads, and services related to your LAVA product.

Toll free number

18602007500

3. Introduction


3.1 Phone Display

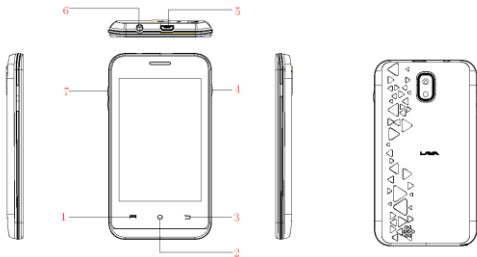








3.2 Key

Key	Function
1.Main Menu	Go to Main menu using this key
2.Idle Mode Key	Return to the idle mode.
3.Back Key	Back to previous menu.
4. Power on/off Key	Pressing and holding to turn the phone on/off.
5. USB Slot	Use USB and Charger to to transfer data or Charge mobile
6.Headset Connector	Connect the headset.
7. Volume Key	Press to increase or decrease volume. Up → increase volume Down → decrease volume

3.3 Icons & Symbols

Icon	Indicates
	Signal strength Vertical bars show the strength of the network connection. The icon is displayed on the standby screen.

	<p>Battery strength</p> <p>Filled area shows the battery level. The icon is displayed on the standby screen.</p>
	<p>Alarm</p> <p>The icon shows an alarm is on. When the alarm is off, it disappears.</p>
	<p>Unread message</p> <p>The icon is displayed on the standby screen when there are unread messages in the inbox.</p>
	<p>Meeting</p> <p>When the mode is set to Meeting, the icon displays in the standby screen.</p>
	<p>Silent</p> <p>When the mode is set to Silent, the icon displays in the standby screen.</p>
	<p>The Phone is locked.</p>
	<p>Earphone.</p>

 
4 Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

4.1 Inserting the SIM Card, Memory card and the battery

Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card and Memory card. Hold the phone with the front facing downwards; pull the battery cover downwards and lift the cover upwards to remove it.



Remove the battery

 
Put your finger on the black holder located at the bottom of the battery slot and lift the Battery up to remove it.



Insert the SIM card

Make sure that the clipped corner of the SIM card is facing the correct direction (clipped corner at top right) and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops; To install the Memory Card, open

its latch, place its indented side downward, insert the card into the card slot, and then close the latch.



Install the battery

With the metallic contacts of the battery facing the metallic contacts in the battery slot, tap the battery down until it locks into place.

Install the back cover

Align and hook the back cover to the top of the battery slot and then push the cover upwards until it locks into place.

4.2 Turning the phone on

To turn the phone on, tap and hold the Power on/off key. If you have already enabled the SIM Lock function then enter the PIN code (the 4 to 8 digit secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain a code from your network operator.

If the phone lock is enabled then you must enter the 4 to 8 digit phone lock code to unlock the handset. By default this code is based on the operator

4.3 Charging the Battery

Ensure the battery inserted in the handset. To charge the battery, plug in the charger connector at the top of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

4.4 Important Password

Default password for phone lock and restore factory settings is 4321.

4.5 Keypad Lock and Unlock

In the standby mode, press power on/off key to lock the keypad manually, and tap the lock icon slide to unlock the keypad.

5. Text Entry


5.1 Input Method

Your mobile phone supports several input methods, which includes:

Multi-Tap (ABC/abc/Abc/Hindi)


Numeric(123)

Changing the input modes


During text editing, you can tap the icon  to change input methods, and press and


hold the icon  to switch input modes: abc/Hindi

Entering Symbols

In any input mode, tap the icon  to insert symbol. Tap the desired symbol to input it.

5.2 Multi- ABC Input

During text editing, press and hold the icon  to switch input modes, then press the

Icon  to switch on(off) Multi-ABC Input method.

This method requires multiple key taps to reach the desired character: the letter "h" is the second letter on the 4 key of soft keypad, so you must tap 4 twice quickly to enter "h". Using this mode requires you to tap a key as many times as needed to enter the desired letter.

Example:

To enter the word «home» in Multi-tap input mode "abc", tap key 4(GHI) twice, tap key 6(MNO) thrice, tap key 6(MNO) once and key 3(DEF) twice.

5.3 Numeric Input

In "123" input mode then you can enter the numbers by soft keypad.

6. Calling

6.1 Making a Call

In idle mode, tap the phone icon to enter dial pad, input the phone number.

Press the Call icon to dial the number.

Press the End Call icon to end the call.



Note: During a call, press the volume key to adjust the volume.

Making an International Call, in dialpad mode:

1. Press and hold the '0' Key to enter "+".
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Tap the Dial icon to call directly.

6.2 Answering a Call

Tap the Accept icon to answer it.

Tap the Reject icon to reject it.

7. Menu Functions

7.1 How To Use

Tap Menu icon in Idle mode.

Tap the icon to choose desired operation or slide the screen to choose to enter the menu.

You can exit a menu and return to idle mode by taping the Back key or Idle Mode Key.

7.2 Dialler

Touch the Dialer icon on the Home screen or in the Main menu to open dial pad screen. In dial pad screen, you can input phone number to originate a call.

7.3 Message

Creating a text message

1. Select New message > Text message.
2. Write a message, please refer to the **Text entry** section of this manual for detailed information.

Create a new multimedia message

1. Select New message.
2. Tap (**Insert**) and select the items you want.
3. Choose enter recipient or add from phonebook and select send.

7.4 Contacts

Your phone features two Contacts. The SIM Contacts is located on your SIM card and the number of entries you can store depends on the SIM card. The second Contacts (Smart Contacts) is integrated in the phone memory.

Add new contact

1. Select Contacts > Add contact.

2. Edit contact.

If you want to save to SIM, you can only edit name and number.

3. Finish editing, tap Save or Cancel.

Searching for a Contact

1. Select Menu > Contacts.
2. Enter the name or the first letter of the name.

7.5 Music

Songs

List all the music files, the icons' function during music playing are as follows:

Icon	Description
Play/Pause icon	Tap to play/pause the current song.
Rewind icon(left)	Short tap to select the previous song
Forward icon(right)	Short tap to select the next song.
Back icon	Back to previous menu.
Playlist icon	Tap to Now playing playlist

When an external memory card is loaded into your phone, its files will be automatically available at through their respective applications.

7.6 Call log

1. Show different call logs.
2. Choose a particular number and press the Dial icon to call the number directly.
3. Delete call logs if you want.







7.7 Calendar



Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc.









7.8 Camera

Your mobile phone features a camera that allows you to take pictures with great clarity and sharpness, store them, set them as wallpaper or send them to your friends. Please ensure that the camera lens is clean before you take pictures, as small dust particles can strongly affect the picture quality.

How to ...

Launch Camera	Enter the main menu then select Camera
Take a picture 	Choose capture mode by slide the icon to  side Tap capture icon  After taking, the picture will be saved as JPG format in Main Menu > File manager > Memory card (T-Card)> My shootings menu automatically.
Take a video 	Choose video mode by slide the icon to  side Tap video icon.  After taking, the video will be saved as AVI format in Main Menu > File manager > Memory card (T-Card)> My shootings menu automatically.
Exit	Tap the Back icon.

Photos 	Enter the album according to the storage.
Camera settings 	Tap capture menu, camera setting icon appears. EV: Hold and slide icon to left or right to adjust EV. Self-timer: Off, 5 secs, 10 secs White balance: Auto / Daylight/ Tungsten / Flourescent / Cloudy / Incandescent Effects: Normal / Grayscale / Sepia / Invert Resolution: Wallpaper/ 0.3MP/ 1.3MP

	<p>Flash: Off, On.</p> <p>Storage:Phone or Memory card</p> <p>Camcorder/Video settings there are some different from camera.as follow:</p> <p>Limitation:No limitation ,15 secs, 30 secs; 60 secs;</p> <p>Time lapse:Off,On</p> <p>Quality:Fine ,Good,Normal,For MMS</p>
<p>Flash Light Settings</p>  	<p>Tap capture menu, camera setting icon appears. tap icon , icon  appears, then tap  to switch flash light off.</p> <p>When flash light off, Tap icon , icon  appears, then tap  to switch flash light on.</p>

7.9 Settings

You can configure your mobile phone to best suit your usage preferences.

7.9.1 Network & connectivity

1. Flight mode

This menu option allows to switch on/off flight mode.

2. Connectivity settings (Bluetooth)

You can use the BT to transfer data and files by pairing with other device.

3. Cellular network settings

This feature allows you to automatically or manually choose your network operator.

7.9.2 Personalization

1. Theme settings

You can set wallpaper and screen lock manually.

2. Sound settings

You can set sound or ringtone manually.

3. Notification settings

You can switch on/off notification service and set notification for message, call log and download.

4. Security settings

Phone lock and SIM lock

When activated, this feature requires you to enter a pre-set password every time you switch on/ power on your handset. It protects your phone from unauthorized access.

SIM security

PIN lock	The SIM card is protected against misuse by the PIN code. SIM card lock may be set after you enter the PIN code correctly.
Change PIN/PIN2	Set new passwords, including SIM PIN and SIM PIN2.

7.9.3 System

This Menu option allows you to set phone parameters such as Brightness, Screen auto-lock(15 secs, 30 secs, 1 min, 2mins, 5 mins and 10 mins, Never),Enhanced picture quality, Date&Time setting, Language&input method ,Dual SIM setting ,Schedule power on/off , SIM usage and Restore factory settings(restore the original device settings, default code 4321), ect.

7.9.4 Application

1. Call settings

Black list: you can set many numbers. When this Black list is enabled, you won't receive the calls from the numbers entered in the Black list.

Auto redial: turn on, the phone will automatically redial the last called number after a while if you fail to connect to the number. Press Cancel to end Auto Redial.

Call time reminder: This function prompts you to end the call in time to save the call cost. You can select Off, Single, or Periodic.

Auto call recording: The sound will be auto record in-call.

Call limiter: The call will auto-end in set time

Call limit time: Set the call limit time through this function.

Connect notice: Turn on , there will be vibration when call is connected.

Auto answer: Enable or disable auto answer when headset mode.

Additional call settings: This Menu option allows you to set phone parameters such as Hide my caller ID, Call waiting/forwarding/barring, Closed user group, Line switching,etc.

2. Contact settings

This Menu option allows you to set phone parameters such as Display Contacts From, Set speed dial list, Backup contacts, Restore contacts, Copy to phone/sim, and Fixed dial number(FDN).

3. Messaging settings

This Menu option allows you to check and set messaging parameters, such as Templates, Memory status, Text message, Multimedia message, Service message, and Broadcast message.

7.10 Clock

You can set Alarm, Worldclock, Stopwatch and Timer through this function.

7.11 Browser

You can use Browser to view web pages and search for information on the web.

7.12 Download

Through this function, you can view a list of files and applications which you downloaded from the webpage.

7.13 Gallery

This menu lists the shootings, pictures and videos from **Menu > File manager > Memory card (T-Card)** according to its storage setting.

7.14 Calculator

This calculator provides limited precision and is only applicable to simple arithmetic calculation.

7.15 File manager.

1. Select Menu > File manager.
2. Select Phone or Memory card by its icon.

7.16 APP. mgr.

Through this function, you can view a list of APP property and MRE settings.

7.17 Recorder

1. Select Menu > Recorder.
2. Tap the Quality settings to set your Audio quality.
3. Back to the previous menu, tap record icon.

In the recording screen, you can tap the left (red) icon to Pause or Continue.

If you have finished, tap the Stop icon to stop recording.

Rename the file by choosing Rename from Options.

7.18 Notes

Add notes and edit or delete them.

7.19 To do list

Add tasks and edit or delete them.

7.20 FM radio

1. Insert earphone, then Tap the Power icon to stop or play FM.
2. Tap the forward by 0.1 MHz or scroll the knob icon to change channel frequency. Press volume key to adjust the volume.
3. Tap Auto search, Settings, Record and Favorites icon to adjust.



Note: Saved sound files can be found in the **Menu > File manager >Memory card (T-Card)> My-records**

7.21 STK

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

7.22 E-Book

E-book reader enables you to read TXT file. Through the USB connecting line putting files to E-book folder of phone or T-Flash card. After finishing downloading, you can find the folder and open the E-book to read text directly.

7.23 Fun

There is a game for you play, any question enter Games settings.

7.24 Google Search

The Google Search function enables you to open a search box for searching the web.

7.25 Lava Zone

You can download wallpapers and other content through the portal.

7.26 Locks

There are three lock screen mode for you select ,you can choose which you like

7.27 Movie

List all the video files, the icons' function during video playing are same as music player.

When an external memory card is loaded into your phone, its files will be automatically available at through their respective applications.

Example: videos will be automatically available in Movie folder.

7.28 YouTube

You can enter YouTube interface through this access.

7.29 Facebook

You can enter Facebook interface through this access.

8. Frequently Asked Questions and Troubleshooting

Frequently Asked Questions	Cause and Solution
Unable to turn on phone	Tap the power on key for over 1 second. Check if the battery is properly connected. Please remove and install it again, retry to turn on; Check if battery is appropriately charged
Unable to connect to a network	Weak signal. Please Try and move to a location with strong signal and try connecting to the network again; Please ensure that you are not beyond the network coverage of service providers; Please ensure you have a valid SIM card. Please contact your network provider for further information;
Poor quality of calling	Please check if the sound volume is tuned improperly In an area with poor receiving condition, example: basement, the signal might be weak. Try reaching a location with stronger Signal reception and call again. While using the mobile phone in the peak period of Communication, like commute time, you may be unable to call because of line congestion.
Standby duration shortened	The standby duration is relative to the system setting of network. While the mobile phone is in an area with poor signal strength and cannot receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in area with no signal reception to save battery.

	Need replacing the battery. Please change a new battery.
SIM Card Error	Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not installed. The SIM card is damaged. Please contact your Web provider.
Unable to dial out	Please confirm if you tap the dial key after dialing. Please confirm if calling is forbidden because of defaulting. Please confirm if the SIM is valid. Please confirm if the call barring is set. Please confirm if the fixed dial function is set.
Callers unable to contact you	Please confirm if the mobile phone is on and connected with the network. Please confirm if calling is forbidden because of defaulting. Please confirm if the SIM card is valid. Please confirm if the call barring is set.
Unable to charge handset	Poor contact. Please check if the plug is connected well. Please confirm if the environment temperature is within the range of 0°C ~40°C while charging. The battery or charger is damaged. You need to replace it.
Unable to set some functions	Wrong operation. The network provider does not support the function, or you have not applied for it.

Note: If the instruction above cannot help you solve problems, please record:

Mobile phone model and serial number

Specific content of warranty

Clear statement of problems

Then contact your local dealer or a **LAVA** authorized service center in your area.

9. Safety Information and Notices

Using the Mobile Phone and Charger

Only use authorised battery and charger. Using other brands may cause battery leakage, overheating, explosion or even fire.

Caution:

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from rain and liquid.

Warning:

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire; also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire, breakdown or damage.

To avoid any damage or breakdown, do not disassemble the phone, battery, charger or internal components by yourself.

Using the Mobile Phone

Warning:

Do not use the phone while you are driving. Pull over and stop your automobile to dial or listen to a phone call.

Usage of mobile phones in aircrafts or hospitals is prohibited. Switch the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your mobile phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

Caution:

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices.

Manufacturers of these systems will tell you whether they are provided with good screening functions. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your mobile phone near or with a credit card, disk or other magnetic materials. This may effect information stored on your phone.

Keep your phone away from pins. Pins can be absorbed by the phone's receiver magnet, which may cause harm.

Using the Battery

Do not dispose of the battery into a fire. Doing so may cause battery explosion or even fire.

If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

Warning:

Replace the battery when the normal usage time begins to decrease or if you notice the battery is overheated or has changed shape or color.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution:

Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Cleaning and Maintenance

The mobile phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on them.

Use a soft cloth to clean the mobile phone, the battery and the charger.

Do not use alcohol, diluted liquid or benzene to clean the mobile phone.

If dust gets in the sockets the phone can be damaged, short-circuit or even the lose the ability to be re-charged. Be sure to clean the socket regularly.

10. SAR declaration

The highest SAR value for this mobile phone is **< 1.6 W/Kg**, in accordance with the requirements of the ICNIRP, which recommended the limit for exposure to radio waves is 1.6 watts/kilogram(W/kg) averaged over 1 gram of tissue. For more information, please visit (www.lavamobiles.com) to query Safety precautions:

- Use a wireless hands-free system (Headphone, headset) with a low power Bluetooth emitter
- Make sure the cell phone has a low SAR
- Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women
- Use cell phone when the signal quality is good
- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.

All the configurations mentioned in this user manual is only for reference; please refer to the actual phone.

E-waste Disposal Mechanism

'E-waste' means waste electrical and electronic equipment (WEEE). In other words E-waste is a popular, informal name for electronic products nearing the end of their "useful life". For more details about e-waste please refer e-waste rules, 2011 www.moef.nic.in

Do's and Don'ts for disposal e-waste

Do's:

Ensure that an Authorized Person repairs your Lava products
Call Our Local Authorized Collection Centers to Dispose Lava products

Always drop your used electronic products, batteries or any



accessories thereof after the end of their life at nearest Authorized Collection Point or Collection Center.
Separate the packaging material according to responsible waste disposal options and sorting for recycling.
Always remove the battery from the product, when you do not intend to use the product anymore it in future.

Don'ts:

Do not dismantle your Lava Product on your own
Do not give your e-waste to Kabbadi Wala / Scrap Dealer/ Rag Pickers.
Do not dispose-off the e-waste in landfills.
Never dump E-waste in garbage bins.
Do not dispose of your product at municipal waste bins or rooms.
Do not throw used batteries into household waste.
Consequences of improper handling and disposal of E-Waste
Improper disposal of waste prevents natural resources from being re-used.
Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment
If e-waste is not properly disposed of, it can threat to the health and well-being of humans and animals and it also has adverse effect on the environment.
Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
If the battery terminals are in contact with metal objects, it may cause a fire.
For more details on how to dispose of your Lava products at the end of life, Please refer the list of our Services Centers on

Pan India basis on our website www.lavamobiles.com or
please view this link for the details of Service Centers
<http://www.lavamobiles.com/support-services>.

Lava warranty certificate

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as "product")

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have to coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to 1.excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs),abuse, accidents, Acts of God, spills of food or liquids, improper installation
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.
- The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.

- The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

Read the guidelines for safe and efficient use as mentioned in the manual.

Read the terms and conditions of your Lava warranty in the manual.

Keep your original receipt; you will need it for warranty services if asked to produce.

Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.....

Dealers Stamp.....

Date of purchase.....

Model No.....

