

# **DCD-8**

## **Word Clock Distripalyzer**

### **Owner's manual**

Version 1.0.3  
Sept. 2006

All materials herein © Brainstorm Electronics, Inc.

Brainstorm Electronics reserves the right to change or modify the contents of this manual at any time.

#### Credits

Concept: AID, Brainstorm Electronics

Software: Gerry Lester

Manual: Bernard Frings, Gerry Lester

Technical Assistance: Jeff Evans, Jim Pace

**Brainstorm Electronics, Inc.**

5100 Goldleaf Circle, 215 - Los Angeles, CA 90056 - USA - Tel: +1/323/845-1171

[www.brainstormtime.com](http://www.brainstormtime.com)

## Table of contents

1. INTRODUCTION .....	3
2. I/O'S DESCRIPTION AND CABLE REQUIREMENTS .....	4
3. INSTALLATION .....	5
4. QUICK START .....	5
5. FRONT PANEL DISPLAY & LED'S .....	6
6. NAVIGATION KEYS .....	7
7. MENU NAVIGATION .....	8
8. MENUS DESCRIPTION .....	9
01- Rate A .....	9
02- Reference A .....	9
03- Alternate Reference .....	9
04- Word Clock Out .....	10
05- Audio Out .....	10
06- Audio In A .....	10
07- Audio In B .....	10
21- Rate B .....	11
22- Reference B .....	11
31- DCD-8 Link .....	11
32- Optical I/O .....	11
33- AES Input Default Clock Source .....	12
41- Input Status .....	12
42- Termination .....	12
91- Menu Lockout .....	12
92- Settings .....	13
99- DCD-8 Software version & FW Serial No .....	13
9. NON-VOLATILE STORAGE .....	13
10. LOCK STATUS .....	14
11. DEFINING THE RATE: Set, Auto & Learn .....	14
12. ALTERNATE REFERENCE .....	16
13. AUDIO ROUTING .....	17
14. REF B .....	18
15. FIREWIRE .....	19
16. DCD-Link .....	19
17. UPDATING THE DCD-8 FIRMWARE .....	19
18. APPENDIX .....	20
Pulled Rates .....	20
Multiplier Rates .....	20
Error Messages .....	21
Digital Audio Formats .....	23
Factory Default Settings .....	23
User Settings .....	24

# 1. Introduction

Congratulations on purchasing the DCD-8 Word Clock Distributalyzer. In the tradition of the Brainstorm Distripalyzers, the DCD-8 is a Word Clock **distributor**, **striper** and **analyzer**.

Inside the DCD-8 is a very flexible generator with ultra low-jitter. With its many I/O's the DCD-8 is a complete word clock solution. It's main features include:

- Word clock generator
- Word clock extractor
- Word clock distributor
- Digital Audio router
- Format converter
- Word clock analyzer
- Video Sync Generator (optional)


## 1.1. SYSTEM ARCHITECTURE

The DCD-8 generator has 2 domains, A & B, each capable of generating a different rate. Any rate can be generated, up to 192KHz.


The DCD-8 can be referenced to any of the inputs: WC, AES, S/PDIF, FireWire, Optical, video or internal crystal.

The A and the B rates can be assigned to any word clock BNC output and audio output, as silent audio.

In addition, each domain can re-clock any audio input and route it to any audio output.

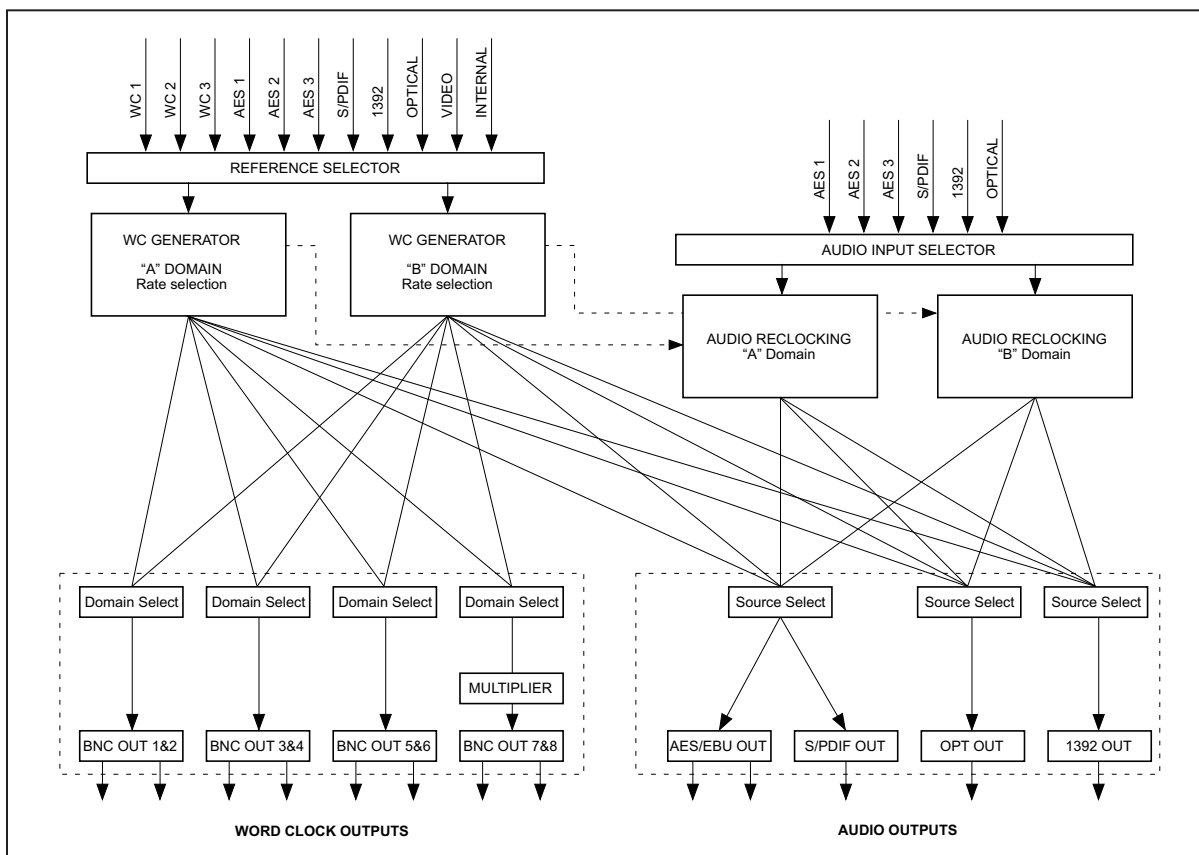

## 2. I/O's Description and Cable Requirements

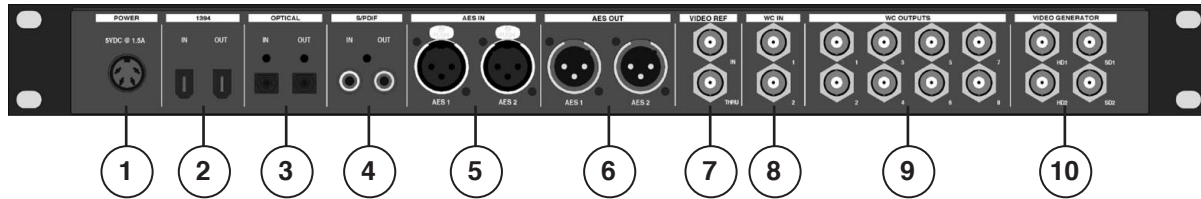

### 1. POWER

The DCD-8 requires 12VDC @ 25W. Acceptable voltage range is 12VDC -10% thru 18VDC +10%.

The external power supply provided with the DCD-8 can accept 100 to 240 VAC input at 50 - 60 Hz so it is suitable for use anywhere in the world.

➤ Use the standard IEC power cable supplied.

### 2. 1394

This IEEE 1394 I/O is used to send /receive digital audio to /from a FireWire device.

➤ Use standard 6-pin FireWire 400 cables.

### 3. OPTICAL

Optical transmitter & receiver - this I/O can be used with ADAT or S/PDIF optical audio signals. See menu 32 for selecting the appropriate format.

➤ Use standard optical fiber cables.

### 4. S/PDIF

2 RCA connectors - I/O. transformer isolated Used for coaxial S/PDIF. Used also to link multiple DCD-8's together (see menu 31).

➤ Use standard 75Ω RCA coaxial cables.

### 5. AES/EBU IN

2 XLR female connectors - Transformer isolated balanced inputs; accepts AES3 or AES11.

➤ Use standard 3-conductor shielded 110Ω XLR cables.

### 6. AES/EBU OUT

2 XLR male connectors - Transformer isolated balanced outputs for AES3 or AES11.

➤ Use standard 3-conductor shielded 110Ω XLR cables.

### 7. VIDEO REF (IN & LOOP)

2 BNC connectors - Input & Loop through Video Ref can be NTSC, PAL or HD analog reference signal

IMPORTANT NOTES:

- This input is unterminated. If the DCD-8 is the last item in the chain, it needs to be terminated by placing a 75Ω terminator on the loop BNC.
- If the video reference is HD analog reference signal, we recommend NOT daisy-chaining it.

➤ Use a standard 75Ω video cable.

### 8. WORD CLOCK IN

2 BNC connectors - Transformer isolated WC inputs Internally terminated with 75Ω.

➤ Use standard 75Ω coaxial BNC cables.


### 9. WORD CLOCK OUT

8 BNC connectors - WC outputs grouped in 4 pairs: 1&2, 3&4, 5&6, 7&8.

➤ Use standard 75Ω coaxial BNC cables.

### 10. VIDEO SYNC GEN OUT (Optional)

For info, see the Video Sync Generator's manual.

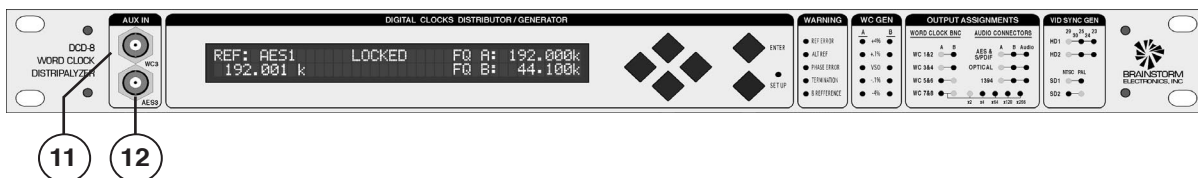

### 11. WORD CLOCK INPUT 3 - FRONT PANEL

1 BNC connector - transformer isolated This connector is identical to the other 2 WC inputs on the rear panel.

➤ Use a standard 75Ω coaxial BNC cable.

### 12. AES/EBU INPUT 3 - FRONT PANEL

1 BNC connector - transformer isolated This front panel BNC accepts unbalanced AES/EBU input (AES3id).

➤ Use a standard 75Ω coaxial BNC cable.

## 3. Installation

### 3.1. UNPACKING

When unpacking the DCD-8 the following items should be in the shipping carton:

- DCD-8 unit
- Universal Power Supply (12VDC @ 25w)
- IEC power cable
- Owner's Manual & Registration card

### 3.2. INSTALLING THE DCD-8

The DCD-8 is designed to be mounted in a standard 19" rack. It requires 1U in height. Ideally, it should be located near your AD/DA and in the same rack.

Usual precautions should be respected when wiring the DCD-8: use high quality cables with good shield to guarantee a good signal transmission. Keep your cables as short as possible.

Word Clock inputs on the connected devices need to be terminated. If they are not, use a BNC-T with a 75Ω termination.

To preserve the integrity of the transmission line, it is recommended that you do not daisy-chain word clock outputs as it can significantly degrade signal quality.

## 4. Quick Start

The DCD-8 is very versatile and can accommodate many different situations. You should read through this manual to familiarize yourself with its many features. The following few simple steps are only provided to get you started right away.

Connect the power supply provided with the DCD-8 to the 4 pin DIN power connector on the rear panel and plug the IEC cable into a proper wall outlet. This turns on your unit.

If the unit has already been used, please refer to page 13 to reset the factory settings. If not, out of the box, the DCD-8 is set to generate a 48KHz Word Clock, referenced to its internal crystal. This rate is fed to all 8 WC outputs, as well as all 5 audio outputs (as silent audio).

### 4.1. CHANGING THE RATE

To select a different rate, follow these steps:

- Press the [SET UP] key (the SET UP LED lights up)
- In Menu 01, press the [RIGHT] navigation key once to move to the Rate field
- Press the [UP] or [DOWN] keys to select the desired rate
- Press the [ENTER] key to confirm your choice
- Press the [SET UP] key again to exit SET UP (the Set Up LED goes out)

Your selection is reflected in the upper right corner of the LCD display, following FQ A.

### 4.2. CHANGING THE REFERENCE

 
To select a different reference, follow these steps:

- Press the [SET UP] key (the SET UP LED lights up)
- Press the [UP] key once to go to Menu 02
- Press the [RIGHT] navigation key once to go to the REF selection
- Press the [UP] or [DOWN] keys to select the desired reference
- Press the [ENTER] key to confirm your choice
- Press the [SET UP] key again to exit SET UP (the Set Up LED goes out)

Your selection is reflected in the upper left corner of the LCD display, following REF.

## 5. Front Panel Displays & LED's


The DCD-8 has been designed so that most of the relevant information would always be available at a glance on it's front panel.



### 5.1. LCD DISPLAY

The 80 character LCD is broken into three separate areas:

- Left: displays the currently selected reference and it's frequency
- Center: shows the Lock Status
- Right: displays the selected A & B frequencies.

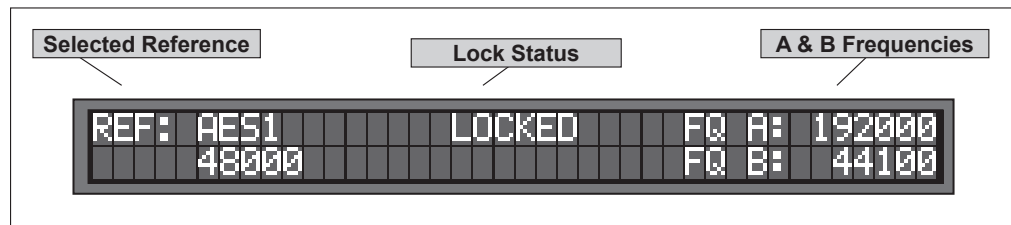

### 5.2. OUTPUT ASSIGNMENTS LED'S

To know what signal has been assigned to each output, there are 22 LED's describing the selections made.


#### Word Clock Outputs: A-B

These LED's indicate which frequency has been assigned to each WC output pair: A or B.

For WC Outputs 7&8, 5 LED's indicate if a multiplier has been applied.

#### Audio Outputs: A-B-Audio

- If 'Audio' is off, the output is silent audio at the A or B rate; LED's indicate which.
- If 'Audio' is on, the output is the audio source selected in menu 6 for A or 7 for B.

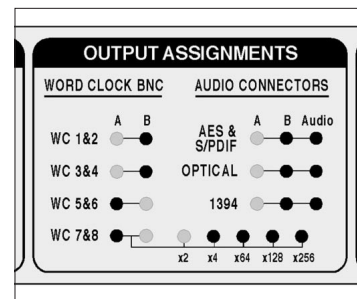


### 5.3. WC GEN LED'S

4 different "pull" coefficients are available. Each has a corresponding LED for A and B domains:

- + 4.16%
- + 0.1%
- - 0.1%
- - 4.0%

These coefficients can be combined to create +4.27% and -4.096%.

VSO (varispeed) LED indicates that another rate (non-standard) is generated.

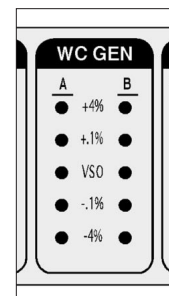

#### 5.4. WARNING LED'S


REF ERROR: a failure of the selected reference occurred

ALT REF: the DCD-8 had to switch to the alternate reference

PHASE ERROR: one of the inputs is out of phase (see menu 41)

TERMINATION: a unit connected to one of the WC outputs is improperly terminated (see menu 42)


B REFERENCE: domain B is not using the same reference as domain A

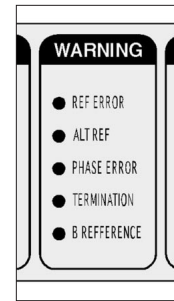

#### 5.5. VIDEO SYNC LED'S

These LED's are only active if the optional Video Sync Generator card has been installed in your DCD-8.

For information on these LED's, please refer to the manual of the optional Video Sync Generator card.

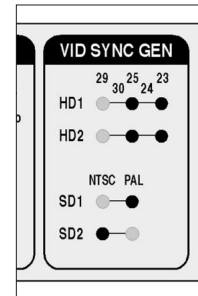


## 6. Navigation Keys

#### 6.1. SET UP KEY

To access the different menus, press the [SET UP] key.

While in SET UP mode, the Set Up LED is on.

To exit the SET UP mode, simply press the [SET UP] key again.

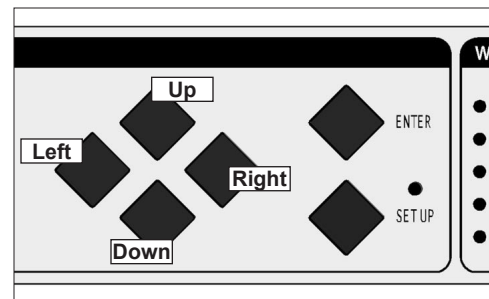

#### 6.2. ENTER KEY

Scrolling through the different values will not affect anything. Only after the [ENTER] key is pressed will a change take place.

When exiting a menu without pressing the [ENTER] key, the changes are lost.

#### 6.3. UP, DOWN, LEFT, RIGHT KEYS

These keys are directly left of the [ENTER] and [SET UP] keys. They are not labeled as such because their function is fairly obvious.

While in Set Up mode, the [UP] and [DOWN] keys are used to change the value of the selected field, while the [LEFT] and [RIGHT] keys are used to select the different fields.

[UP] and [DOWN] keys are also used to change menu pages.

## 7. Menu Navigation

### 7.1. SELECTING A MENU

When the Set Up mode is entered, the LCD display switches to the Set Up menu last used, with the cursor on the far left position in the upper line.



To move to another menu, with the cursor on the upper left position, press the [UP] or [DOWN] key.

### 7.2. CHANGING VALUES

To edit one of the fields on the current menu, press the [RIGHT] or [LEFT] key to move the cursor to the desired field. Then, press the [UP] or [DOWN] key to change the value.

Note that no change will take effect until the [ENTER] key is pressed. When exiting a menu without pressing the [ENTER] key, the changes are lost.

### 7.3. THE CURSOR

The cursor position is indicated with a '>' character, implemented as inverse video, flashing on and off. For numeric entry such as the VSO value, an additional underline cursor appears beneath the digit column being adjusted.

After a value is edited, the cursor changes to a solid triangle, until the [ENTER] key is pressed.



If the cursor is moved to another field without pressing the [ENTER] key first, the solid triangle stays in front of the edited field to indicate a change was made but not entered yet.

### 7.4. STATUS VALUES

Throughout the different menus, values appear in the display enclosed in square brackets. These are status values.

Status values are the values actually obtained, based on a menu selection. In some cases, this might be a rate in Hz. In others it might be a different value if the one asked for is unavailable. For example, in menu 5, if Audio is unavailable [Mute] will be displayed.

### 7.5. SET VS. AUTO VS. LEARN

The words "Set", "Auto" and "Learn" are used to distinguish whether the user is establishing the value (Set) or if the system is deducing the value automatically (Auto & Learn).

See chapter 11 for more information on these functions.



## 8. Menus Description

Chapter 8 lists all the different menus available in the SET UP mode. Note that some of the menu options will change based on your selections. As an example, if S/PDIF has been selected in menu 32 as the optical connector format, ADAT no longer appears as a reference option in menu 02, and vice-versa.

### 8.1. MENU 01: RATE A

```

001 RATE A:  Set  96000 +0.1%  [96096]
           vso:  Off
  
```

In SET mode, a specific frequency can be selected; in AUTO mode, the reference's rate is automatically selected. AUTO mirrors the reference selection. AUTO is not available if the reference is Internal Crystal or Video.

VSO can be activated in SET mode. VSO range is +/- 5% in .001% steps or .001 semi-tone.

Please note that VSO is not implemented in software version 1.03.

Status is the actual rate in Hz.

### 8.2. MENU 02: REFERENCE A

```

02 REF A:  WC1k 1  [WC1k 1]
           rate: Set  48000 -0.1%  [47952]
  
```

Select any of the available external sources as reference or use the internal crystal.

Choices are:	Internal	AES 1	ADAT
	Word Clock 1	AES 2	Optical (S/PDIF)
	Word Clock 2	AES 3	1394
	Word Clock 3	S/PDIF	Video

When selecting any of the external sources, a RATE menu appears on the bottom line. RATE has 2 modes:

- LEARN: the DCD-8 determines the incoming rate;
- SET: the user determines the incoming rate.

For more information on Set vs. Learn, go to chapter 11.

### 8.3. MENU 03: ALTERNATE REFERENCE A

```

03 ALT REF A: [Video] [Video]
           rate: Learn 23.976 1125p [23.971]
  
```

The alternate reference is used as a backup reference in case the main reference fails. If it happens, the DCD-8 smoothly switches to the alternate reference. For more on Alternate Reference, see chapter 12.

Similar to menu 02, when selecting any of the external sources, a RATE menu appears on the bottom line. The RATE can be on AUTO or SET.

#### 8.4. MENU 04: WORD CLOCK OUT



Word Clock outputs are adjustable in pairs. For each pair, the choice is A or B, referring to the rates set in menus 01 and 21.

Outputs 7 & 8 can also add a multiplier to the A or B rates (see Appendix 2). Note that only the available choices will be displayed.

#### 8.5. MENU 05: AUDIO OUT



For each Audio Out, the choices are:

- A.Mute Silent audio at the A rate
- A.Audio Re-clocked audio source A as selected in menu 06
- B.Mute Silent Audio at the B rate
- B.Audio Re-clocked audio source B as selected in menu 07

NOTE: The AES Audio Out includes all AES and S/PDIF outputs.

If audio is unavailable, status indicates [Mute]

#### 8.6. MENU 06: AUDIO IN A



The selected audio source can be re-clocked in domain A and routed to any of the audio outputs in menu 05. For more on Audio Routing, see chapter 13.

NOTE: this re-clocking occurs in the A domain. If your audio source is not synchronous with the A rate, sound degradation will occur.

If the input selected is unavailable, the status is [OFF] and an error message appears (see appendix 3).

#### 8.7. MENU 07: AUDIO IN B



Menu 07 is identical to menu 06, for domain B.

### 8.8. MENU 21: RATE B



Menu 21 is identical to Menu 01, for domain B

### 8.9. MENU 22: REFERENCE B



Under most circumstances, the B domain will use the same reference as A. However, if necessary, a separate reference can be selected for B.

This menu is identical to menu 02, for domain B, with one additional choice: 'Use REF A' (default setting).

For more on Ref B, go to Chapter 14, page 18.

**CAUTION:** When selecting a reference in menu 22, domains A and B no longer share the same reference. To alert the user of this condition, a front panel warning LED turns on, labeled "B Reference".

### 8.10. MENU 31: DCD-8 LINK



When using multiple DCD-8 together and the optional video sync generator the DCD-link feature guarantees that they stay in phase. The S/PDIF port is used for this link (RCA connectors).

The choices are:

- Off
- Transmit
- Receive, re-transmit

When DCD-Link is set to 'Receive & re-transmit', the Reference is automatically changed to DCD-Link.

This advanced feature is not implemented in version 1.03.

 
### 8.11. MENU 32: OPTICAL I/O



Optical I/O can be set to ADAT or S/PDIF Optical.

Changing this setting may cause an error of this I/O was selected as a reference or an audio source (see appendix 3 for more on error messages).

### 8.12. MENU 33: AES INPUT DEFAULT CLOCK SOURCE



When any AES or S/PDIF source is used as a reference or as an audio source, it is automatically used as the default clock source, in that order of priority. If not, the user can determine in this menu which AES or S/PDIF source to use as the clock source. This will be used by the DCD-8 primarily for measurements (frequency & phase).

In AUTO mode, the DCD-8 scans through each input and selects the first valid signal it finds. When no AES inputs are connected, status indicates [Scanning].

### 8.13. MENU 41: INPUT STATUS



This menu displays the rate and phase information for each input.

To view a different input, go to the input field and use the [UP] and [DOWN] keys.

Note that the phase information is not implemented in software version 1.03.

### 8.14. MENU 42: TERMINATION



This page shows a termination measurement for each of the 8 word clock outputs. These measurements are not meant to be accurate, but to give an indication.

Ideally, the value displayed should be 75Ω. If < 48Ω, the word 'Double' is displayed; if < 30Ω, 'Triple'; if >500Ω, 'Open'.

If any output is double or triple-terminated, the TERMINATION warning LED lights up.

To view a different output, go to the output field and use the [UP] and [DOWN] keys.

NOTE: These are DC measurements. It may not measure AC coupled inputs correctly.

### 8.15. MENU 91: MENU LOCKOUT



To prevent accidental changes, the DCD-8 menus can be locked out. In this mode, no changes are permitted.

If a change is attempted while the menus are locked out, an error message appears on the LCD display: "ERROR - Menus Locked Out."

### 8.16. MENU 92: SETTINGS



This menu is used to store and recall user presets. The DCD-8 has provisions to store up to 4 different presets, labeled USER 0 through USER 3.

To store a preset, select SAVE. Then select the user preset number you would like to save to and press [ENTER].

To recall a preset, select RECALL. Then select the user preset number you would like to recall and press [ENTER].

FACTORY DEFAULTS: There is an additional preset holding the Factory Defaults. This preset can only be recalled and cannot be modified.



For details on the Factory Defaults, see Appendix 5.

### 8.17. MENU 99: DCD-8 SOFTWARE VERSION



This menu displays the unit's software version number and its FireWire serial number.

To update the software version, refer to chapter 17.

The FireWire serial number is pre programmed at the factory and cannot be changed. Identification over FireWire has to be different for each DCD-8 so that more than one of them can co-exist on the same bus.

## 9. Non-Volatile Storage

The DCD-8 has 4 user presets and a factory default preset (see menu 92 above).

In addition, it has non-volatile memory holding the current settings. This includes all DCD-8 settings such as rate and reference selections as well as output assignments. This memory is continuously updated so that, when the unit is turned on, it is in the same condition as it was when powered down.

NOTE: You should wait approximately 10 seconds after a change was entered before powering down, to allow for the flash memory to be updated.

## 10. Lock Status



The lock status of the DCD-8 is displayed in the center of the LCD display. Below are the 7 different possibilities and what they indicate:

NO REF	Reference missing
UNLOCKED	Unable to lock
SLEW	PLL is trying to lock
LOCKED --	Loose Lock
LOCKED -	Lock confirmation phase
LOCKED	Good and locked
HOLDING	Holding last known frequency after lock failure

The DCD-8 always tries to lock to it's input. Once the rate has been established (SET or LEARN), if the reference is off speed by more than 10%, it switches to SLEW. Note that with video, the 10% rule applies to the horizontal frequency and not the frame rate.

## 11. Defining the rate: Set, Auto & Learn

Part of the DCD-8's great flexibility comes from the fact that the rate generated does not have to match the rate of the reference. Different frequencies can be cross-locked if necessary. But the DCD-8 can also be set up to simply generate the reference frequency.

This is done through the use of the SET, AUTO and LEARN functions.

### 11.1. RATE MENU

In the Rate menu, the DCD-8 offers a choice between SET and AUTO. With SET, the user can select a specific rate. With AUTO, the DCD-8 determines the rate, based on the selection made in the Reference menu. AUTO simply mirrors the Reference menu.

NOTE: Auto is not available if the reference selected is Internal or Video.



### 11.2. REFERENCE MENU

In the Reference menu, the DCD-8 offers a choice between LEARN and SET. In the LEARN mode, the DCD-8 measures the input reference and determines it's rate. In SET, the user determines it.



Most of the time LEARN will work fine. However, at times, the user may choose SET to be sure the DCD-8 does not misinterpret an input frequency which is slightly incorrect. The Set mode may also be chosen for more failsafe operation, in that there is no chance that the DCD-8 will re-define a frequency which drifts over time.

### 11.3 ABOUT USING THE SET MODE FOR THE REFERENCE

**WARNING:** It is very important to understand that SET overrides the DCD-8. When using this function, the user can potentially mislead the DCD-8 and affect the output frequency. This could be intentional. But caution should be used here.

When SETTING the rate of the reference, there is the possibility that the selected rate will not match the measured rate (actual rate). If that is the case, the DCD-8 will still lock to the reference but the output frequency will be adjusted proportionately.

In the second example below, with the NTSC video reference is SET as PAL, the A frequency SET at 44100Hz will actually be 52867Hz ( $25/29.97 \times 44100 = 52867$ ).

### 11.4 OFF SPEED INDICATION

When the reference is detected to be off speed by more than 1.5%, the DCD-8 alerts the user as follows. The main display alternates between the normal LOCKED status and the OFF SPEED indication, staying about 2 seconds on each one. The measured reference frequency is shown under the words 'Off Speed' for comparison with the nominal rate, shown under the reference.

Here is an example of the Off Speed indication for Ref A WC1.

```
REF: WC1k 1      Off Speed      FQ A: 44100
      192000    <- 176400Hz      FQ B: 96000
```

For comparison, here is another example for Ref A Video, off speed:

```
REF: Video      Off Speed      FQ A: 44100
      25.0      <- 29.970Hz      FQ B: 96000
```

### 11.5 HOW ALL THIS WORKS

To help understand how these different modes interact, let's take a look at a few examples.

- Ref: LEARN & Rate: AUTO  
48.003k in = 48.003k out  
44.1k in = 44.1k out      ➤ In this case, no rate needs to be programmed. The DCD-8 learns the incoming rate and regenerates it. What comes in is what comes out.
- Ref: LEARN & Rate: SET (48k)  
48.003k in = 48.003k out  
44.1k in = 48k out      ➤ Here, if the DCD-8 detects that the input rate has changed, it makes the necessary adjustments to maintain the output rate as set.
- Ref: SET (48k) & Rate: AUTO  
48.003k in = 48.003K out  
44.1k in = 44.1k out      ➤ When set on AUTO, the rate mirrors the reference. The OFF SPEED message will appear on the LCD if the reference is off (44.1).
- Ref: SET (48k) & Rate: SET (44.1k)  
48.003k in = 44.103k out  
44.1k in = 40.517k out      ➤ With Ref in SET, if the input rate is different than what was set, the DCD-8 applies the off-speed ratio to the SET output frequency

Note: 48.003 is only used in these example to illustrate that the DCD-8, when locked to the reference, will track small variations.

## 12. Alternate Reference

If the external reference fails, the DCD-8 has 2 different ways of insuring that the WC output remains safely uninterrupted.

### 12.1. MAIN REFERENCE FAILURE WITH AN ALTERNATE REFERENCE SET

If an alternate reference was set in menu 3, the DCD-8 goes into the following cycle:

- Step 1: When a failure occurs, 2 things happen immediately:
  - the PLL switches to the Alternate Reference
  - the generator goes in HOLDING mode, holding the last known frequency.
- Step 2: After about 2 seconds, the generator switches smoothly to the alternate reference.

During Step 1, the LCD display indicates "HOLDING" as the lock status.

During Step 2, the lock status goes from 'LOCKED --' to "LOCKED" as it reaches full lock.

If the Alternate Reference fails, the DCD-8 goes back through steps 1 and 2, but this time, Internal Crystal is used as the new reference.

### 12.2. MAIN REFERENCE FAILURE WITH NO ALTERNATE REFERENCE SET

If no alternate reference was set in menu 3, the DCD-8 holds the last known frequency and displays "HOLDING" in the LCD display.

If a signal is still present at the main reference input, the DCD-8 attempts to lock to it again. If it succeeds, it goes through the normal 'Locked' sequence; if not, it continues holding and attempts to Lock to the main reference again.

If no signal is present at the main reference input, the DCD-8 will remain in 'HOLDING' mode indefinitely.

### 12.3. REVERT TO REF A

After a failure of the main reference, the following error message appears on the lower line of the LCD display:

"PRESS ENTER FOR OPTIONS"

This message flashes to alert the user of the problem, along with the REF ERROR LED.

```

REF: AES1      HOLDING      FQ A: 48000
Press ENTER for Options
  
```

After pressing the [ENTER] key, the options available are:

- EXIT WITH NO CHANGE
- CLEAR REF ERROR
- RETRY REF A

```

REF: AES1      HOLDING      FQ A: 48000
Press ENTER to: [L]Retry REF A
  
```



The third option, RETRY REF A, is only available if an Alternate Reference has been set in menu 03. If no Alternate Reference was set, the DCD-8 will automatically retry Ref A.

NOTE: When reverting to Ref A, the transition will be smooth, but only if the DCD-8 was locked to either the alternate reference or the internal crystal before selecting RETRY REF A.

#### 12.4. ERROR MESSAGES

The following messages appear in the LCD display when appropriate:

REF RETRY FAILED  
REF RETRY REQUIRE PLL RESET (DCD-8 was not locked - see NOTE above)

#### 12.5. WARNING LEDS

REF ERROR: This red LED flashes as soon as the main reference fails.

ALT REF: This green LED lights up as soon as the DCD-8 switches to the alternate reference. It flashes if the Alternate Reference fails.

#### 12.6. REF B

Under most circumstances, REF A will be used by domains A & B. However, in menu 07, a separate reference can be set for domain B. But, the Alternate Reference option is only available for the main reference (REF A) and not REF B. If REF B fails, it will go through the procedure described in 12.2 on the previous page.

## 13. Audio Routing

One of the features of the DCD-8 is to re-clock an audio input and route it to an audio output.

- **SELECT AN INPUT:** To route audio through the DCD-8, an input must first be selected in menu 06 or 07 (the DCD-8 allows 2 separate inputs to be selected, one for domain A and one for domain B).
- **SELECT AN OUTPUT:** That input must then be assigned to an output. In menu 05, under the desired output, select 'A.Audio' to assign the A input or 'B.Audio' to assign the B input.

On the front panel, under 'Output Assignments', the AUDIO LED's indicate that audio is being routed; at the same time, the A and B LED's indicate which input is being routed.

WARNING: When routing audio through the DCD-8, the audio is re clocked in either domain A or B. It is imperative that the audio source be synchronous with the domain selected. Otherwise, signal degradation will occur.

#### 13.1. MAPPING OPTION 1: LEFT TO ODD AND RIGHT TO EVEN

In menu 06 & 07, when selecting a stereo source as the input (AES or S/PDIF), the DCD-8 gives you the option to map this input to all of the output pairs, including the FireWire and ADAT connectors. This means that the left channel would go to channels 1,3,5,7 and the right channel to 2,4,6,8. They would also go to all the stereo outputs (AES or S/PDIF).

### 13.2. MAPPING OPTION 2: 8 CHANNEL ROUTING MAP

If not selecting 'Left to Odd/ Right to Even', the DCD-8 uses a routing map as described below. This routing map will vary, depending on the rate at which the router is running due to the various bit-splitting formats accepted by the DCD-8 (S/MUX and AES double-wire). For more on digital audio formats, go to Appendix 4 on page 23.

FireWire 44.1 to 96k	ADAT 44.1 to 48k	ADAT S/MUX 88.2 to 96k	AES & S/PDIF 44.1 to 96k
1	1	1&2	AES-1 L
2	2	3&4	AES-1 R
3	3	5&6	AES-2 L
4	4	7&8	AES-2 R
5	5		S/PDIF L
6	6		S/PDIF R
7	7		AES-3/ Optical L
8	8		AES-3 /Optical R

FireWire 176.4 to 192k	ADAT S/MUX IV 176.4 to 192k	AES Double Wire 176.4 to 192k
1	1&2&3&4	AES-1
2	5&6&7&8	AES-2

## 14. Ref B

The DCD-8 has 2 separate domains, A and B. These domains are used to generate multiple rates simultaneously. Under most circumstances, both domains will use the same reference. Therefore, the default setting for Ref B (menu 22) is 'USE REF A'.

However, if necessary, a separate reference can be selected for domain B. In essence, this would be separating the DCD-8 in 2 completely independent units.

NOTE: A warning LED lights up on the front panel to alert the user.

When setting a separate reference for B, the main menu will reflect this. However, the amount of information displayed will be reduced, due to the space available. Both references will be displayed, but not their frequency.

REF A:	WC1k	1	LOCKED	FQ A:	44100
REF B:	AES1		LOCKED	FQ B:	96000

Similarly, when displaying Off Speed condition (see chapter 11), the measured frequency will not be displayed.

REF A:	WC1k	1	Off Speed	FQ A:	44100
REF B:	AES1		LOCKED	FQ B:	96000

Those missing frequency indications normally appear on the bottom line, which is used up here for Ref B.

## 15. FireWire

The DCD-8 includes a FireWire I/O which is used to transmit and receive digital audio as well as to update the current software version (see chapter 17).

Drivers for PC and Mac are available for download at [www.brainstormtime.com](http://www.brainstormtime.com). Once installed, the DCD-8 should be recognized by your computer as an 8 channel device.

The DCD-8 can lock to the clock coming from the FireWire audio and clean it up. It can also re-clock and route audio to and from a FireWire device.

The FireWire audio is not implemented yet in version 1.03.

## 16. DCD-Link

Multiple DCD-8's can be linked together by simply connecting an output from the Master DCD-8 into the slave DCD-8 and selecting it as the reference on the slave DCD-8.

The DCD-link option goes a little further by keeping multiple DCD-8's and the optional video sync generator in phase.

DCD-Link is activated in menu 31. The master unit should be on 'Transmit' and the slave unit(s) on 'Receive and re-transmit'. Connect a 75Ω coaxial cable between the DCD-Link OUT (RCA - S/PDIF OUT) on the master unit and the DCD-Link IN on the slave unit.

The reference on the slave DCD-8 is automatically changed to 'DCD-Link' and the reference rate is shown on the LCD display.



DCD-Link is not implemented in version 1.03.

## 17. Updating the Firmware

You should compare your software version number (menu 99) to the latest version number, as listed on our web site. If not current, you should update your DCD-8.

Updating the software version is done through the FireWire port. It can be done with a Mac or a PC. The procedure is similar for both computers:

1. Install the DCD-8 driver on your computer (this would have already been done if you are using FireWire audio)
2. Connect a FireWire cable between the DCD-8 and your computer
3. Run the Firmware Loader software on your computer
4. Load the new file into the DCD-8, replacing the old one
5. Exit the Firmware Loader
6. Power down the DCD-8 then power up again
7. Go to Menu 99 to verify the current software version number.

These are the files available for download from our web site ([www.brainstormtime.com](http://www.brainstormtime.com)):

- DCD-8 driver (PC and Mac)
- Firmware loader (PC or Mac)
- DCD-8 current software
- Installation instructions (PC and Mac)

Please note that only registered users are allowed to download these files so be sure to register your unit as soon as possible.

A CD containing these files can also be purchased. Please contact us for more information.

## 18. Appendix

### 18.1. PULLED RATES

Here is a list of the standard and pulled rates generated by the DCD-8.

-4.096%	(25 to 23.976 f/s)	42,294	84,587	169,175
-4.0%	(25 to 24 f/s)	42,336	84,672	169,344
-0.1%	(30 to 29.97 f/s)	44,056	88,112	176,224
BASE RATE		44,100	88,200	176,400
+0.1%	(29.97 to 30 f/s)	44,144	88,288	176,576
+4.166%	(24 to 25 f/s)	45,938	91,875	183,750
+4.2709%	(23.976 to 25 f/s)	45,983	91,967	183,934
-4.096%	(25 to 23.976 f/s)	46,034	92,068	184,136
-4.0%	(25 to 24 f/s)	46,080	92,160	184,320
-0.1%	(30 to 29.97 f/s)	47,952	95,904	191,808
BASE RATE		48,000	96,000	192,000
+0.1%	(29.97 to 30 f/s)	48,048	96,096	192,192
+4.166%	(24 to 25 f/s)	50,000	100,000	200,000
+4.2709%	(23.976 to 25 f/s)	50,050	100,100	200,200

### 18.2. MULTIPLIER RATES

Through WC outputs 7&8, the DCD-8 can apply a multiplier to the selected base frequency. Here is a list of the available rates. An 'X' indicates this choice is not available.

	FSx1	FSx2	FSx4	FSx64	FSx128	FSx256
192 KHz	192.0KHz	X	X	12.2880MHz	X	X
176 KHz	176.4KHz	X	X	11.2896MHz	X	X
96 KHz	96.0KHz	192.0KHz	X	6.1440MHz	12.2880MHz	X
88 KHz	88.2KHz	176.4KHz	X	5.6448MHz	11.2896MHz	X
48 KHz	48.0KHz	96.0KHz	X	3.0720MHz	6.1440MHz	12.2880MHz
44 KHz	44.1KHz	88.2KHz	X	2.8224MHz	5.6448MHz	11.2896MHz
32 KHz	32.0KHz	64.0KHz	X	2.0480MHz	4.0960MHz	8.1920MHz

### 18.3. ERROR MESSAGES

When a faulty value is selected, an error message is displayed as soon as the [ENTER] key is pressed. Although the request is not granted, only the [status value] is adjusted, not the selected value. Therefore, every time the [ENTER] key is pressed, the error message re-appears. To eliminate this, an 'acceptable' value must be entered in the proper menu.

Below is a complete list of all the error messages generated by the DCD-8 along with a description and the menus concerned.

NOTE: These messages appear on the LCD display for about 3 1/2 seconds and may be cancelled by any key press.

- **ERROR: Same audio source both domains**  
Same audio (group) cannot be source to both domains (see menus 06 & 07).  
NOTE: the DCD-8 considers all AES & S/PDIF as a single source, as far as the audio router is concerned
- **ERROR: ADAT input selected but not available**  
Can't choose ADAT as audio source when optical connectors switched to Optical S/PDIF (see menus 06, 07 & 32)
- **ERROR: AES 3 input selected but not available**  
Can't choose AES3 as audio source when optical connectors switched to Optical S/PDIF (see menus 06, 07 & 32)
- **ERROR: Optical input selected but not available**  
Can't choose Optical S/PDIF as audio source when optical connectors switched to ADAT (see menus 06, 07 & 32)
- **ERROR: Optical reference not available**  
Can't choose Optical S/PDIF reference when optical connectors switched to ADAT - may occur when switching the optical input from Optical S/PDIF to ADAT (see menus 02 & 32)
- **ERROR: Optical choice prevents reference select**  
Can't choose ADAT or AES3 reference when optical connectors switched to Optical S/PDIF - may occur when switching the optical input from ADAT to Optical S/PDIF (see menus 02 & 32)
- **ERROR: Menus Locked Out**  
Attempt to change a menu setting while menus are locked out (see menu 91)
- **ERROR: REF combination (A, B) unavailable**
- **ERROR: REF combination (alt A, B) unavailable**  
Domains A & B cannot have dissimilar AES/SPDIF reference combinations (AES inputs share a single PLL) - (see menus 02 & 22) - The same applies to ALT REF A (menu 03)
- **ERROR: REF B same as REF A**
- **ERROR: REF B same as ALT REF A**  
The same source cannot be assigned to Ref B and REF A (or ALT REF A). In that case, Ref B reverts to 'Use Ref A'.

The following 3 messages are informative messages.

- **ERROR: REF Retry failed**  
Original reference found to be missing during Retry
  - **INFO: REF Retry required PLL reset**  
System was not locked when ref Retry requested -- smooth re-lock not attempted and PLL re-started to guarantee synchronization
  - **INFO: Saving User Settings**  
System is in the process of saving user settings following a Save request
- 

The following 3 are also informative. They display if the reference rate (or alt ref rate) is on LEARN and the incoming rate changes

- **INFO "Learned rate change: REF A"**
  - **INFO "Learned rate change: REF B"**
  - **INFO "Learned rate change: ALT REF A"**
- 

- **Off Speed**

This message appears when the reference is detected to be off speed by more than 1.5%. The main display alternates between the normal LOCKED status and the Off Speed indication - staying about 2 sec. on each one. When there is only a single reference (A), the measured reference frequency is shown on the bottom line, for comparison with the nominal reference rate.

For additional information, go to chapter 11, on page 15.

---

The last type of message is more of a warning message and requires user feedback.

- **Press ENTER for options**

This message appears after a failure of the reference.

To alert the user, it flashes continuously on and off on the bottom line of the LCD display, along with the REF ERROR LED.

Pressing the [ENTER] key gives several options. To access these options, use the [UP] and [DOWN] keys.

The options available vary depending on the ALT REF settings (menu 03):

- If an alternate reference had been set and the DCD-8 switched to it:
  - ◆ Retry REF A: to attempt to re-lock to the main reference.
  - ◆ Clear REF ERROR: this option clears the flashing REF ERROR LED and exits; the DCD-8 stays locked to the alternate reference and the LCD keeps on flashing the 'Enter for options' message, offering only options 1 & 3 this time;
  - ◆ EXIT with no change: exit but leave everything as is.
- If no alternate reference had been set and the DCD-8 is HOLDING:
  - ◆ Clear REF ERROR: this option clears the flashing REF ERROR LED and exits; the DCD-8 stays in HOLDING mode;
  - ◆ EXIT with no change: exit but leave everything as is.

#### 18.4. DIGITAL AUDIO FORMATS

The following table lists all the digital audio formats accepted by the DCD-8:

Formats	Number of channels per connector	Connector	Valid Rates
AES Single Wire	2	XLR	44.1-96 KHz
AES Double Wire	1	XLR	176.4-192KHz
AES3id	2	BNC	44.1-192 KHz
S/PDIF Coaxial	2	RCA	44.1-192 KHz
S/PDIF Optical	2	TOS-Link	44.1-96KHz
ADAT Lightpipe	8	TOS-Link	44.1-48KHz
ADAT S/MUX	4	TOS-Link	88.2-96KHz
ADAT S/MUX IV	2	TOS-Link	176.4-192KHz
FireWire	8	1394	44.1-192 KHz

The DCD-8 accepts AES double-wire, ADAT S/MUX and S/MUX IV. The input formats on the AES / S/PDIF and ADAT connectors will be adjusted based on the REFERENCE; the output formats will be adjusted based on the RATE.

To run the ADAT input in S/MUX mode, the relevant domain REFERENCE must be forced into the 96000 range (4 channels) or in the 192000 range (2 channels); to run the ADAT output in S/MUX mode, the relevant domain RATE must be forced into the 96000 range (4 channels) or in the 192000 range (2 channels).

All AES, S/PDIF and Optical S/PDIF I/O's run in standard single-wire mode from 44.1k to 96k and in double-wire mode from 176.4k to 192k range.

#### 18.5. FACTORY DEFAULT SETTINGS

The following are the factory default settings.

Rate A	48000 Hz (SET- VSO off)
REF A	Internal (LEARN)
ALT REF A	Off
WCLK OUT	All outputs on A
AUDIO OUT	All outputs on A.Mute
AUDIO IN A	Off
AUDIO IN B	Off
RATE B	48000 Hz (Set - VSO off)
REF B	Use Ref A
DCD-Link	Off
Optical I/O	ADAT
AES Input Default Clock Source	Auto
Menu Lockout	Off

These settings can be recalled in menu 92.

18.6. USER SETTINGS

Use this chart to note your own settings.

	USER 0	USER 1	USER 2	USER 3
RATE A				
REF A				
ALT REF A				
WCLK OUT				
AUDIO OUT				
AUDIO IN A				
AUDIO IN B				
RATE B				
REF B				
Optical I/O				
AES Input Default Clock Source				
Menu Lockout				



**BRAINSTORM ELECTRONICS, INC.**

**[www.brainstormtime.com](http://www.brainstormtime.com)**

Distributed Exclusively by

**plus24**

**1155 N. La Brea Avenue, West Hollywood, CA 90038 - USA**

**Tel: (323) 845-1171 - Fax: (323) 845-1170**

**[www.plus24.net](http://www.plus24.net)**

# DCD-8


## Word Clock

# Distribrialyzer

A Distributor, a Stripper and an Analyzer

Operation Manual

Software version 1.03

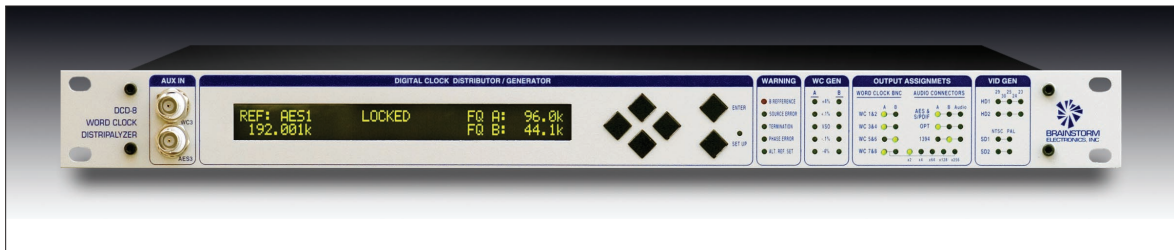

**BRAINSTORM**  
ELECTRONICS, INC.

...Intelligent Solutions For The Recording Studio