

User's ▶▶▶▶▶▶▶▶ manual

**1 Parallel Port + 2 USB Ports Wireless G
10/100M Print Server**

HWPS12UG



Website: www.hawkingtech.com
E-Mail: techsupport@hawkingtech.com

© Copyright 2004 Hawking Technologies, Inc. All rights reserved.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to subpart J of Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at their own expense.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

VCCI Mark Warning

注意

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づく第一種情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

LIMITED WARRANTY

Hawking Technology guarantees that every HWPS12UG 1 Parallel Port Plus 2 USB Ports Wireless 802.11g 10/100M Print Server is free from physical defects in material and workmanship under normal use for two (2) years from the date of purchase. If the product proves defective during this two-year warranty period, call Hawking Customer Service in order to obtain a Return Authorization number. Warranty is for repair or replacement only. Hawking Technology does not issue any refunds. **BE SURE TO HAVE YOUR PROOF OF PURCHASE. RETURN REQUESTS CAN NOT BE PROCESSED WITHOUT PROOF OF PURCHASE.** When returning a product, mark the Return Authorization number clearly on the outside of the package and include your original proof of purchase.

IN NO EVEN SHALL HAWKING TECHNOLOGY'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE OR ITS DOCUMENTATION. Hawking Technology makes no warranty or representation, expressed, implied or statutory, with respect to its products or the contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose. Hawking Technology reserves the right to revise or updates its products, software, or documentation without obligation to notify any individual or entity. Please direct all inquiries to: techsupport@hawkingtech.com

Trademarks

NetWare is a registered trademark of Novell Inc. and Windows 95/98/Me and Windows NT/2000/XP are registered trademarks of Microsoft Corp. All other brands and product names are trademarks of their respective companies.

Copyright

No part of this publication may be reproduced in any form or by any means or used to make any derivative (such as translation, transformation or adaptation) without the express written consent of the manufacturer as stipulated by the United States Copyright Act of 1976.

Table of Contents

1. INTRODUCTION TO THE HWPS12UG	6
1.1 Product Introduction.....	7
1.2 Product Package	9
1.3 Network Printing Architecture	10
1.3.1 Print Server Network Functions.....	11
1.3.3 Network Printing Functions for a Network Server	14
1.4 Network Printing Environment	15
1.5 Contents of the User's Manual.....	17
1.6 Firmware & Printing Function	18
2. HARDWARE INSTALLATION	19
3. WINDOWS PEER-TO-PEER NETWORK	20
3.1 System Architecture	21
3.2 Administrator Installation and Setup.....	23
3.3 Administrator Utilities.....	32
3.4 Client Installation and Setup	33
3.5 Client Utilities	37
3.5.1 Network Ports Quick Setup	37
3.5.2 Remote Ports (Utility).....	39
4. WINDOWS NT/2000 NETWORK.....	42
4.1 System Architecture	43
4.2 Windows NT/2000 Server Installation and Setup	44
4.3 User Installation and Setup	46
5. NETWARE NETWORK	47
5.1 System Architecture	48
5.2 NetWare 3.x/4.x/5.x Installation & Setup	50
5.2.1 Installation Using PSETUP.....	50
6. UNIX SYSTEM NETWORK	55

6.1	Introduction	56
6.2	Enable The HWPS12UG's TCP/IP Support	57
6.3	Setup the HWPS12UG's IP Address.....	58
6.3.1	DHCP.....	58
6.3.2	BOOTP	58
6.4	Verify the HWPS12UG's IP Address	61
6.5	Configure Remote lpd Printing on the Host	62
7.	CONFIGURATION UTILITY	65
7.1	Introduction	66
7.2	Search – Search for All Available Print Servers	68
7.3	Status - Print Server Status.....	69
7.4	Setting up the Print Server	71
7.5	AppleTalk Configuration	72
7.6	General Configuration.....	74
7.7	Netware Print Server Configuration.....	75
7.8	System Configuration.....	77
7.9	TCP/IP Configuration	79
7.10	Wireless Configuration	81
7.11	Wizard	89
7.12	Report.....	95
8.	WEB MANAGEMENT.....	96
8.1	Introduction	97
8.2	Web Management of Print Server	98
8.2.1	Login.....	98
8.3	Device Status.....	99
8.3.1	System.....	99
8.3.2	Printer.....	100
8.3.3	TCP/IP.....	101
8.3.4	NetWare	102

8.3.5	AppleTalk	103
8.4.1	Wireless Setup	104
8.4.2.1	General Wireless Settings	105
8.4.2.2	Encryption	107
8.4.2.3	Site Survey	109
8.5	Setup Wizard	110
8.5.1	System	110
	User Name / Password is used to authenticate the administrator through the Web administration tool	110
8.5.2	TCP/IP	111
8.5.3	NetWare	113
8.5.4	AppleTalk	115
8.5.5	System Configuration	117
8.5.6	Restart	117
8.6	System Tools	119
8.6.1	Load Default	119
8.6.2	Upgrade Firmware	120

9. IPP PRINTING122

9.1	Introduction	123
9.2	System Setup	124
9.2.1	Print Server Side	124
9.2.2	Client Side	125

1. Introduction to the HWPS12UG

1.1 Product Introduction

Congratulations on purchasing Hawking's HWPS12UG 2 USB + 1 Parallel Port Wireless G Print Server. The Hawking HWPS12UG is a powerful and convenient network printing solution that will connect your USB and parallel printer(s) to a wireless 802.11b or 802.11g network. The HWPS12UG can connect with a 802.11b or 802.11g wireless network and has a 10/100Mbps auto-sensing port, allowing you to attach it to a 10Base-T or 100Base-TX network without the need for a dedicated PC print server. The HWPS12UG also supports multiple servers and multiple protocols, providing you with the capability to print from anywhere, from any computer and from any application.

The HWPS12UG print server supports IPX, TCP/IP, and AppleTalk protocols. It also supports the most common network operating systems and protocols including Windows 95/98/Me, Peer-to-Peer Printing, Windows NT/2000/XP, NetWare, Unix/Linux, MAC OS X, etc.

With the HWPS12UG Installation Wizard for Windows, you can easily and instantly adjust the HWPS12UG's settings for your printing environment and start enjoying the fantastic features provided by this print server.

In the following chapters, we will introduce in detail the printing features, installation methods, and

system configuration for different network environments.

If you would like to set up and install print server quickly, please refer to the Quick Installation Guide that comes along with this print server.

1.2 Product Package

Package Contents

The following items are packaged with your HWPS12UG 2 *USB + 1 Parallel Port* 10/100M Internet print server:



HWPS12UG Print Server



One CD-ROM



Quick Installation Guide



One power adapter

1.3 Network Printing Architecture


This section illustrates how a print server functions over a network environment. Before you install and use the HWPS12UG print server, it is strongly suggested that you read this section completely and select only the chapters that pertain to your specific operating system.

Below is a diagram of a typical network with a print server installed. There is a main server, several client computers, print server, along with an optional network server. Below are the three components of this diagram:


■ Print Server

■ Client User


■ Network Server (optional)

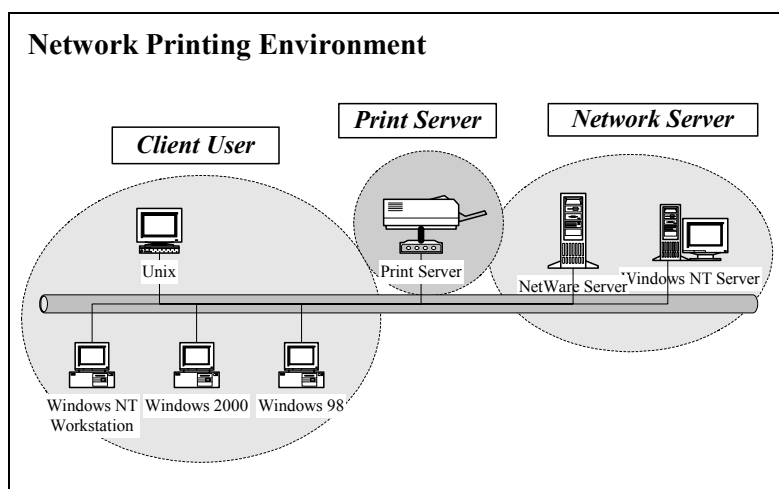


1.3.1 Print Server Network Functions

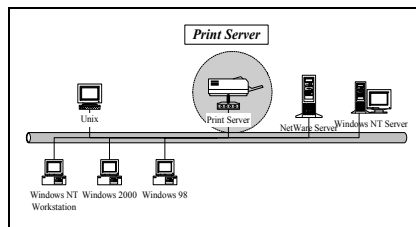

Because the HWPS12UG print server supports IPX, TCP/IP, and AppleTalk protocols, any networked computer can print directly through the print server from any of the installed protocols.

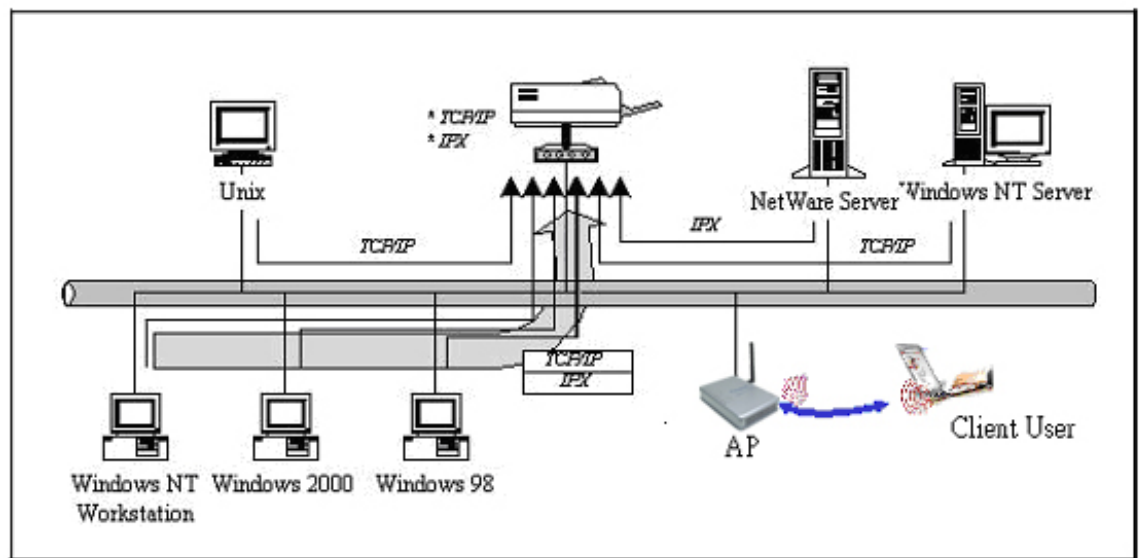


1.3.2 Network Printing Functions for Clients

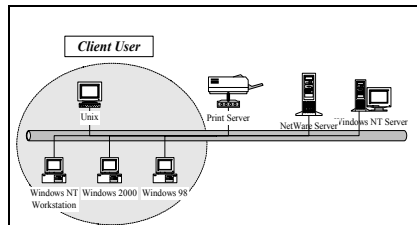


Windows 95/98/Me/NT/2000/XP

The HWPS12UG provides a PTPP (Peer-to-Peer Printing) driver and utilities for Windows 95/98/NT/2000/XP users. The PTPP (Peer-to-Peer Printing) supports the TCP/IP protocol.

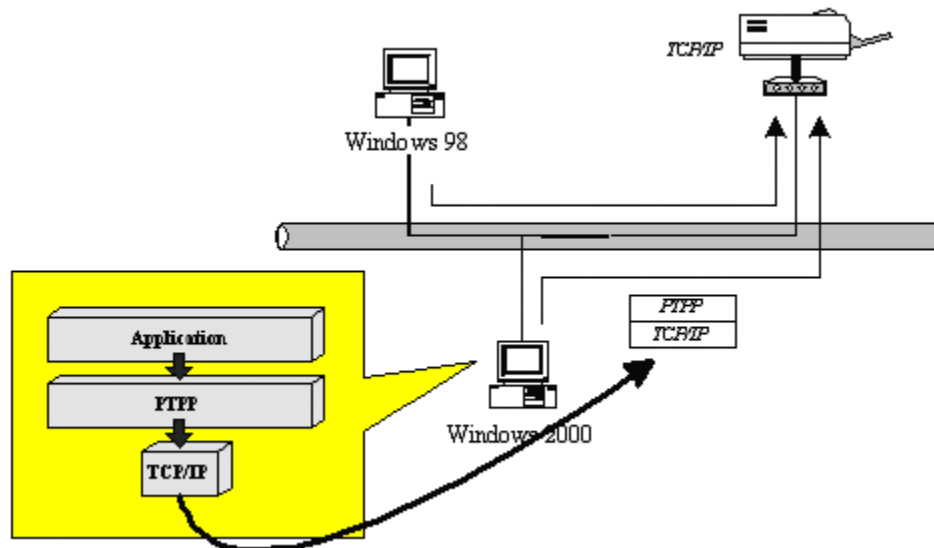

In the client installation procedure, after the PTPP (Peer-to-Peer Printing) driver is installed in Windows, the client or administrator system will automatically (manual configuration is also allowed) search through all of the print servers on your network and add your selected print servers' printing

port to your Windows printing port availability list.
(see diagram below)

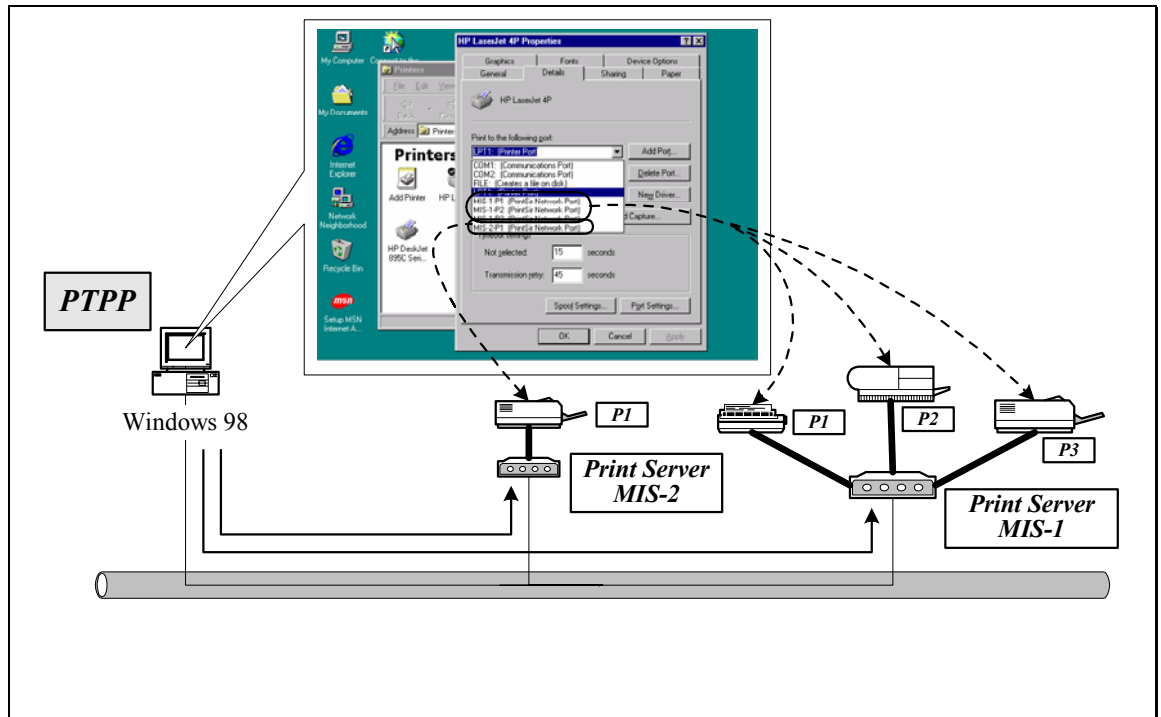


UNIX / Linux

UNIX (includes HP/UX, SCO Unix, SunOS, Solaris, Unixware DECUnix, IBM AIX and others) and Linux use the system-standard LPR to print to your HWPS12U.

MAC OS

The MAC OS can use the system-standard AppleTalk network to print through your HWPS12UG.

1.3.3 Network Printing Functions for a Network Server

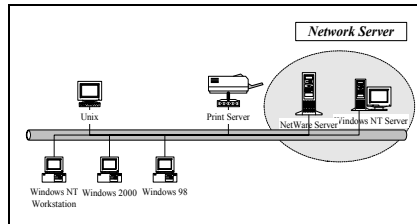

Common network servers use the following operating systems:

Windows NT/2000

The HWPS12UG provides a PTPP (Peer-to-Peer Printing) driver with utilities for Windows NT and Windows 2000. After PTPP is installed, the server can directly print to the HWPS12UG print server. Adding this printing function into your Windows NT/2000 Server allows for print queuing, user authority management, and many other advanced features.

NetWare 3.x/4.x/5.x


In a NetWare environment, the HWPS12UG offers various printing modes including print queue, remote printer, etc.

1.4 Network Printing Environment

Common network printing environments use the following:


Windows Peer-to-Peer Network

The client's PPTP driver will use the TCP/IP protocol to print to the print server.

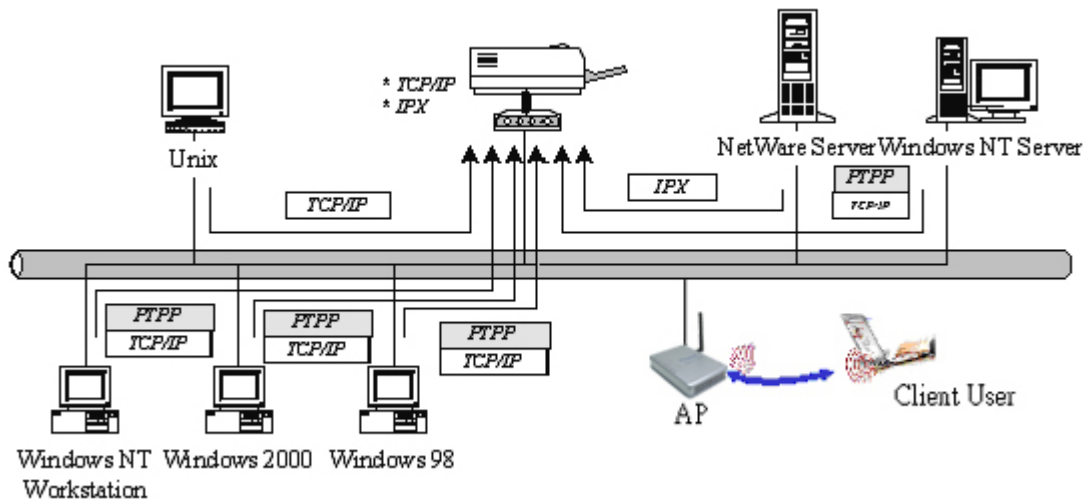


Windows NT/2000 Network

The network printing function will become available after the PTPP driver is installed into Windows NT/2000. Adding this printing function for your Windows NT/2000 Server enables print queuing, user authority management, and many other advanced features.

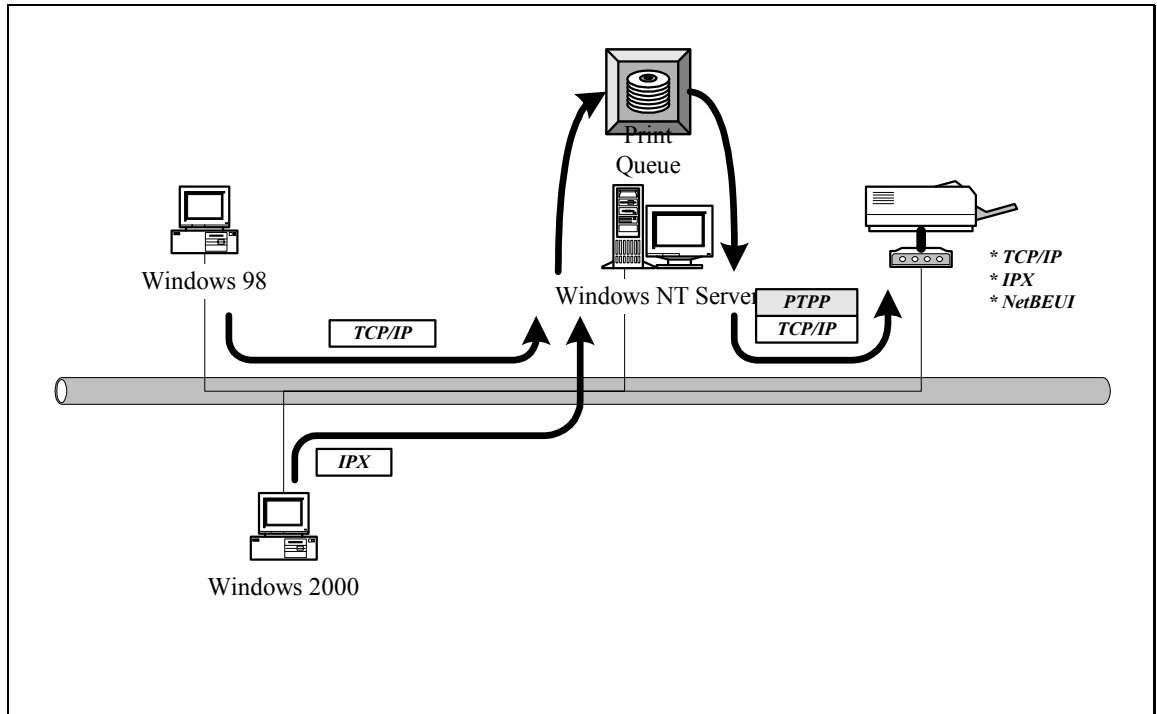

NetWare Network (see below)

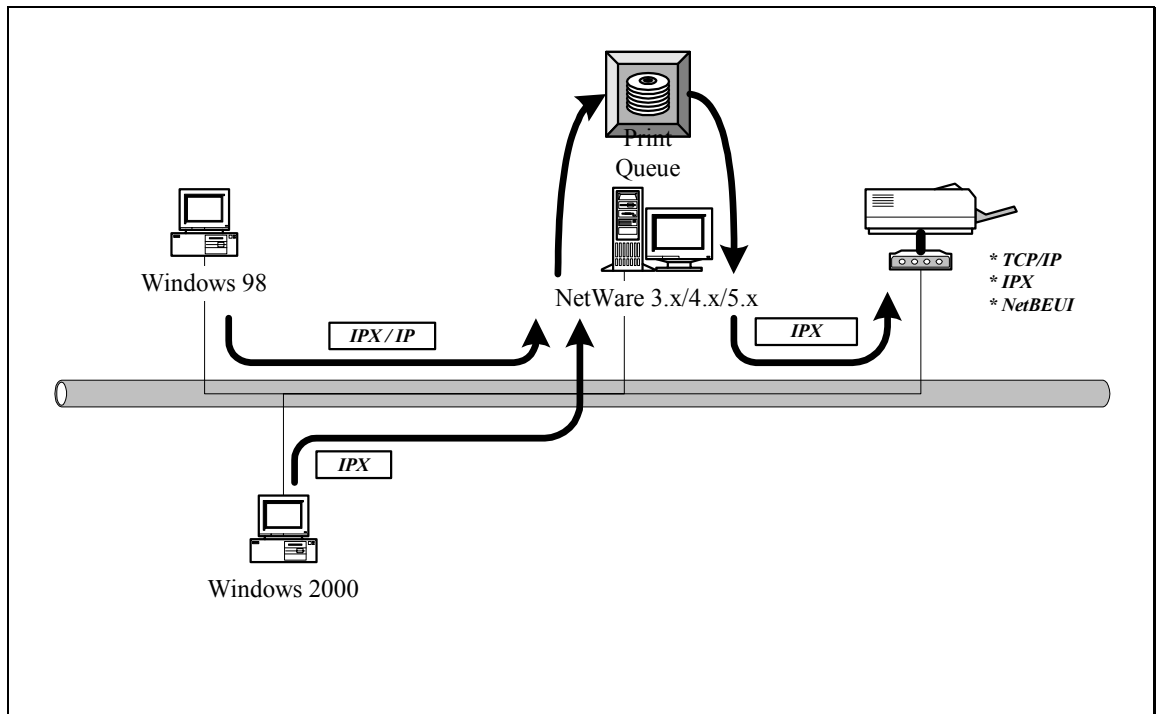

1.5 Contents of the User's Manual

Chapter 2 explains the HWPS12UG's hardware installation and configuration.

The following chapters 3, 4, 5, and 6 introduce configuration features for each of the following operating system networks:

Chapter 3. Windows Peer-to-Peer Network

Chapter 4. Windows NT/2000 Server-Based Network

Chapter 5. NetWare Network

Chapter 6. UNIX System Network

You may select the appropriate chapters and sections to read depending on your networks printing requirements.

Chapter 7 and chapter 8 introduce the HWPS12UG's management and configuration utilities for both Windows and your local web browser.

Chapter 9 introduces the HWPS12UG's IPP Printing functions and setup procedure. IPP Printing provides a convenient way to print documents across the Internet through the use of Windows NT/2000/and XP native IPP protocol.

1.6 Firmware & Printing Function

The print server provides a complete network printing solution. The feature set is listed below:

PTPP (Peer-to-Peer-Printing)

TCP/IP (LPR)

IPP Printing

NetWare Bindery Printing

AppleTalk

2. Hardware Installation

1. Unpack the HWPS12UG's packaging and check all the items listed in section 1.2.
2. Connect the HWPS12UG to the printer you want to share on your network.
3. Connect the power adapter to the print server.
4. The print server will perform the Power-On-Self-Test (POST) after it is powered on. The Status LED will flash for up to one minute to indicate that the print server is ready.


NOTE1 : You MUST use the power adapter shipped with the HWPS12UG print server, do NOT use any other power adapter from any other sources.

NOTE2: To prevent any compatibility problems between the HWPS12UG and other printers, it is recommend that you power on the print server before the printer.

3. Windows Peer-to-Peer Network

3.1 System Architecture

The HWPS12UG supports Windows Peer-to-Peer network printing mode, which is suitable for most medium and small network environments. Through Hawking's quick and simple installation procedure, users can immediately enjoy the convenience of network printing.

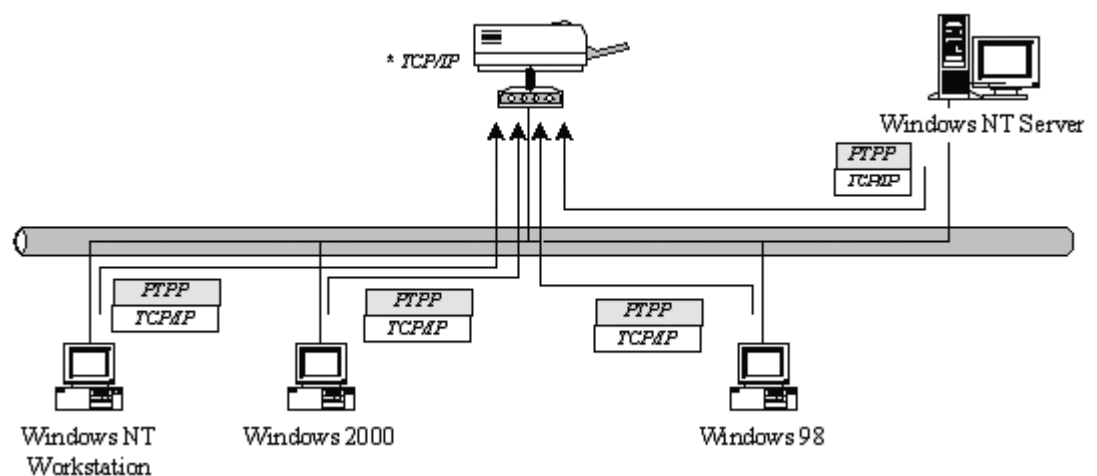

The installation procedure is separated into the following two parts:

1. Administrator Installation and Setup (refer to section 2 for more detailed information).

System administrators must:

- a) Install the administrator's utilities into his/her computer.

b) Configure the print server from the administrator's configuration utility.

2. Client Installation and Configuration (refer to section 3 for more detailed information).

Client users must install the Windows PTPP driver (Peer-to-Peer Printing) for network printing.

In addition, after PTPP is installed, the system will automatically search for all print servers on the network, and add all printing ports (P1/U2/U3) of the print server into Windows' available printing port list (refer to Network Printing Architecture in section 1.4 for more detailed information).

3.2 Administrator Installation and Setup

WINDOWS 95/98/Me/NT/2000/XP


- 1) **POWER ON:** After you have correctly connected your print server to your PC and router, please power on all units.
- 2) Before the installation, please verify that your network protocols are installed on your PC (TCP/IP and/or IPX). If they are not installed, please consult your operating systems manual for instructions on how to do so.
- 3) **INSTALL the Administrator Installation Program:** To install your Print Server administration software, please follow the directions listed below.

1. Insert the **Windows 95/98/Me/NT/2000/XP** Setup CD into your CD-ROM.
(Windows should execute the **Autorun.exe** program automatically. If not, run **Autorun.exe** manually from your CD-ROM drive's root directory).


2. The Hawking Installation windows manager will pop up on your screen as follows:




3. Click on “*Admin Installation*” and the “*Utilities Setup*” window will be displayed.

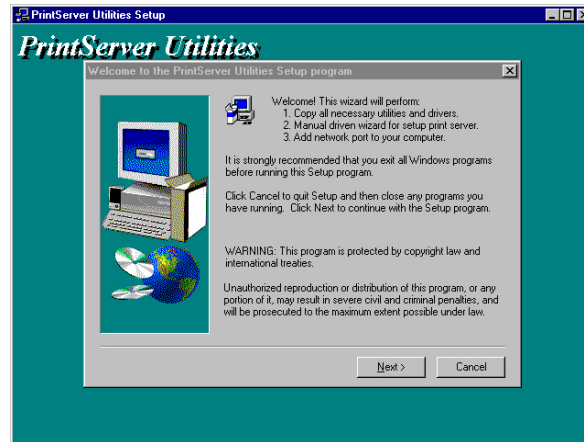


1. Click “Next,” and specify the destination folder where the *HWPS12UG* utility files will be installed.

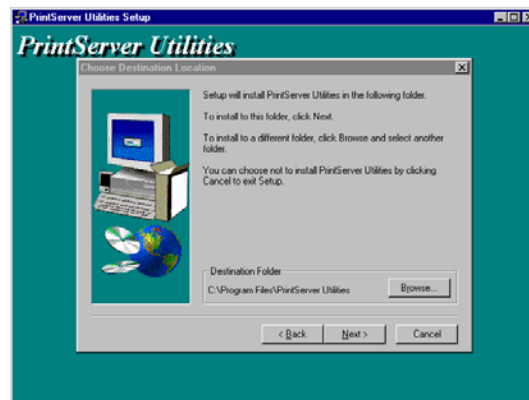


2. Click “Next,” and select the components you want to install. **It is highly recommended to install all provided components.**

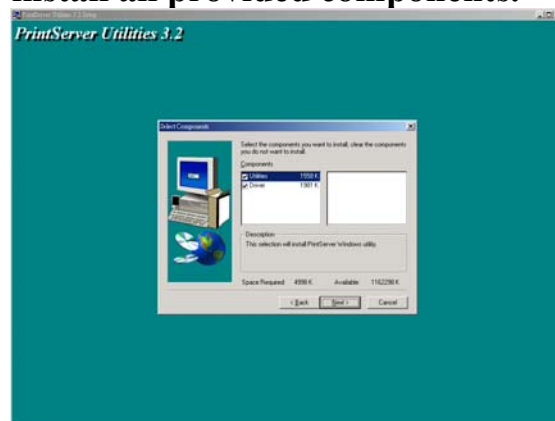


3. Click “Next,” and specify the program folder where the program icons will be added.

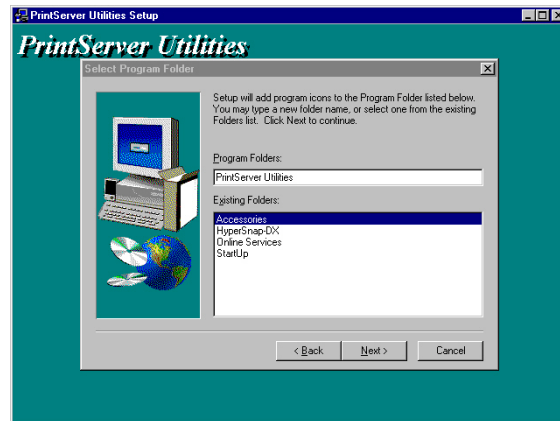


4. Click “Next” to start the utility file installation.

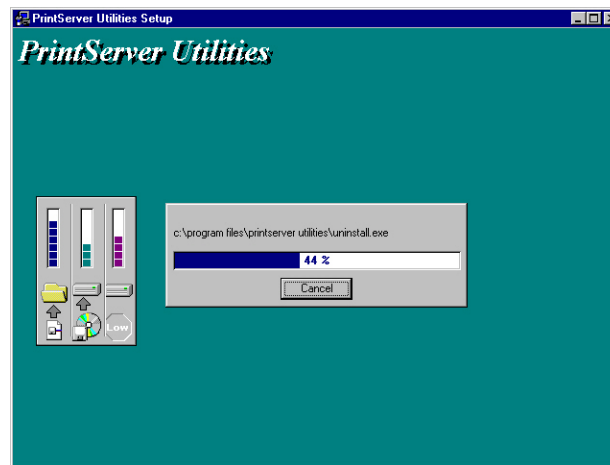


5. The “Print Server Utilities” program will finish installing. **After this installation is complete, the next step will involve configuring your HWPS12UG.** Click “Next,” and the “Choose Print Server” dialog box will be displayed as follows.

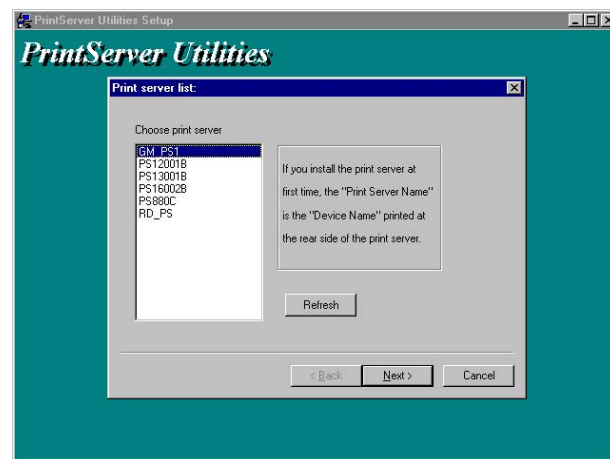

- Click “Next” and a dialog box will prompt you to name your print server. (Please make sure to write down the name you assign to your print server for future use).

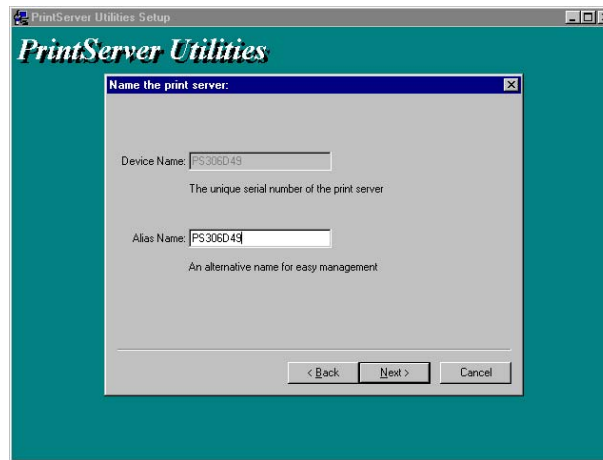

- Click “Next” to configure your print server’s network communication protocol.

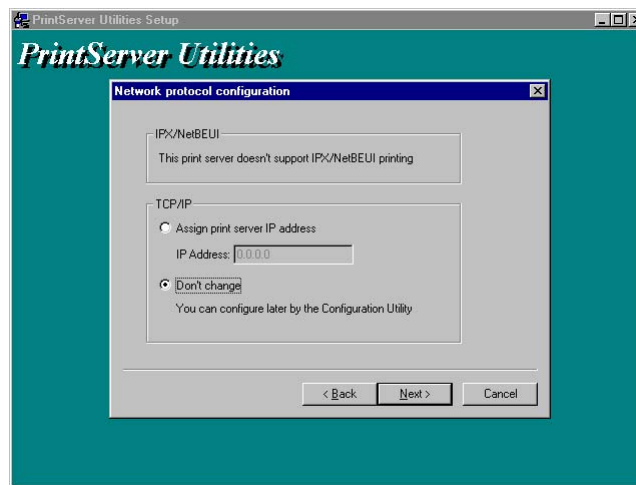


As a system default setting, the IPX protocol is enabled and does not need to be configured.


With the TCP/IP protocol, you can either (1) assign a dedicated IP address for your print server or (2) configure it later through the configuration utility software. **(If you choose “Do not change IP – configure later,” there is no effect on your network settings. It is suitable for both Non-IP and IP-enabled networks).**

- Click “Next” and the configuration summary will be displayed in the setup window. You have completed the “Print Server Setup” process and are ready to setup your print server to work with your printer. Please

click “Next” and your system will add the HWPS12UG’s network port to your PC.

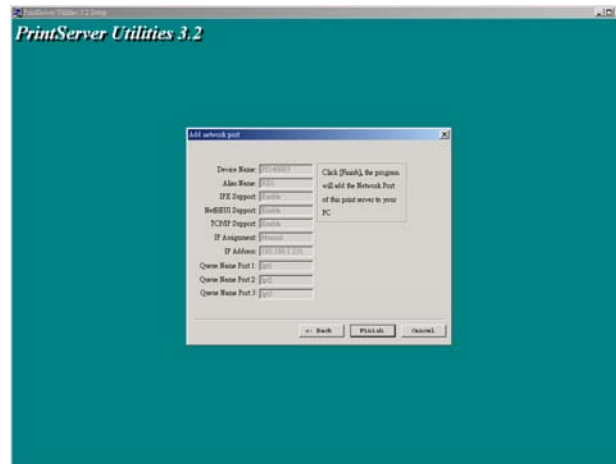

9. The “Installation complete” window will be displayed to indicate that the Administrator Installation procedure is finished.

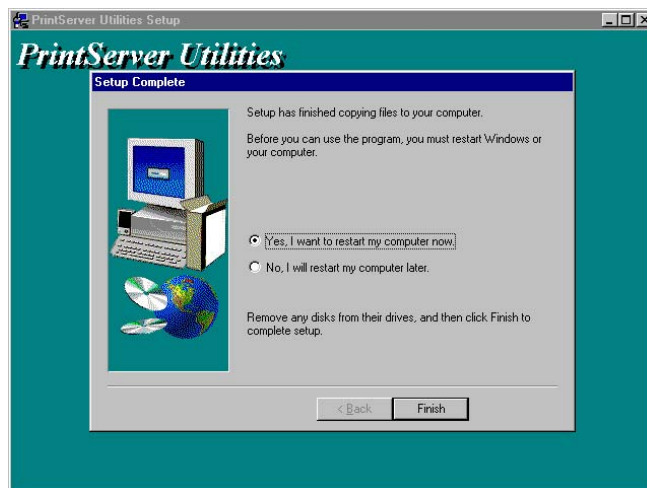


(Please restart your computer for your setup to complete its installation)

Now that you have completed the administrator’s setup, you can perform the “Client Installation” procedure on all client computers in your network.

To set up printing from this administrator’s PC to the print server, please follow the standard “Add Printer” procedure as described in the steps below. Please choose your appropriate operating system and follow the directions to add your printer through your OS.


WINDOWS 98/NT/Me/2000

Step1. Click the *Start* button, choose *Setting* ➔ *Printers*

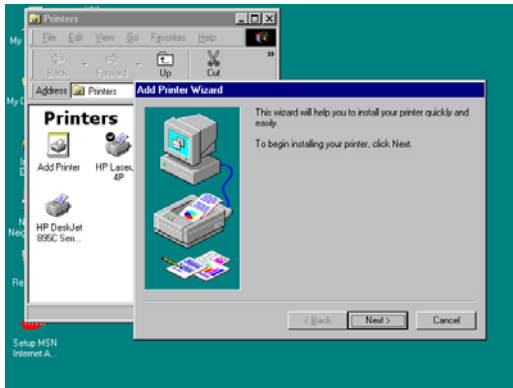


Step2. Double click on *Add Printer*


Step3. Select *Local printer* ➔ click *Next*.

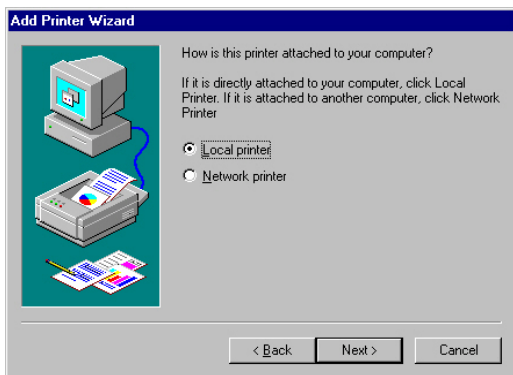

Step4. Select your printer manufacturer and model, and then click *Next*.

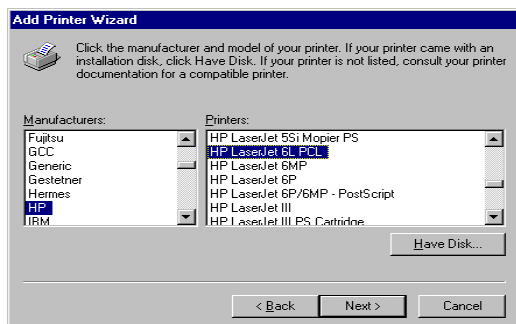

Step5. Choose the *Print Server's Network Port*, which was created by the administrator or client installation process, and click *Next*.

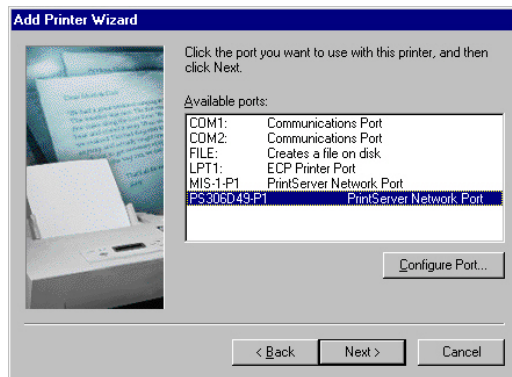


Step6. Complete the rest of the questions to finish the network printer setup.

WINDOWS XP Setup

Step1. **Click the Start button; choose Control Panel → Printers and Faxes**


Step2. **Click on Add a Printer**

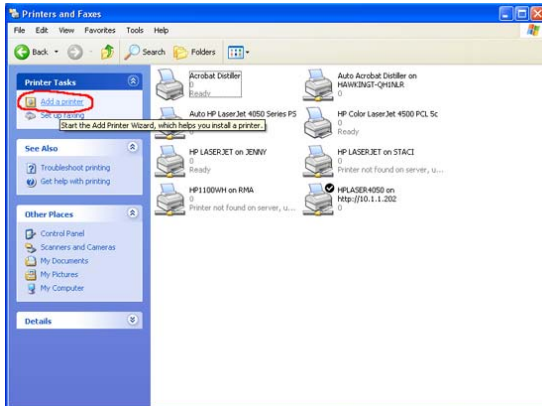


Step3. **The Add Printer Wizard will appear → Press Next.**




Step4. **Select “Local printer attached to this computer” → Press Next.**

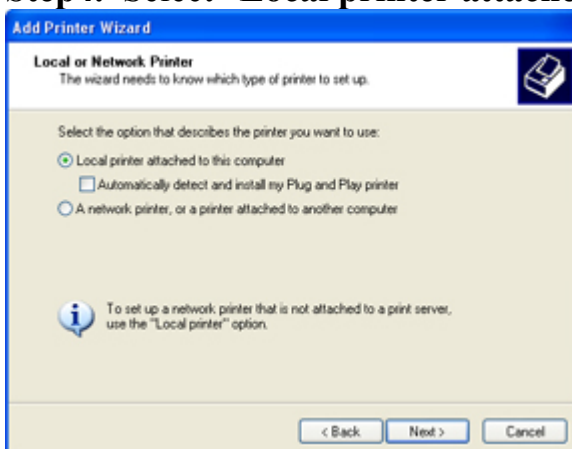

Step5. In the “**Select a Printer Port**” window select “**Use the following port**” and drag the selection bar down to your newly created print server entry → Press *Next*.

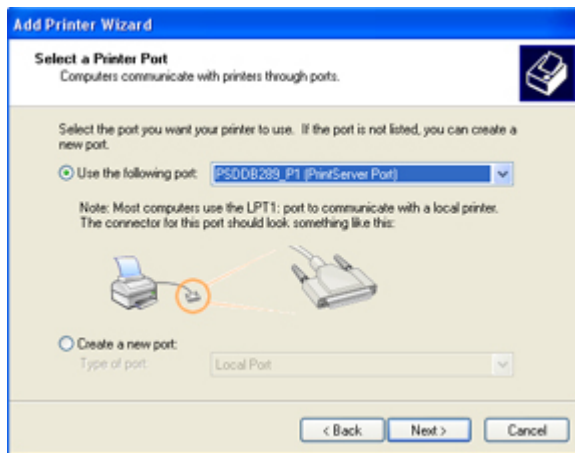

Step6. Select a suitable printer manufacturer and model, and then click *Next*.

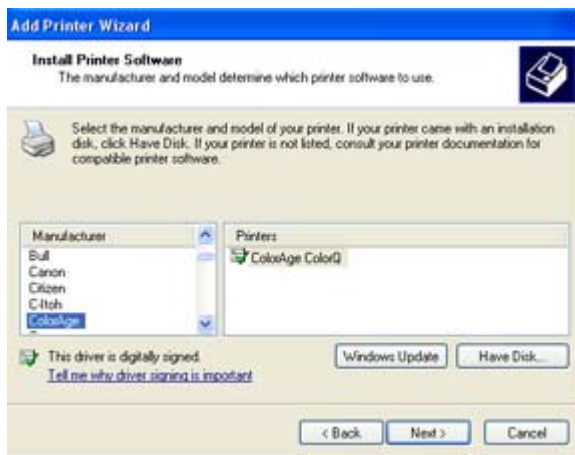

Step7. Please continue through the next couple of installation steps by pressing *Next* until your new printer is added to your computer. Press the finish button to finalize your configuration.

Please repeat “add Printer” steps for every printer attached to the HWPS12UG.

3.3 Administrator Utilities

After the Administrator Installation is completed, there will be six utilities in print server's Program folder.

Network Ports Quick Setup

- Local printer port management tool (see section 3.5).

Remote Ports

- Remote printer port management tool (see section 3.5).

NetWare Quick Setup

- NetWare quick installation software (see chapter 5).

Print Server Configuration

Uninstall

3.4 Client Installation and Setup

1. Insert the CD shipped along with the HWPS12UG into your CD-ROM drive. The Autorun.exe program will execute automatically. If it does not start automatically, run Autorun.exe manually from your CD-ROM drive's root directory.

2. The *"Installation Manager"* will be displayed on the screen as follows.



3. Click *"Client Installation"* and the *"Utilities Setup"* window will be displayed.




4. Click *"Next"* and specify the destination folder where the utilities will be installed.




5. Click “*Next*” and specify the program folder where the program icons will be added.



6. Click “*Next*” to start the installation.

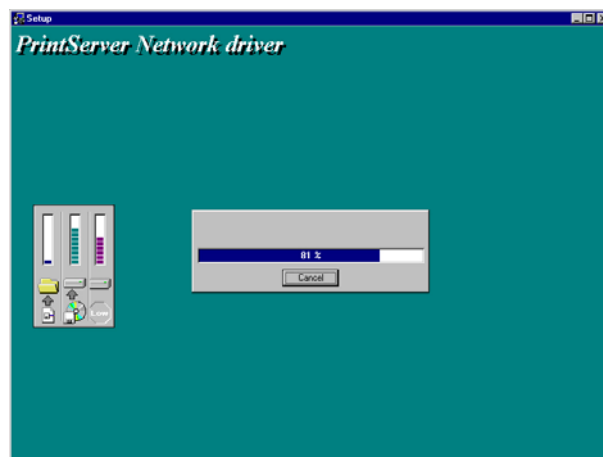

7. You have completed the software installation process. Click “*Continue*” and the HWPS12UG’s network port will be detected on the network and will be added to your PC.

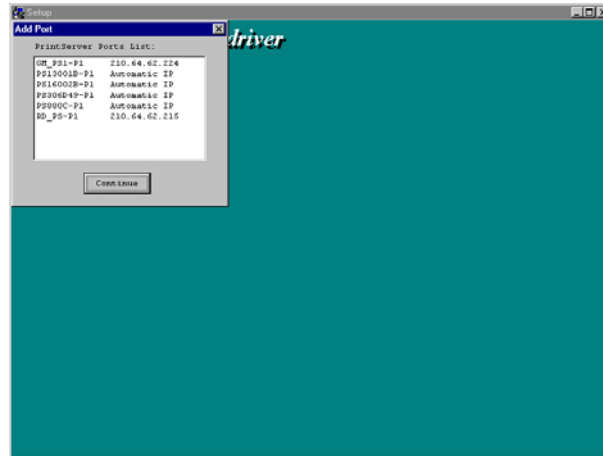

8. The “Installation complete” window will be displayed to indicate that the Client Installation procedure is finished.



You must then perform the Windows standard “Add Printer” procedure, as described below, to add a network printer to your PC.

Step1. Click the *Start* button, choose *Setting* → *Printers*

Step2. Double click the *Add New Printer* ➔ select *Local printer* ➔ click *Next*.

Step3. Select a suitable printer manufacturer and model, and then click *Next*.

Step4. Choose the *HWPS12UG's Network Port* that was created in the client installation process and click *Next*.

Step5. Complete the rest of the questions by hitting *Next* to finish the network printer setup.

Please make sure to repeat the “add Printer” steps for every printer attached to the HWPS12UG.

3.5 Client Utilities

After Client Installation is completed, there will be three tools located in the print server's Program folder.

1) Network Ports Quick Setup

2) Remote Ports


3) Uninstall Network Driver

The Uninstall Network Driver tool will assist you in removing all installed client software. The other two tools are described as follows:


3.5.1 Network Ports Quick Setup

The Network Ports Quick Setup Utility offers a very simple method to add or remove your print server's printer port from the client's computer.

During the client's installation procedure, the system will automatically search for all print servers on the network and add them into the printer ports of the client's computer. (see below)

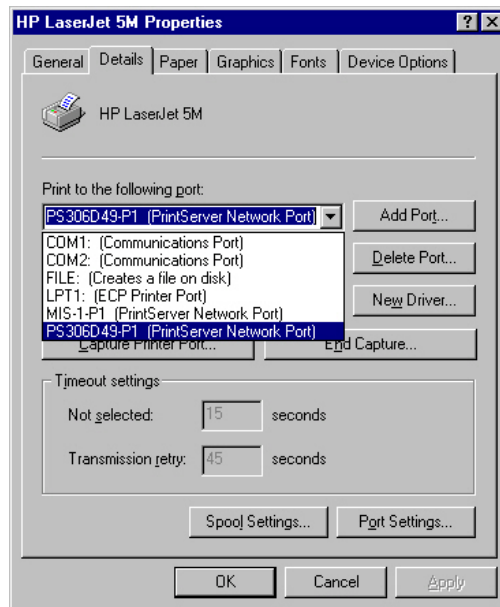

If you have just installed another new print server on your network, you must run this program first. This program will search for new print servers and allow you to add the new network printer port into the client's computer. Perform the standard Add Printer procedure, and you will be able to print directly to the printer through the newly installed print server port.

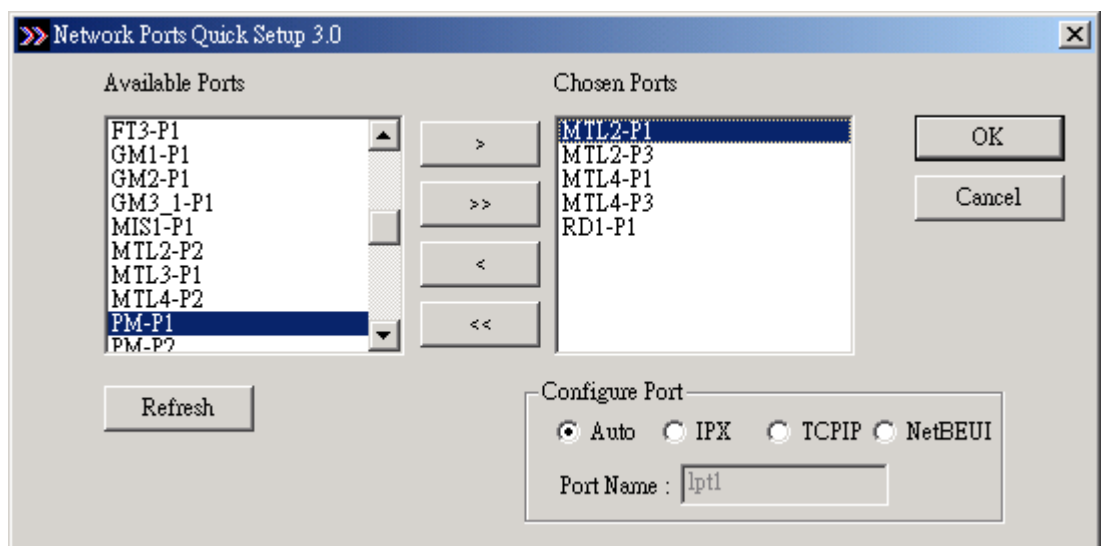


Please be aware that Network Ports Quick Setup Utility can only detect and configure all print servers on the same network; it cannot search and configure print servers on other subnets across network segments. You must use the Remote Ports Utility described in the next section to manage remote (across network segments) print servers.

3.5.2 Remote Ports (Utility)


The Remote Ports Utility is a convenient tool for you to manage and add printer ports of a remote print server. From the utility assistant panel, you can print to other print servers outside of your subnet and across your network segments. Please note that this function only supports the TCP/IP network protocol.

Please follow the procedures described below:

Step1. Run the Remote Ports Utility

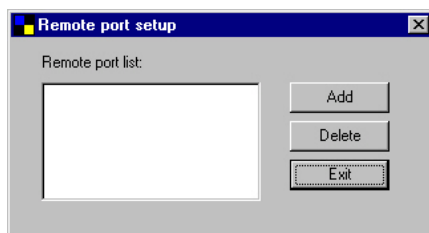


Step2. Press Add, then enter the print server's name, IP address, select used ports, and enter the LPR queue name of each port.

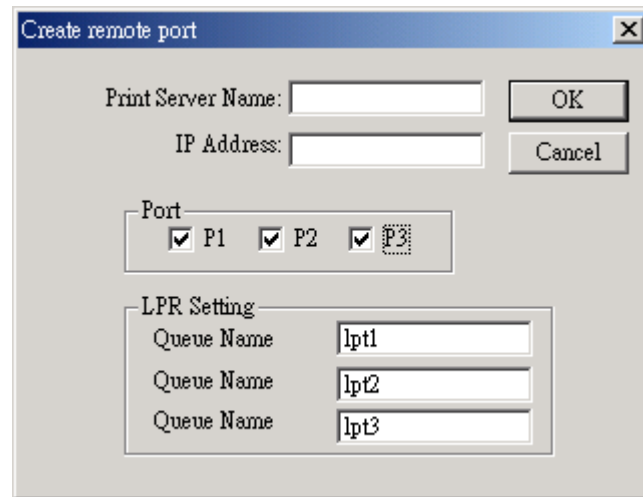

The 'Create remote port' dialog box contains the following fields and controls:

- Print Server Name:** A text input field.
- IP Address:** A text input field.
- Port:** A group box containing three checked checkboxes labeled **P1**, **P2**, and **P3**.
- LPR Setting:** A group box containing three 'Queue Name' labels, each followed by a text input field. The first field contains the text 'lpt1', the second 'lpt2', and the third 'lpt3'.
- Buttons:** 'OK' and 'Cancel' buttons are located to the right of the 'Print Server Name' and 'IP Address' fields.


Step3. Press OK to add the remote printer port into your computer's printer ports.

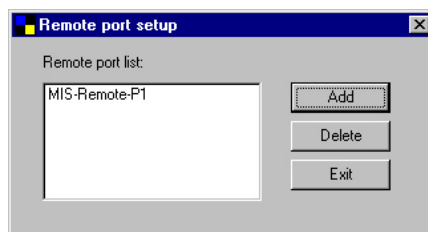

The 'Remote port setup' dialog box contains the following elements:

- Remote port list:** A list box containing the entry 'MIS-Remote-P1'.
- Buttons:** 'Add', 'Delete', and 'Exit' buttons are located to the right of the list box.


In order to use the remote printing function, you will have to proceed with the normal Add Printer procedure and select your printer port as the newly added remote printer port.

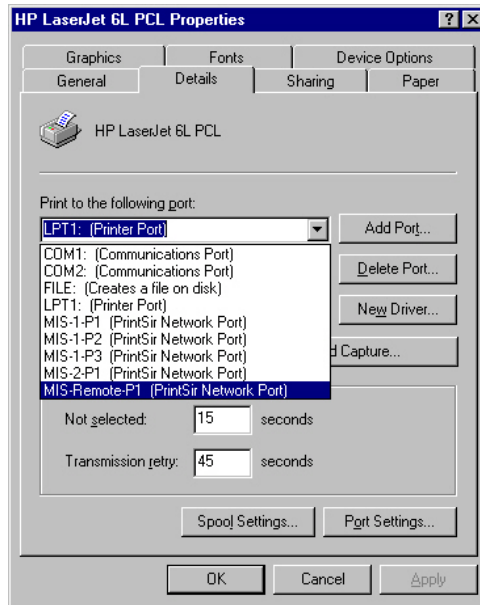

4. Windows NT/2000 Network


4.1 System Architecture

Peer-to-Peer network printing and Server-Based Printing is available for machines using the Windows NT/2000 server. Only one Windows NT/2000 is required to have the Windows PTPP (Peer-to-Peer Printing) driver installed to share the printing service on the network. Other network users can simply connect to the server and access the shared printer. (See below).

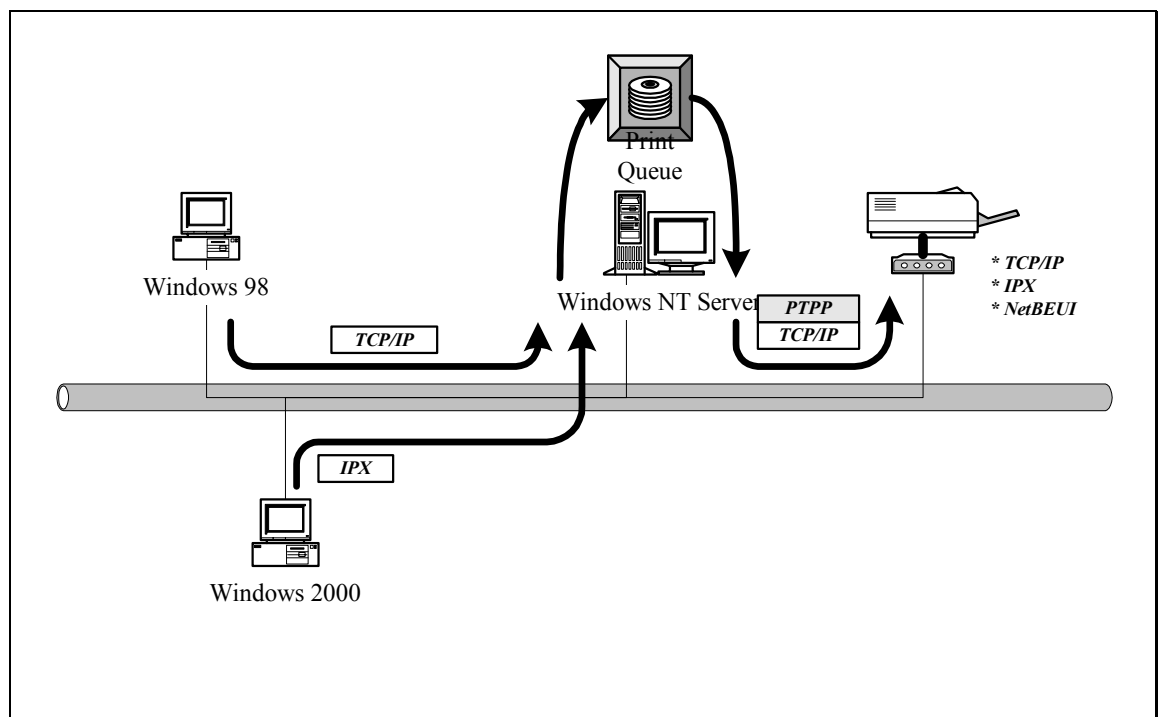

4.2 Windows NT/2000 Server Installation and Setup

Please follow the procedures described below for installation of a peer-to-peer connection (PTPP) between a Windows NT/2000 Server and the HWPS12UG.

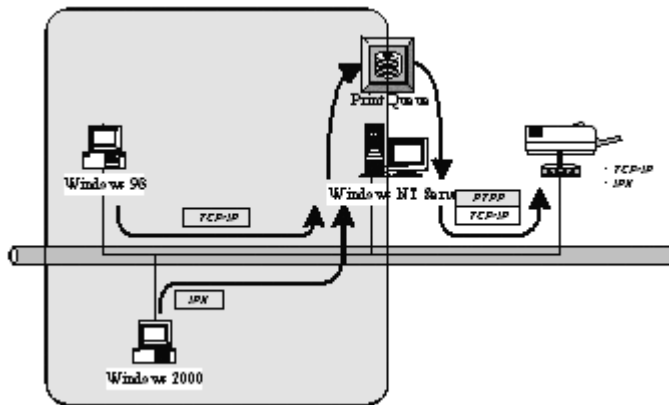

Step1.

If this is your first time installing the print server, please install the administrator software on your Windows NT/2000 server first. Refer to section 3.2 for installation instructions.

If your network has already an installed working print server and your Windows NT/2000 server has not yet installed the PTPP driver, please install the client software. Refer to section 3.4 and 3.5 for installation instructions.


Step2.

Please add/configure Peer-to-Peer Printing on your Windows NT/2000 network printer and verify that you can print from Windows NT/2000 to the print server through the installed PTPP driver.


Step3.

Share the above server's printer with the network by performing the standard Windows printer sharing installation process.

4.3 User Installation and Setup

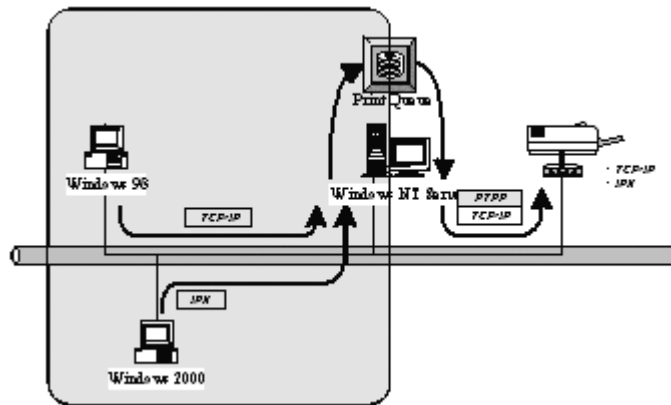

After the server side installation is completed, the client side will be able to find the server's shared printer in your Network Neighborhood. You will then need to perform Window's standard *Add New Printer* procedure. Select "*Network Printer*" as shown in the screen below, and complete the configurations to access the shared printer.

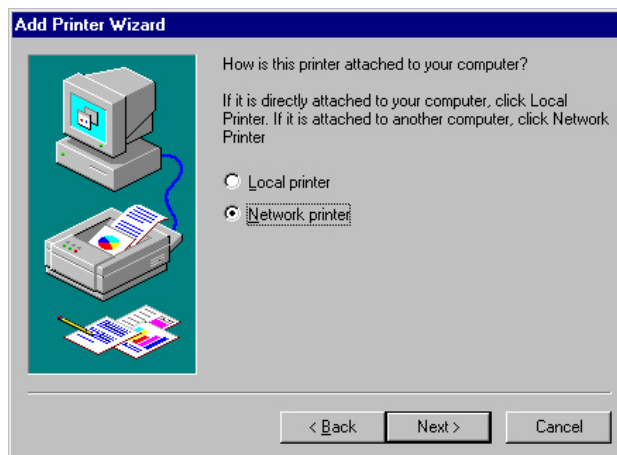


5. NetWare Network

5.1 System Architecture

We implemented the NetWare printer sharing functionality into the HWPS12UG, to allow one or more printers attached to the print server to be connected to your network. The HWPS12UG can support NetWare print server functions:

- The embedded print server, which emulates the “queue management functionality” of the NetWare print server, is the PSERVER program running on the NetWare server. A user first prints a job at a workstation; the job is routed to a NetWare server. The NetWare server then stores the job in a print queue and the print server gets the print job from the queue to the printer on your network.

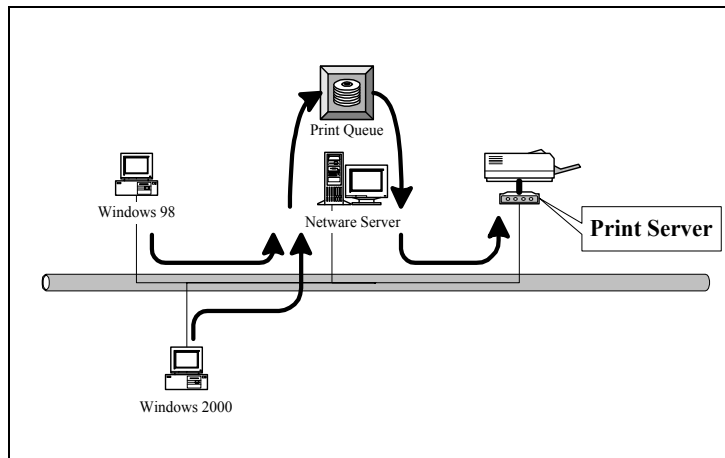

The advantages of embedding the NetWare network printing functionality in the print server include:

Quick and easy installation.

Easy network management.

Enhanced printing performance.

Relief of NetWare's file server burden.

Each print server should log into a NetWare server before servicing the print jobs. Each print server will occupy a user account with which it can log into the NetWare server.

5.2 NetWare 3.x/4.x/5.x Installation & Setup

Once your print server is connected to your Ethernet network, you can set it up for use with your networking software

5.2.1 Installation Using PSETUP

5.2.1.1 Configuring in Print Server Mode

For more complex setup needs, you can use the PSETUP program in conjunction with the NetWare PCONSOLE program.

The installation procedure is as follows:

1. From a workstation, log in to your NetWare server as SUPERVISOR.
2. Run the PSETUP program included on the CD-ROM. (Ex. e:\dosutil\psetup.exe)
3. Select your new print server from the list provided.



4. Choose NetWare Configuration from the menu.




5. Select the Print server in the Printing mode field.
6. Change the Alias of the print server if you wish.
7. Set the Primary File Server to be the file server where the print server's queue will be located.
8. Press Escape to exit the Print Server Configuration screen, confirm that the changes should be saved, and exit PSETUP.

At this point the print server setup is complete. You can now begin setting up the NetWare print server and print queue objects:

9. Run the NetWare PCONSOLE program.
10. Change the current file server, if necessary, using the Change Current File Server menu selection.
11. Choose the Print Queue Information menu selection.

12. Press the Insert key to add a new print queue.


13. Type in a print queue name, such as “PQ” or “Q1”.

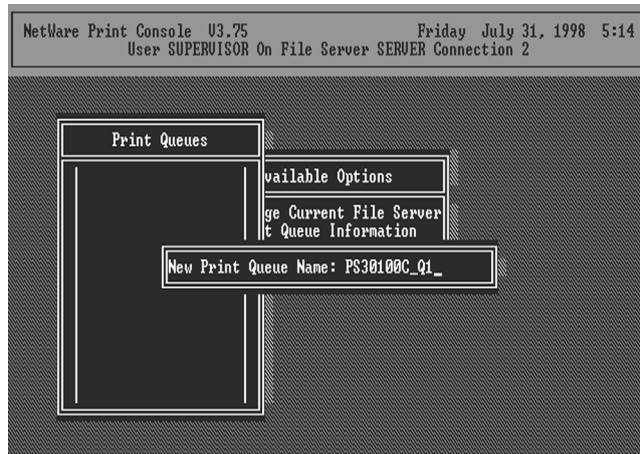


14. You have now successfully created the print queue that your print server will serve. Press the Escape key until the Available Options main menu is displayed.

15. Select “Print Server Information.”

16. Press the Insert key to add a new NetWare print server object. The print server name can be identical to the PSxxxxxx name printed on the label of the print server, or you can use an alias name you have assigned using PSETUP.

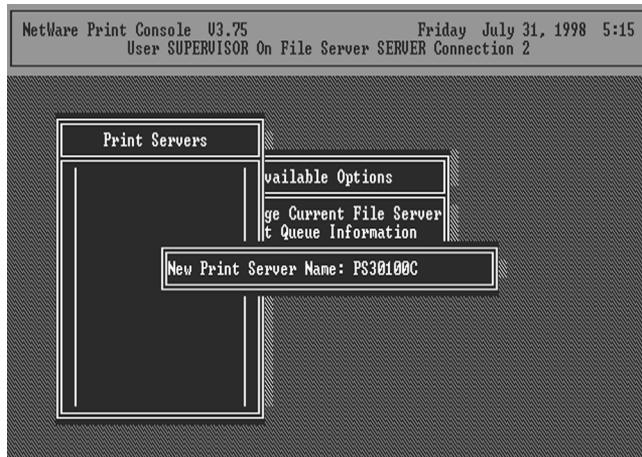


17. Press Enter to select the newly created print server.
18. Select "Print Server Configuration."
19. Select "Printer Configuration."
20. Select Printer 0 (or Printer 1, Printer 2), and press Enter, then select Parallel LPT1 (or LPT2, LPT3) in the Type field. If your print server has only one port, you do not need to configure this Type field.

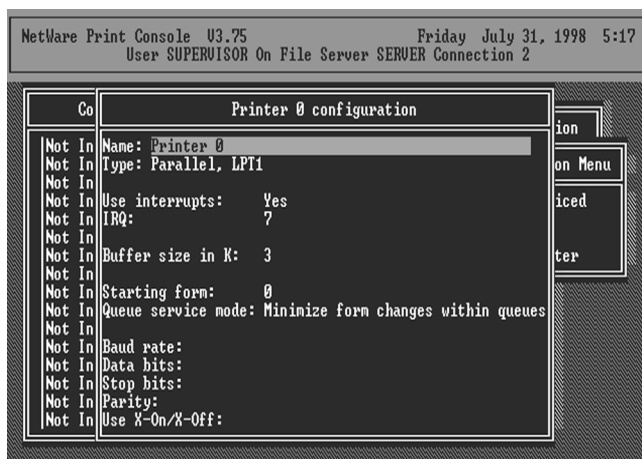

21. Press Escape, and answer Yes to the Save Changes question.

22. Select Queues Serviced by Printer, then select Printer 0 (or Printer 1, Printer 2) and press Enter.

23. Press *Insert* and add your newly created print queue to the list of queues serviced by the printer. Enter a priority number for the queue service, or press Enter to accept the default.

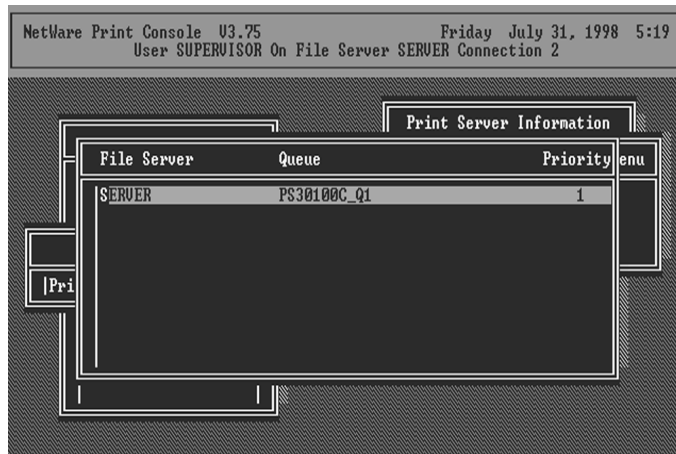

24. Repeatedly press Escape to exit the PCONSOLE program.

25. Reset the print server to have the changes take effect.

NOTE: If the print server you have is with multiple printer connectors, you may create multiple print queues and printer objects.

Your print server should now be ready to use. You should be able to redirect printing to your print server using a CAPTURE command like the one shown in the previous section.

6. UNIX System Network

6.1 Introduction

The HWPS12UG can use TCP/IP printing through the Unix lpd (Line Printer Daemon) protocol. The lpd protocol is based on the BSD version of Unix and is supported under most versions of Unix.

This chapter explains how to configure the print server for TCP/IP operation, and how to modify configuration files on your Unix system to allow printing to the print server. The configuration examples in this manual follow the syntax for BSD based Unix systems. Please refer to the related system documentation for the correct syntax of your system.

To configure the print server for lpd printing, perform the following procedures below:

1. Enable the HWPS12UG's TCP/IP Support.
2. Set the HWPS12UG's IP address.
3. Verify the HWPS12UG's IP Address.
4. Configure remote lpd printing on the host.
5. Print a test page.

In the next section, we will describe these five procedures in depth.

6.2 Enable The HWPS12UG's TCP/IP Support

The default configuration of the HWPS12UG has TCP/IP support enabled. You can configure the HWPS12UG to enable TCP/IP support using the configuration program or PSETUP program included on the HWPS12UG CD-ROM.

6.3 Setup the HWPS12UG's IP Address

The print server must have a unique IP address in order to be recognized by the network.

You can set up the IP address on various Unix systems using any one of the following methods:

1. DHCP (Dynamic Host Configuration Protocol)
2. BOOTP (Bootstrap Protocol)

The print server will use the last three methods to obtain its IP address automatically if its IP address is configured as Auto (0.0.0.0).

6.3.1 DHCP

There are many Unix systems that support the DHCP protocol and the procedures to configure the DHCP server database are different. This manual does not describe the DHCP server configuration on Unix systems. It is highly recommended that the DHCP server should be located on the same network as the HWPS12UG.

6.3.2 BOOTP

If you have the BOOTP daemon, bootpd, running on your UNIX and is accessible to the print server, you can use the BOOTP protocol to set up the IP address of the print server. We recommend that the BOOTP server should be located on the same subnet as the print server. If you use Network Information Services

(NIS) in your system, you may need to rebuild the NIS map with the BOOTP services before doing the following BOOTP configuration. To rebuild the NIS map, please refer to your system documentation.

To configure the IP address data for the BOOTP server, you will need to log in as the host of the BOOTP server with superuser (root) admin rights. Perform the following steps to add address entries:

1. Optionally, assign a name corresponding to the print server's IP address. You can add this address to the /etc/hosts file, by adding the following line:

```
203.66.191.12      pserver
```

2. Add an entry to the host's /etc/bootptab file, similar to the following:

```
hostname:\

:ht=1:\

:ha=print_server_ethernet_address:\

:ip=print_server_ip_address:
```

Lines should be indented with tabs.

Where hostname is the device name of the HWPS12UG; the ht=1 tag specifies that the hardware type is Ethernet. The ha= tag specifies that the Ethernet address of the HWPS12UG is the Node ID located on the print server. The ha tag must be preceded by the ht tag. The ip= tag should correspond to the IP address you want to assign to the print server.

For example, below is an example of a print server with the following configuration:

Node ID: 0000B4010101 (this implies Ethernet address is 0000B4010101),

IP address: 203.66.191.12

The entry for this print server in the /etc/bootptab file should be:

```
PS010101:\  
  
:ht=1:\  
  
:ha=0000B4010101:\  
  
:ip=203.66.191.12:
```

6.4 Verify the HWPS12UG's IP Address

To verify that your print server is responding to the newly assigned IP address, use a PING command to check the HWPS12UG's response:

```
ping ip-address
```

6.5 Configure Remote lpd Printing on the Host

You can use this procedure to configure your Unix host(s) to allow printing to your network. The procedure below can be used for Unix variants that are related to BSD Unix, like SunOS or Linux. For other versions of Unix, consult your system documentation, keeping in mind that:

1. The print server should be treated as a BSD networked print server host.
2. The host name should be the name (or IP address) that you have assigned to the print server.
3. The printer name (or queue name) on the remote host should be lpt1, lpt2 or lpt3, the name of the parallel port on the print server.

You will need to perform the tasks below, logged in as the superuser (root). To configure your Unix host for printing,

1. Optionally, assign a name corresponding to the print server's IP address. You can add this address to the /etc/hosts file, by adding the following line:

203.66.191.186

pserver

2. Create a spool directory for the printer in the same directory where spool directories are normally kept on the machine, such as /var/spool or /var/spool/lpd:

```
mkdir /var/spool/lpd/pserverd
```

```
chown daemon /var/spool/lpd/pserverd
```

```
chgrp daemon /var/spool/lpd/pserverd
```

```
chmod 775 /var/spool/lpd/pserverd
```

3. Add an entry to the host's /etc/printcap file, similar to the following:

```
printer-name:\n\n:lp=:\n\n:rm=203.66.191.186:\n\n:rp=lpt1:\n\n:lf=/var/spool/lpd/pserverd.log:\n\n:sd=/var/spool/lpd/pserverd:\n\n:mx#0:
```

Lines should be indented with tabs. More than one printer name can be used, with variants separated by vertical bars (name1|name2).

The rm= entry should correspond to the IP address you have assigned to the print server. You can also use a host name if you have one assigned in the /etc/hosts file.

The sd= entry should correspond to the spool directory you created in the previous step.

The rp= entry should correspond to the port name of the remote printer. The values should be lpt1, lpt2, or

lpt3, depending on which printer port your printer is attached to.

The HWPS12UG should now be available for printing from your Unix host.

7. Configuration Utility

7.1 Introduction

This chapter introduces the HWPS12UG's system configuration utility in a Windows environment. This utility is automatically installed during the Windows Administrator Utility installation procedure - refer to section 3.2 and 3.3.

This utility provides complete management and configuration functions for the print server. This utility only provides configuration functions for the HWPS12UG itself; it does not include configuration functions for client side or other file server or NetWare server in the network environment.

The Configuration Utility provides the following configuration and management functions:

Search Print Server: Search All Available Printer Servers on the Network

Print Server Status: Print Server Network Status

AppleTalk Configuration: AppleTalk Protocol Setting

General Configuration: General Information of print server

NetWare Configuration: NetWare Printing Configuration

System Configuration: Print Server Network Ability Setting and Firmware Upgrade

TCP/IP Configuration: IP Address and DHCP Server Configuration


Wireless Configuration: Wireless LAN Configuration

Setup Wizard: Guide You Through All the Settings

Report: List the Status of All Available Print Servers on the Network

We will explain each function separately in the following section.


7.2 Search – Search for All Available Print Servers

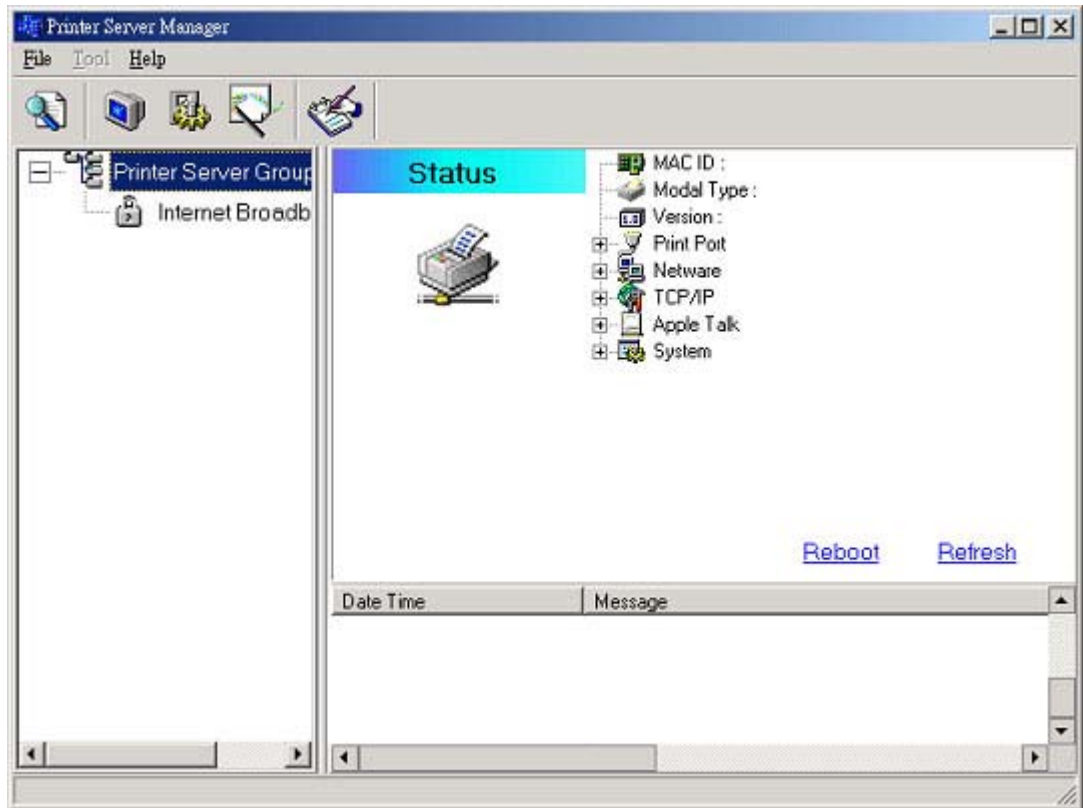

After you start up Hawking's HWPS12UG configuration utility, click the "Search" icon  on the tool bar. The configuration utility will delay for several seconds to search for all print servers on the network. All available print servers will be listed under the "Print Server Group" window on the left side of your screen.

You must select the print server you would like to configure from the list. The configuration utility will display the selected print server's status on the right side of the window.

7.3 Status - Print Server Status

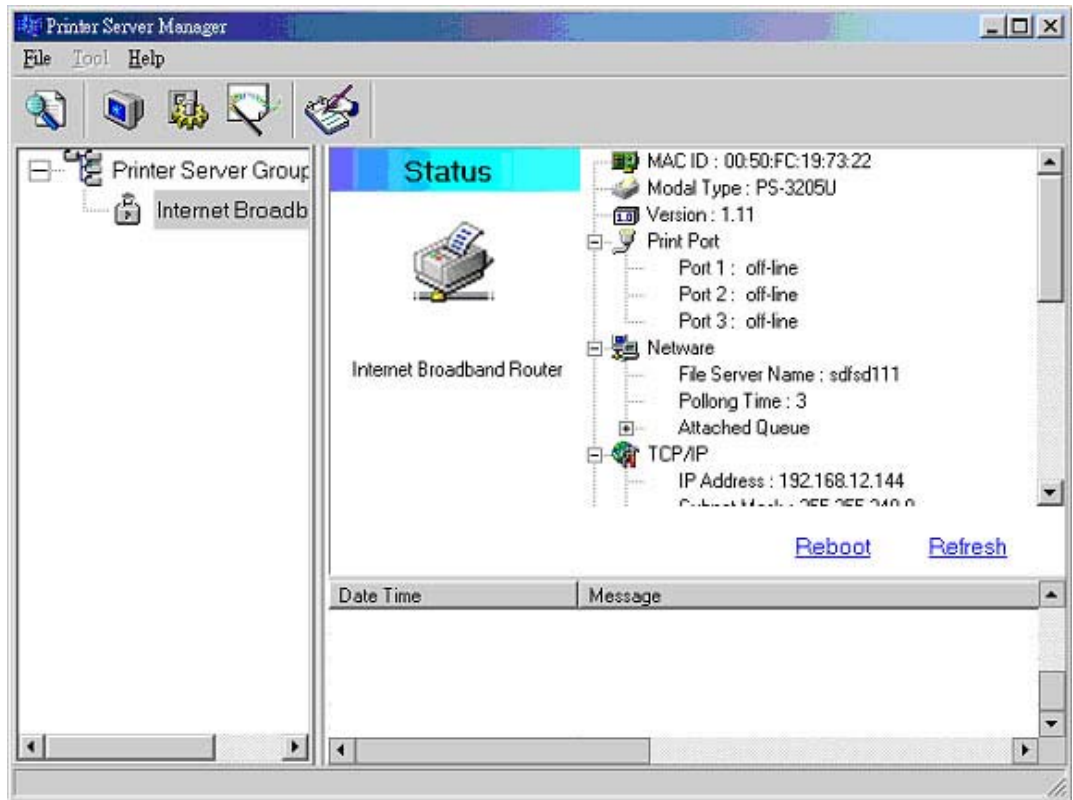


Click the “Status” icon  on the tool bar to view the current status of the selected print server.

Information about the selected print server is displayed including the MAC ID, model type, firmware version, status of each printer port, NetWare file server name, NetWare file server polling interval, NetWare printer queue names, IP address, subnet mask, default gateway, AppleTalk printer type, AppleTalk zone and print server printing ability...etc.

You can refresh the print server's status by pressing the “*Refresh*” button.

You can restart the print server by pressing the “Reboot” button.

7.4 Setting up the Print Server

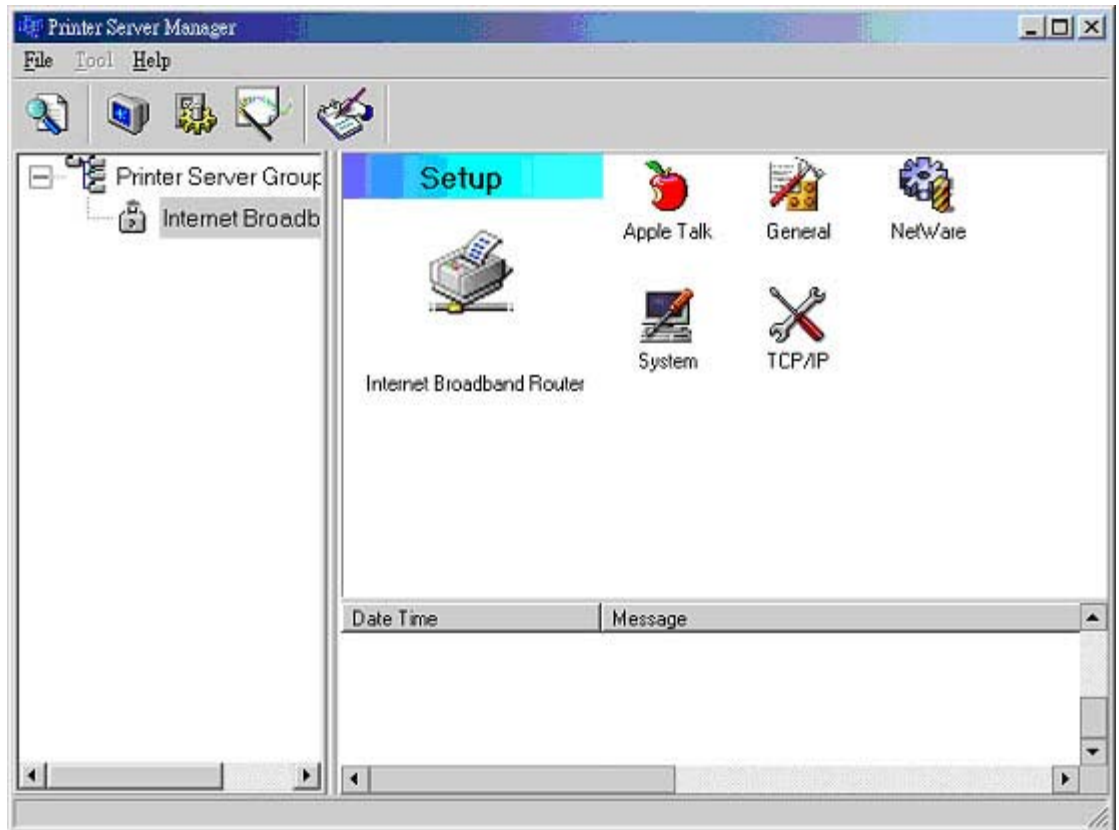

Click the “Setup” icon  on the tool bar and the setup items of the current selected print server will be displayed on the right side of the window.


You can modify the HWPS12UG’s settings here.

Please Note: Default password and login is requested when configuration settings are changed or modified -

Login: admin

Password: 1234

7.5 AppleTalk Configuration

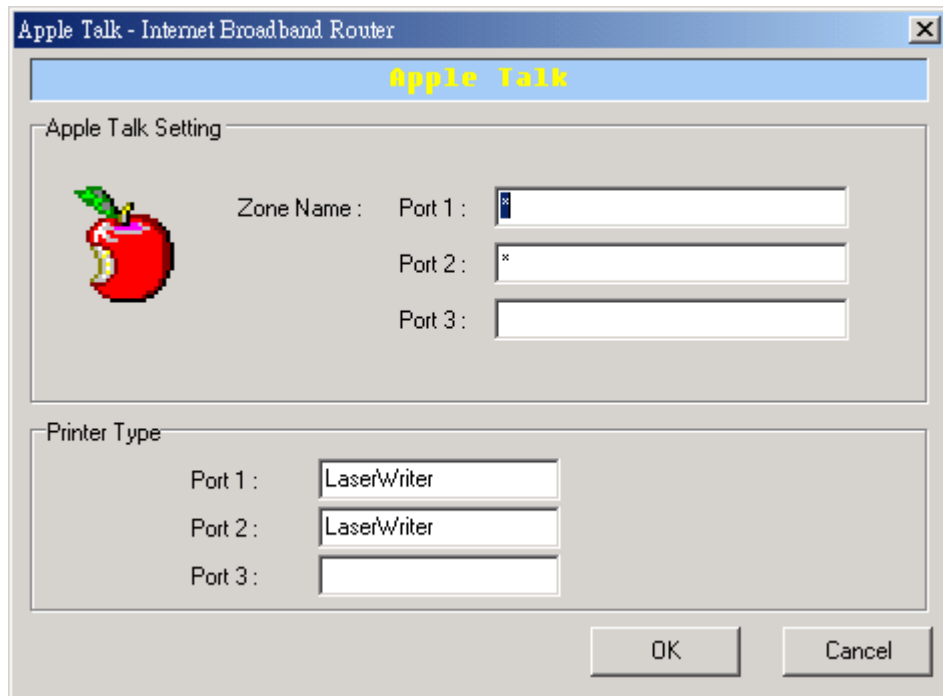

Double Click on the “AppleTalk” icon and the AppleTalk configuration window will appear.


AppleTalk is a data communication protocol often used by Macintosh computers. The HWPS12UG can use this protocol to join the AppleTalk network and share your printer to other AppleTalk workstations. You will have to setup the “Zone Name” and “Printer Type” for each printer port of the HWPS12UG.

Zone Name: Enter the HWPS12UG AppleTalk zone that your AppleTalk network uses. The selected zone must be active before other AppleTalk workstations can share your HWPS12UG. Only workstations in the same zone can share your printer. If you want to share your printer with every workstation in every

Zone, you should enter an “*” in the “Zone Name” field.

Printer Type: This is the type of printer attached to each printer port. You can get the printer type information from the manufacturer of your attached printer.

7.6 General Configuration

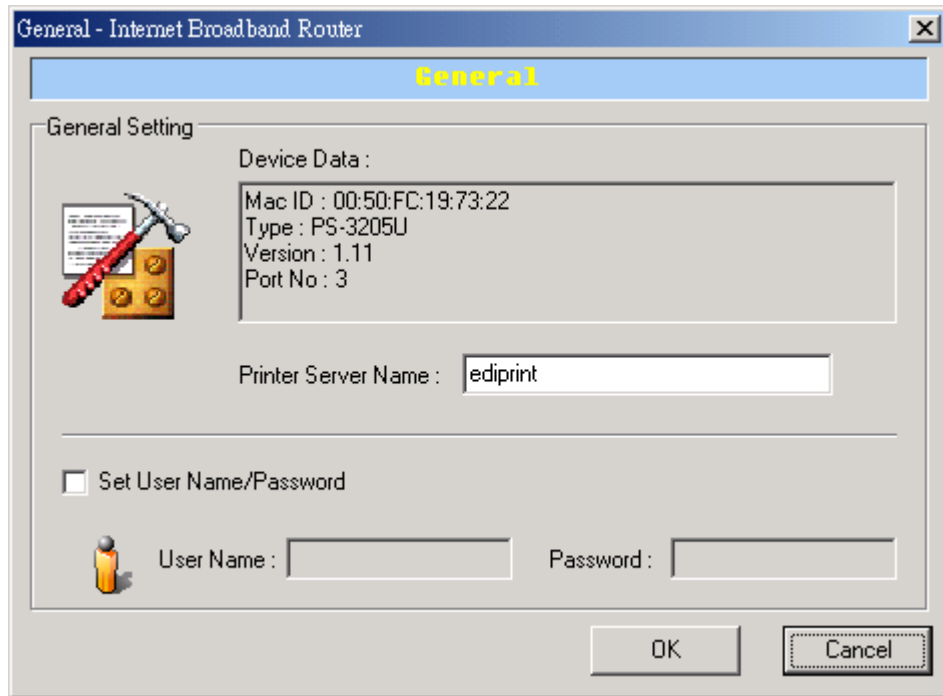


Double Click the “General” icon and the General configuration window will be displayed.

You can see basic print server information in this window. You also can configure the “Print Server Name,” “User Name,” and “Password” here.

Print Server Name: This is the name of your HWPS12UG. You can use this name to identify the HWPS12UG when you are searching for your print server through the administration and client utilities.

User Name / Password is used to authenticate the administrator through the Web administration tool.

7.7 Netware Print Server Configuration

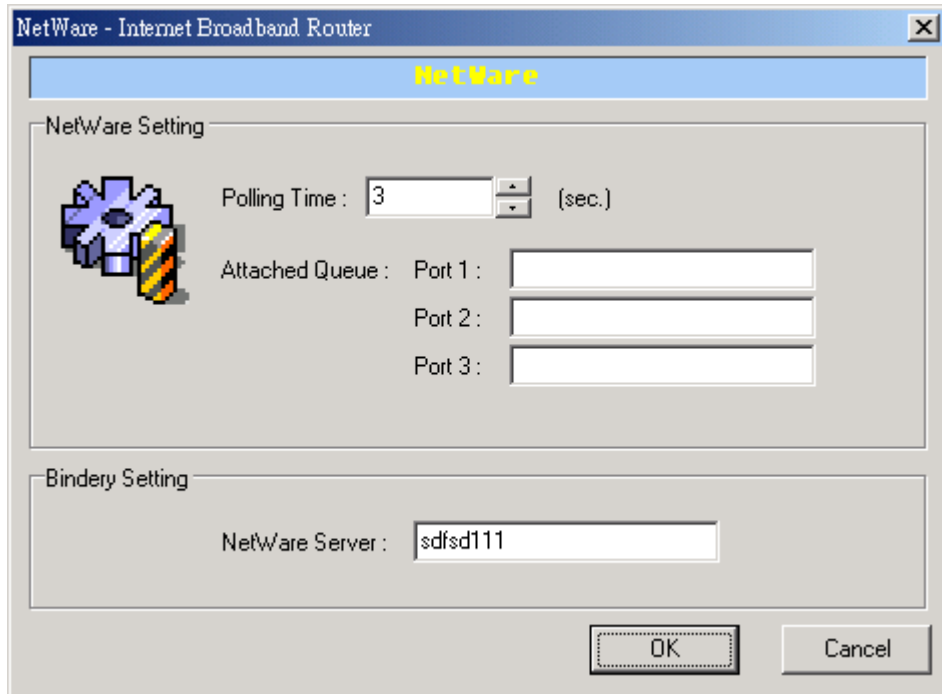

The image shows a Windows-style configuration window titled "NetWare - Internet Broadband Router". The window has a blue header bar with the text "NetWare" in yellow. Below the header, there are two main sections: "NetWare Setting" and "Bindery Setting".

NetWare Setting

- On the left is a gear icon with a yellow and black striped cylinder next to it.
- Polling Time :** A text box containing the number "3" followed by a small up/down arrow and the text "(sec.)".
- Attached Queue :** Three stacked text boxes labeled "Port 1 :", "Port 2 :", and "Port 3 :".

Bindery Setting

- NetWare Server :** A text box containing the text "sdfs111".

At the bottom right of the window are two buttons: "OK" and "Cancel".

Double Click on the “NetWare” icon and the NetWare configuration window will be displayed.

The HWPS12UG supports the NetWare Bindery Printing method and periodically polls the NetWare server printer queues for printing jobs. You will have to assign the NetWare server name, print server polling interval, and the name of queue on the NetWare server for each printer port.


Polling Time is the polling interval time that the HWPS12UG waits before printing jobs on the NetWare server.

Attached Queue is the name of the printer queue on the NetWare server. The printer queue keeps all

printing jobs waiting on the NetWare server. You have to assign a printer queue for each printer port of the HWPS12UG.

NetWare Server is the name of the NetWare file server that provides printer queues.

7.8 System Configuration

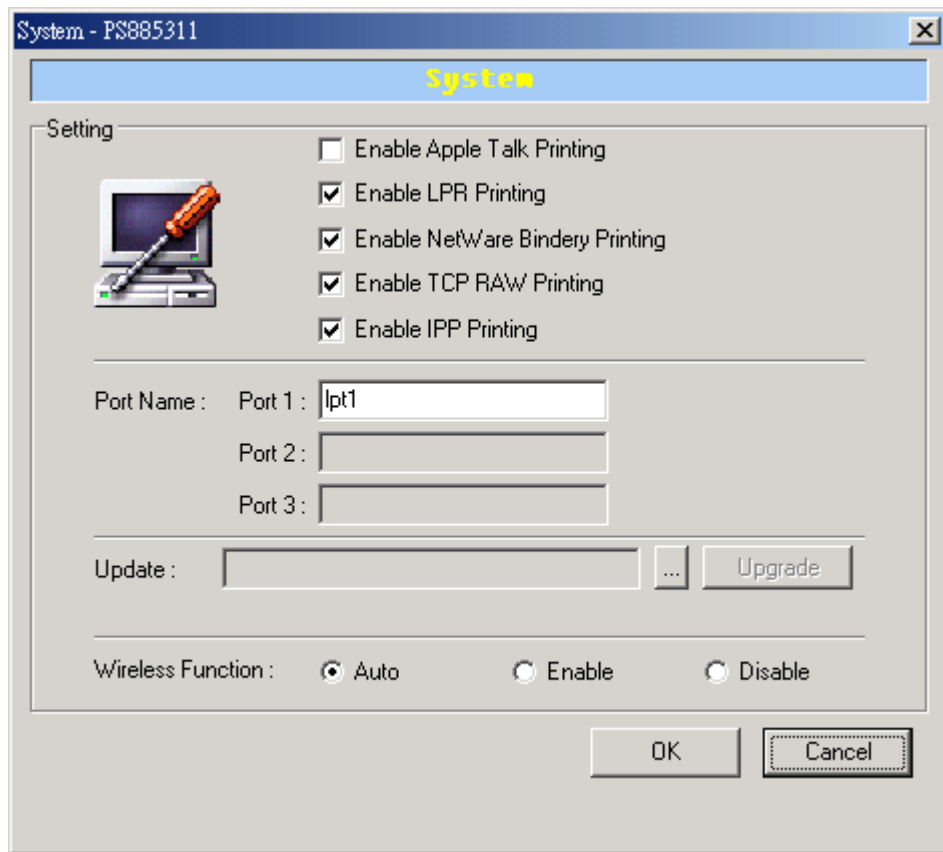

Double Click “System” icon and the System configuration window will be displayed.

From the System configuration page, you can select to enable/disable each printing protocol, assign name for each printer port, and upgrade to a new firmware version.

Port Name: This is the name of your printer port. Each printer port needs to be assigned a name. The client utility uses this name to access the printer port.

Upgrade Firmware: You can use the “Upgrade Firmware” tool to update to the newest firmware of the print server. Click the  button and select the correct firmware version file. After selecting the firmware file, click the “Upgrade” button to finish the firmware update process.

Wireless Function: You can select “Enable” or “Disable” to manually enable or disable the wireless functionality of the HWPS12UG Print Server. If you manually enable the wireless functionality, the print server’s wireless LAN will be always enabled and Ethernet will be disabled. If you manually disable the wireless functionality, the print server’s wired LAN connection will be always enabled and all wireless functionality will be disabled. You also can select “Auto” to let the print server automatically decide to enable or disable the wireless functionality. The print server can only work in either Ethernet or wireless LAN mode. It cannot work in both Ethernet and wireless LAN mode at the same time. When the print server initially boots up, it will auto-detect if the LAN port is connected to an active network through the Ethernet cable. If the print server is connected to an active network through the Ethernet cable when booting up, the print server will run in Ethernet LAN mode (Wired). If the print server is not connected to an active network through an Ethernet cable when booting up, the print server will run in wireless LAN mode (Wireless). The HWPS12UG’s default setting is to run in “Auto” mode.

7.9 TCP/IP Configuration

TCP/IP - Internet Broadband Router

TCP/IP

TCP/IP Setting



☐ Auto IP

☒ Specify IP

IP Address :

Subnet Mask :

Gateway :

TCP/IP - PS885311

TCP/IP

TCP/IP Setting



☒ Disable

☐ Enable

Start Address :

End Address :

Gateway :

DNS :

Double Click the “TCP/IP” icon and the TCP/IP configuration window will appear.

You can configure the print server to automatically get its IP address from your networks DHCP server or manually specify a static print server IP. The HWPS12UG also has a built-in DHCP server. You can enable this DHCP server and let it manage your print server IP addresses for you.

Click the “IP” button to enter the IP setting page. If you need the print server to automatically get an IP from your networks DHCP server, select “Auto IP.” You also can select “Specify IP” to manually assign “IP Address,” “Subnet Mask,” and “Gateway” for the HWPS12UG.

Click the “DHCP” button to enter the DHCP server settings page. You can enable/disable the DHCP server and assign a range of IP addresses here. The DHCP server is disabled by default. You will have to configure a “Start Address,” “End Address,” “Gateway,” and “DNS” for the HWPS12UG. The print server will assign a unique IP address for each client.

7.10 Wireless Configuration

If you wish to use the print server's wireless LAN capabilities, please set up the HWPS12UG print server through an Ethernet connection before setting up the wireless connection. After configuring the wireless LAN portion of your print server's settings, unplug your LAN Ethernet cable and restart the HWPS12UG print server by unplugging the power cable from the rear of the unit. If your wireless configuration does not work, please plug in your Ethernet LAN cable again, restart the print server, and configure the print server through Ethernet until your wireless LAN settings are correct.



Double Click on the “Wireless” icon and the wireless configuration window will be displayed.

If you use an access point or wireless router to access your local network, you should select “Infrastructure Mode” to connect your print server to the wireless LAN. If you do not have a wireless network currently running and wish to use a peer-to-peer wireless connection, please select “Ad Hoc Mode.”

After selecting the wireless operation mode of the print server, click “Next” to continue with detailed wireless configuration.


Infrastructure Mode:



In Infrastructure mode, your HWPS12UG will use an access point or wireless router to relay information from your computer to the print server. You can let the print server scan for an available access point

automatically or manually assign the SSID of the access point or wireless router you wish to use.

If you wish to let the HWPS12UG print server scan for an available access point or wireless router, the following window will be displayed.

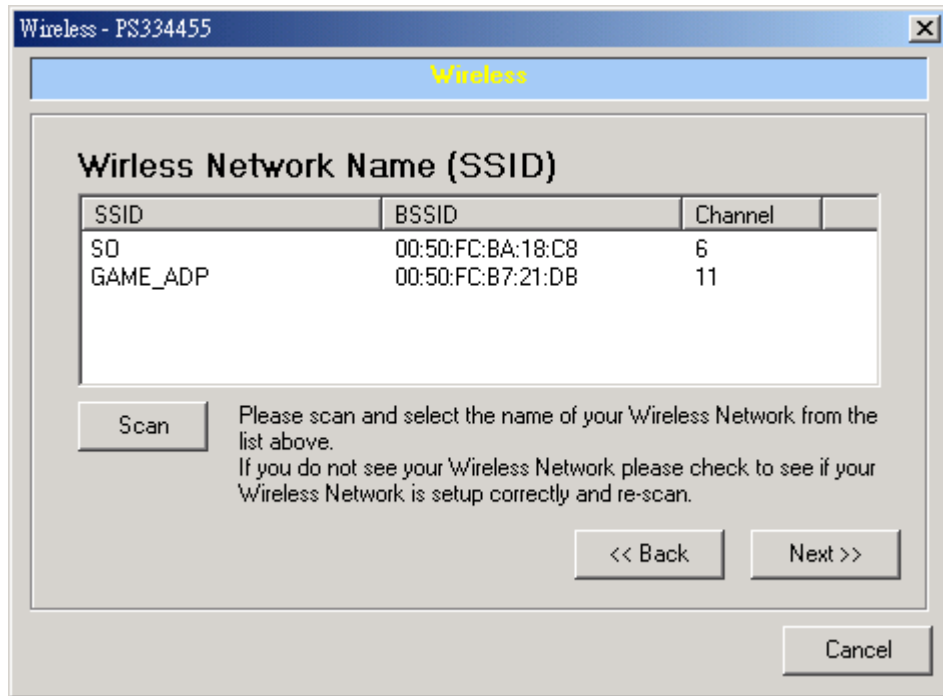


This is a list of scanned available wireless access points. Select an access point in the list to connect to and click "Next." If you cannot find the access point that you wish to use, click on "Scan" to let the HWPS12UG scan for your wireless network again.

Ad Hoc Mode:




In Ad Hoc mode, you can let the HWPS12UG automatically associate with other wireless stations or manually assign the SSID of your wireless network. You can let the print server automatically select the channel that is the same with your peer connection or manually assign a channel.

If you wish to let the HWPS12UG print server scan for an active wireless station, the following window will appear.

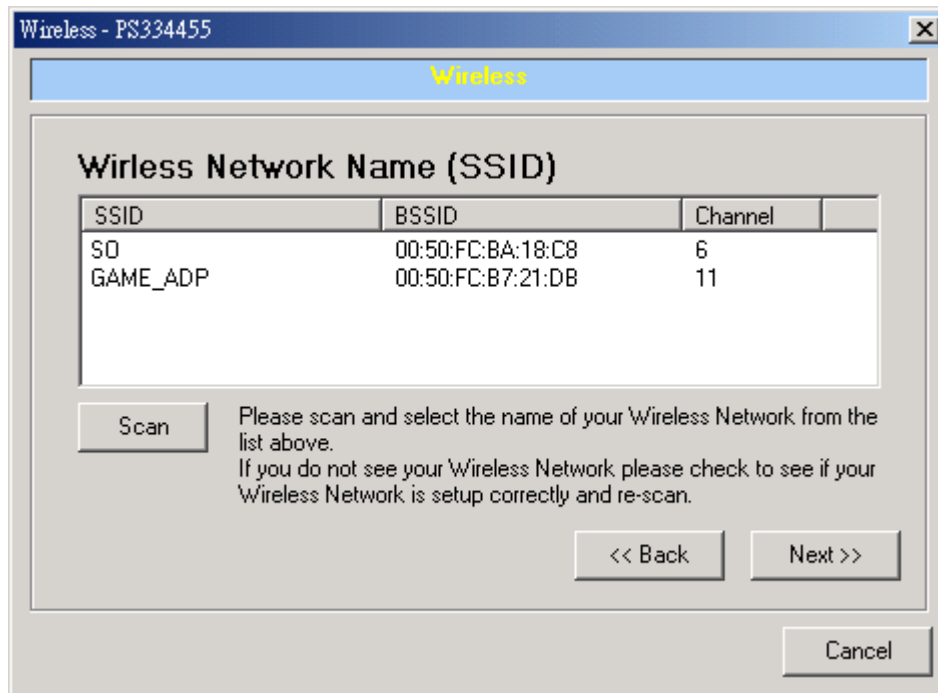

The list displays active available wireless stations. Select the wireless station you wish to connect to from the list and click “Next.” If you cannot find the wireless station that you want the HWPS12UG print server to communicate with, click “Scan” to let the print server scan the available networks again.

Both “Infrastructure” and “Ad Hoc” mode must select to use or disable encryption as displayed in the following procedure:

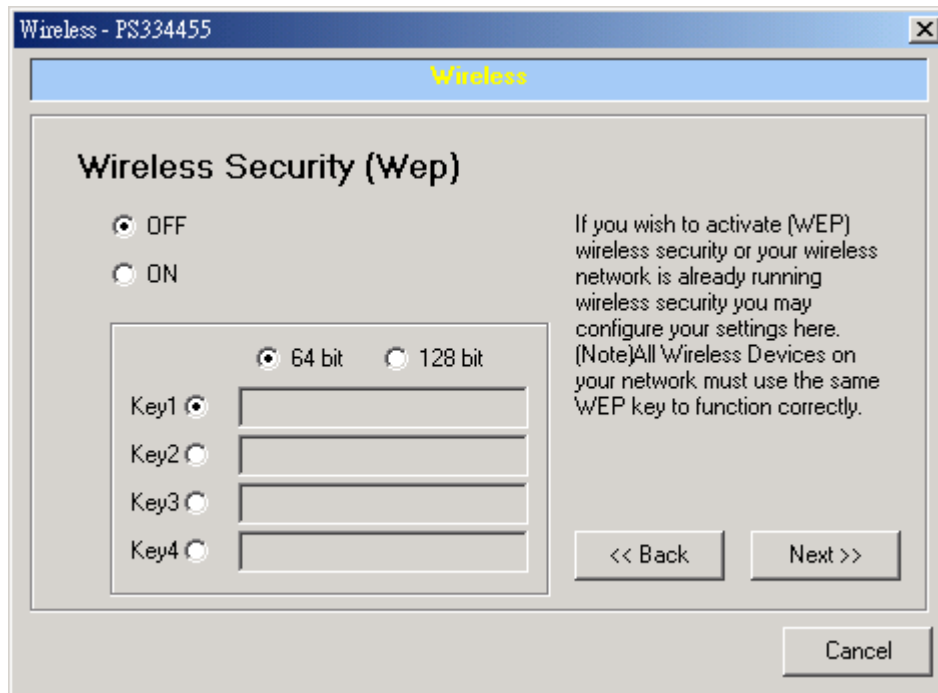


If you want to use WEP encryption to protect your wireless network, you have to select “ON” to enable the “Wireless Security” function. The wireless security setting should be the same with other wireless devices in the same network.

You can select “64 bit” or “128 bit” length encryption keys. The longer the key length is, the stronger your security will be, however, the addition of WEP will effect your data transfer performance.

Enter four key values and select one key as the default key.


When you finish configuring the wireless security features of this print server, click “Next” to configure the IP address of your wireless print server module.

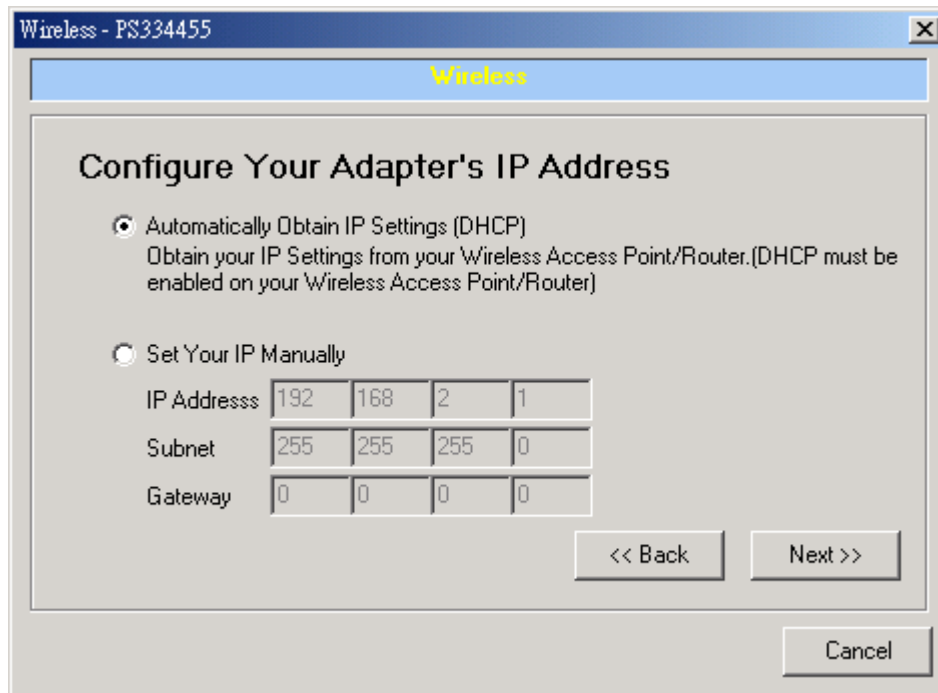

You can select to allow the print server to automatically obtain your network's IP settings with the DHCP client feature or manually assign the IP settings.


If you manually assign the IP settings, you have to enter IP address, subnet mask, and default gateway address.

When you finish configuring the IP settings, click "Next" to confirm the wireless configuration status.

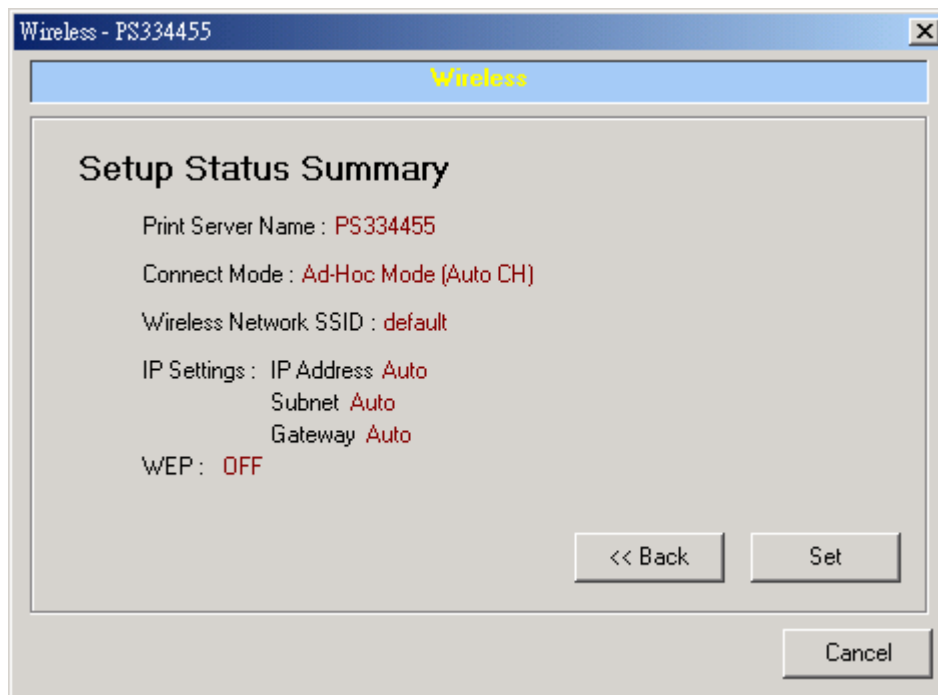

Click “Set” to save the wireless configuration.


7.11 Wizard

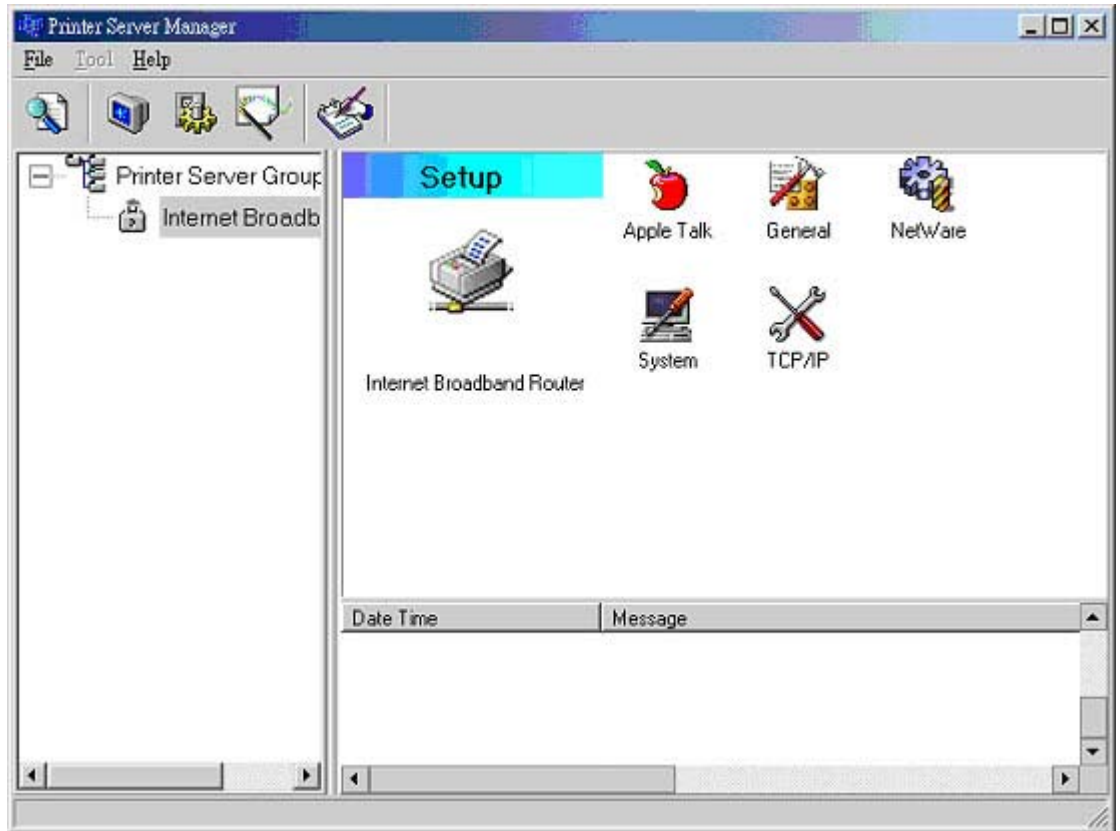

Click the “Wizard” icon  on the tool bar and the setup wizard of the current selected print server will be shown on the right side of the information window.

Double click the “Print Server Wizard” and the setup wizard will guide you through the setup process.

Step 1: Setup the name of the print server and the name of each printer port. Please refer to section 7.6 and 7.8 for detailed information.

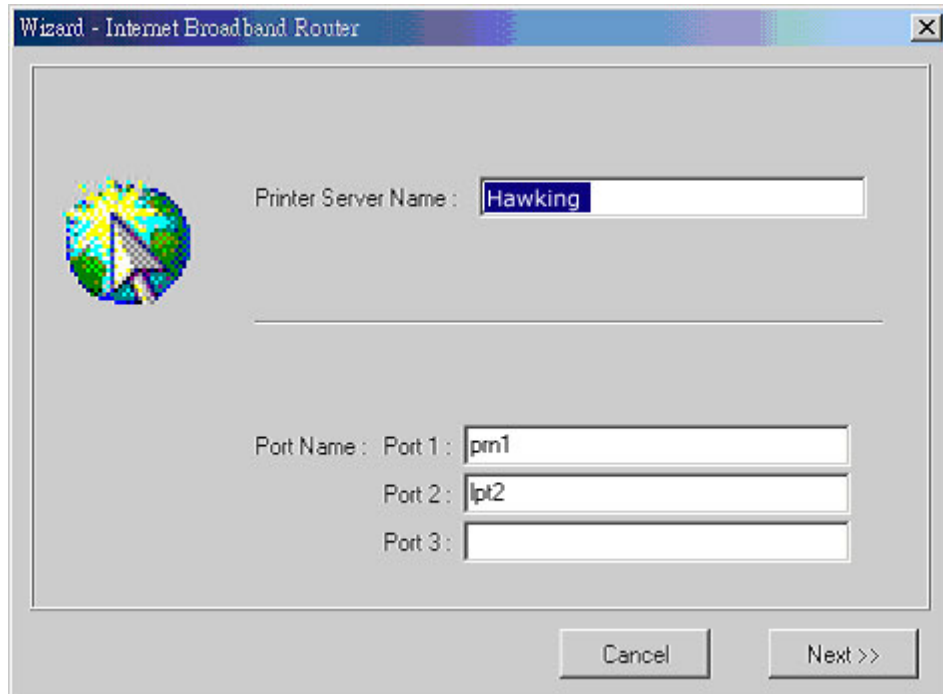


The image shows a window titled "Wizard - Internet Broadband Router". On the left is a circular icon with a mouse cursor. The main area contains the following fields:

- Printer Server Name :
- Port Name :
 - Port 1 :
 - Port 2 :
 - Port 3 :

At the bottom right are two buttons: "Cancel" and "Next >>".

Step 2: Select to enable the required printing protocol. Please refer to section 7.8 for detailed information.

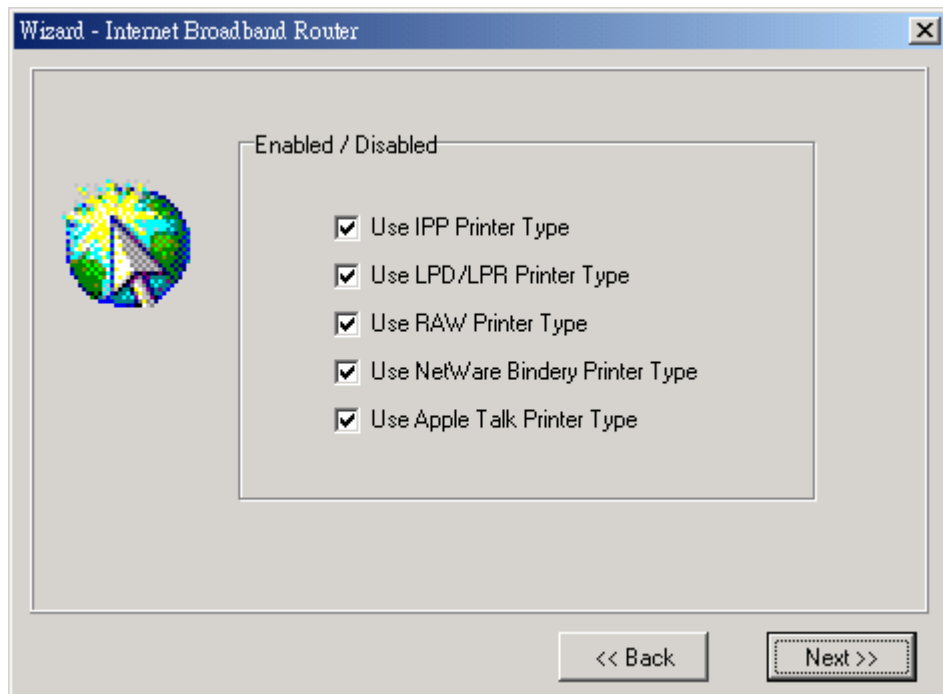

The image shows a window titled "Wizard - Internet Broadband Router". On the left is a circular icon with a mouse cursor. The main area contains a section titled "Enabled / Disabled" with a list of printer types, each with a checked checkbox:

- ☒ Use IPP Printer Type
- ☒ Use LPD/LPR Printer Type
- ☒ Use RAW Printer Type
- ☒ Use NetWare Bindery Printer Type
- ☒ Use Apple Talk Printer Type

At the bottom right are two buttons: "<< Back" and "Next >>".

Step 3: Setup the IP address of the HWPS12UG and the DHCP server. Please refer to section 7.9 for detailed information.

Wizard - Internet Broadband Router

IP DHCP Server

☐ Auto IP

☒ Specify IP

IP Address : 192 168 12 144

Sunnet Mask : 255 255 240 0

Gateway : 192 168 12 252

<< Back Next >>

Step 4: Setup NetWare printing. Please refer to section 7.7 for detailed information.

Wizard - Internet Broadband Router

Polling Time : 3 (sec.)

Attached Queue : Port 1 :
Port 2 :
Port 3 :

NetWare Server : sdfsd111

<< Back Next >>

Step 5: Setup AppleTalk printing. Please refer to section 7.5 for detailed information.


Wizard - Internet Broadband Router

Zone Name : Port 1 : *
Port 2 : *
Port 3 :

Printer Type : Port 1 : LaserWriter
Port 2 : LaserWriter
Port 3 :

<< Back Next >>

Step 6: Select the Wireless Adapter mode and set up wireless LAN settings. Please refer to section 7.10 for detailed information.

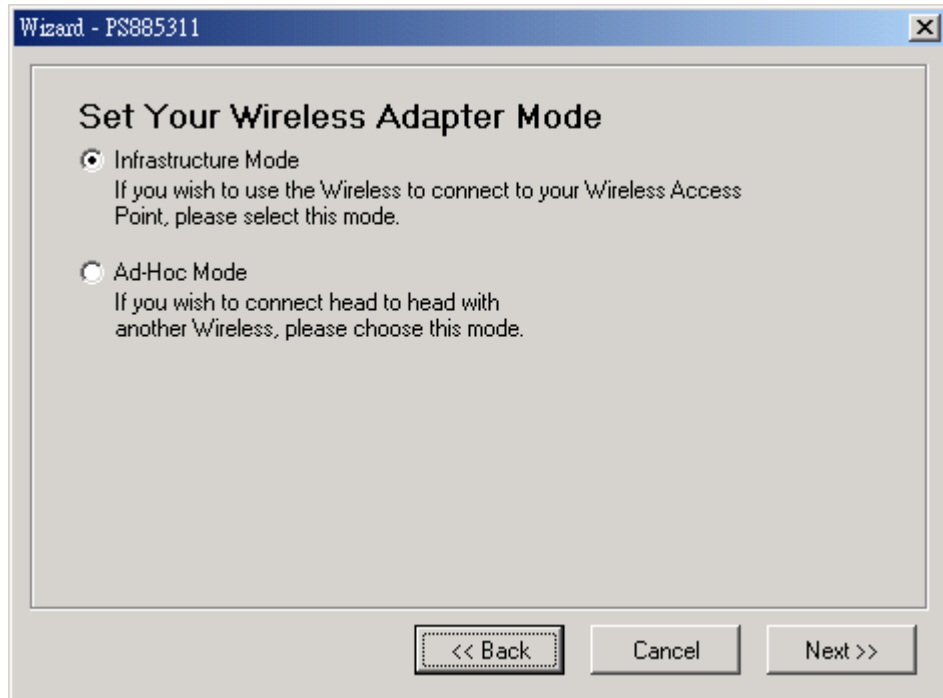

Step 7: Click “Set” to finalize your settings.



Setup Status Summary

PrinterServer

Name : PS885311

Port Name Port1 : lpt1

Port2 :

Port3 :

Print Protocol

AppleTalk : Disable

LPR : Enable

NetWare : Enable

TCP RAW : Enable

IPP : Enable

IP setting

IP Address 192.168.12.213

Subnet 255.255.255.0

Gateway 0.0.0.0

DHCP server : Disable

NetWare

Server : fs

polling time : 3 sec

Queue Port1 : PQ1

Port2 :

Port3 :

Wireless

Function : Auto

Connect Mode : Infrastructure

SSID : ddd


WEP : OFF

<< Back

Cancel

Set

7.12 Report

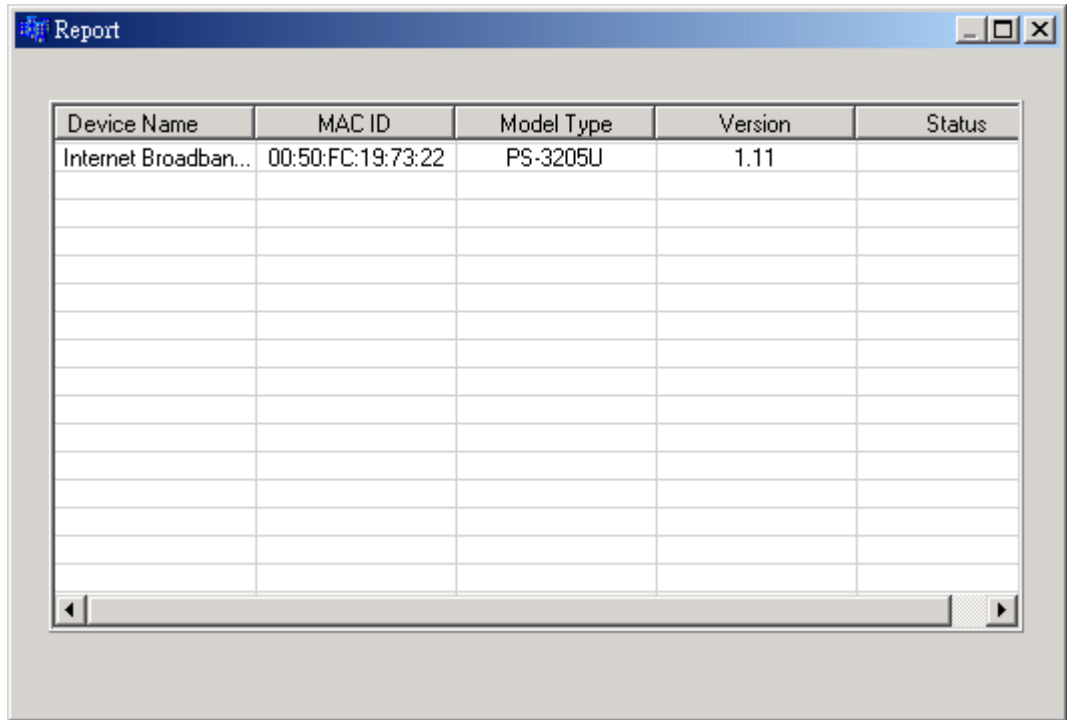

The screenshot shows a window titled "Report" with a standard Windows-style title bar (minimize, maximize, close buttons). Inside the window is a table with five columns: "Device Name", "MAC ID", "Model Type", "Version", and "Status". The first row of data shows "Internet Broadban...", "00:50:FC:19:73:22", "PS-3205U", "1.11", and an empty status field. There are 11 empty rows below the first one. A horizontal scrollbar is visible at the bottom of the table area.

Device Name	MAC ID	Model Type	Version	Status
Internet Broadban...	00:50:FC:19:73:22	PS-3205U	1.11	

Click the “Report” icon  on the tool bar and the Report window will pop-up.

The report lists basic information of all available print servers on the network. The information includes Device Name, MAC ID, Model Type, Firmware Version, and print server status.

8. Web Management

8.1 Introduction


The HWPS12UG can be configured and managed via the Web. Through the Local Area Network, or even the Internet, an administrator can easily configure and manage the HWPS12UG's functions through a web browser. Simply enter the print server's IP address into your browser's URL field to manage the HWPS12UG through the print server's built-in Web Server.

8.2 Web Management of Print Server

8.2.1 Login

You can use any Web Browser to review the status or configure the settings of the HWPS12UG. After entering the IP address of the print server, a login page will be displayed. You have to enter correct “User Name” and “Password” before accessing the Web Management pages.

Note: Default User Name is “**admin**” and default password is “**1234**”.

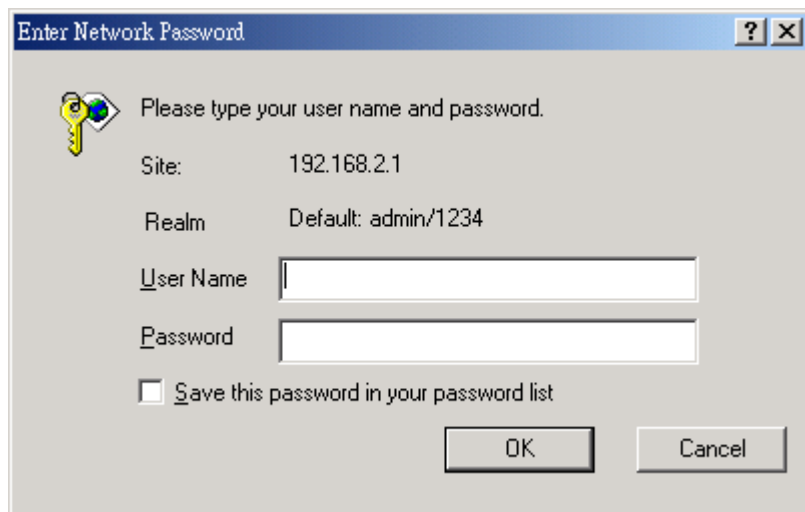


The screenshot shows a Windows-style dialog box titled "Enter Network Password". It contains a key icon and the instruction "Please type your user name and password." Below this, the "Site:" is set to "192.168.2.1" and the "Realm:" is set to "Default: admin/1234". There are two text input fields: "User Name" and "Password". At the bottom, there is a checkbox labeled "Save this password in your password list" which is currently unchecked. "OK" and "Cancel" buttons are located at the bottom right.

Enter Network Password	
Please type your user name and password.	
Site:	192.168.2.1
Realm	Default: admin/1234
User Name	
Password	
☐ Save this password in your password list	
OK Cancel	


8.3 Device Status

8.3.1 System

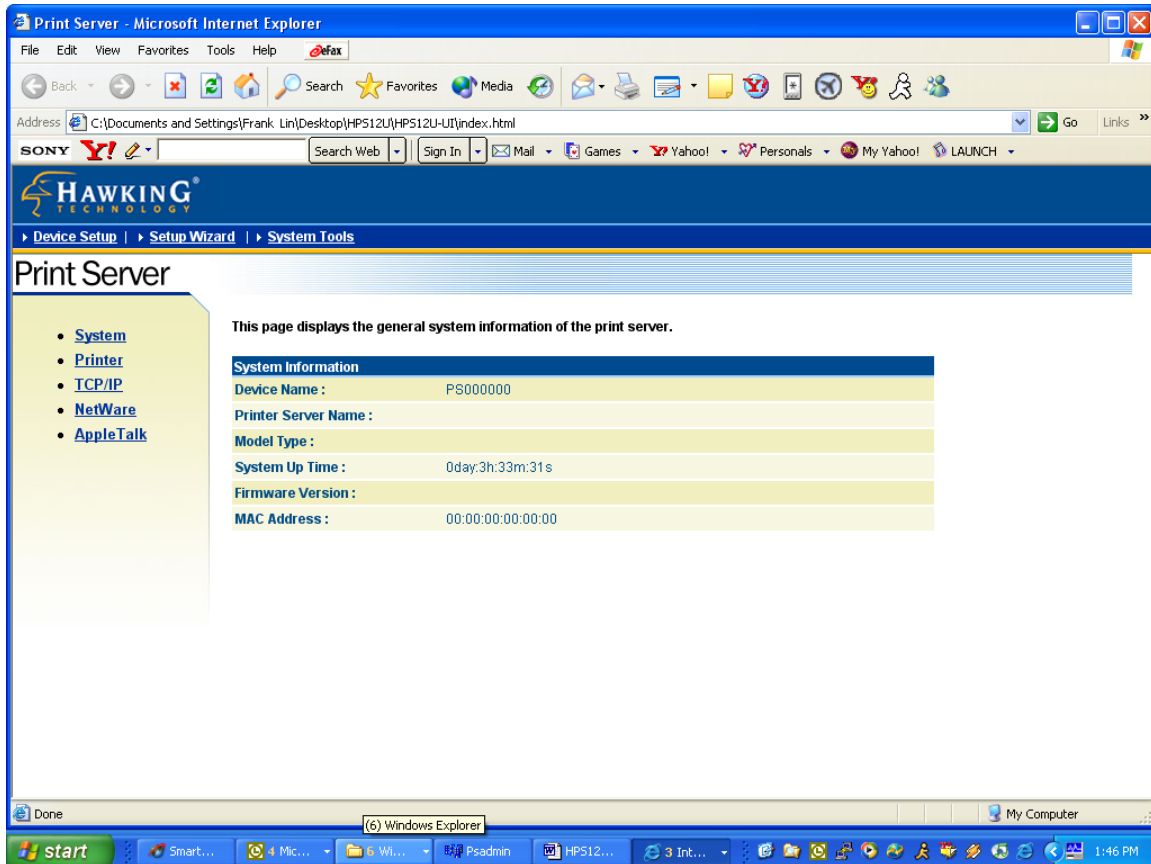


The System Information includes “Device Name,” “Print Server Name,” “Model Type,” “System Up Time,” “Firmware Version,” and “MAC Address.”

8.3.2 Printer

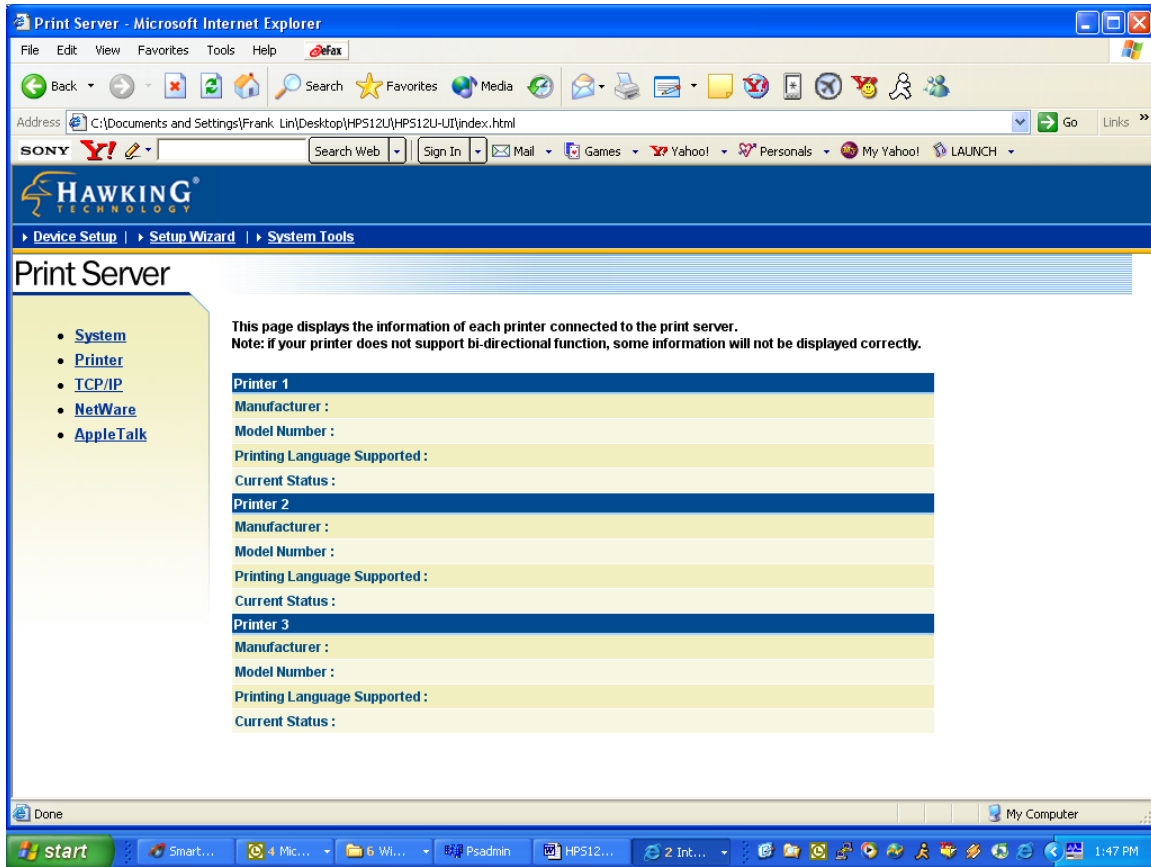


This page lists printer information for all printers connected to each of the HWPS12UG's ports.

8.3.3 TCP/IP

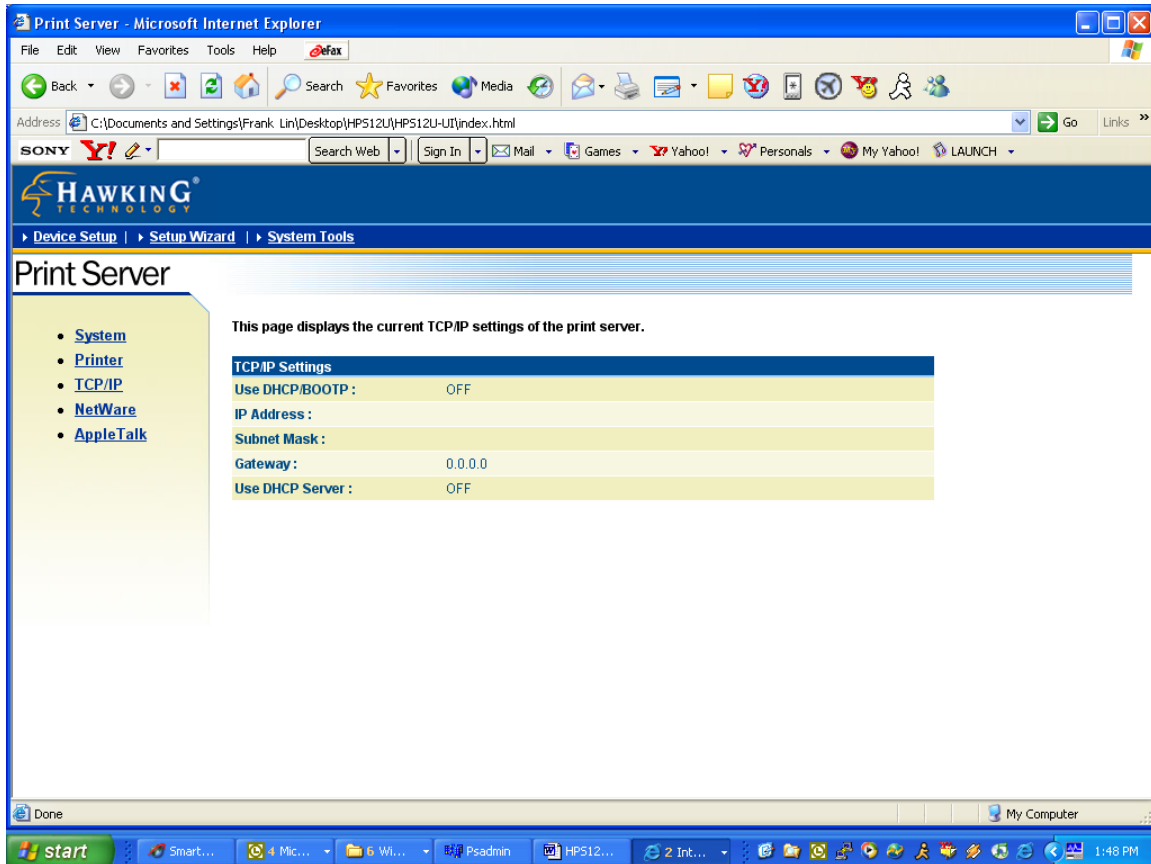


This page lists all TCP/IP settings which include your HPS1U's "IP Address," "Subnet Mask," and "Gateway." It also lists the HWPS12UG's DHCP server settings including your "Start IP," "End IP," and "Domain."

8.3.4 NetWare

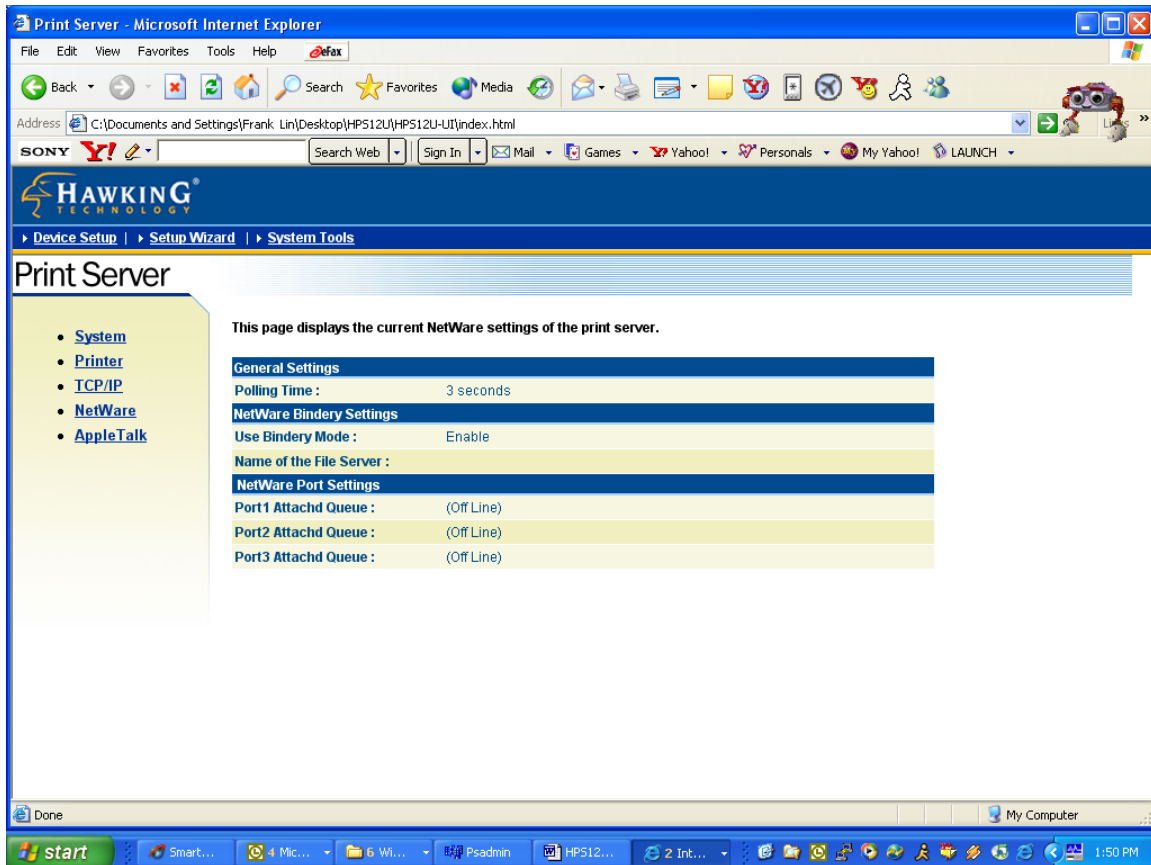

This page lists the HWPS12UG's NetWare settings including "Polling Time," "Name of the File Server," and "Queue Name of each Port."

8.3.5 AppleTalk

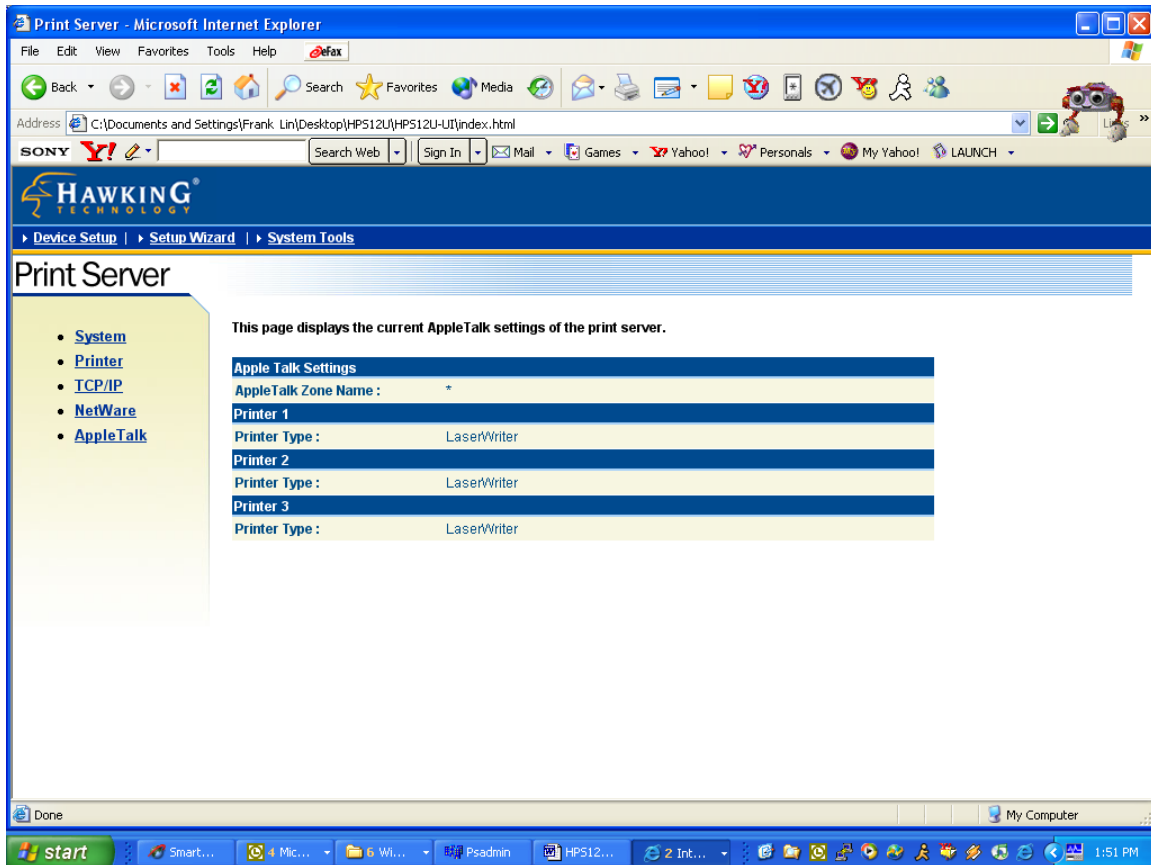

This page lists the HWPS12UG's AppleTalk settings including "AppleTalk Zone Names" and your "Printer Type."

8.4 WIRELESS

8.4.1 Wireless Setup

In order to enable the HWPS12UG's wireless functions, you must first enable this feature on the print server.

Under the *Device Status* window, please select either “auto” or “enable” if you wish to use the wireless features of this print server.

Print Server - Microsoft Internet Explorer

Address: http://10.1.1.244/index.html

HAWKING TECHNOLOGY

Device Status | Setup Wizard | System Tools

HWPS12UG Print Server

- System
- Wireless
- TCP/IP
- NetWare
- AppleTalk
- Sys Config
- Restart

This Menu allows you to configure general system settings of the Print Server. Click "Save and Next" to continue.

System Settings

Print server Name: Hawking Print Server

Administrator's Password

USER Name: admin

Password: []

Re-type Password: []

Wireless Function

Enable/Disable: Auto

Save & Next


Auto: Use either wireless or wired LAN to connect to the HWPS12UG

Enable: Enables Wireless only LAN connection

Disable: Disables wireless LAN connection

8.4.2.1 General Wireless Settings

You can set the following wireless parameters to connect to the Hawking HWPS12UG print server. These parameters include Alias Name, ESSID and Channel. Under the *Setup Wizard* select the *Wireless* tab to the right of your browser.

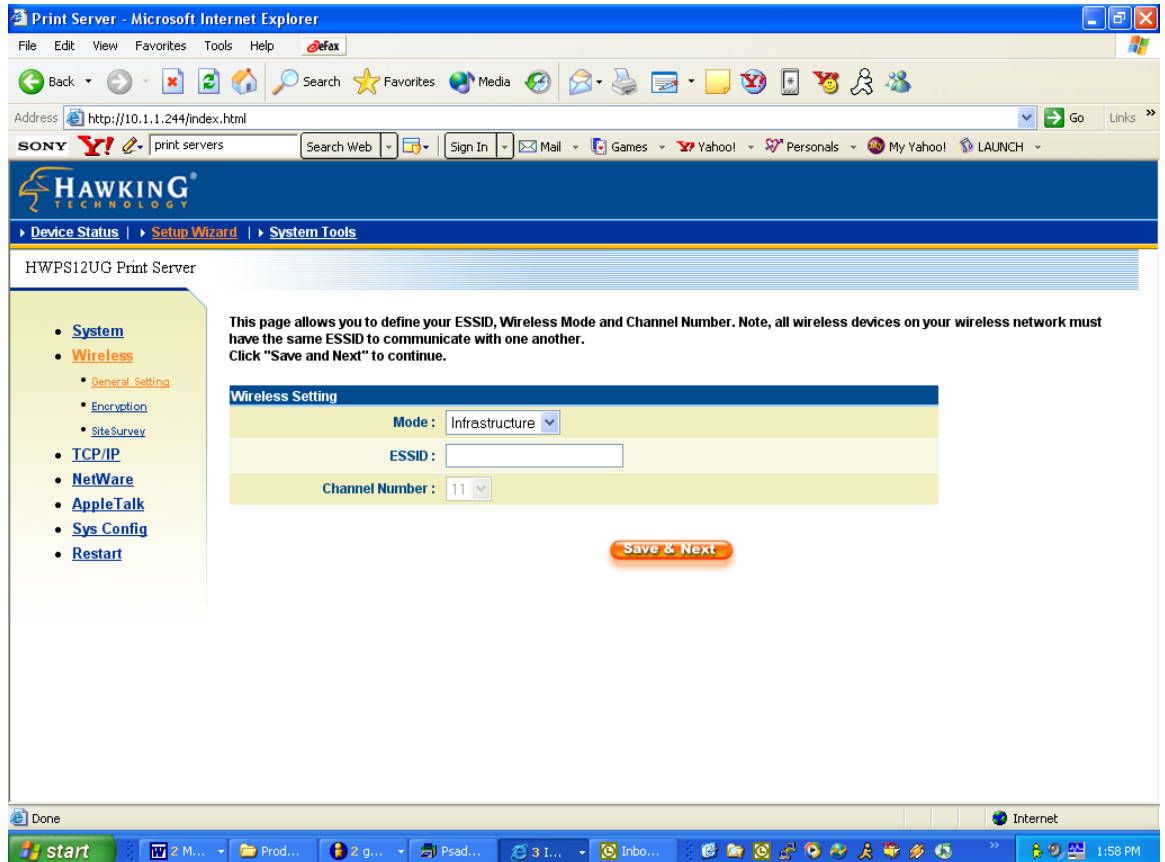


You can set the wireless parameters that are used to connect your print server to your wireless network. These parameters include Mode, ESSID and Channel Number. You can manually set the parameters of your wireless LAN on this page or use the Site Survey function to automatically search for an available access point and associate the HWPS12UG with it.

Mode: Used to set the operating mode your wireless print server. You can choose between two available modes: “Ad Hoc” or “Infrastructure.” If you do not have a wireless access point and want to use peer-to-peer connection, you should choose to run the print server in “Ad Hoc” mode. If you have a wireless access point or router on your network, you should choose to run the HWPS12UG in “Infrastructure” mode.

ESSID is the unique name identified by an available wireless LAN. The ESSID prevents your print server from joining the wrong wireless network. Please make sure to use the correct ESSID of all stations and access points in the WLAN network that you wish to connect to.

Channel Number is the wireless channel that your wireless LAN is using. Please make sure that the channel number of all stations and access points are the same as your selected WLAN.

8.4.2.2 Encryption

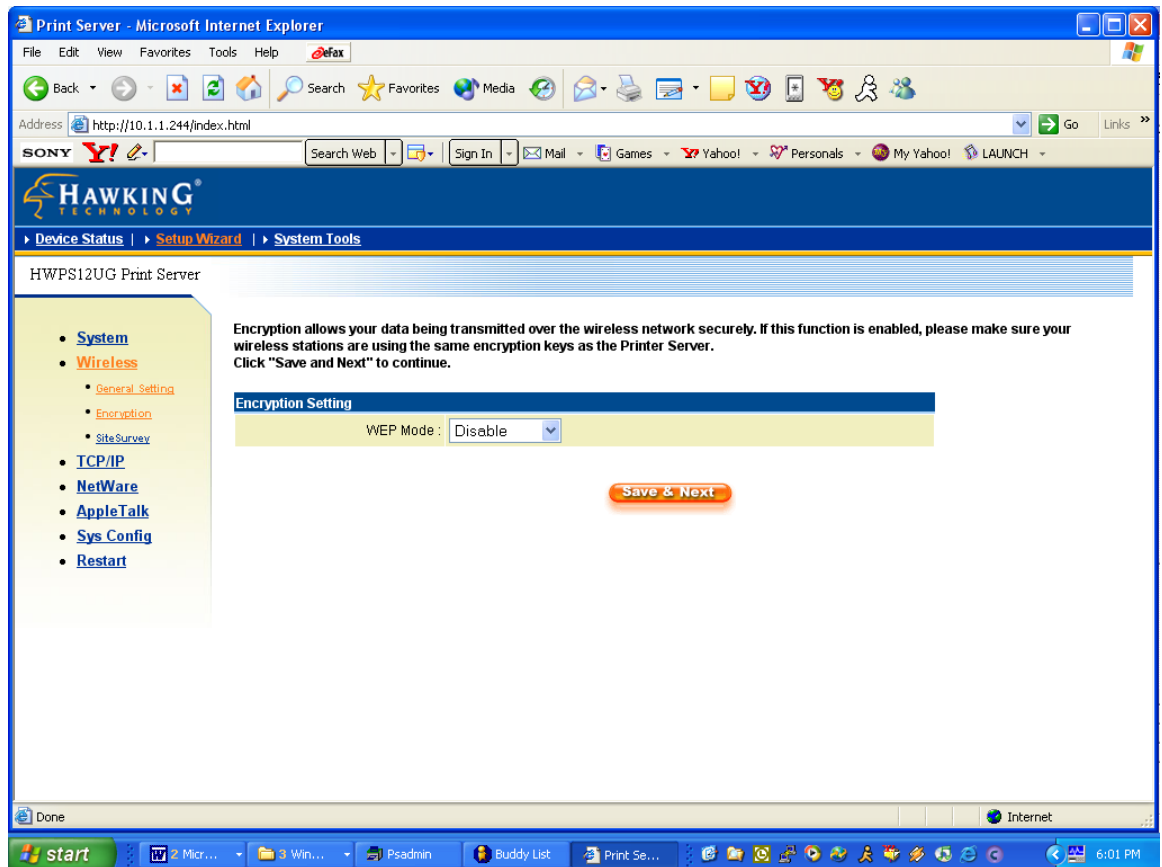

The HWPS12UG supports the WEP encryption standard to enhance the security of your wireless LAN. WEP is an authentication algorithm, which protects your wireless data from unauthorized users. If using WEP in your wireless network, please set the authentication type and WEP key of your print server to the same settings as your wireless station, router, or access point. The HWPS12UG supports 64/128-bit WEP encryption. With WEP enabled, your data will be transmitted over the wireless network securely.

WEP Mode / Key Length: You can choose to “Disable” the WEP function. You also can choose to

enable “64-bit WEP” or “128-bit WEP” encryption for use with your wireless networks’ 128-bit or 64-bit WEP key. Please note that the length of your WEP key will determine the amount of encryption used in your data transmission. The longer your key is, the more processing power is used which will affect your data transmission speeds.

Key Format: You may select ASCII Characters (alphanumeric format) or Hexadecimal Digits (in the "A-F", "a-f" and "0-9" range) to be used as your WEP Key.


Key 1 – Key 4: The WEP keys are used to encrypt data transmitted through your wireless network. Fill in the data key text box by following the rules below.

64-bit WEP: input 10-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 5-digit ASCII characters as the encryption keys.

128-bit WEP: input 26-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 10-digit ASCII characters as the encryption keys.

Default Key: Select one of four keys to encrypt your data. You may change the default values of the predefined keys. Only the key you select as the “Default key” will be used.


8.4.2.3 Site Survey

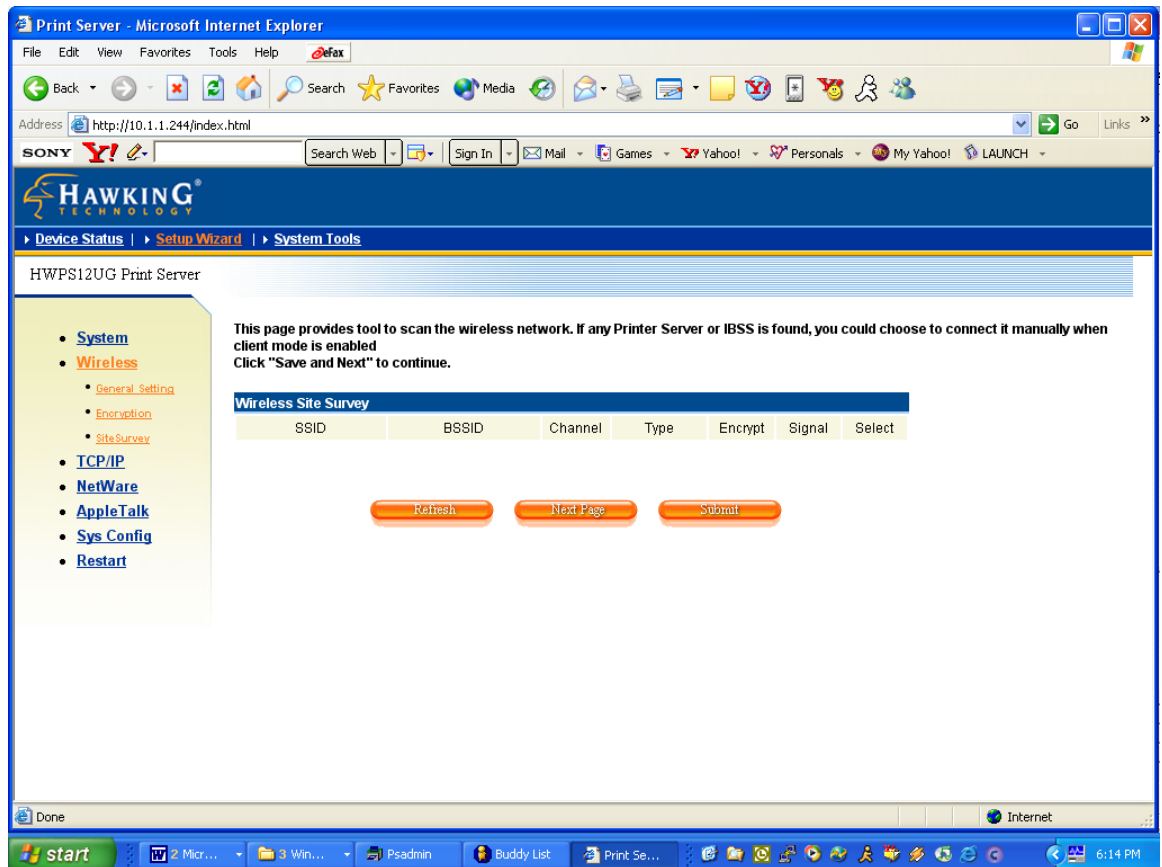

You can use this Site Survey function to search for an available wireless access point. The following information will be listed for any available access point: SSID, BSSID, Channel, Type, Encryption and Signal Strength. You can select one access point in the list for this print server to associate with or you will have to use the General Settings to manually setup the wireless parameters.

8.5 Setup Wizard

8.5.1 System

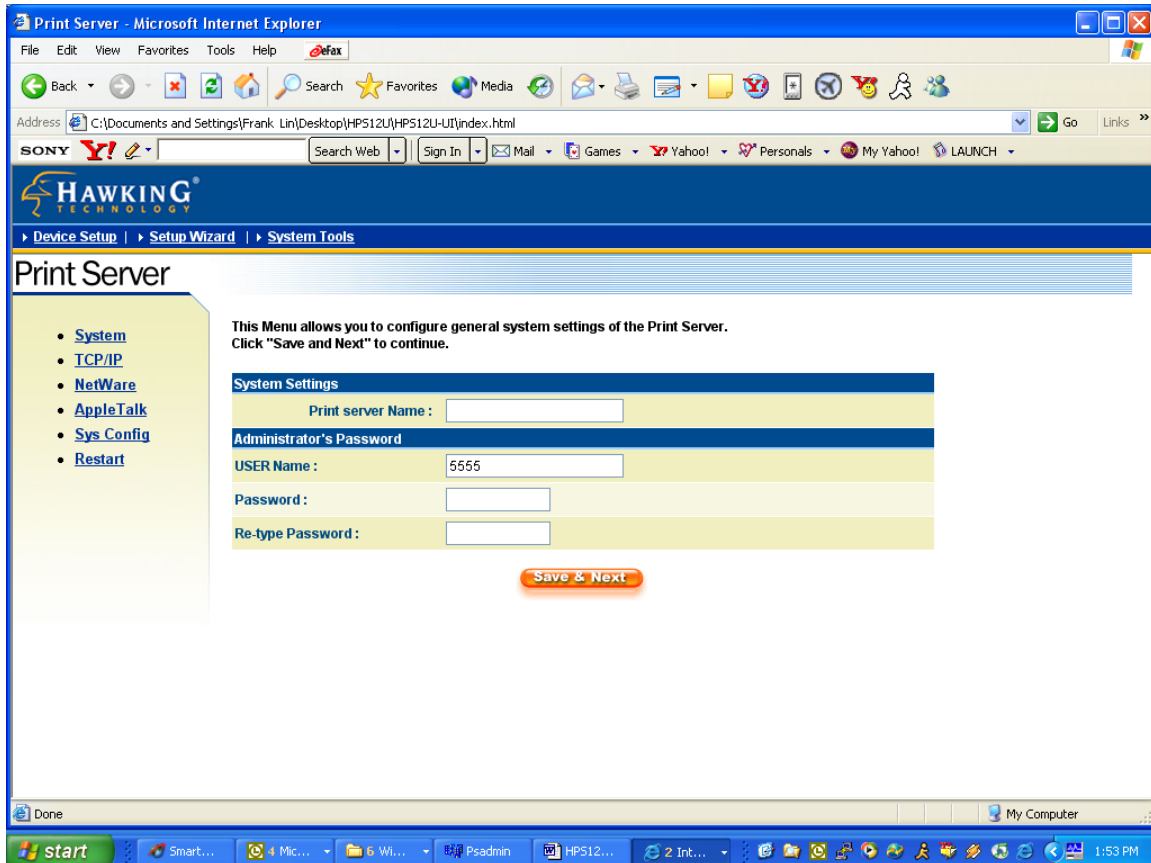


You also can configure the “Print Server Name,” “User Name,” and “Password” here.

Printer Server Name: This is the name of the print server. You can use this name to identify the HWPS12UG when you are searching for the print server through the administration and client utilities.

User Name / Password is used to authenticate the administrator through the Web administration tool.

8.5.2 TCP/IP

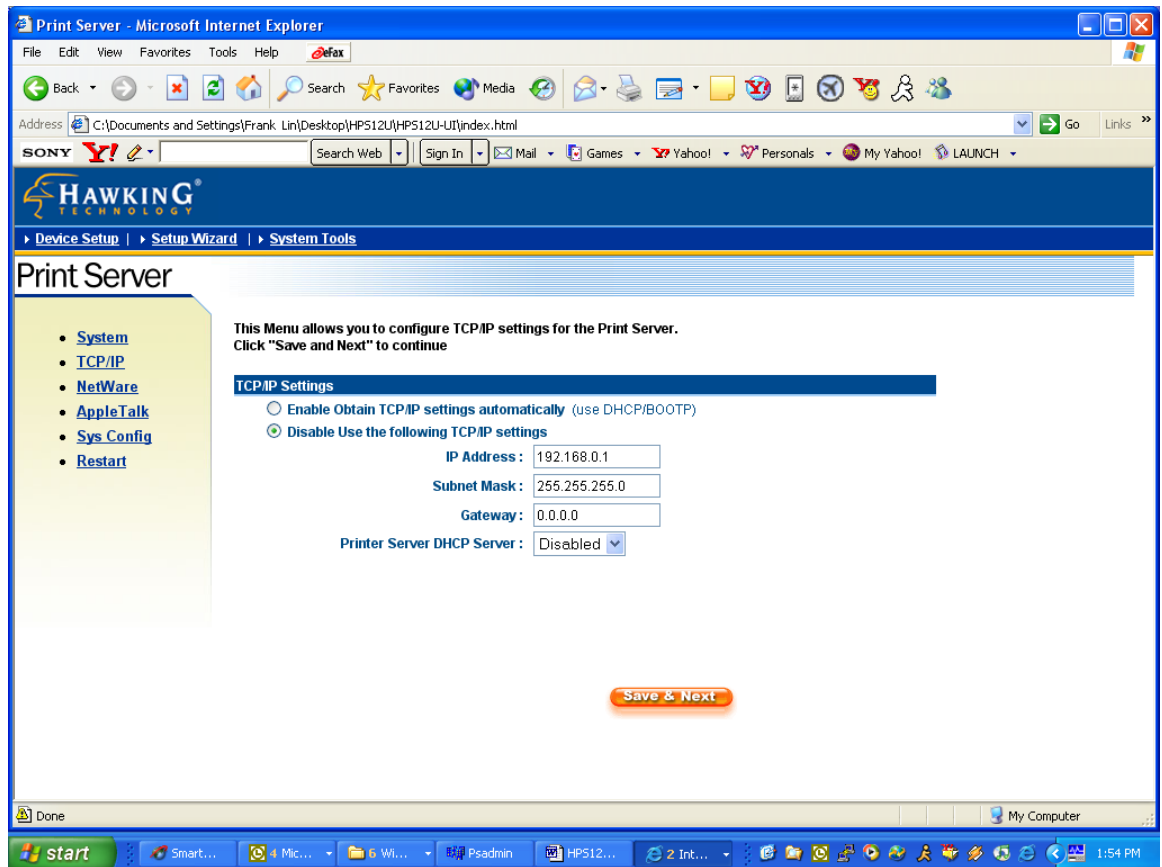


You can configure the print server to automatically get an IP from DHCP server or manually specify a static IP. The print server also has a built-in DHCP server. You can enable this DHCP server and let it manage your IP address for you.

If you need the HWPS12UG to automatically get an IP address from the DHCP server, select "Auto IP." You also can select "Specify IP" to manually assign an "IP Address," "Subnet Mask," and "Gateway" for the print server.

You can enable/disable the DHCP server and assign a range of IP addresses here. The DHCP server is

disabled by default. You have to configure your “Start Address,” “End Address,” “Gateway,” and “DNS.” The HWPS12UG will assign a unique IP address for each client.

8.5.3 NetWare

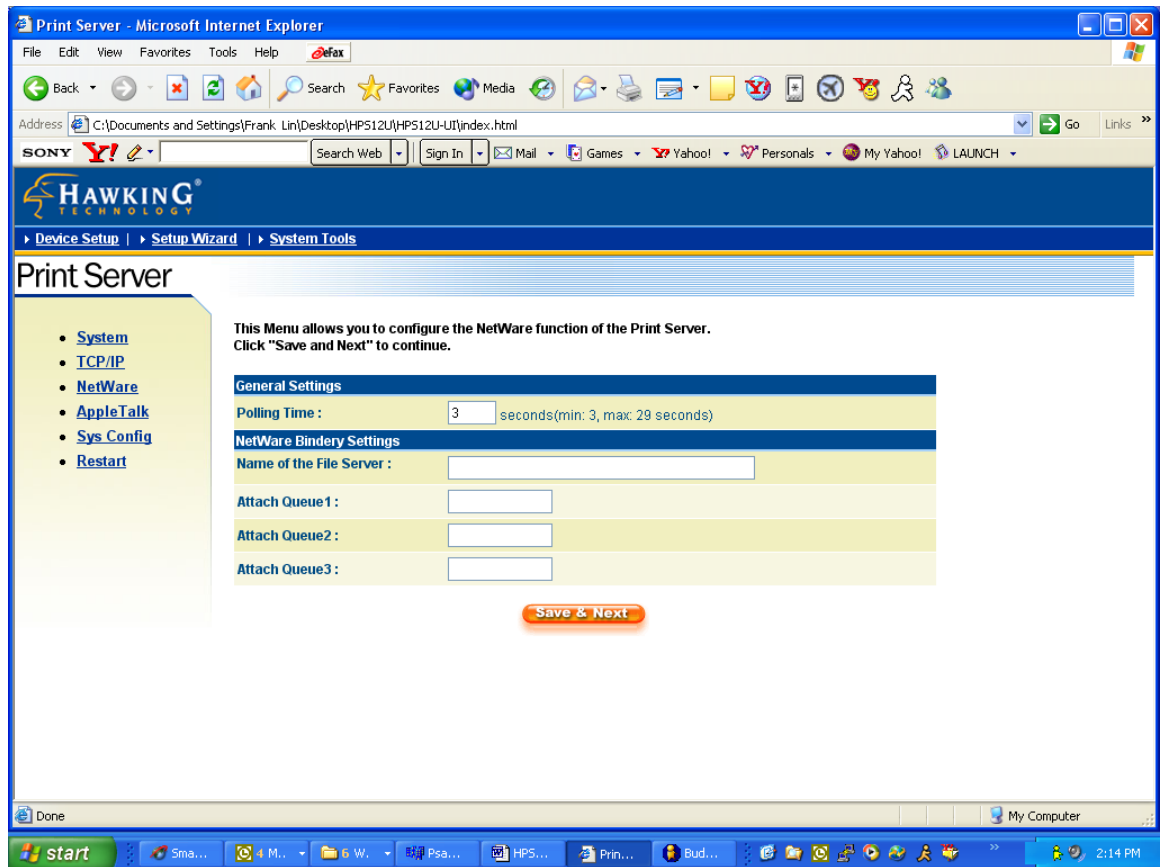

The HWPS12UG supports the NetWare Bindery Printing method. The print server periodically polls the NetWare server printer queues for printing jobs. You have to assign the NetWare server name, print server polling interval, and the name of queue on the NetWare server for each printer port.


Polling Time is the polling interval of the print server for queued printing jobs on the NetWare server.

Attached Queue is the name of the printer queue on the NetWare server. The printer queue keeps all printing jobs waiting on the NetWare server. You

have to assign a printer queue for each printer port of this print server.

NetWare Server is the name of the NetWare file server that provides printer queues.

8.5.4 AppleTalk

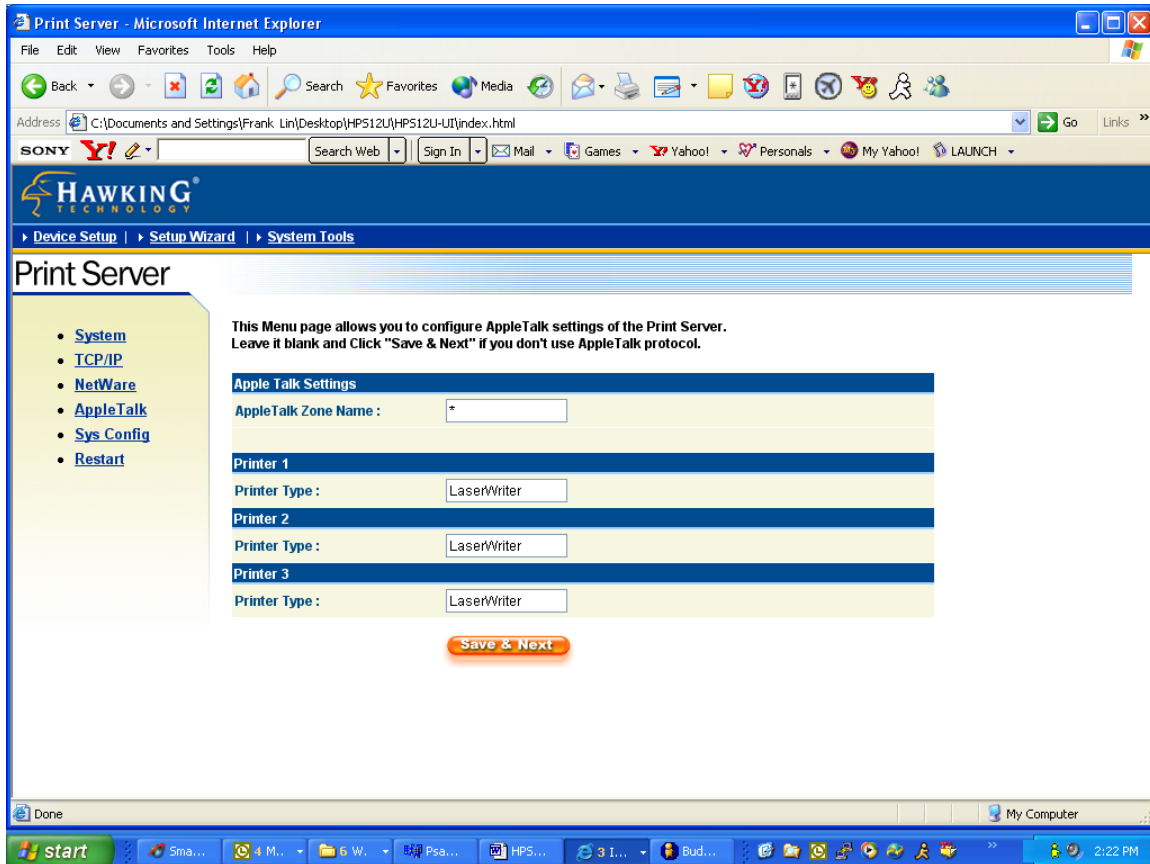


AppleTalk is a data communication protocol often used by Macintosh computers. The HWPS12UG can use these parameters to join the AppleTalk network and share printers with other AppleTalk workstations. You have to setup the “Zone Name” and “Printer Type” for each printer port of this print server.

Zone Name: The HWPS12UG has to join an AppleTalk zone before it can be shared with other workstations. Only workstations in the same zone can share the printer. If you want to share the printer to all workstations in all Zones, you should enter an “*” in the “Zone Name” field.

Printer Type: This is the type of printer attached to each printer port. You can get the printer type from the manufacturer of the printer.


8.5.5 System Configuration

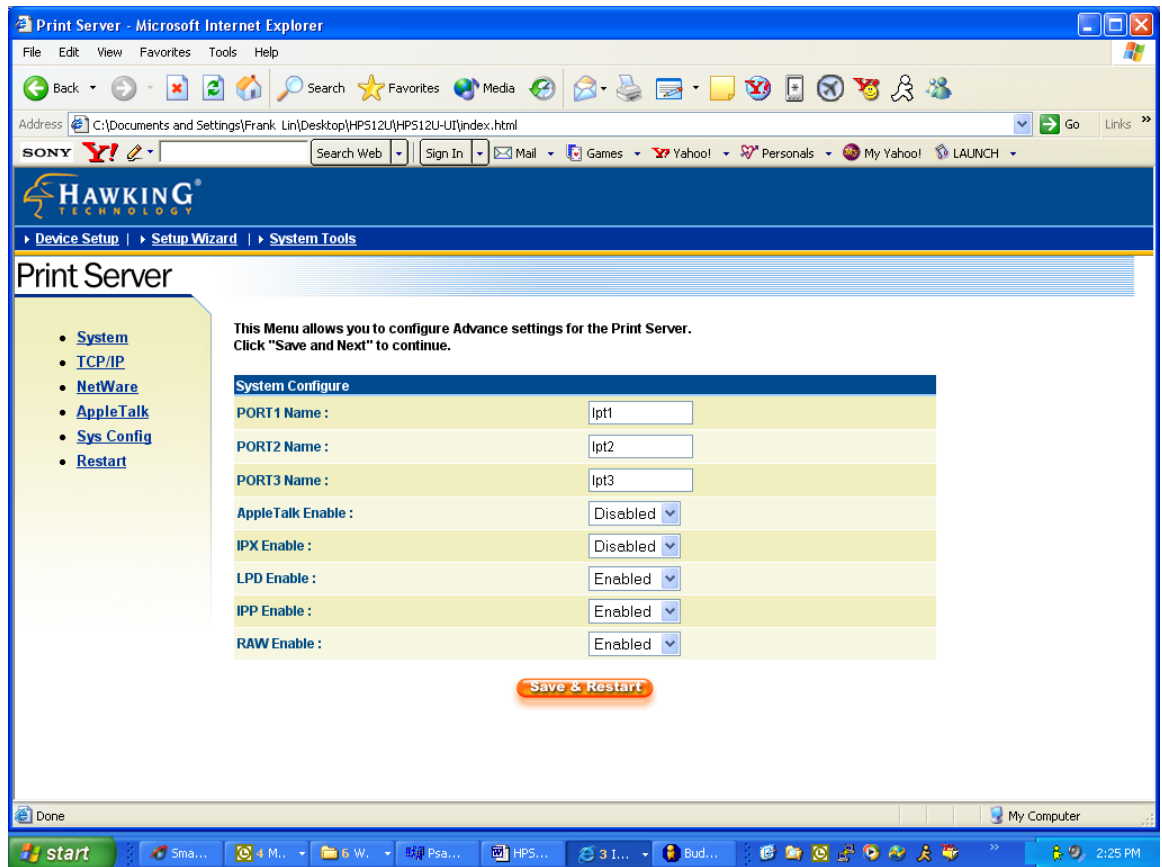

From the System configuration page you can select to enable/disable each printing protocol and assign a name for each printer port of the HWPS12UG.

Port Name is the name of the printer port. Each printer port has to be assigned a name. The client utility uses this name to access the printer port.


8.5.6 Restart

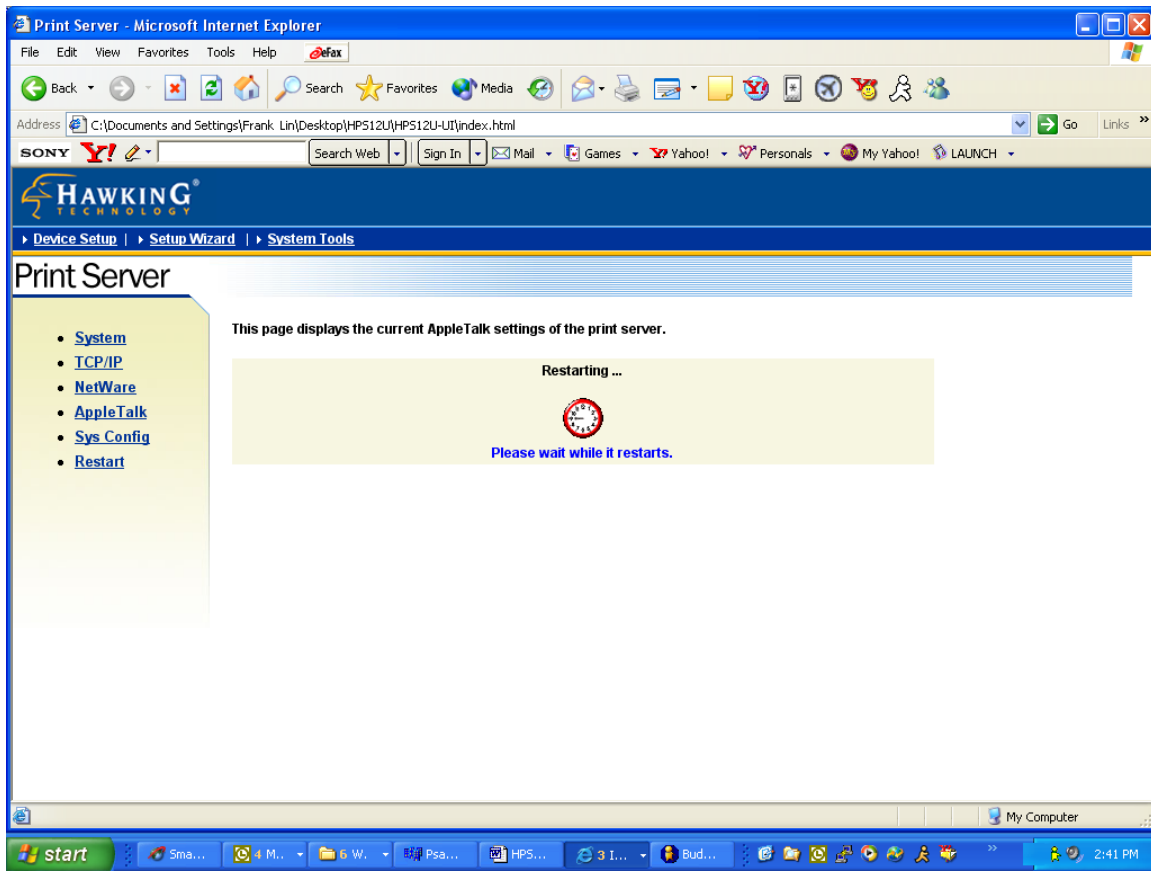

The “Restart” page will be displayed after you have finished and saved system configuration. You can click the “Restart” button to restart the system.


8.6 System Tools

8.6.1 Load Default

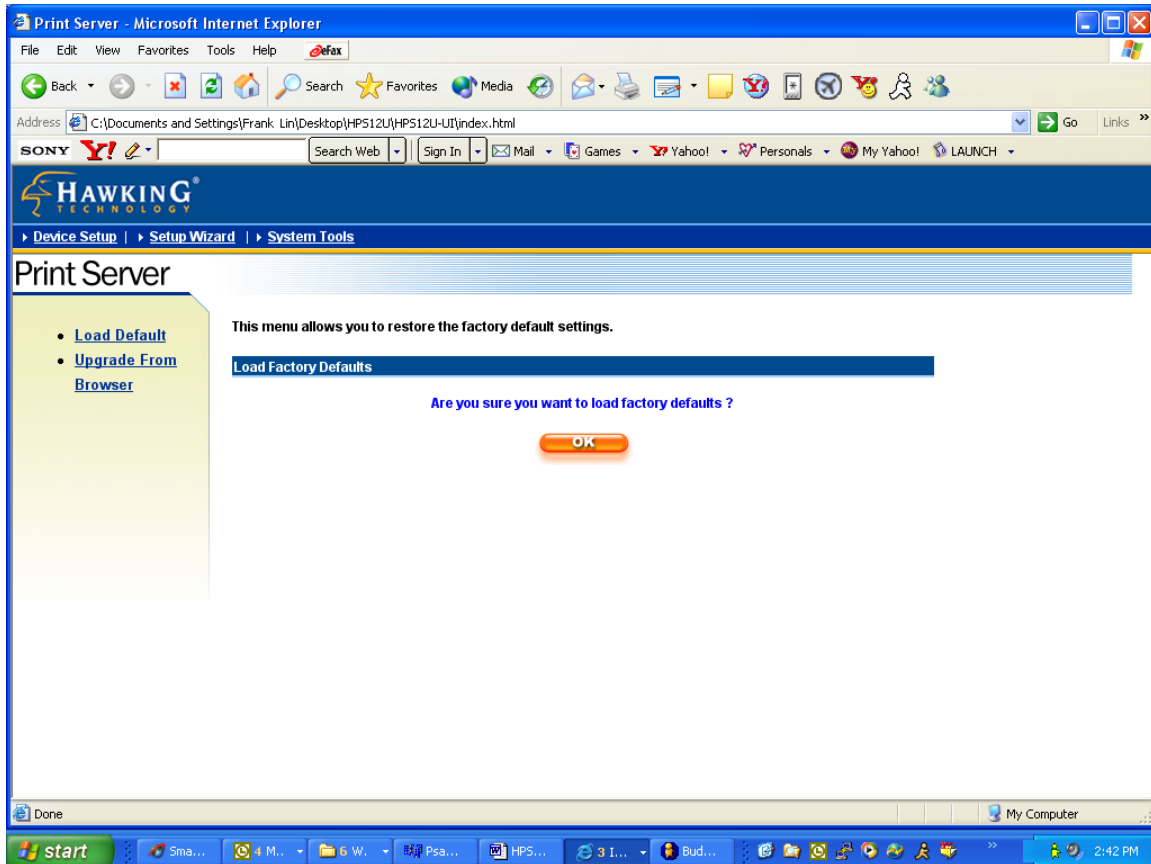

You can use this page to restore the factory default settings. All of your previous setup will be cleared.

8.6.2 Upgrade Firmware

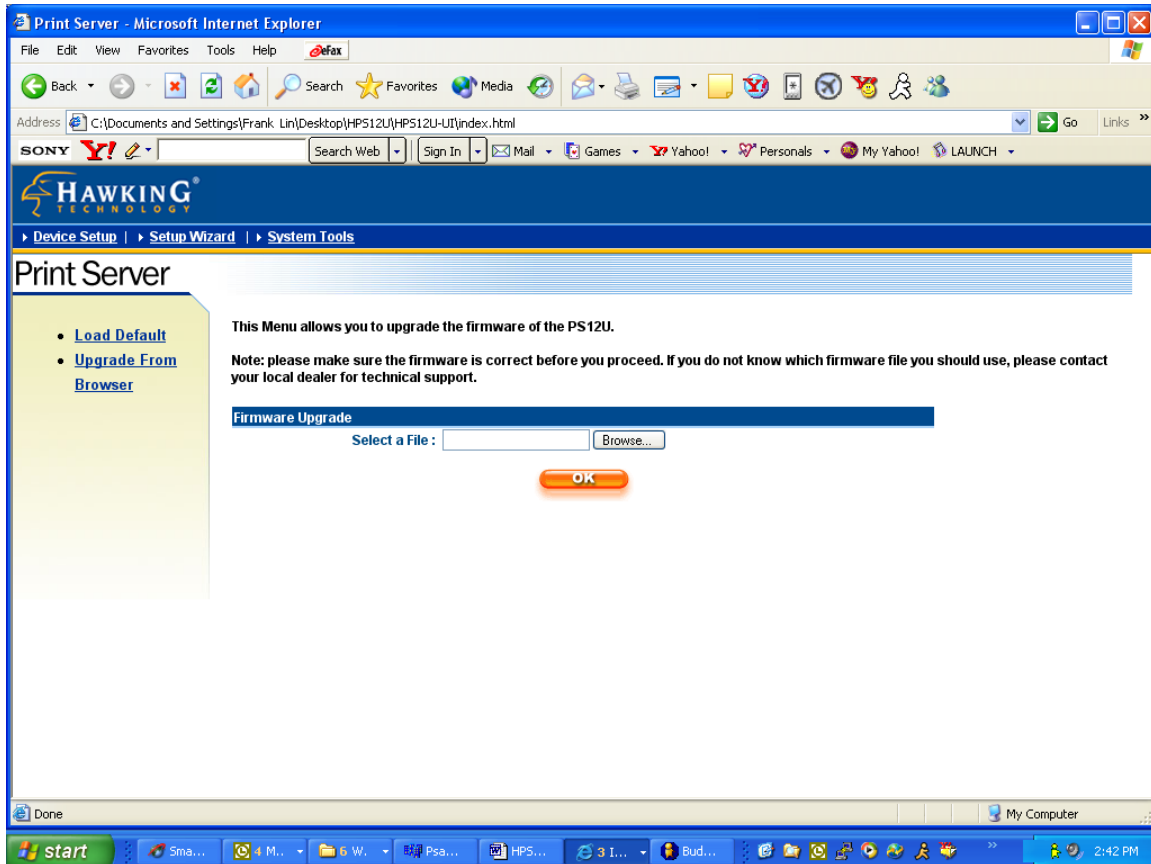

You can upgrade new firmware for the HWPS12UG from this page. Click “Browse” to select the new firmware from your hard drive or CD and then click “OK.” The firmware will take several minutes to update.

9. IPP Printing

9.1 Introduction


The IPP (Internet Printing Protocol) provides you with a convenient method for remote printing jobs via the TCP/IP protocol. The HWPS12UG 2 USB + 1 Parallel Port 10/100M Print Server can support IPP printing capabilities. It is not necessary to modify any of the print server's internal settings to use the IPP printing features. Windows 2000 and Windows XP computers can use IPP printing functions through the operating system's internal IPP functionality. IPP printing will let you share your network printer with any PC that can access the HWPS12UG print server by IP. You can even share your printer with users over the Internet who know your printer model, printer port, and IP address of your HWPS12UG.

Please make sure that you have the IPX protocol installed before using IPP for Windows 2000 or XP.
--

9.2 System Setup

9.2.1 Print Server Side


It is not necessary to modify your IPP settings on the print server side. Make sure you know your print server's IPP settings and make sure they are correctly set to your network's IP settings. Contact your system administrator if you are unfamiliar with your network's routed IP settings. If you would like to share your printer with Internet users outside of your internal network structure, you will have to set an outside IP address that can access the print server. You also have to make sure that any gateway, router or firewall does not block the IPP protocol if you have those devices installed. Please contact your system administrator or consult your router's manual for DMZ or port mapping configuration settings.

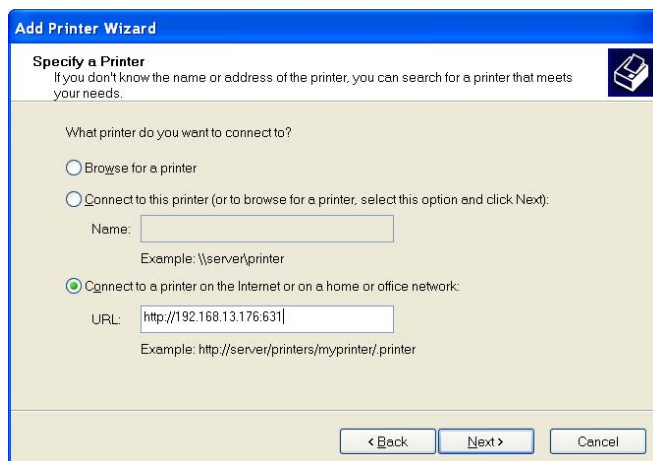

The screenshot shows the 'Add Printer Wizard' window, specifically the 'Specify a Printer' step. The window has a blue title bar with the text 'Add Printer Wizard'. Below the title bar, there is a section titled 'Specify a Printer' with a printer icon. The text reads: 'If you don't know the name or address of the printer, you can search for a printer that meets your needs.' Below this, there is a question: 'What printer do you want to connect to?'. There are three radio button options: 'Browse for a printer', 'Connect to this printer (or to browse for a printer, select this option and click Next):', and 'Connect to a printer on the Internet or on a home or office network:'. The third option is selected. Below the third option, there is a text box for 'URL:' containing the text 'http://192.168.13.176.631'. Below the text box, there is an example: 'Example: http://server/printers/myprinter/printer'. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'.


9.2.2 Client Side

You will need to perform Window's standard *Add New Printer* procedure. To do this, select the "*Network Printer*" setting as shown in the screen below and click "Next."

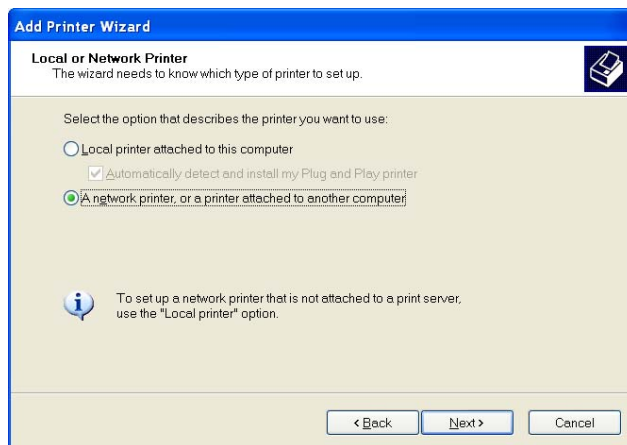

Select "*Connect to a printer on the Internet or on a home or office network*" and enter the URL of your HWPS12UG print server. The URL format will be "http://IP:631/LPT_PORT". The IP portion of the URL will be the print server's IP address. LPT_PORT is the port name of your print server that your printer is connected to. For one port print servers, the port name will be "lpt1". For Hawking's three-port print server, the port names are – lpt1, lpt2 or lpt3 depending on which printer port your printers are connected to. (Please write down the printer port and corresponding printer model for configuring our line of multiple port print servers.) The last number you will need to write down after the port name and colon will be 631. 631 is the IPP standard port

number for IPP printing requests. An example IP address will be modeled as follows: The URL will be `http://192.168.12.13:631/lpt1` for a print server located on the first printer port (lpt1) of the IP address 192.168.12.13. (lpt2 and lpt3 for printers located on the 2nd and 3rd ports respectively.) After entering the URL of print server, click “Next” and complete the remaining configuration settings to access the shared network printer.

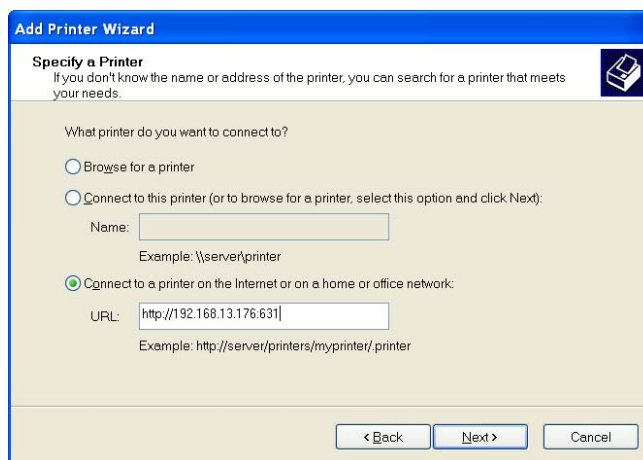

The screenshot shows the 'Add Printer Wizard' window with the title bar 'Add Printer Wizard'. The main heading is 'Specify a Printer' with a subtext: 'If you don't know the name or address of the printer, you can search for a printer that meets your needs.' There is a printer icon in the top right corner. The question 'What printer do you want to connect to?' is followed by three radio button options: 'Browse for a printer', 'Connect to this printer (or to browse for a printer, select this option and click Next):', and 'Connect to a printer on the Internet or on a home or office network:'. The third option is selected. Below the third option, there is a 'Name:' label and a text box containing 'http://192.168.13.176:631'. Below the text box is an example: 'Example: http://server/printers/myprinter/.printer'. At the bottom of the window are three buttons: '< Back', 'Next >', and 'Cancel'.

Add Printer Wizard

Specify a Printer
If you don't know the name or address of the printer, you can search for a printer that meets your needs.

What printer do you want to connect to?

☐ Browse for a printer

☐ Connect to this printer (or to browse for a printer, select this option and click Next):

Name:

Example: \\server\printer

☒ Connect to a printer on the Internet or on a home or office network:

URL:

Example: http://server/printers/myprinter/.printer

< Back Next > Cancel