

MEGA

00000000000000000

User Manual

Contents

- Safety Information 3
- Technical Information 4
- Main Power Connection 5
 - DMX 512 Connection 5
 - DMX Profile 6
 - Main Control 7
 - Rigging the Fixture 9
- Cleaning and Mainenance 9
 - Parts List 9

Check that the unit has not been damaged during transport



Read all cautions and warnings prior to operation of this equipment

Protection Against Fire



- 1. Maintain a minimum of 1 foot distance from any type of flame.
- 3. Replace fuse only with the specified type and rating.
- 4. Do Not install the unit to close to a heat source.
- 5. Make sure cable are properly secured away from unit movement.
- 6. Maximum surface operating temperature 80°.

Protection Against Fire



Electrical

- 1. Disconnect power before servicing.
- For connection to main power supply proceed to page 5.
 This unit must be earthed. (electronically grounded)
- 4. Do not expose unit to rain or moisture.

Protection Against Mechanical Hazards



- 1. Use safety chain when hanging unit.
- 2. Use quality clamps or bolts when positioning unit
- 3. Do not open unit while it is on, risk of electrical shock.

Mechanical

Part Numbers

Fixture

3030- Pro Color Strip

Mechanical Specifications

DMX Connectors:	3-pin & 5 Pi	n XLR connectors	40"
Power Connection:	Neutrix Pow	er Con in/Out	←
Thermal:		mbient temperature 40°C urface temperature 60°C	
Fastening System:	Single Mour	nting Yoke & Security Eye bolt	
Accessories:		oower head to Blue Power Conn cable 1 wer Conn head	I meter long
Fixture		Packaged for Shipping	
Size: 40" x 6" x 3"		Size: 41" x 7.25" x 5"	
Weight: 10 lb		Weight: 12 lbs	, v
		1	

Electrical Specifications

LED Quantity:

LED Type: Tri Colored LED Watts: 3

LED Lifetime: 60 to 100 thousand hours

18

LED Angle: $45^{\circ}(\pm 5^{\circ})$

Power Consumption: 110V-220V50/60 Hz

Ballast: Electronic

Watts: 46 Amps: .61

Control & Programming

Protocol: DMX 512

DMX Channels:	Mode A	3 Channels	
	Mode P	54 Channels	
	Mode F	6 Channels	

R,G,B R,G,B X18 R ,G ,B, Strobe, Macro , Dimmer

Control options: Audio-trigger

Operating mode: Master/Slave

Main Power Connection

Caution!

- 1. Do not connect fixture to a dimmer system.
- 2. This unit has Auto switching power supply. It will respond to 110V or 220V automatically
- 3. This unit must be earthed. (electronically grounded)
- 4. Replace fuse only with the specified type and rating.

The occupation of the connection-cable is as follows:

This fixture is equipped with an electronic power supply that will let the unit operate from 90V to 240V from 50Hz to 60Hz

Cable (USA)	Cable (EU)	Pin	110V	220V
Black	Brown	Live	L	L
White	Light Blue	Neutral	N	L
Green	Yellow/Green	Ground		N



DMX-512 Connection

The fixture is equipped with 3 pin XLR Sockets for DMX input and output. The sockets are wired in parallel. Only use a shielded twisted pair cable designed for RS-485 and 3 pin XLR plugs and connectors in order to connect the controller with the fixture or the fixture with another.



Caution!

At the last fixture the DMX signal needs to be terminated with a terminator. Solder a 120 Ohm resistor between the (-) and the (+) signal into a 3 pin XLR plug and plug it in to the last fixture on the signal run. Pre-manufactured terminator plugs are available for purchase from your Mega-Lite dealer (HOS-DMXT).

DMX Profile

Pro Color Strip Mode A (3 Channel)

DMX Chanel	Function	Description	Value
1	LED Color	Red LED intensity	0-255
2	LED Color	Green LED Intensity	0-255
3	LED Color	Blue LED Intensity	0-255

Pro Color Strip Mode **P** (54 Channel)

			2
DMX Chanel	Function	Description	Value
1	LED Color	Red LED intensity	0-255
2	LED Color	Green LED Intensity	0-255
3	LED Color	Blue LED Intensity	0-255
	11 11		11 11
52	LED Color	Red LED intensity	0-255
53	LED Color	Green LED Intensity	0-255
54	LED Color	Blue LED Intensity	0-255

Pro Color Strip Mode F (3 Channel)

DMX Chanel	Function	Description	Value
1	LED Color	Red LED intensity	0-255
2	LED Color	Green LED Intensity	0-255
3	LED Color	Blue LED Intensity	0-255
4	Strobe	Strobe (slow to fast)	0-255
		No Function	0-1
		Color fade (slow to fast)	2-19
		Color Snap (slow to fast)	20-39
		Random (slow to fast)	40-59
		Yellow	60-79
	Macro	Purple	80-99
5		Aqua	100-119
		Color Snap (slow to fast)	120-139
		Red Pulse	140-159
		Green Pulse	160-179
		Blue Pulse	180-199
		Yellow Pulse	200-219
		Aqua Pulse	220-229
		White Pulse	230-249
		White LED Full	250-255
6	Dimmer	Dimmer Off to Full	0-255

Main Control Menu

The control board on the fixture base is your interface to access and control all the functions on the unit. Its digital display gives you a code view of the options and functions. The following will explain each function and its options.





Red Dimmer

This function allows you to dim the red LED's on the whole strip. Press Enter use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

Green Dimmer

This function allows you to dim the green LED's on the whole strip. Press Enter use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

	—	-	E
--	---	---	---

Blue Dimmer

This function allows you to dim the blue LED's on the whole strip. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.



This function allows you to strobe the LED's on the whole strip in White color. Press **Enter** use the **up/down** keys to select desired flash settings. Press **Enter** to confirm the settings.

|_ || _| || _ || || || _| _ Fade Scroll

This function allows you to fade the LED's on the whole strip from one color to another. Press **Enter** use the **up/down** keys to select desired fade speed settings. Press **Enter** to confirm the settings.

i_____ Flash Scroll

This function allows you to change the LED's on the whole strip from one color to another. Press **Enter** use the **up/down** keys to select desired color change speed settings. Press **Enter** to confirm the settings.



Chase Effect

This function allows you to select different chase patterns on the whole strip. Press **Enter** use the **up/down** keys to select desired chase settings. Press **Enter** to confirm the settings.



Chase Speed

This function allows you to select the speed of the chase that was selected on the Chase function . Press **Enter** use the **up/down** keys to select desired chase speed settings. Press **Enter** to confirm the settings.

This function allows you to select the chase pattern that will be triggered via audio. Press **Enter** use the **up/down** keys to select desired Chase settings. Press **Enter** to confirm the settings.

Sound Flash

This function allows you to select the flash pattern that will triggered via audio. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.



This function allows you to select the sensitivity of the audio sensor. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

Rigging the fixture

Caution!

- 1. The installations must be carried out by an authorized dealer or trained professional.
- 2. Unit may cause severe injures if you have doubts concerning the safety do not install.
- 3. Unit is to be 24 inches away from flammable materials (decoration material)
- 4. Use high quality installation equipment to hang unit.

When rigging a unit it is very important that you follow common safety procedures. Rigging requires extensive experience including but not limited to calculating working loads, material being used and periodic safety inspections. If you lack these qualifications, do not attempt the installation yourself, instead use a professional structural rigger.

When rigging the unit always be secured with a secondary safety attachment. The installation location of the projector has got to be built in the way that it can hold 10 times the weight for 1 hour with out any harming. Installation should be checked at least one time a year by a skilled person.

Cleaning and maintenance

Installation Maintenance: The operator has to make sure that the unit is operating safely and has the installations and electronics checked by an expert every 2 years.

The following points have to be considered during the inspection:

- 1) All screws used for installing the device or part of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, fixation and installation spots (ceiling, suspension, trussing).
- 3) The electronic power supply cables must not show any damages, material fatigue (e.g. porous cables) or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

Note: There is no serviceable parts inside the device except for the LED's. Maintenance and service operations are to be carried out by authorized dealers.

Replacing the fuse: Only replace the fuse with the same type and rating.

Replacing the power cable: If the power cable of this device becomes damaged, it has to be replaced by authorized dealers or trained professional only.

Should you have further questions , please contact your dealer.

Parts List

4050-case	8 Pro Color Strip Road Case
3030-pcb	Main PCB card
3000-triled	Single Tri Chip LED
3030-ledm	LED module
3030-ps	Power Supply
4000-dis	Display
4000-fh	Fuse Holder



Mega-Lite 5718 Kenwick St San Antonio, TX 78238 Ph 210-684-2600 Fax 210-855-6279 www.mega-lite.com / info@mega-lite.com