

User Manual of Button Camera

● Product Accessories

- Button camera
- Ring
- USB cable
- User manual CD
- Four buttons
- A clip

● Picture & Buttons



1. Power on/off 2. Light 3. Reset 4. switch button (left side taking photo, right side taking video) 5. Micphone 6. Camera 7. USB port

● Technical Data

- 1) Functions: taking photo, video and audio
- 2) Color: black (if you need we can design other colors)
- 3) Video: AVI, 640*480 resolution
- 4) Photo: JPEG, 1280*960 resolution
- 5) Internal memory: 1GB-8GB
- 6) USB: 2.0 (Hs)
- 7) Charging time: 2-3 hours
- 8) Battery use time: built-in Li battery, 1-2 hours
- 9) Operation systems: No need for driver installation if the operating system is Windows ME/ 2000/ XP/ VISTA or above (Windows98 is excepted)

● Operation

Remark: Switch button: turn left to take photo, turn right to take video and audio

◆ Switch on

Push the switch button to record side (right side)

◆ Recording video and audio

- 1) Long press on/off button or use the magnetic ring to touch the camera for some seconds, yellow light turns on, seconds later, blue light keeps on, it start to record video and audio., the camera starts to record video and audio at the same time.
- 2) Press on/off button or use the magnetic ring to touch the camera once, yellow light keeps on, indicating recording is finished and the data is saved automatically.

◆ Taking photo

- 1) Push the switch button to photo side (left side), yellow light keeps on. Then short press on/off button, blue light keeps on. The device enters photo mode.
- 2) Press on/off button or use the magnetic ring to touch the camera once, yellow light flash once, indicating a photo is taken and saved automatically.

Attention: switch video mode to photo mode, the video file will be saved automatically.

◆ Switch off

Under the standby mode or recording mode, keeping press the on/off button for several seconds, the device power off, also you can press the reset button with the clip to turn it off.

Attention: switch off while recording, the file can be saved automatically first.

◆ Reset

You need to reset the device when it doesn't work because of wrong operation. Just press the reset button with the clip once, the device will be as good as original.

◆ Charging

Under power off or standby mode, connect the camera to computer via USB cable and charge it. The yellow light keeps twinkling while being charged. When the yellow light stops twinkling and keeps on, it shows the camera is fully charged.

◆ Setting recording time

There is a function which show the video recorder time (year-month-day hour: minute: second) will be recorded in the recorded files, and will be shown when playback. Please set the time correctly as follows:

- Insert the user manual CD into the computer
- Copy the file "time.txt" to the root of the disk of the camera.
- Open the TXT file then write down the computer time as the format in the file and save it .
- Immediately , you must open the device and record a file to activate the time . The time will be simultaneous to the time file.

● Attention

- 1) The system will turn off automatically when no operation is made within one minute under standby mode.
- 2) The system will save the video file firstly then turn off if low of power when taking video.
- 3) When taking video continually, the system will automatically generate a new video file after each operation.
- 4) The file being saved need some time, please do not operate during the blue light changing the yellow such as press any buttons or connect it to computer, or the file would not be saved completely even lost.
- 5) The time of PC recognizing the device is different according to its different system and configuration, so please not operate during recognizing. If the device can't be recognized, please check your computer's operation system, device drivers, USB port and the USB cable is normal, and then connect the hardware again.