

RT-208 2 Line DECT Manual CONTENT

1. General	3
1-1 DECT and GAP	3
1-2 Features	3
1-3 Default Status	4
2. Installation	5
2-1 Location	5
2-2 Connecting power and phone line (Refer to following drawing)	5
2-3 Charging the handset	6
2-4 Initial setting	6
3. Key and Display	6
3-1 Display	6
3-2 Symbols	7
3-3 Key Description	8
3-4 Key function	8
4. Making call	9
4-1 Answering	9
4-2 Adjust Receiver Volume	10
4-3 Outgoing Call	10
4-3-1 External call with normal dialing	10
4-3-2 External Call with Dial Preparation	10
4-3-3 External Call from Phone Book	10
4-3-4 External Call from Caller ID List	10
4-3-5 Redial	10
4-3-6 External Call Line Select	10
4-4 Internal Calls between handsets	10
4-5 External Call Transfer	11
4-6 Three Way Conference	11
4-7 Pause	11
4-8 Call Duration Display	11
4-9 Mute	12
4-10 Do not Disturb	12
4-11 Power ON/OFF Handset	12
4-12 Out of Range	12
4-13 Speaker Phone	12
4-14 Headset connection	12
5. Phone Book and Function Setting	13

5-1 Key locked.....	13
5-2 Phone Book.....	13
5-2-1 To <ADD> the new phone number in phone book	13
5-2-2 To <EDIT> the Phone Book function.....	14
5-2-3 To <DELETE> the PHONEBOOK.....	14
5-2-4 To <READ> the PHONEBOOK	14
5-2-5 To <ERASE> the PHONEBOOK	14
5-3 Caller-ID/CLIP Function.....	14
5-4 Register New Handset.....	15
5-5 Handset Setting	16
5-5-1 Set external ring melody and volume.....	16
5-5-2 Set intercom ring melody and volume.....	16
5-5-3 Turn ON/OFF Key tone.....	16
5-5-4 Input user name on the display (Max.8 letters).....	17
5-5-5 Change Handset Pin.....	17
5-5-6 Baby Call.....	17
5-5-7 Auto Pick up.....	18
5-5-8 Any key talk.....	18
5-5-9 Select Language.....	18
5-5-10 Erase Caller ID list.....	18
5-5-11 Set Handset Default.....	18
5-6 Base Setting.....	19
5-6-1 Change Dial mode.....	19
5-6-2 Change Flash Time.....	19
5-6-3 Change Pause time.....	19
5-6-4 Select External Line Priority.....	20
5-6-5 Ring Group Setting.....	20
5-6-5 Desubscribe the handset from the base.....	21
5-6-6 Call Barring.....	21
5-6-7 LCR Function/ Connect To PABX.....	21
5-6-8 Change Base Pin.....	23
5-6-9 Set Base Default.....	23
5-7 Select Base.....	24
Appendix 1 - Menu Tree.....	25
Appendix 2 – How to input the letters.....	26

1. General

You have acquired a 2 lines cordless PABX for operation on the analogue network.

It offers a range of feature that will make the handling of telephone call easier. Up to eight handsets can be operated over one base station will enable internal connections in order to increase the availability. The handset can be registered onto max. four base stations in order to use the same handset in different locations. The handsets can be also used in connection to GAP-compliant base stations of other manufactures.

Standard package include :

Base station with plastic stand

Handset * 2 pcs

Ni-Mh rechargeable battery * 6 pcs

Handset Belt Clip * 2pcs

Charger * 2pcs(with adapter)

AC-main adapter

Telephone line cord * 2pcs

Wall Mount screw * 2 pcs

Wall mount position sheet

User Manual

1-1 DECT and GAP

The handset uses a digital radio connection to the base station in accordance to the DECT-standard(Digital Enhanced Cordless Telephone).With the appropriate use the digital channel ensure best voice quality without rustling and side noises within the working range area. For effecting signals between handset and base station, the RT-208 uses the Generic Access Profile (GAP).

Generic Access Profile (GAP) and the DECT-standard determine the procedures after which digital cordless telephone effect connection. The GAP-standard is non-manufacture dependant, which enables the mixed use of base stations and handsets of various producers. The basic functions (making calls, receives calls) are always possible under these combination, other functions (LCR, Select line, indication of connection time) that are provided by the RT-208 base station together with the handset might not be possible with units of other manufactures.

1-2 Features

2 line cordless system

Auto line select (Each handset can be set individually)

Auxiliary port for parallel connect with fax, answering machine or single line phone

Ring group setting (Do not disturb)

Assign operator setting

FSK/DTMF CLIP (Calling Line Identification Presentation), **50 number listed**, up to 25 digits for each No.

Call back for CLIP

Redialing, 3 number listed, up to 25 digits for each No.

Phone book with name and number (**50-locations**, 12 letters for each name and 25 digits for each No.).

Multi language selection

Baby Call.

Key Lock/Unlock

Call barring(5-locations, 5-digits for each location).

Any key talk (Number key only).

Auto pick up on/off

Internal calls

Call transfer of external calls

Adjustable Ringer Volume and melody.

Three way conference

Adjustable Handset Receiver volume.

Microphone Mute

Key-Click On/Off.

LCR(Least cost routing)

Low Battery and Out of Range warning beep.

Talk time display

Handset speaker phone

Headset connection jack on handset

1-3 Default Status

HANDSET :

Any key talk	– On
Auto pick up	– Off
Handset Receiver volume	– Level 6
Key click	– On
Intercom Melody / Volume	– 7/9
External Ring Melody / Volume	– 1/9
PIN	– 1590

BASE :

Dialing mode	– DTMF
Pause Time	– 3 Seconds
Pin	– 1590
Select Line	– Alternative

2. Installation

2-1 Location

Place the base station at a central location where you want to use your telephone (not in the cellar or the attic).

The base station should be freely accessible and not operated behind walls or furniture.

Strong steel concrete walls and metal doors do heavily restrict the radio connection. Avoid the use at such locations.

For outdoor operation, the base station should be placed near to a window, but always indoors.

Charging unit, handset and complimentary units should not be placed near to :

- ◆ Heating bodies, direct sun emission or unaired rooms
- ◆ Appliances creating strong magnetic field, electric appliances, luminous lamps, computers, radio transmitters,
- ◆ Television or Facsimile and telephone terminals.
- ◆ Locations where the terminal is likely to be covered, its air supply restricted and liquid substances can make contact.
- ◆ Dusty locations and places that are exposed to vibrations, shock or extreme temperature fluctuation.

2-2 Connecting power and phone line (Refer to the drawing)

Handset :

 
- ◆ Open the battery cover of the handset and insert 3 AAA Ni-MH batteries. Ensure the correct polarization of battery.
- ◆ Connect the adaptor cable of charger into the power outlet on the wall. Ensure the correct power voltage.



Base Unit :

Power: Connect one end of the main adaptor cable to the power outlet and the other end to the power jack at the rear side of the base

Telephone line: There are two phone jack and one auxiliary port on the base. Plug one end of the Line 1, Line 2 into telephone line wall outlet and the other end into phone jack at the rear side of the unit. If you use only one line, you can plug in either Line 1 or Line 2. AUX port is used to parallel another telephone, fax machine or answering machine.

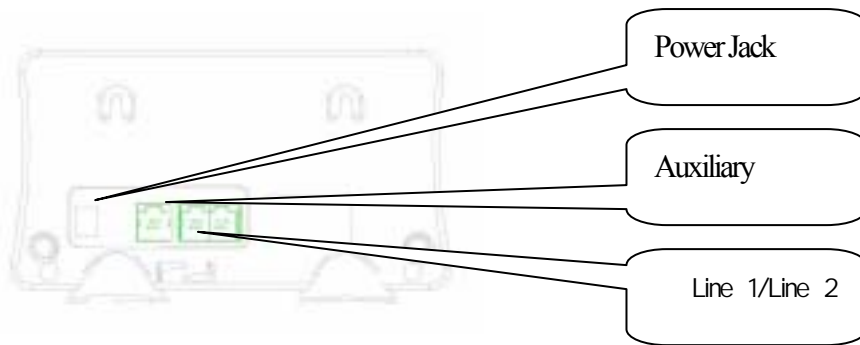

Caution: 1. AUX port is paralleled with Line 1.
 2. There is no Tel/Fax detection on the AUX port.

2-3 Charging the handset

When you place the handset onto the charger, you will hear the beep sound, and battery symbol flash. (Battery symbol appear only when low battery or charging stage. If your battery symbol is empty and you hear warning beep, you have to recharge your handset before you use it. Charge the handset for at least 12 hours before you use it for the first time.

Caution

Do not use normal batteries(primary cells)! The use of other battery types or primary cell will discharge the manufacture from any form of liability for occurring malfunctions or damages. If you leave the handsets for over than one week for trip, please put it back to charge or remove the battery form handset.

2-4 Initial setting

 
It is recommended to activate the following setting :

- ◆ Change your PIN for the protection against unauthorized alterations of the settings.
- ◆ Store frequently dialed telephone No.'s in your phone book.
- ◆ Set the volume and tune of the ringer tone to your own liking.
- ◆ In case that you want to use further handsets on this base station, please refer to page 14 register new handset.


3. Key and Display

3-1 Display


Full Screen:

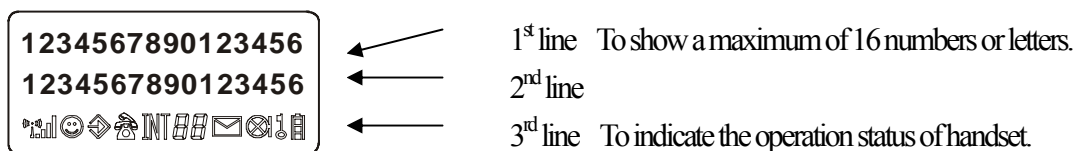

Stand by mode:

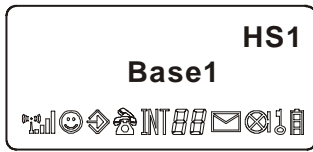 

■ *w/o user name*

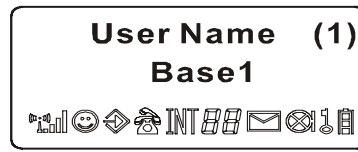 

■ *With user name*

Base 1 : Indicate the base No. which the handset is working on.

HS 1 : Indicate your handset No. which is registered on the base.(Total 15 handsets can be registered on one base).

3-2 Symbols



Antenna

When the antenna symbol appears on the display, this indicates that the handset is located within the working range of the base unit. When the handset is out of working range, “Searching.....” will appear on the display.



Baby Call

When baby call was activated, the baby symbol will appear .



Function Setting

When you go into programming menu, the icon appear.



Off hook

The off hook symbol appears when the “Talk” key is pressed to call out or receive a call.



Internal Call

The INT symbol is used for internal calls between handsets.



Line Busy Indication

The icon appear “L1” or “L2” in all handsets when one of the external line is connected. When both line was connected, ”12” appear on the display.




Missed Call

The missed call symbol appear when you have missed call or unread caller NO.



Mute

The symbol appear when you mute the microphone.

 **Lock**

The lock symbol is displayed when the handset is locked. The unit can only receive incoming calls.

 **Battery**

The battery symbol appear only in “Charging” or “Low battery” status. You need to charge the battery when Low battery symbol appear.

3-3 Key Description

Handset Unit



Base Unit





3-4 Key function



Talk/End/Speaker phone

Take on calls and end the calls

There is two dialing mode. You can press  first and then dial phone # or you can dial phone # first and then press  key to start dialing.

To activate the speaker phone by pressing  button more than 2 seconds when it is at off hook mode.



R (Flash)

FOR PABX TRANSFER

Or Handset power on/off



Up/Down key

Activate the programming menu by press DOWN key.

OR

Start phone book by press “UP” key .



INT/OK

Establish internal connection

OR

Confirm programming step.



Mute/C

Mute key (Microphone OFF in conversation)

OR

Correct mistake input (Clear)

OR

Escape from programming menu



Redial/Pause


Redialing key, browsing of lately dialed telephone No.'s by pressing the key repeatedly.

OR

Insert a dial pause for the storage of phone book No.

4. Making call

4-1 Answering


The user can accept an incoming internal or external call by pressing the  key or any number key (when “any key talk” on).

The “INT”(Internal) or “External” call symbol related to the incoming call continues to flash on the display until

the call is accepted. If caller ID service is available, you will see the caller No. (See page 13 Caller ID).


Note : *When you are answering to Line 1 and simultaneously Line 2 call in, you will hear short beep tone to remind you on L2.*

4-2 Adjust Receiver Volume



You can adjust receiver volume by pressing  while the phone call is taking.

4-3 Outgoing Call



4-3-1 External call with normal dialing

Press the  key first, and then enter the dial digits. The No. will be dialed out instantly.





4-3-2 External Call with Dial Preparation

- ◆ Enter the desired telephone number.
- ◆ Press the  button.
- ◆ During the dialing, the number can be corrected by pressing the  button.



4-3-3 External Call from Phone Book

- ◆ Press UP key and going into phone book (Refer to 5-2 Phone Book Setting, Page12).
- ◆ Scroll the phone book by pressing  key and find the phone No. you want to call out.
- ◆ Press  key.

4-3-4 External Call from Caller ID List

- ◆ Press the  down key and go into Caller ID menu. Press  key.
- ◆ Scroll the Caller ID List by pressing  key and find the phone no. you want to dial out.
- ◆ Press  key



4-3-5 Redial


- ◆ Press the  button repeatedly to browse the different numbers in the Redial memory.
- ◆ Press the  button.

4-3-6 External Call Line Select

You can select the L1, L2 or Alternative by setting from function menu so that you have optimum usage of telephone line. Please refer to page 19, 5-6-4 “Select External Line Priority”

4-4 Internal Calls between handsets




- ◆ Press the  button.
- ◆ Enter the number of the desired handset.
- ◆ When the called handset starts to ring, press  button to answer the incoming

- ◆ internal call.
- ◆ Press the  button when you want to terminate the internal call.

Note : When a handset is in communication, you will hear a busy tone when you try to reach it.

4-5-1 External Call Transfer

You can transfer external call to another internal handset by following steps:

- ◆ Press  button, followed by the number of the desired handset.
- ◆ As soon as the called handset answer the call (external caller was put “ON HOLD”), both handsets are now connected.
- ◆ The first handset will transfer the external call to the second handset by pressing the  key.
- ◆ If the second handset doesn't answer, press  button to return to the external call again.
- ◆

4-5-2 To hold the line 1 external call and pick up line 2 incoming call

a. When you hear the beep sound of second incoming call when you are talking, to press the intercom key to hold the first call, the other side of the calling party will hear a on hold music.

b. To on-hook the talk key.

c. To wait for the second incoming call ringing, pick up the second incoming call when you hear the ringing

d.

d-1. When you finish the second incoming call, on-hook the talk key, the first incoming call will ring, you can pick up the call and continuously talk with the first calling party.



d-2 Or during you are talking with second incoming call, you also can hold the second incoming call by press the intercom key and on-hook the talk key. The first incoming call will be ringing and you can pick up after the ringing.

4-6 Three Way Conference

You can connect two handsets to conference with external line by following steps:

- ◆ In above 4-5 call transfer procedure step two.
- ◆ When second handset was connected, press “#” key of first handset for more than one second, you can start conference function.

4-7 Pause

While entering a phone number you can add a pause time to this number by pressing the  button for connecting to PABX. It should not be the first digit of a telephone number otherwise the  button will interpreted as a Redial button.




4-8 Call Duration Display

When the External/Internal call is connected, the call duration will display on the LCD. The time is displayed in the following format : {hh : mm : ss} (hours : minutes : seconds)

If you want to clear the time display and continue to dial, press “Mute” key.

4-9 Mute

You can deactivate the microphone during a conversation to prevent being heard by your correspondent.

- ◆ Press the  button during a conversation.  is shown on the display.
- ◆ When you want to continue the conversation, press the  button again.


4-10 Do not Disturb

To prevent disturb, you can set each handset to ring or not when call come in. Or you can assign all incoming call to certain handset. Please refer to page 19, 5-6-5 “Ring Group Setting”.

4-11 Assign one of handset as an operator

You can assign one of the handset as an operator. When call in, only the assigned handset will ring. Please refer to page 20, 5-6-6 “Ring Priority Setting”

4-12 Power ON/OFF Handset

The handset can be activated/deactivated by pressing the  button for more than 2 seconds.
You will hear beep tone while power ON/OFF

4-13 Out of Range


When the handset is out of the working range of the base unit or when it’s not subscribed to the base unit, it will emit a warning tone.

You have to move closer towards the base unit or you have to subscribe the handset to the base unit.





4-14 Speaker Phone

The speaker phone can be activated by pressing the  button for more than 2 seconds when you are at talking mode.
It can be deactivated by pressing  button again.

4-14 Headset Connection





The handset of RT-208 provides a 2.5 mm headset connection jack to be connected to headset. When you connect the headset to the handset, you control the on/off of the headset function by pressing the  button on the handset.

5. Phone Book and Function Setting

The RT-208 was designed user friendly with  menu. You can set your phone book and programming the handset by press  “DOWN” key, scroll the menu, select your preferable and confirm by **pressing**  key or escape the menu by **pressing**  key. When finish the setting, you will hear the beep tone for confirmation. The detail menu tree please refer to appendix one *Menu Tree*.



5-1 Key locked

When the handset is locked, outgoing calls are no longer possible. Incoming calls can still be received without any problem.




Key lock	Scroll menu by press  DOWN key then press  while the “Key Lock appear on the display.
-Locked-	You will hear a beep tone and the handset key is locked.
Release	
-Locked-	Press  Down key
-Unlock?-	When “Unlock” appear on the display, press  you hear a beep tone and the key was unlock.

5-2 Phone Book









You can save 20 telephone numbers(25 digits) with name (12 letters) in the phone book.

Phone Book	Scroll menu by press  Down key then click  while the display show “Phone Book”.
------------	--




5-2-1 To <ADD> the new phone number in phone book .

-Add-	Press 
Name :	Key in the name then press  (Refer to – Appendix 2 How to Input letters)
Number :	Key in the phone no. then press  .
Stored	The phone No. is saved.





5-2-2 To <EDIT> the Phone Book function.

-Edit-	Press 
Name/Phone	Press 
Name	Use  or  to edit the name and confirm by 
Phone No.	Use  or  to edit the phone No. and confirm by 
Stored	The revised phone No. is saved.




5-2-3 To <READ> the PHONEBOOK .

Read	Press  , you can scroll the saved phone book by  key
Name Phone#	Press  to dial out.

5-2-4 To <DELETE> the PHONEBOOK



DELETE	Press  to go into Delete Mode.
Name Phone #	Press  key to scroll the PHONEBOOK until the one you want to delete appear then press 
Are you sure ?	Press  to confirm.

5-2-5 To <ERASE> the PHONEBOOK .

Erase All	Press  to erase all phone no.
Are you sure?	Press  to confirm, or give up by pressing 

5-3 Caller –ID/CLIP Function



When the unit receives a phone call, the caller's phone number is shown on the handset's display. The unit receives calls in FSK(name, telephone number, date and time of call) as well as in DTMF(telephone number only). In case of the caller deactivate the caller ID, you will see "PRIVAE" on the display. Or if the caller is out of service, you will see "OUT OF AREA". The phone can save 10 calls which can be reviewed later. When the memory is full, the old calls will be replaced by the new ones in the memory.

You will see the  icon on the display, if there is any missed call. If you answered the phone, the caller No. will be recorded without  icon displayed.




Note : 1. If the L1 and L2 came in simultaneously. The display will show first caller's no. and then switch to second caller no. If you pick up the call, first call will be linked first.

2. Maximum 5 handsets will support Caller ID.(HS1 ~ HS5) If you have more than 5 handsets, some of the handsets will not display Caller ID.

Caller ID

Press the  "Down" key and when display show " Caller ID", press 

No.1 #####


Display will show the last 50 caller list. (No.1 means the newest call and total 10 memories can be stored) Press  to scroll the stored Caller No. The  icon will show on the display if the message is unread. As long as you read the message, the  icon will disappear.

5-4 Register New Handset(All the registered handsets must be in Stand by mode.)

RT-208 base can be registered with up to 15 handsets (Include other manufacturer's DECT product with GAP compatible)

5-4-1 To open the base for register: Pick up one of the registered handset and follow the procedure as below.


Base Setting

Press  "Down key" and go into base setting mode.


Master Pin

Key in pincode then press . Default value 1590.

New H/S


Press  key and go into "NEW HS" mode.

Sub Pin


Key in the sub PIN code then press . Sub PIN is temporary used for register which can be same or Different with Master PIN. Now you can start to register NEW HANDSET

5-4-2 To register NEW HANDSET : Pick up the new handset and follow the procedure as under below.

Register

Press  "Down key" and go into register mode.


*Base 1

Select the base No. which you want to assigned on this handset (BASE 1 ~ BASE 4), then press . The base no. which has been registered will start with "*".

#####

Base ID code will display on the LCD. Press  for confirmation.

Pin code:

Key in the handset SUB PIN code(Has to be same as 5-4-1 SUB PIN) and confirm by  key.
You will hear beep one and the new handset is ready to use.

- Note:**
- 1.You have to finish the new handset register procedure within 60 seconds as soon as the base opened.
The base will close for registration automatically after that.**
 - 2. The handset No. was generated by base from HS1 automatically, you cannot select it.**

5-5 Handset Setting

When you have multi handsets, every handset can be set individually.

-HS setting-



Scroll menu by press  then click  while the display show “HS Setting”.

5-5-1 Set external ring melody and volume.



-Set extring-

Press 

-Ering #-

Press  key to choose your preferable melody then press 

-Ering ##-



Press  key to choose your preferable volume level, then press 

5-5-2 Set intercom ring melody and volume.



-Set intring-

Press 

-Iring #-

Press  key to choose your preferable melody then press 

-Iring ##-



Press  key to choose your preferable volume level, then press 

5-5-3 Turn ON/OFF Key tone

Set keytone



Press 

-On /Off-

Press  key to choose On/Off key tone, then press 





5-5-4 Input user name on the display (Max.8 letters).

You can input your personal name on the display for identification.(Especially when you have more than one handset).

User Name	Press 
Name :	Key in the name and press 
Name<1> Base 1	Display show your name and handset #



5-5-5 Change Handset Pin

Some setting are protected against unauthorized alternation via PIN (Personal Identification No.).You can set different PIN code in handset and base or make it same. This PIN has 4 digits; the default No. from factory setting is 1590.You should alter PIN as soon as possible in order to ensure the protection. Please make sure that you will always have available the last valid PIN because a reset to the default status can only be effected against payment by authorized service personnel.

Set Pincode	Press 
-HS pin:-	Key in the default pincode1590, then press 
-New pin:-	Key in the new pincode then press  (at least 4 digits)
-Retype :-	Key in the new pincode again then press  for confirmation

5-5-6 Baby Call

The function allows you to program one specific number that will be dialed automatically no matter which key has been pressed. One direct call number can be programmed per handset. Incoming calls can still answered without any problem.

Baby Call	Press 
-Empty-	The display show on Empty.
-#####-	Key in the phone no. then press 
Baby Call	Display show “ Baby Call”.

Release baby call

Quick press the  Down key twice.

5-5-7 Auto Pick up

When the handset was on the charging status, you can pick up the incoming call without pressing any key. (Just pick up the handset from base and start to talk).

Auto pick up

Press 

On/off

Select ON/OFF by pressing  key and then confirm by  key.

5-5-8 Any key talk

When the call came in , you can press the  key or any numerical key to answer the phone.

Any key talk

Press 

On/off

Select ON/OFF by pressing  key and then confirm by  key.



5-5-9 Select Language

Provide various kinds of language for your convenience.

Language

Press 

English/Deutsch/Francis/Netherlands



Select your preferable language by pressing  key and then confirm by  key.

5-5-10 Erase Caller ID list

Erase CID

Press  to confirm.

Are you sure ?

Press  for confirmation, or give up by 

5-5-11 Set Handset Default

You can reset your handset to an identification like configuration to the default status(see page 4).

The phone book memory will also be erased.



Set Default

Press 

Pin :

Input handset Pin code. Default value 1590

Are you sure ?

Press  for confirmation, or give up by 


5-6 Base Setting

You can change dial mode, flash time, base pin and so on in base, all the handsets which registered on the base will be impacted by the new setting.

BS Setting

Press 

Master Pin

Key in pin code then press 

5-6-1 Change Dial mode

Dial Mode

Press 

DTMF/Pulse

Press  key to select DTMF or PULSE mode then press  for confirmation.



5-6-2 Change Flash Time

Flash time will vary in different country or different PABX. It might cause mis-operation. Please check with technical people before changing.

Flash Time

Press 

Flash 100ms

Press  key to select you need and then press  for confirmation.



5-6-3 Change Pause time

Pause is convenient when you need to dial out through PABX(To get a temporary dial pause).You can select the pause time from 1 to 4 second.

Pause Time


Press 



Pause 1 sec

Press  key to select and then press  for confirmation

5-6-4 Select External Line Priority

You can set the priority when link to external PSTN line for optimum line efficiency. For instance, when line1 was paralleled with fax machine, you might prefer to use line 2 first for external call. Every handset can have different setting.

Select Line	Press “  ”.
-------------	--

HS1 Alternative HS2 L1, L2	Press  to select the HS No. you want to change then press  . Now you have 6 options.
-------------------------------	--

Alternative : Line1, Line2 consequence



Line 1 First : Line 1 first, if busy then Line2.

Line 2 First : Line 2 first, if busy then Line1

Line 1 only : Only use Line 1


Line 2 only : Only use Line 2



No: Can only receive call.

Alternative	Press  to select your option and press  for confirmation.
-------------	---




5-6-5 Ring Group Setting

You can assign certain handsets to Line 1 or Line 2 ring group to prevent disturb from external line. The Handset which deactivate can only receive internal transfer call or dial out.

Ring Group	Press  key
------------	---

Line1/Line2	Select L1 or L2 by  key and Press  key.
-------------	---








HS 1x3x5xx	Key in the handset # you want to disable from the L1 or L2 ring group. The H/S no. which was disable will appear with the “x” mark.
------------	---

HS 10+xxxx	Press  Down key for HS No. 10~15 setting. Then press  for confirmation or  for escape.
------------	---

Note : If you want to disable handset ring for both Line 1 and Line 2, you have to set for both..



5-6-6 Ring Priority Setting(Assign operator)

You can assign one of the handset for L1 and L2 as an operator by ring priority setting. When call came in, only the operator handset will ring. If no one pick up the phone for few rings(You can set the ring count.), the phone will transfer to ring other handsets.(If you activate the ring group setting, the incoming call will follow your ring group setting.)

Ring Priority	Press  key
Line1/Line2	Select L1 or L2 by  key and Press  key.
H/S:off,1~15	Press  key to choose HS no. you want to assign as operator then press  for confirmation.(“Off” means no operator was assigned.)
H/S: off, 1~15 Ring cnt: 1~20	Select ring count numbers(From 1~20) by  key and press  key for confirmation.






5-6-7 De-subscribe the handset from the base

You can de-subscribe the registered handset from the base station (All the handsets must be power on and in stand by mode.)

Remove HS	Press 
H Desub 12M----	You will see all the registered handset No. on the display(“M” means MASTER handset in setting mode, ”-“ means no. register). Key in the handset No. to de-subscribe and press  for confirmation. The de-subscribed handset will beep and display “Not Sub”.

5-6-8 Call Barring

You can set 5 groups of No. to barrier the out going call.(1-5 digits for each group.) For instance, long distance call, GSM call and so on. You can also select each handsets of different barrier groups.

Call Barry	Press 
No.1 : Empty	Input the No. you want to barrier and press  .
HS # xxxxxxxx	Input the handset No. you want to activate the above barring No. then press  for confirmation, the display will back to setting mode.
No.2: Empty	If you want to set 2nd group, go into call barring mode again and press  key to switch to next group. Repeat above procedure to set next barrier No.. To deactivate the call barring, go into the No. X and clear the No.(“Empty” appear on the display) then press  .

5-6-9 LCR Function/Connect to PABX

The LCR function provide the user to choose the most economic router to make the call amount various telephone operators. You can set the optimum provider number in the handset. RT-208 handset will automatically put your optimum provider number in front of dialed no. and call out.


How to use LCR :

1. Set up your area "CODE". For instance 123(depend on your telephone operator)
- 2.Set up your preferable "PROVIDER" No. For instance 456.
- 3.Turn the "ROUTER" ON
4. If you connect RT-208 under PABX, set up the PABX Prefix No. For instance 0 or 9.
5. Dialing example :


	<u>Normal</u>	<u>Connect To PABX</u>
When you dial :	<u>123</u> 9999	0 123 9999
Actual dial out :	123 9999	0P 123 9999
When you dial :	234 9999	0 234 9999
Actual dial out :	456 234 9999	0P 456 234 999


6. You can temporary turn off the LCR by press "#" twice in front of dialing No.

How To Set The LCR

LCR Setting Press 


- ◆ Provider: You can set the your optimum provider number here.(max.. 6 digits)

Provider Press 

Provider
Num: Empty Input the number your local provider then confirm by 

- ◆ CODE: You can set your area code which your home was located. (max. 6 digits)

Code Press 

Code
Num: Empty Input the number of your area code then confirm by 

◆ PABX CODE(Connect to PABX)

When you connect RT-208 under the PABX system, you can set the PABX prefix code. For instance, 0 or 9. (max. 2 digits)

You can use the PABX code independently without LCR function by just empty the code and provide no.

PABX CODE

Press 

PABX Code
Num: Empty

Input your PABX prefix No.(E.g. 0 or 9) then turn ROUTER ON.

RT-208 will give a pause time automatically when you dial out through PABX



◆ ROUTER

You can activate or deactivate the LCR function here.

Router

Press 

On/Off

Press  key to select you need and then press  for confirmation.

5-6-10 Change Base Pin


Change Pin

Press 

New Pin

Key in the new pincode then press  (4 ~ 8 digits)

Retype :

Key in the new pincode again then press 



5-6-11 Set Base Default

You can reset your base to the default status.

Set Default

Press 

Are you sure ?

Press  for confirmation or give up by 



5-7 Select Base

Handset can be subscribed to 4 different base station. When a handset is subscribed to several base station, you can choose which base station you want to work with. For example: You want to use your handset in the office as well as at home. You therefore have to register the handset to both base stations.

Select Base

Press 

*Base No.:

Press  key to select the base No. and confirm by pressing  (The available base No. will start with “*”).

Base Auto

When you select “Base AUTO”, the handset will search automatically. The first reachable base station will be selected and immediate operation status will be effected













Appendix 1 - Menu Tree

- Idle Mode
 - Key Lock
 - Phone Book
 - Add
 - Edit
 - Read
 - Delete
 - Erase all
 - Caller ID
 - HS Setting
 - Set Extring
 - Set Intring
 - Set keytone
 - User name
 - Set pincode
 - Select line
 - Ring group
 - Baby Call
 - Auto pick up
 - Any key talk
 - Language
 - Erase CID
 - Set default
 - BS Setting
 - Dial Mode
 - Flash Time
 - Pause Time
 - New HS
 - Remove HS
 - Call Barring
 - LCR Setting
 - Change PIN
 - BS Default
 - Select Base
 - Base 1
 - Base 2
 - Base 3
 - Base 4
 - Base Auto

----- Register ----- Base 1
 ----- Base 2
 ----- Base 3
 ----- Base 4

Appendix 2 – How to input the letters


Alphabet allocation chart

Key pressed	Once	Twice	3 times	4 times	5 times
	l		()		-
	A	B	C	2	,
	D	E	F	3	:
	G	H	I	4	+
	J	K	L	5	%
	M	N	O	6	/
	P	Q	R	S	7
	T	U	V	8	.
	W	X	Y	Z	9
	0	β	Ä	ö	ü
	*				
	#				



Operating method:



Press the key one ~ 5 times to get the alphabet your want.(Refer to above chart.)

Continue to input the alphabet by pressing other key until you finish the full name key in.

Delete wrong alphabet by press  key.

If next alphabets is in the same key, please wait for the cursor move to next position.

Press  “Up” key to move cursor to left side or press  “DOWN” key to move cursor to right..

Press  key once, the alphabet will become small letter. Press  key again to recover to big letter.