



SATLINK
USER'S MANUAL

SATLINK

WS-6932

USER'S MANUAL

CONTENTS

Product Description

GUIDE	2
1.1 Face Panel & Button	3
1.2 Power On/Off	4
1.3 Power Supply & Battery	4
Menu	4
2.1 Satellite Search	5
2.2 Multimedia	10
2.3 System Setting	13
2.4 TP manage	15
2.5 Spectrum	16
2.6 Constellation	20
2.5 Shortout Buttons	22
3. Specifications	26
4. Warning	27
5. Product Standard Package	29

Product Description

Using WS6932 can receive DVB-S and DVB-S2 signal, Watch HD programing. It's very convenient for installer to catch quick and accurate alignment for antenna to the best position.

Ws6932 uses microprocessor controller with reliable and stable performance. When it is turned on, channel picture, signal strength and signal quality will be showed on LCD screen. And also big menu window can be selected for data figure.

Ws6932 displays EL/AZ, CBER/VBER, S/N, signal strength and lock sound alarm.

Ws6932 can detect very weak signal and provide antenna power (OFF/13V/18V). It's with auto-protection for LNB short-circuit.

Ws6932 has the AV in and AV out function.

Ws6932 Key has backlight, WS6932 with flashlight function.

Ws6932 uses the 12V power adapter. It includes 8.4V3000mAH high capacity LI-ION battery which can work for more than 2 hours when it is fully charged.

1.GUIDE

1.1 Panel keypads



NO.	Name	Function
1	MENU	To show main menu or return to previous menu
2	F1	Function Button
3	F2	Function Button
4	F3	Function Button
5	F4	Function Button
6	EXIT	To cancel selection or exit from current menu
7	▲▼▶ OK	Arrow for Cursor Moving OK for Confirming
8	Mute	Sound On/Off Switching
9	SCAN	Quick search for DVB-S
10	M.INFO	Show 5 channels signal information for DVB-T
11	INFO	Show information of current program
12	0-9 Numerical Button	To input numer for setting parameters
13	Power Connection port	Port for power charging
14	USB Port	Port for Upgrading or connecting to multimedia
15	Flashlight holes	flashlight
16	Power Switch	Power Switch for machine power
17	LNB IN	Connecting to the dish for DVB-S
18	AV OUT	AV OUT
19	AV IN	AV IN
20	Power Indicator Light	The light is on when meter is turned on
21	22K Switch Indicator Light	22K Switch is on when it lights
22	13/18V Indicator Light	To show H/V switch output
23	Signal Lock Indicator Light	Locked signal when it lights
24	Charging Indicator Light	The light is on when it's charging and off when charging is completed.

1.2 Power On/Off

To turn on the meter when Power Switch moves to I position.

To turn off the meter when Power Switch moves to 0 position.

Please turn off the meter to charge the meter in time when system information for showing low power pops up.

1.3 Power Supply and Battery

It's used with 12V 1.5A Power Adaptor. It charges through external power when battery is out of power.

It's used with 8.4V 3000 mAH Lithium Battery. It needs 4 hours charging time by connecting power adaptor with external power or car charging. After it's full charge, it works for more than 5 hours (It also depends on the load of external antenna).

Notice: For initial charge, please make battery fully-charged(We suggest it charge for 8 hours).


2.MENU


Press “MENU” key to enter into main menu, and

use Arrow key to move cursor, and then press “OK” key to select sub-menu.



2.1 Satellite Search

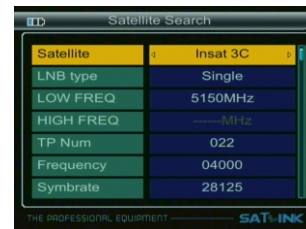

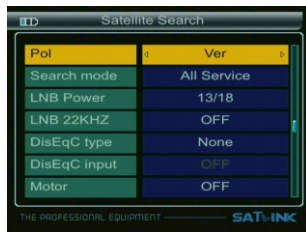

2.1.1 Satellite

Press [▶] button to enter can be change the satellite name,
Press [◀] button to enter can be change the current frequency.

2.1.2 LNB Type

press [◀][▶] enter ,select (Single、UNIVERSAL、
ONECABLE)

2.1.3 The vibration frequency

press [◀][▶]enter (select 5150、9750、10000、10050、
10600、10750、11200、11250、11300、11475)

2.1.4 TP NUM

press [◀][▶] enter, select TP NUM

2.1.5 Frequency

Use the numerical button to input Freq Value for Down Freq

2.1.6 SymbRate

Use the numerical button to input Value for Symbol Rate

2.1.7 Pol

Select Polar Mode (VER、HOR)

2.1.8 Search Mode

Set parameters, and press “OK” button to enter the Sub-menu,
and then align direction of antenna according to the interface
parameters.

2.1.9 LNB Power (OFF、18、13、13/18)

2.1.10 22Khz

22Khz switch (OFF、ON)


2.1.11 Switch type

(None、DisEqC 1.0、DisEqC 1.1)

2.1.12 Motor

(OFF、DisEqC 1.2、USALS)



press “OK” button to enter the Motor -menu

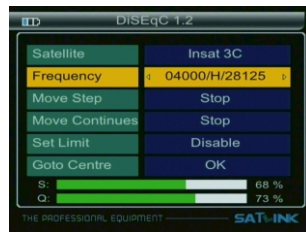


Setting up the **Satellite Search -menu**, Press “OK” button to enter the **Quick search -menu**.



Press [◀][▶] enter select ZOOM, MONITOR, TP SCAN, AUTO

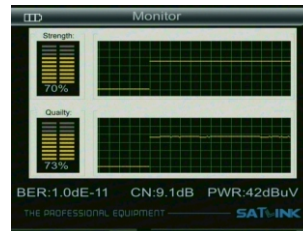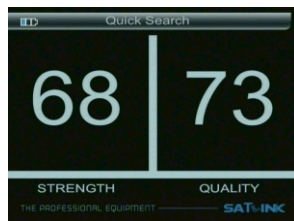


Press “OK” button to Search, Program automatically save the search is complete return to the previous menu.


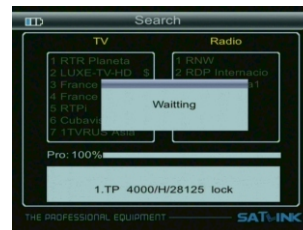


2.2.3 Download the current user database

Usb interface , press the F1 key , you can download the current user database 。 on the basis of satellite tp tools to produce there own default satellite database

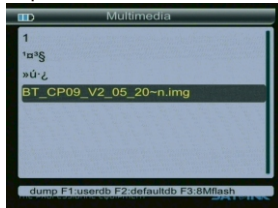

2.3 System setting

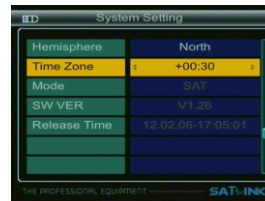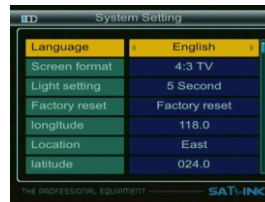

2.3.1 Language Select

Choose a kinds of menu languages

2.3.2 Screen format

screen output format slect (4 : 3TV、16 : 9TV)

2.3.3 Light setting

Button backlight delay slect switch
(OFF、5 Second、10 Second、20 Second)

2.3.4 Factory reset

Press "OK" key , software return back factory set

2.3.5 Longltude

Enter local longitude by number key

2.3.6 Location

Press [◀][▶]choose local west .east of position

2.3.7Latitude & Hemisphere

Enter local latitude by number key

2.3.8Hemisphere

Press [◀][▶]choose local west .east of position

2.3.9 SW VER

display fw2e version number

2.3.10 Release Time

display software setting time

2.4 TP Manage



USE [▲][▼]use[] to select TP to see the signal strength and signal quality of the TP





2.5 Spectrum

Press OK button and then enter spectrum parameter to set menu.






2.5.1 To set parameters according to requirements, and then press OK button to enter the chart of spectrum.

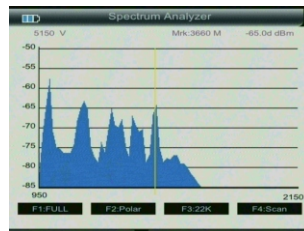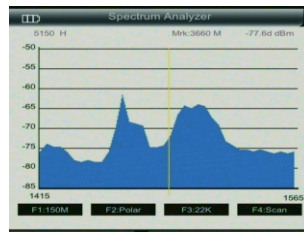

2.5.2 When the screen appears the spectrum, press F1 button to change bandwidth and press F2 to change the polarity.


2.5.3 Press F4, Scanning near the cursor frequency, and save search program

2.5.4 Press OK button , then enter the TP SEARCH, enter the Constellation.

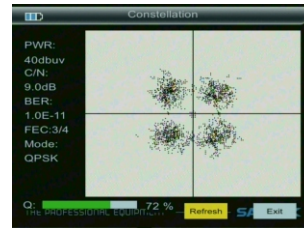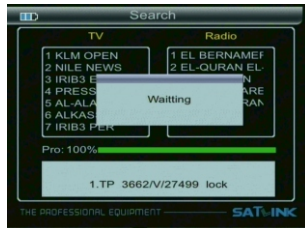
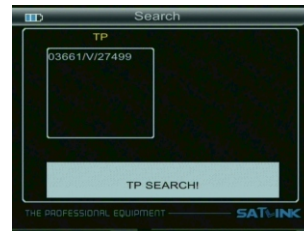


2.6 Constellation

Press OK button , then enter the constellation parameter to set menu

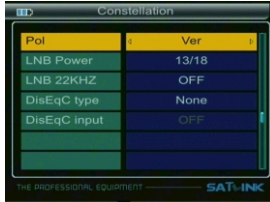


2.6.1 To set parameters according to the requirements, press OK button to enter the constellation chart parameter.
To show signal parameter DVB-S (QPSK) 、 DVB-S2 (8PSK) according to the parameter of satellite finder.
(For the same satellite, different transponders show different signal strength, the signal of DVB-S (QPSK)) is stronger than DVB-S2 (8PSK) .

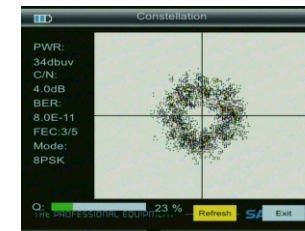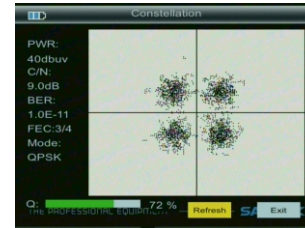


2.7 Shortcut Buttons


2.7.1 In the broadcast , press OK to enter the lower menu , follow the prompts

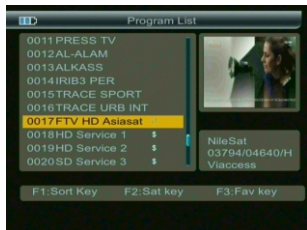


2.7.2 In the broadcast , press F1 to enter the lower menu , follow the prompts

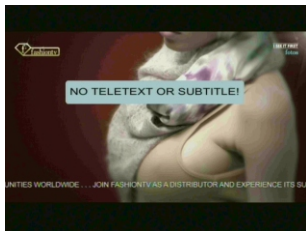

2.7.3 In the broadcast , press F2to enter the lower menu , follow the prompts

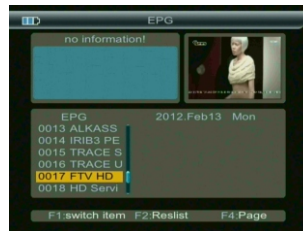


2.7.4 In the broadcast , press F3 to enter the lower menu , follow the prompts

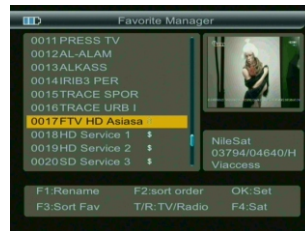


2.7.5 In the broadcast , press OK to enter the lower menu , follow the prompts




2.7.6 in the broadcast , press the TV/Radio , to achieve TV/ Radio feature conversion.

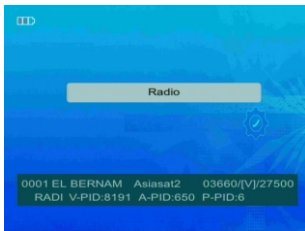

2.7.7 In the broadcast , press INFO to enter next menu, follow the prompts

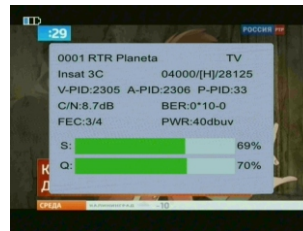

2.7.8 Press MUTE button to turn on or turn off the sound

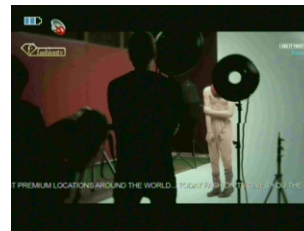

Specifications

System		Fully DVB-S&DVB-T Compliant	Yes
Antenna input	DVB-S	Connector	F type, Female
		Frequency Range	950MHz~2150MHz
		Signal Level	-65dBm ~-25dBm
		LNB Power	13/18V, Max350mA
		LNB Switch Control	22KHz
	DiSEqC	Ver 1. 0/1. 1/1. 2 USLAS	
	DVB-T	Connector	1EC Female 9.5mm
		Frequency range	VHF and UHF
Bandwith		8/7/6 MHz	
Input impedance		75ohm	
Demodulator	DVB-S	Front end	QPSK
		Demodulation Range	2Mbps ~45Mbps
		SCPC and MCPC Capable	Yes
	DVB-T	Modulation	COFDM
		Constellation	QPSK, 16QAM, 64QAM
		Transmission mode	2K, 8K
		Guard interval	1/2, 1/4, 1/8, 1/16, 1/32
		FEC	1/2, 2/3, 3/4, 4/5, 5/6, 7/8
System Resources		Processor	32bit processor(133MHz)
		FLASH	16bit
		SDRAM	8*16bit
		MPEG 2	MP@ML
Video Decoder	Data Rate		Max 15M bits/s
	Resolution		720*576, 720*480
	Video format		PAL/NTSC/SECAM
	MPEG		MPEG-1&2
Audio	Type		Single
	Sampling Rate		32, 44, 1&48KHz
	Data Transfer		Connector
Flashlight	Power		0. 5W
Power Supply	Li-ion battery		3000mAh/8. 4Max
	Power Adaptor	In	AC 100-220V
		Out	DC 12V
Physical characteristic	Size		12. 5*20. 5*4. 5(CM)
	Net Weight		0. 66kg

Handing Precautions and Prohibitions of Battery in Sat Meter

Warning:

一、 You are using Lithium ion batteries and Lickel metal hydride batteries. So Please don't work under high temperature or high pressure condition. If the following items happened, abnormal chemical reaction may occur which will lead to the battery overheat, emit smoke, ignite and/or burst.

1. Incinerate and dispose the battery in fire or heat it.
2. Pierce the battery with a nail or other sharp objects. Strike it with a hammer or step on it.
3. Immerse the battery with water or connect the positive (+) and negative
4. Connect the positive (+) and negative (-) terminals with other metal objects, such as necklaces hair pins and so on.

The battery is only applicable to the charger which supplied or appointed by the manufacturer of this machine.

(二) The battery is only applicable to the charger which supplied or appointed by the manufacturer of this machine.

1. The battery should be stored within a temperature range of 0°C to 40°C.
2. The battery is expendable. When stored for a long time, charge the battery at least once per half month so as to prevent over discharge.

Handling:

Please use the battery only supplied by the manufacturer, otherwise it will destroy the battery.

Please do not put the battery in fire or dispose it together with garbage.

Please contact the waste administrative institute to cope with waste battery carefully.

5.Product Standard Package



AV cable



Car charger cable



Power



Carrying case



Rubber Cover