

Please read this
instruction manual
carefully before
use and store in a
safe place for future
reference



User Manual


Stylo Retro Vinyl Player

READ BEFORE OPERATION

- Keep these instructions for future use.
- Handle the unit with care at all times
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Make sure no liquid is spilled on device and device openings.
- The ventilation holes should not be covered. Make sure there is enough space above and beside the amplifier/receiver (about 4 inches).
- Do not place a CD player or other equipment on top of the Turntable Player/Recorder.
- Do not open or disassemble the cabinet, as this may result in damage to the circuitry or electrical shock.
- The power cord should be unplugged during long period of inactivity.
- Do not attempt to clean the unit with the chemical solvents as this might damage the finish. Use a clean, dry cloth.
- The user shall not try to maintain device beyond that which is described in this information form. The guarantee would negate.

INSTALLATION AND OPERATION

CAUTION: To avoid stylus damage, make certain the included stylus guard is in place whenever the turntable is being installed, moved or cleaned.

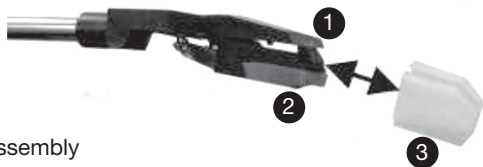


- 1 Stylus Assembly
- 2 Stylus (Needle)
- 3 Stylus Guard

TURNTABLE FEATURES

- 3-speed turntable fit suitable to play at 33, 45, 78 rpm
- Belt-drive and semi-automatic play tone arm
- Ceramic stereo cartridge with jewel stylus
- Built-in 45 rpm adapter
- 3.5mm headphone socket (front)
- L/R output jack(rear)
- Full range stereo speakers
- Translucent plastic dust cover

LOCATION OF CONTROLS

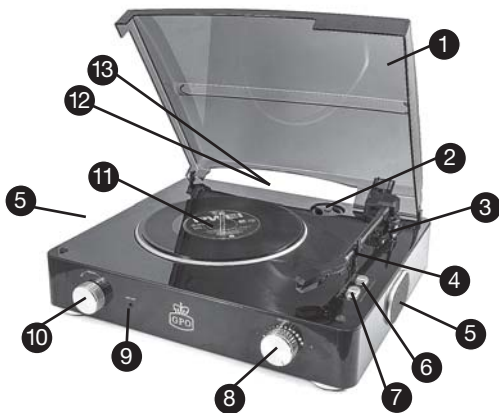

- | | | | |
|---|---------------------------------------|----|-------------------------|
| 1 | Translucent dust cover | 7 | Speed setting switch |
| 2 | 45rpm adapter | 8 | Volume knob |
| 3 | Play/pause arm lever | 9 | 3.5mm Headphone jack |
| 4 | Stylus boom arm | 10 | On / Off Switch |
| 5 | Full range dynamic
stereo speakers | 11 | Turntable |
| 6 | Auto / Manual stop switch | 12 | 3.5mm input jack (rear) |
| | | 13 | L/R output jack(rear) |

CAUTION: This unit should not be adjusted or repaired by anyone except qualified service personnel.

CONNECTION: Connect the power cord to AC outlet 230V/50Hz.

PHONO OPERATION

1. Play turntable

A - Turn on the power switch knob (10), then place a record carefully on the turntable. In certain circumstances, 45 RPM adapter is needed.

B - Select the speed of record: 33, 45, 78rpm (7) according to vinyl to played.

C - Lift the boom arm (4) and carefully place the stylus on the record where you would like play to begin.

D - Adjust volume as desired. (10)

2. Play Aux-in

Turn on the power Switch knob, you can connect the other music source (mp3 player, DVD, CD) via AUX-IN cable.

HEADPHONES OUTPUT

The GPO Stylo can be hooked up to headphones or more powerful speakers via 3.5mm jack connection using the headphone socket. (9).

The GPO Stylo can be connect more powerful speakers or other amplifier via L/R jack connection using the L/R line.

REPLACING STYLUS

This operation is quite delicate so proper care and attention must be taken to avoid damage to the unit.

1. Safety first! Ensure the unit is unplugged from the power.
2. Holding the stylus boom arm steady, carefully slide the red portion of the tip from the end of the boom arm housing – you may need to tease the clip out with your thumbnail.
3. Add the replacement stylus by simply sliding it back on to the end of the boom arm where you removed the original piece. It should click into place when housed correctly.

WARRANTY & SUPPORT

Your ProTelX product has been carefully manufactured and 100% tested using high quality assured components. It is guaranteed against faulty workmanship and materials for a period of 12 months from the date of purchase. In the unlikely event that failure should occur, the unit will be repaired or replaced free of charge when returned postage paid to the address below within the guarantee period.

The guarantee does not include damage or failure resulting from misuse or damage in transit. Your statutory rights under common law are in no way affected by this guarantee.

For service in or out of the guarantee period, please return the unit postage paid to the ProTelX address below.

When returning your unit please ensure that the package contains a covering letter stating where and when the unit was purchased and the nature of the faults plus your proof of purchase.

* Repair or replacement is at the discretion of the manufacturer.

ProTelX reserves the right to change product specification without prior notice.

Protelx Ltd Unit 6 Park 17, Moss Lane,
Whitefield, Manchester M45 8FJ

**You may wish to call our customer service department on
0845 521 4095**



The lightning flash and arrowhead within the triangle is a warning sign alerting you of dangerous voltage inside the product

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation mark within the triangle is a warning sign alerting you of important instructions accompanying the product



The symbol opposite indicates that the electric and electronic components are the subject of a selective collection, it represents a dustbin on wheels barred of a cross. The electric and electronic products can contain substances having negative effects on the environment and health. Worn, they should not be thrown with domestic waste but to be imperatively recovered in the selective collection: dump, associations of social economy and interdependent.

The selection of waste decreases the potential effects on the environment and human health due to the substances dangerous which can compose certain components electric and electronic

Take an active part to remove you not from the apparatuses with domestic waste!

