

EAGLE[™]

Energy Access Gateway Link to Ethernet



User Manual

Version 1.04
June 2013

Copyright © 2013 by RAINFOREST AUTOMATION, INC (“RFA”). All rights reserved.
No part of this manual may be reproduced or transmitted in any form without the expressed, written permission of RFA.

Under copyright law, this manual or the software described within, cannot be copied, in whole or part, without the written consent of the manufacturer, except in the normal use of the software to make a backup copy. The same proprietary and copyright notices must be affixed to any permitted copies as were affixed to the original. This exception does not allow copies to be made for others, whether or not sold, but all of the material purchased (with all backup copies) can be sold, given, or loaned to another person. Under the law, copying includes translating into another language or format.

Rainforest Automation may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Rainforest Automation, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

Trademarks

Third-party brands and company names mentioned herein may be trademarks and/or registered trademarks of their respective companies and are the sole property of their respective manufacturers.

Notice

The author(s) assumes no responsibility for any errors or omissions that may appear in this document nor does it make a commitment to update the information contained herein.

EAGLE™ – Energy Access Gateway Link to Ethernet

RFA-Z109
Version 1.04

User Manual

Table of Contents

Regulatory information	4
Quick Setup	5
Step 1: Prerequisite software and hardware	5
Step 2: Provision the EAGLE™	5
Step 3: Power up the EAGLE™	5
Step 4: Connect to the EAGLE™	6
Step 5: View Your Meter Data	7
Features of Your EAGLE™	8
Introduction to Your EAGLE™	9
EAGLE™ Status LED Lights	10
EAGLE™ Hardware Ports	11
Understanding the Information Label	12
Web Viewer Function Buttons	13
CONFIG Button	13
HISTORY Button	15
STATUS Button	15
Connecting to a Cloud Service	16
Connecting to Bidgely	17
Connecting to Wattvision	19
Troubleshooting Guide	22
Technical Support	23

Regulatory information

FCC Notices

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC/IC RF Exposure Statement

This equipment complies with FCC and Industry Canada radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed to provide a separation distance of at least 8 inches (20cm) from all persons.

ICES-003 Compliance

This Class B digital apparatus complies with Canadian ICES-003.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Regulations For Australia and New Zealand

This equipment complies with the C-Tick labeling requirements for Australia and in New Zealand. As a radio transmitter, this device complies with the requirements of AS/NZS 4268:2008 as designated in the Radiocommunications (Short Range Devices) Standard 2004 for Australia and as required by the Radiocommunications Regulations (General Users Radio License for Short Range Devices) Notice 2011 for New Zealand. This device is a Category A device as defined in the Radiocommunications (Compliance Labeling - Electromagnetic Radiation) Notice 2003.


Quick Setup

Step 1: Prerequisite software and hardware

- 1) Access to an Ethernet connection directly connected to the Internet.
- 2) A PC or other device with a web browser.

Step 2: Provision the EAGLE™

Your **EAGLE™** must be registered with your utility to connect to the smart meter. You will need to contact your utility with two numbers (MAC Address and Install Code) that can be found on the Information Label on the underside of your **EAGLE™**:

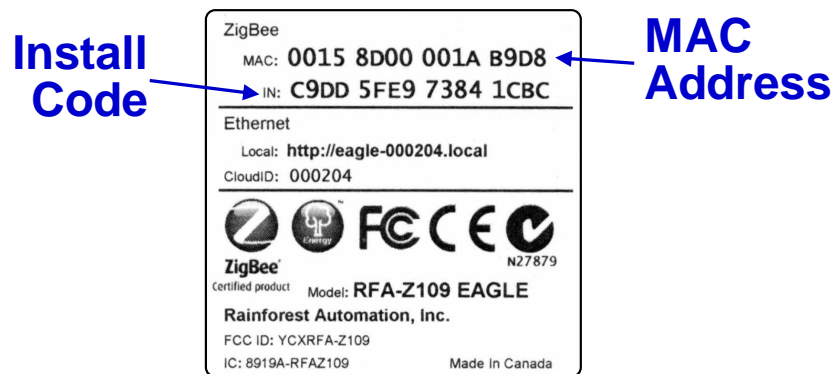

Note that it may take some time for your utility to enable the smart meter to connect with your device. You must wait until this process is complete before proceeding; your **EAGLE™** will not function correctly until the smart meter is enabled.

Step 3: Power up the EAGLE™


- 1) Plug the Ethernet cable into a port on your router, and the other end into the Ethernet port on your **EAGLE™**.
- 2) Plug the AC adapter into a nearby wall outlet, and plug the other end into the power socket on your **EAGLE™**.
- 3) Allow two minutes for the device to boot up. You should see that 3 of the 4 status LED lights (not the Cloud) are all on continuously. This indicates that the unit is functioning normally.



Step 4: Connect to the EAGLE™


You should now be able to connect to your **EAGLE™** using a web browser. The computer running the web browser must be connected to the same router as the **EAGLE™**, and the computer must also be running multicast Domain Name System (mDNS), which is known as Bonjour on Apple computers. mDNS may be already installed on your computer, as many printers and Apple's iTunes use this protocol. If you need to manually install mDNS on your Windows PC, you can find instructions at: <http://support.apple.com/kb/DL999>

The Local Web Address of the **EAGLE™** can be found on the Information Label that is on the underside of the unit.

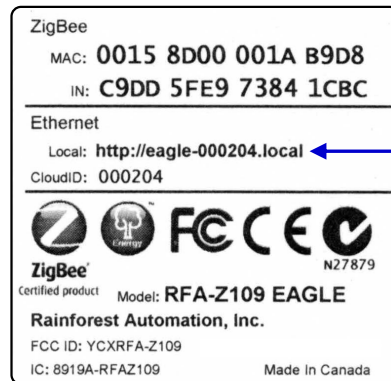

Local Web Address

Simply type this address into the URL field of your web browser and connect. When your web browser connects to the **EAGLE™**, you should see the Web Viewer home page:

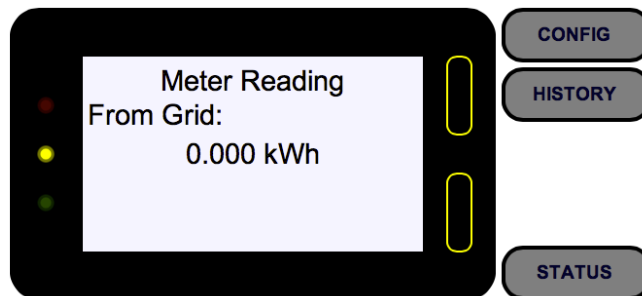

Note that you may have to wait a short while until the time and date are loaded.

 
Step 5: View Your Meter Data

The **EAGLE™** Web Viewer is designed to look and work like the Rainforest Automation **EMU-2™** In-Home Display product.

The two black buttons on the right side of the display screen can be used to cycle through a number of screens that show:

- Total meter reading, in kWh
- Instantaneous demand in kW and \$/hr
- Current electricity price in effect
- Text message from the utility (if any)


Simply click on the upper button to page up through the sequence of screens, and click the lower button to page down.

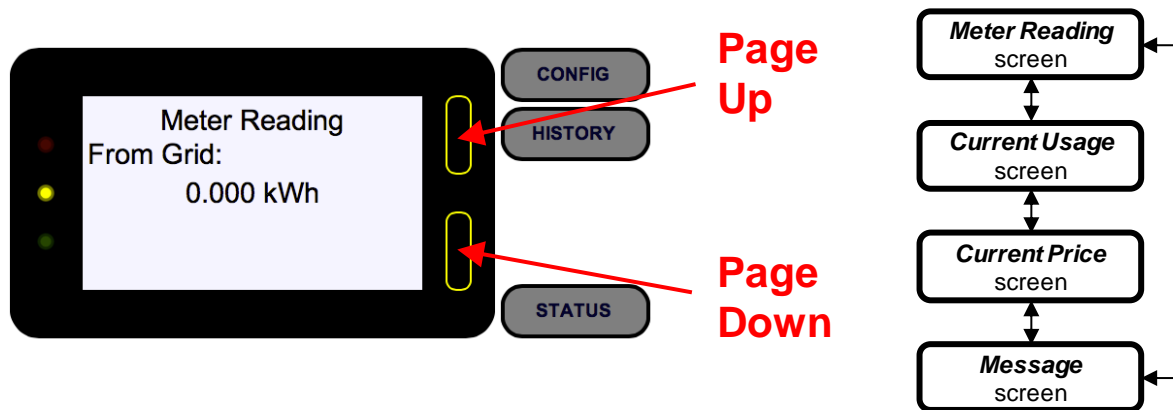

You can also click on the HISTORY button to see graphs of your power usage.

Features of Your EAGLE™


Front

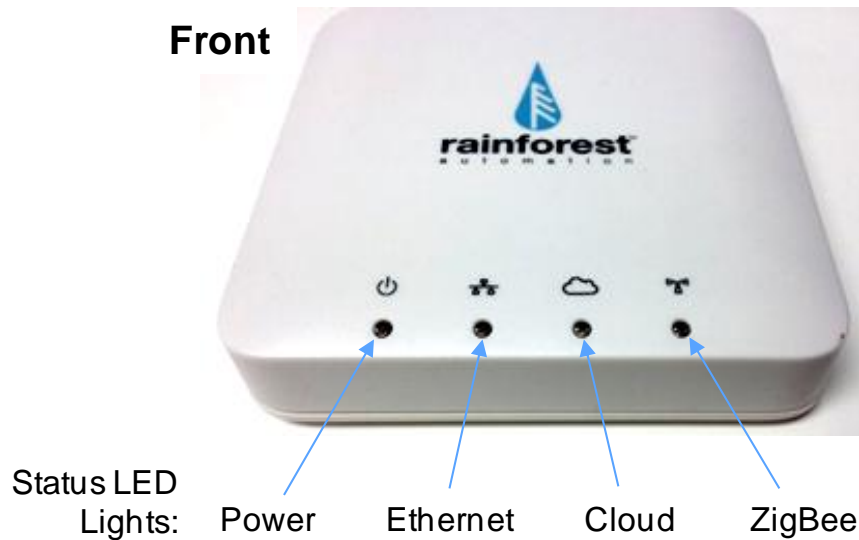

Underside



Back

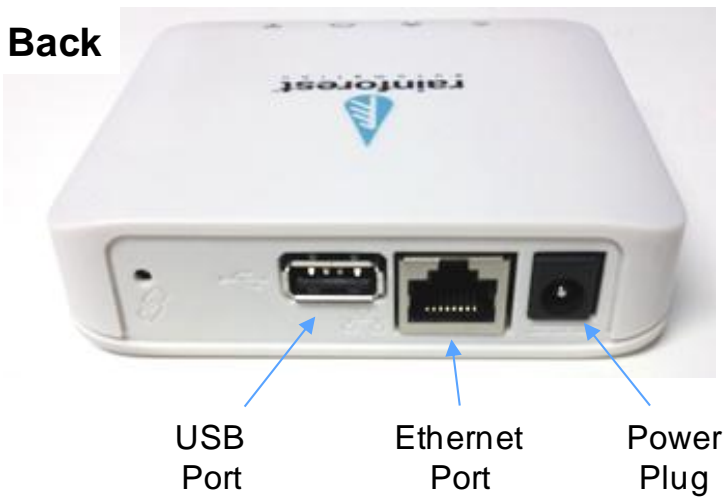

Keyhole Slots Non-slip Pad Information Label

Introduction to Your EAGLE™

Congratulations on getting an **EAGLE™**, the most versatile link to your smart meter energy information. This device is a compact gateway that connects directly to the smart meter using ZigBee wireless. It reads the meter in real time, and streams the data to your home network. You can also direct the data to the internet to take advantage of the many Cloud Services available.

Your **EAGLE™** helps you track the energy consumption of your home – whether you are home or not. This will help you take control of your usage, and allow you to save energy and lower your utility bills.

It's easy to get started: just plug in your **EAGLE™** and connect to it with your web browser. Your **EAGLE™** has a built-in web server that provides a simple Web Viewer that you can use to see your smart meter data. Any device, including your smartphone or tablet, that has a web browser and is connected to your local router can connect to your **EAGLE™** and use its Web Viewer. This allows you to see your smart meter energy data on any web device on your home network.

In addition to the Web Viewer, your **EAGLE™** can also connect you to an online Cloud Service. This can provide you with a feature-rich presentation of your smart meter energy data that is available from anywhere, from a wide variety of devices. There are quite a number of Cloud Services available, providing all sorts of detailed data analysis, amazing graphics, and helpful household suggestions. There are also opportunities for social networking and even ways to earn money and merchandise.


 

 
Your **EAGLE™** has been designed to talk to all of these Cloud Services. It is an open system that uses industry standard communication protocols, and is not tied to any particular service.

To make things easy, a menu of compatible Cloud Services is provided to enable you to connect to the service of your choice with just a few mouse clicks.

EAGLE™ Status LED Lights

Your **EAGLE™** has four LED lights at the front of the top of the device. These lights give you a quick way to check the status of your device.



-  Power LED – shows that the device is powered on. It should always be on when the unit is plugged in.
-  Ethernet LED – shows the status of the connection to the local Ethernet network. When the link is active, the light will be flashing. When an IP address is obtained, the light will be on constantly.
-  Cloud LED – shows the status of the connection to a cloud service. When the user has enabled the cloud service, the light will be flashing. When successfully sending and receiving data with the cloud service, the light will be on constantly.
-  ZigBee LED – shows the status of the ZigBee link to the meter. Initially, it will flash briefly once per second. Once the meter has been found, the light will flash longer every three seconds. Finally, when the connection to the meter is established, the light will stay on continuously.

Normally, all four LED lights should be on continuously when the unit is in normal operation.

EAGLE™ Hardware Ports

Your **EAGLE™** has three interface ports on the back.

 


From left to right, these ports are:

- Power – the included AC adapter plugs into this socket. The other end of the adapter plugs into a nearby power outlet.
- Ethernet – the included Ethernet cable plugs into this socket. The other end of the cable plugs into your local network router. This should be plugged in first before plugging the power in.
- USB – this socket can be used to expand the functions of the **EAGLE™**. Nothing should be plugged into this socket.

Understanding the Information Label

The information Label is located on the underside of your **EAGLE™**. It contains important information that you will need to operate your device.

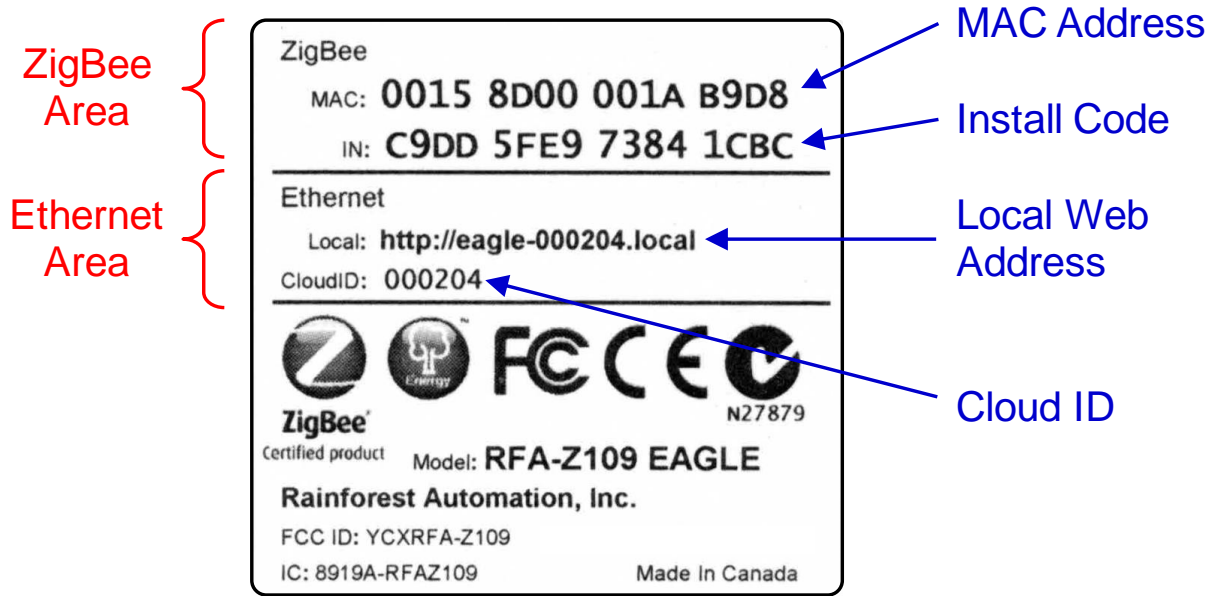

- ZigBee Area – This area at the top of the label has two fields:
 - MAC: the (802.15.4 ZigBee MACID.
 - IN: the Install code for the device.


Both of these numbers are unique to your device, and must be provided to your utility so that they can load them into your meter. Only when the meter is loaded with these numbers can it communicate with your **EAGLE™**.

- Ethernet Area – This area in the middle of the label has two fields:
 - Local: the local URL, or Local Web Address of your **EAGLE™**, which is used to find it on your Local Area Network (LAN) using your web browser.
 - CloudID: the last 6 digits of the Ethernet MAC address of the device, which is used when registering the device with a Cloud Service.

Both of these numbers uniquely identify your device on the Internet Protocol (IP) network.

Web Viewer Function Buttons


The **EAGLE™** Web Viewer home page has three Function Buttons down the right side:

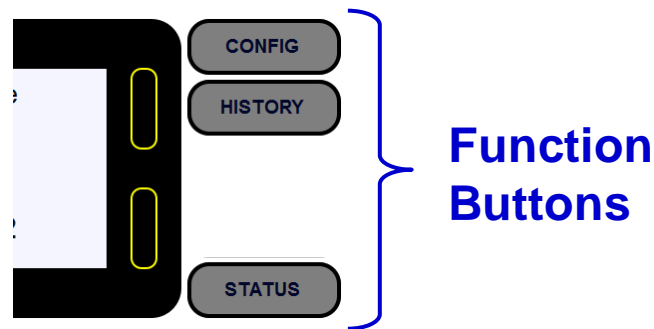

These buttons can be used to see more detailed information, such as historical data and status details, as well as allowing you to control configuration settings.


CONFIG Button

Clicking the CONFIG Function Button takes you to the “Basic Configuration” page. This page allows you to select your preferred language for the Web Viewer (only English is currently supported).

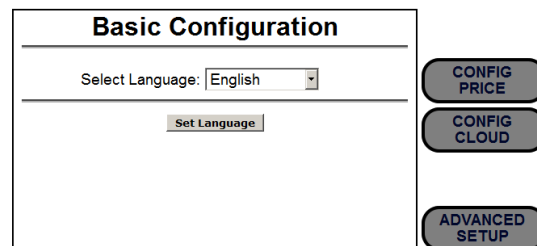


This page also has three Function Buttons down the right side:

- **CONFIG PRICE** – Brings up the “Price Configuration” page that allows you to manually set the electricity price, or set to the price found in the meter.

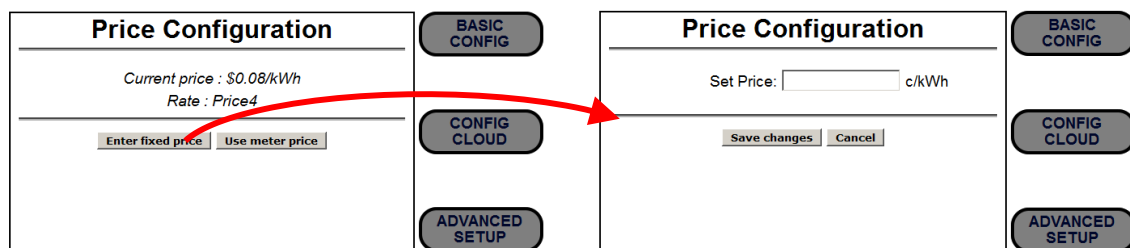

- **CONFIG CLOUD** – Goes to the “Cloud Configuration” page that lets you set up a connection to stream your meter data to a Cloud Service. See the **Connecting to a Cloud Service** section of this manual.
- **ADVANCED SETUP** – Takes you to the “Advanced Configuration” page that lets you set network configuration options. *Note that many of these options can adversely affect the operation of your device – use with caution!* You will see a warning before entering this page.

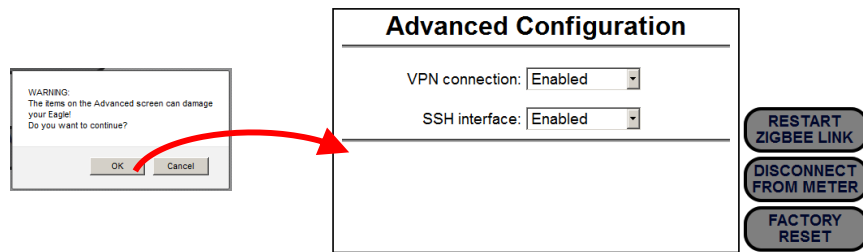

Your **EAGLE™** comes preconfigured to allow remote updates using Secure Shell (SSH) and Virtual Private Network (VPN). If you prefer not to allow external connections (including the Rainforest update server) to your device, you can disable VPN connections. Likewise, you can prevent anyone (including yourself) from logging into your device by disabling the SSH interface.


The “Advanced Configuration” page also has three Function Buttons down the right side:

- **RESTART ZIGBEE LINK** – Reboots just the ZigBee radio, without losing the connection to the smart meter.
- **DISCONNECT FROM METER** – Resets the ZigBee radio link to the smart meter, and terminates the connection. The meter will not talk to the **EAGLE™** until it is re-provisioned, as described in Step 2 of the **Quick Setup** section of this manual. This function can also be used to move the **EAGLE™** to a different meter.
- **FACTORY RESET** – Reboots the **EAGLE™**, which terminates the meter connection, clears all of the history data, and sets all options to original factory settings.

HISTORY Button

Clicking the HISTORY Function Button takes you to a page that shows you a graph of historical data.

You can choose the type of data -- either historical consumption (kWh) or demand samples (kW) – and the time period (last hour/day/week/year) over which the data is shown.

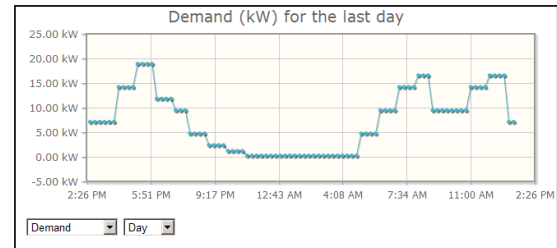

STATUS Button

Clicking the STATUS Function Button takes you to the “Status Page 1” page. This page shows you detailed information about your **EAGLE™**. Clicking the STATUS PAGE 2 Function Button in the upper right corner brings up the “Status Page 2” page, which displays important information about the network, the meter, and the Cloud host.

Status Page 1		
Device	MAC ID	0x00158d00001aba28
	Install Code	0x1791e62fc4c30e73
	Link Key	0x5613675c7b483dc1bf0c0ffe3eaeedb
Version	Hardware	3.1.1
	Firmware	1.4.17 (4810)
	Date Code	20120923ABCDEFGH
Link	Channel	32
	Signal Strength	100


STATUS
PAGE 2

Status Page 2		
Meter	MAC ID	0x000781000083e0c7
	Type	electric
	Nickname	unknown
Network	PAN ID	0x000781000083e0c7
	Status	Connected
Cloud	Host	unknown
	Enabled?	unknown

STATUS
PAGE 1

Connecting to a Cloud Service

To set up a connection to the Cloud Service of your choice, click the CONFIG button in the upper left of the Web Viewer home page. This will display the “Basic Configuration” page. Then click on the “CONFIG CLOUD” button to get to the “Cloud Configuration” page.

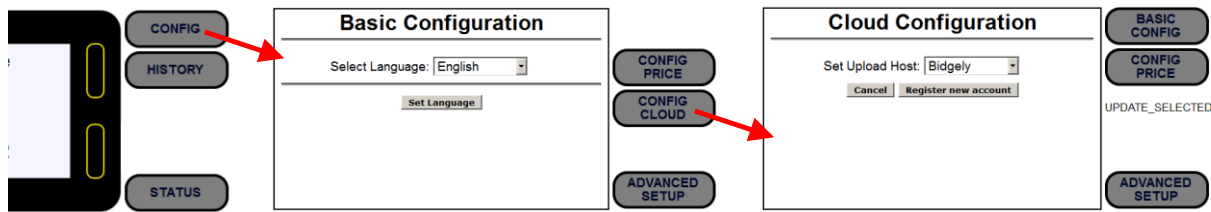

Now you can select the Cloud Service you want from the drop-down menu for “Set Upload Host”. To register your selection, click the “Register new account” button.

To complete your connection to the Cloud Service, you will have to set up an account with the Cloud Service, and you will have to indicate that data will be coming from a Rainforest **EAGLE™** device. You will also have to provide your **EAGLE™** Cloud ID. This is a 6-digit number that can be found in the Ethernet area in the middle of the Information Label that is on the underside of your **EAGLE™**.




In the following sections you will find detailed directions for connecting to specific Cloud Services.

Connecting to Bidgely

Set up the EAGLE™ upload server

- 1) From the Web Viewer home page, click on the “CONFIG” button in the upper left corner to get to the “Basic Configuration” page.
- 2) Click on the “CONFIG CLOUD” button to get to the “Cloud Configuration” page.
- 3) Select “Bidgely” from the drop-down menu for “Set Upload Host”.
- 4) Click the “Register new account” button.

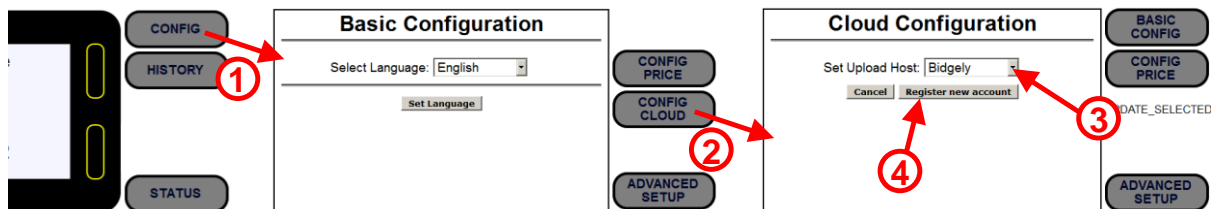


Get a Bidgely account

- 1) Open another window in your web browser and go to bidgely.com. Click on 'sign up' at the top right of the page:




You will see the “How to Get Started” page.

 - 2) Click on the blue “Sign Up >” button
- 3) Fill in the form on the “User account” page and click the “Create new account” button at the bottom on the right.

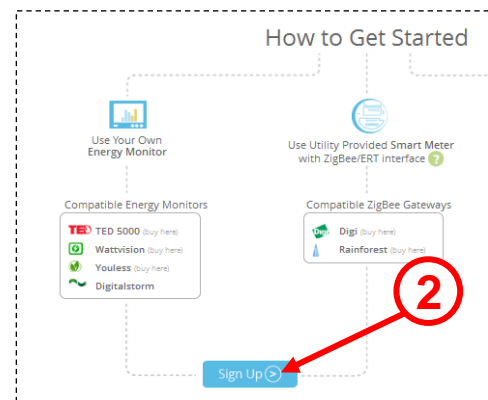

You should be automatically sent to the “Energy Monitor Set Up” page.

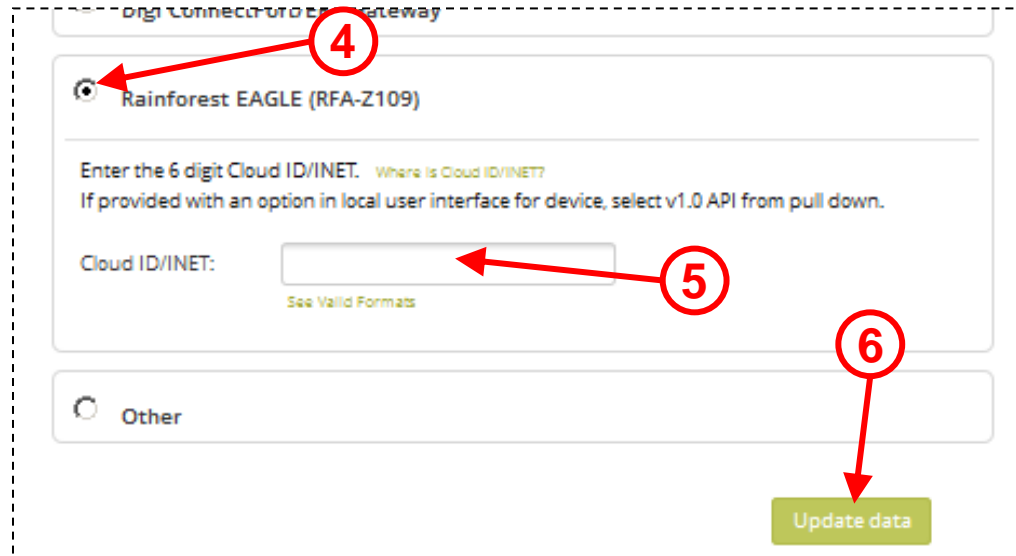

- 4) Select “Rainforest EAGLE (RFA-Z109)”
- 5) In the “Cloud ID/INET” field, enter: the 6-digit Cloud ID found on the Information Label on the underside of the **EAGLE™**.
- 6) Click “Update Info”
- 7) You will see a dialog box appear that asks you to test your connection. Click “OK”. Notice that a “Test Connection” button appears at the bottom of the page.
- 8) Click the “Test Connection” button.
- 9) You will see a dialog box indicating that the connection between your Bidgely account and your **EAGLE™** is being tested. It may take a few minutes to get a GOOD result.

View your Bidgely data


Click the small grey pie graph at the top right of the Bidgely page to see your Energy Dashboard.



Connecting to Wattvision

Set up the EAGLE™ upload server

- 1) From the Web Viewer home page, click on the “CONFIG” button in the upper left corner to get to the “Basic Configuration” page.
- 2) Click on the “CONFIG CLOUD” button to get to the “Cloud Configuration” page.
- 3) Select “Wattvision” from the drop-down menu for “Set Upload Host”.
- 4) Click the “Register new account” button.

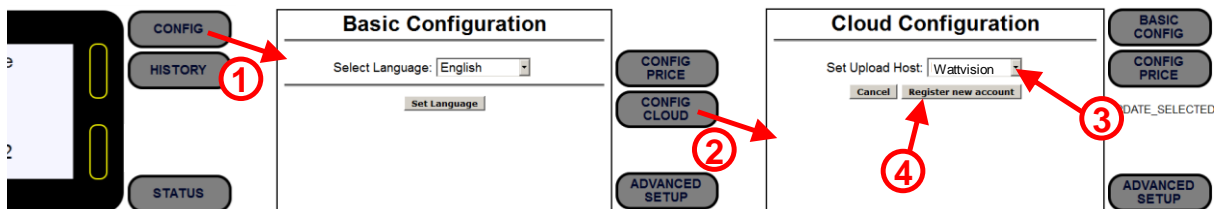


Get a Wattvision account


Note that Wattvision uses your Google account for sign in. If you do not have a Google account, go to the Google home page (www.google.com), and click the “Sign in” button in the top right corner. Then click the red “SIGN UP” button in the top right corner, and follow the directions.

- 10) Open another window in your web browser and go to www.wattvision.com/partners/rainforest.

 
Click on the big green 'Sign in to Wattvision' button at the bottom of the page:

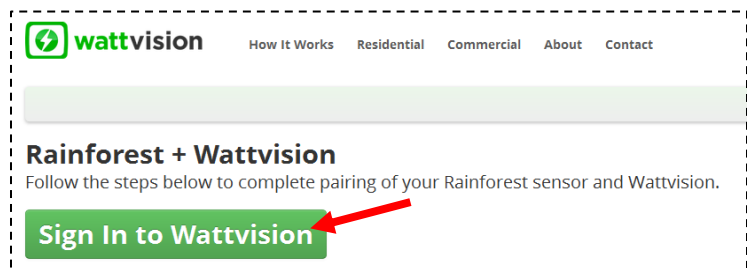

 - 11) You will see the Google sign in page. Enter your email and password and click the blue “Sign in” button.

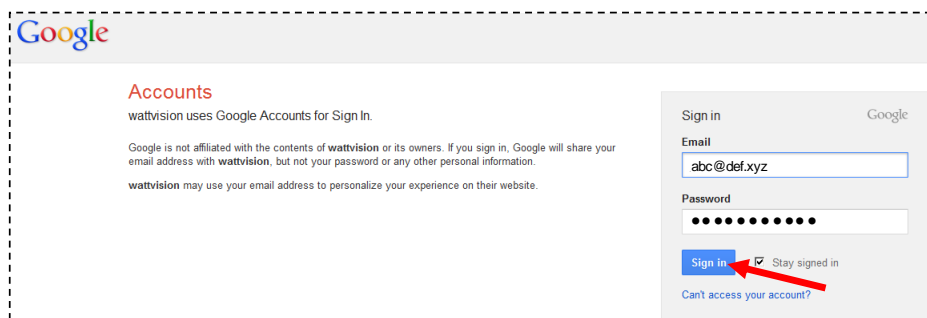


- 12) After you sign in, Google will ask you to allow Wattvision to connect to your account:

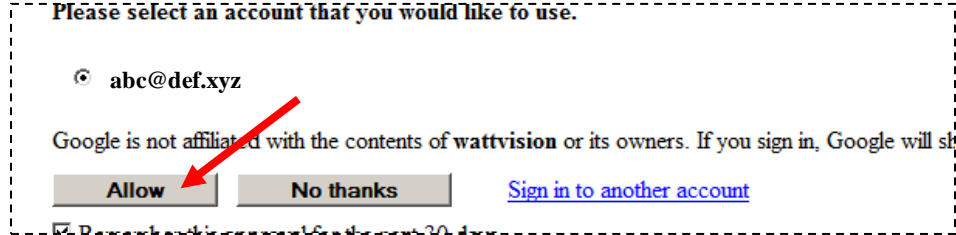


Click the "Allow" button.

 13) You will now be returned to the Wattvision site:

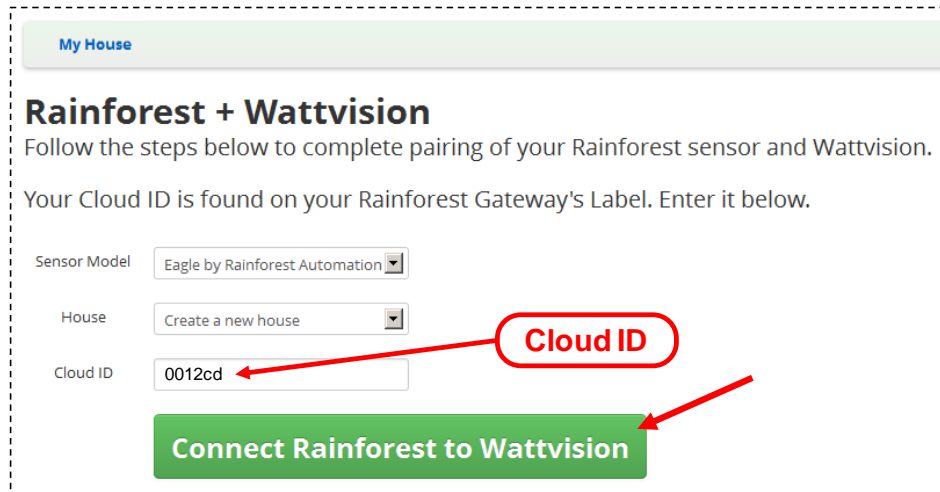


 In the "Cloud ID" field, enter: the 6-digit Cloud ID found on the Information Label on the underside of the **EAGLE™**. Then click the big green "Connect Rainforest to Wattvision" button. You should then see the "My House" screen:

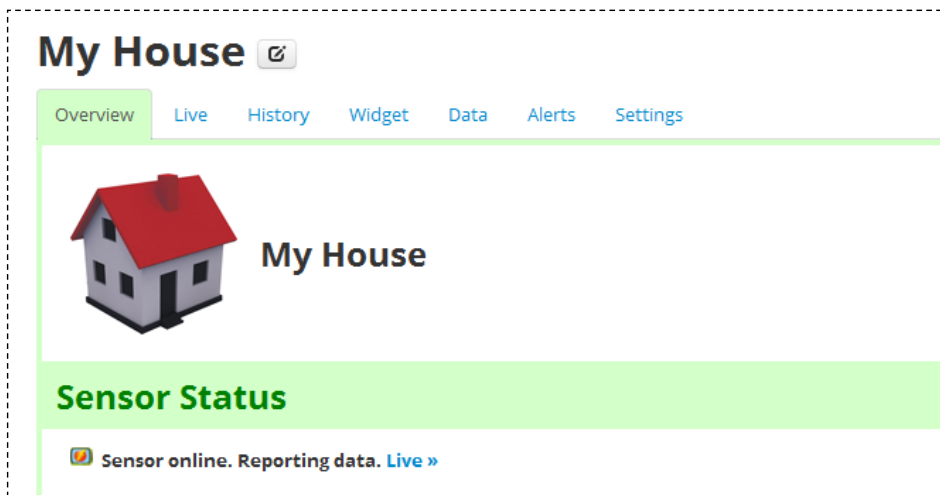

View your Wattvision data

 Click the “Live” tab in the “My House” screen to see your near real time data:

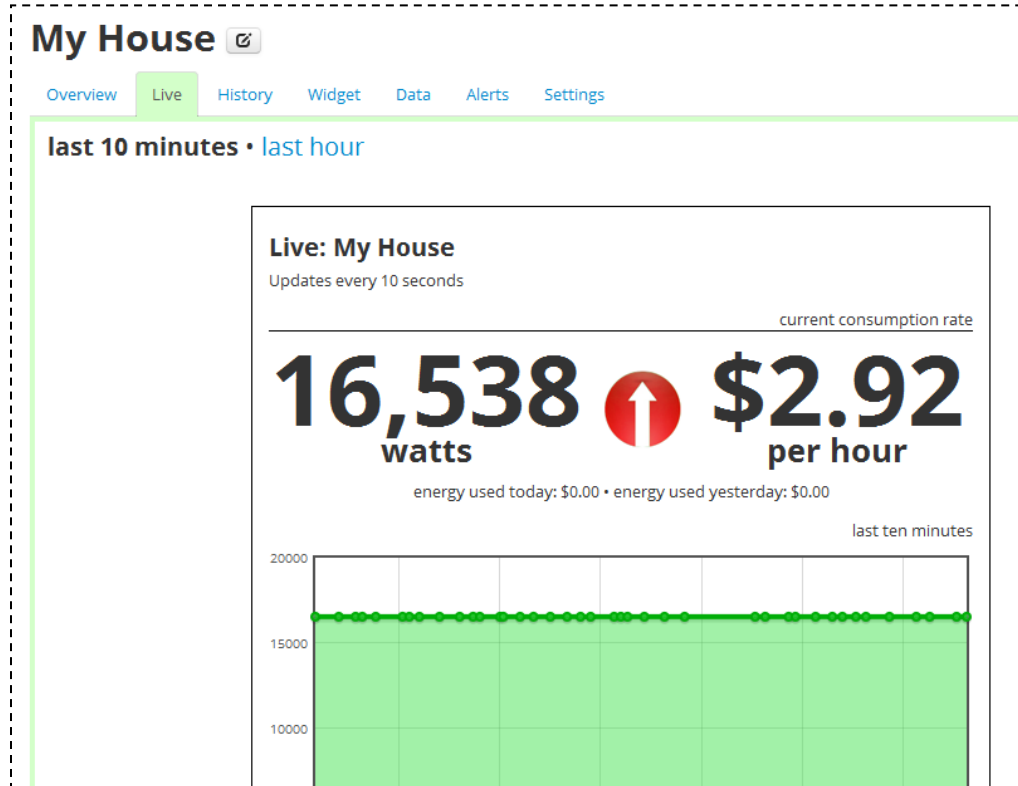

Troubleshooting Guide

Symptom: Your web browser cannot find the **EAGLE™**; the Web Viewer home page does not come up.

- a. Check that the **EAGLE™** power light is on. If not, make sure the power cord is plugged in firmly in the back, and the adapter is plugged into the wall outlet (you can also try another outlet).
- b. Check that the **EAGLE™** Ethernet light is on continuously, and is not flashing. If the light is not on, ensure that the Ethernet cable is plugged in solidly to both the router and the **EAGLE™**. Check that router is turned on and that the light on router port indicates that the **EAGLE™** is connected. If the **EAGLE™** Ethernet light is flashing, this means that the **EAGLE™** did not get an IP address from the router. Make sure that the **EAGLE™** is connected to a router, and not just a switch. Try unplugging the power cord of your **EAGLE™**, and plugging it back in again after 10 seconds. This will reset your **EAGLE™**. Make sure the Ethernet light comes on and goes from flashing to always on.
- c. Make sure that your computer is plugged into the same router as the **EAGLE™**. If you are on a mobile device, make sure you are connected to the same WiFi network that the **EAGLE™** is plugged into.
- d. If you are not using an Apple computer, check that you have installed mDNS, or Bonjour for windows: <http://support.apple.com/kb/DL999>
- e. If none of the above work, find the IP address of the **EAGLE™** by logging into your router and locating the **EAGLE™** on the network. Entering this IP address into your browser will connect you to the **EAGLE™**.

Symptom: The Web Viewer home page just shows “Loading” and is unable to get data.

- a. Ensure that you have contacted your utility, and they have loaded your meter with your device information, and the meter is ready to communicate with the **EAGLE™**.
- b. Check that the **EAGLE™** ZigBee light is on continuously, and is not flashing. If the light is flashing, try moving the **EAGLE™** closer to the meter. If this does not cause the light to go from flashing to continuously on, then the **EAGLE™** may need to be disconnected from the meter and be re-provisioned by your utility.

Technical Support

Contact us at: www.rainforestautomation.com/support