

Printing System (K)

INSTRUCTION HANDBOOK

<Set-up Edition>

ALWAYS read this Instruction Handbook thoroughly before use. After reading, maintain it in good condition and keep it together with the Instruction Handbook for your copier.

Trademark Information

- Novell and NetWare are registered trademarks of Novell, Inc.
- IBM and IBM PC-AT are trademarks of International Business Machines Corporation.
- PowerPC is a trademark of International Business Machines Corporation of America and other corporations.
- Adobe and Acrobat are trademarks of Adobe Systems Incorporated.
- CompactFlash is a trademark of SanDisk Corporation.

All other company and product names contained in this Instruction Handbook are trademarks or registered trademarks of their respective companies. The designations TM and [®] will not be used in this handbook.

All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from the Publisher.

Legal Restriction On Copying

- It may be prohibited to copy copyrighted material without permission of the copyright owner.
- It is prohibited under any circumstances to copy domestic or foreign currencies.
- Copying other items may be prohibited.

IBM PROGRAM LICENSE AGREEMENT

THE DEVICE YOU HAVE PURCHASED CONTAINS ONE OR MORE SOFTWARE PROGRAMS ("PROGRAMS") WHICH BELONG TO INTERNATIONAL BUSINESS MACHINES CORPORATION ("IBM"). THIS DOCUMENT DEFINES THE TERMS AND CONDITIONS UNDER WHICH THE SOFTWARE IS BEING LICENSED TO YOU BY IBM. IF YOU DO NOT AGREE WITH THE TERMS AND CONDITIONS OF THIS LICENSE, THEN WITHIN 14 DAYS AFTER YOUR ACQUISITION OF THE DEVICE YOU MAY RETURN THE DEVICE FOR A FULL REFUND. IF YOU DO NOT SO RETURN THE DEVICE WITHIN THE 14 DAYS, THEN YOU WILL BE ASSUMED TO HAVE AGREED TO THESE TERMS AND CONDITIONS.

The Programs are licensed not sold. IBM, or the applicable IBM country organization, grants you a license for the Programs only in the country where you acquired the Programs. You obtain no rights other than those granted you under this license.

The term "Programs" means the original and all whole or partial copies of it, including modified copies or portions merged into other programs. IBM retains title to the Programs. IBM owns, or has licensed from the owner, copyrights in the Programs.

1 . License

Under this license, you may use the Programs only with the device on which they are installed and transfer possession of the Programs and the device to another party. If you transfer the Programs, you must transfer a copy of this license and any other documentation to the other party. Your license is then terminated. The other party agrees to these terms and conditions by its first use of the Program.

You may not:

- 1) use, copy, modify, merge, or transfer copies of the Program except as provided in this license;
- 2) reverse assemble or reverse compile the Program; or
- 3) sublicense, rent, lease, or assign the Program.

2. Limited Warranty

The Programs are provided "AS IS."

THERE ARE NO OTHER WARRANTIES COVERING THE PROGRAMS (OR CONDITIONS), EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Some jurisdictions do not allow the exclusion of implied warranties, so the above exclusion may not apply to you.

SUPPLEMENT TO AGREEMENT FOR SOFTWARE BUNDLING AND DISTRIBUTION FOR ALDC

3. Limitation of Remedies

IBM's entire liability under this license is the following;

- 1) For any claim (including fundamental breach), in any form, related in any way to this license, IBM's liability will be for actual damages only and will be limited to the greater of ;
 - a) the equivalent of U.S.\$25,000 in your local currency; or
 - b) IBM's then generally available license fee for the Program

This limitation will not apply to claims for bodily injury or damages to real or tangible personal property for which IBM is legally liable.

IBM will not be liable for any lost profits, lost savings, or any incidental damages or other economic consequential damages, even if IBM, or its authorized supplier, has been advised of the possibility of such damages. IBM will not be liable for any damages claimed by you based on any third party claim. This limitation of remedies also applies to any developer of Programs supplied to IBM. IBM's and the developer's limitations of remedies are not cumulative. Such developer is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions, so they may not apply to you.

4. General

You may terminate your license at any time. IBM may terminate your license if you fail to comply with the terms and conditions of this license. In either event, you must destroy all your copies of the Program. You are responsible for payment of any taxes, including personal property taxes, resulting from this license. Neither party may bring an action, regardless of form, more than two years after the cause of action arose. If you acquired the Program in the United States, this license is governed by the laws of the State of New York. If you acquired the Program in Canada, this license is governed by the laws of the Province of Ontario. Otherwise, this license is governed by the laws of the country in which you acquired the Program.

About this Instruction Handbook

This Instruction Handbook <Set-up Edition> is meant to be read when the Printer Board is installed in your copier and the copier is to be used mainly as a local printer. It contains explanations on set-up procedures for using the copier as a printer.

As the required set-up and configurations for the printer may differ depending upon the environment in use in the connected computer, please read those sections related to your specific computer environment and perform the appropriate set-up and configuration explained there.

This handbook should also be read and used together with the On-Line Manual that is on the included CD-ROM. That On-Line Manual contains explanations on printing, performing certain settings and configurations, and the procedures required at your computer.


When there is a reference in this Instruction Handbook to a **15 ppm copier**, it refers to those machine with a copy speed of 15 pages/minute (w/ digital indicator display) and when there is a reference to a **20 ppm copier**, it refers to those machine with a copy speed of 20 pages/minute (w/ full message display).

About the On-Line Manual


The On-Line Manual for this Instruction Handbook is a PDF (Portable Document Format) file and is located on the CD-ROM that is included with this product. The Adobe Acrobat Reader software is required in order to access the On-Line Manual. The installer for Adobe Acrobat Reader is also included on the CD-ROM so the software can be installed onto your hard disk from there.

Getting connected

When connecting the printer directly to your computer (with a parallel cable) ...

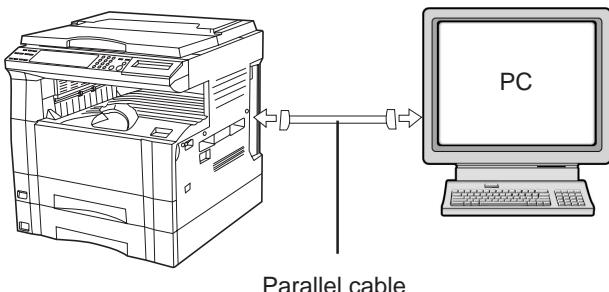


① Connecting the printer directly to your computer with a parallel cable **Page 5**

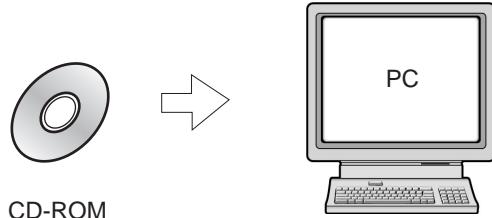


② Installing the printer driver into your computer... Refer to the On-Line Manual

When connecting the printer to a network (the optional Network Card must be installed)...


<Example connection>

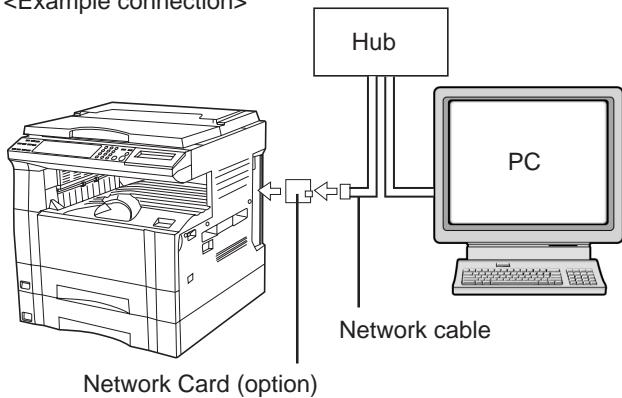

① Connecting a network cable (100Base-TX, 10Base-T, etc.) to the printer **Page 5**

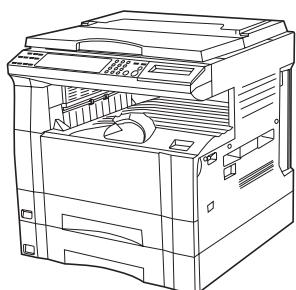

② Performing network (TCP/IP) settings at the printer **Page 6**

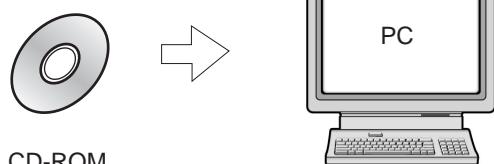

③ Installing the printer driver into your computer... Refer to the On-Line Manual

Table of contents

1. Preparations	2
1-1 Accessories	2
1-2 Required items	2
1-3 Name of parts (main body)	2
1-4 Name of parts (operation panel)	3
2. Set-up	5
2-1 Connecting the printer cable	5
2-2 Installing the software	5
2-3 Network (TCP/IP) settings	6
3. Troubleshooting	9
3-1 Canceling printing	9
3-2 When an error code or error messages appears...	10
3-3 Basic troubleshooting chart	14
4. Specifications	15

1. Preparations

1-1 Accessories


- 1 CD-ROM
- This Instruction Handbook

1-2 Required items

- Parallel cable

1-3 Name of parts (main body)


- ① Parallel interface connector
Connect a bi-directional parallel cable here.
- ② Memory Card (CompactFlash) slot
Insert the optional Memory Card (CompactFlash) here.
- ③ Main switch
Turn this switch ON (|) first, prior to using the printer. Always turn this switch OFF (O) when connecting the printer cable, etc.
- ④ Operation panel
Use when performing settings, etc., at the printer itself.

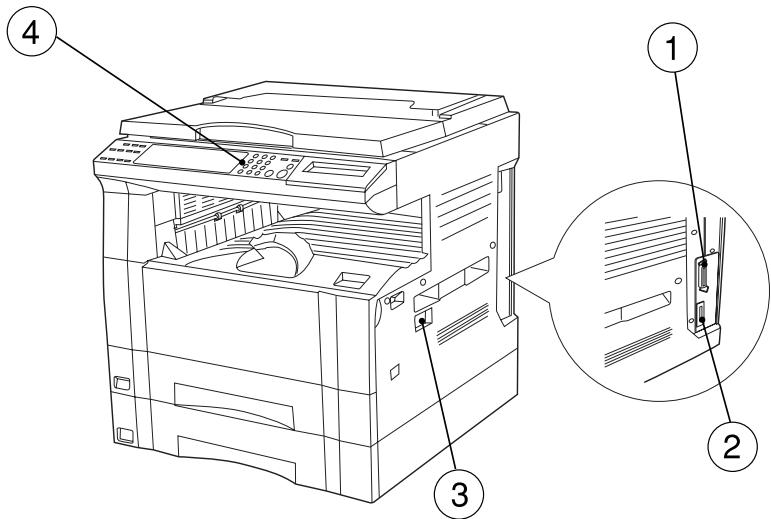


<This illustration above shows the 15 ppm copier complete with the Optional drawer.>

1-4 Name of parts (operation panel)

15 ppm copier - Inch specifications

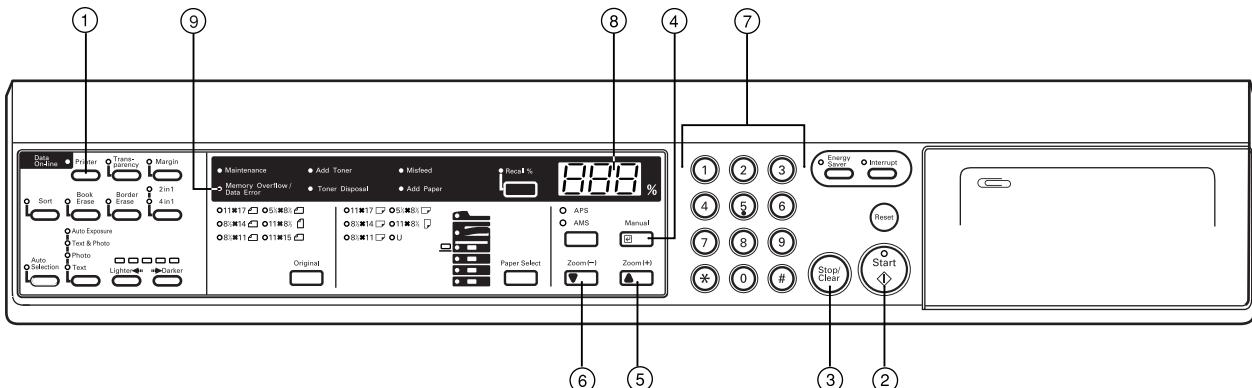

15 ppm copier - Metric specifications

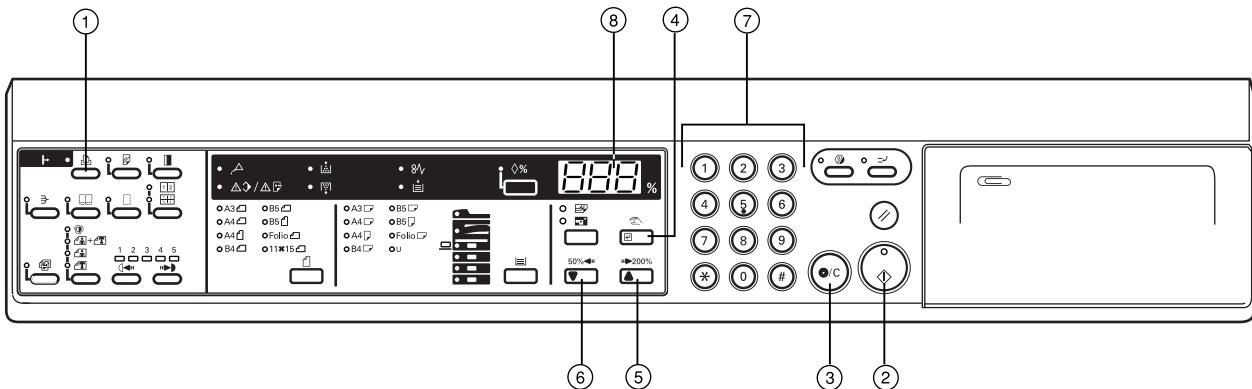

① Printer key

Press this key when you want to switch to the printer mode.

② Start [GO] key

Press this key when you want to restart printing, as well as when you want to initiate the operation for form feed. This key is also used to switch the printer on- and off-line. When the printer is on-line, the Data On-line indicator will be lit.

③ Stop/Clear [CANCEL] key

Press this key when you want to stop printing, when you want to cancel a setting midway through it, or when you want to clear an error message.

④ Enter [Manual] key

Press this key when you want to register a setting.

⑤ ▲ [Zoom (+)] key

Press this key when you want to scroll up among the various functions, settings, etc.

⑥ ▼ [Zoom (-)] key

Press this key when you want to scroll down among the various functions, settings, etc.

⑦ Numeric keys

Press these keys when you want to enter a desired value directly.

⑧ Copy quality/magnification display

Indicates the status of the printer as well as other settings. "P00" will be displayed when the machine is in the printer mode.

⑨ Memory Overflow / Data Error indicator

Flashes when a printing error has occurred. In this case, "Prt" and "E##" will alternately flash as well in the copy quality/magnification display. Press the Printer key and check the cause of the error.

For more detailed information, refer to "3-2 When an error code or error messages appears..." on page 10.


● The copy quality/magnification display in the printer mode

To enter the printer mode, press the Printer key. The indications that appear in the copy quality/magnification display when the machine is in the printer mode are explained in the table below.


Indication	Meaning
P00	This is the initial display when the machine is in the printer mode.
P##	Indicates the menu number of printer-related settings. The actual menu number of the selected setting will be displayed in place of the ##. For more detailed information, refer to the On-Line Manual.
Prt E##	"Prt" and "E##" will alternately flash when a printer error occurs. (The corresponding error number will be displayed in place of the ##.) For more detailed information, refer to "3-2 When an error code or error messages appears..." on page 10.
Prt #	"Prt" and a 2-digit number will alternately flash to indicate the current status of the printer. The meaning of the flashing numbers is as follows: 01: The printer is in the middle of a self test. This will appear when the main switch is turned ON () as well as when the printer is reset. 02: The printer is in the process of changing settings. Wait until it has completed the operation. 10: The printer is in the middle of processing data. 15: The printer is waiting for data. 20: A form feed time-out has occurred. 25: The printer is in the process of canceling data.

1. Preparations

20 ppm copier - Inch specifications

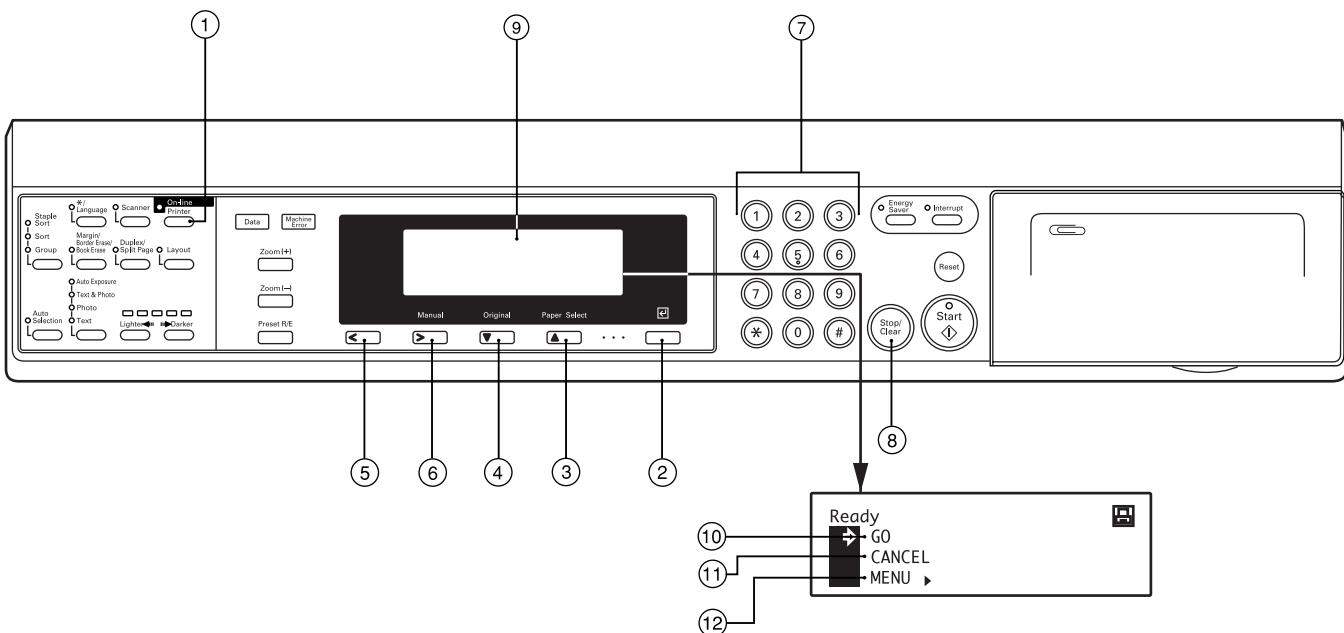

20 ppm copier - Metric specifications

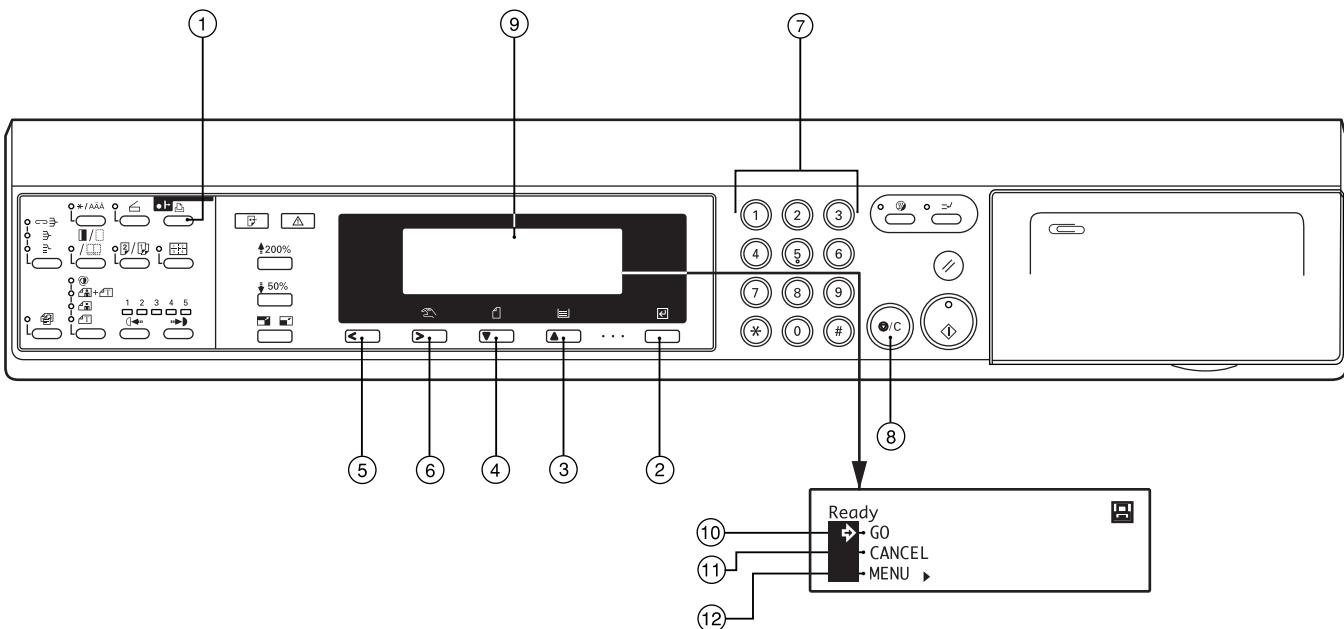

① Printer key

Press this key when you want to switch to the printer mode.

② Enter key

Press this key when you want to register a setting.

③ ▲ (Cursor) key

Press this key when you want to scroll up among the various functions, settings, etc.

④ ▼ (Cursor) key

Press this key when you want to scroll down among the various functions, settings, etc.

⑤ < (Cursor left) key

Press this key when you want to scroll left during a setting procedure.

⑥ > (Cursor right) key

Press this key when you want to scroll right during a setting procedure.

⑦ Numeric keys

Press these keys when you want to enter a desired value directly.

⑧ Stop/Clear key

Press this key when you want to cancel a setting midway through it.

⑨ Message display

Indicates the status of the printer as well as other settings.

● The message display in the printer mode

To enter the printer mode, press the Printer key. The message display will change to the corresponding display for the printer mode.

⑩ "GO" command

Select this command when you want to start printing, as well as when you want to initiate the operation for form feed. This command is also used to switch the printer on- and off-line. When the printer is on-line, the Data On-line indicator will be lit.

⑪ "CANCEL" command

Select this command when you want to stop printing or you want to clear an error message.

⑫ "MENU" command


Select this command when you want to change the printer default settings.

2. Set-up


2-1 Connecting the printer cable

CAUTION: ALWAYS turn the main switch to the printer OFF (O) BEFORE connecting the printer cable.

- 1 Turn the main switch located on the right side of the printer OFF (O) and then turn the power off to your computer as well.

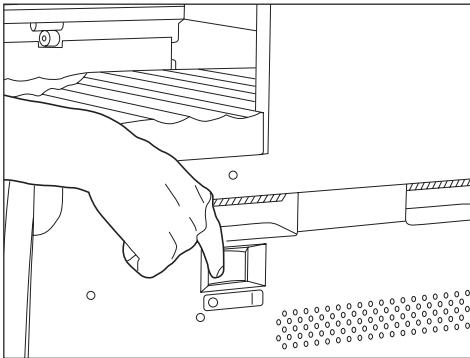


- 2 Connect the printer cable to the parallel interface connector located at the back of the right side of the printer.
* If the optional Network Card is installed in the printer, connect the printer cable (100BASE-TX, etc.) and perform the appropriate network settings. Refer to "2-3 Network (TCP/IP) settings" on page 6.

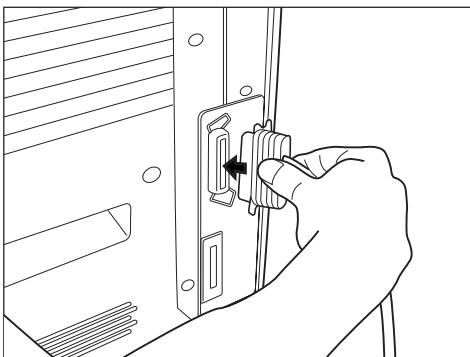

- 3 Connect the other end of the printer cable to the parallel interface connector on your computer.

- 4 Turn the main switch to the printer back ON (|).

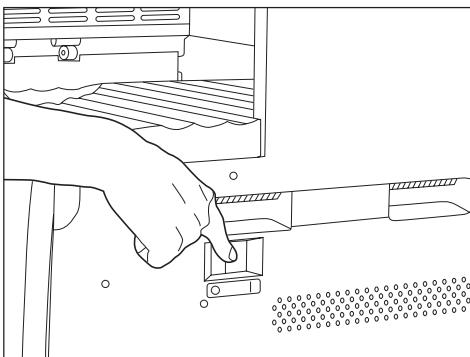

2-2 Installing the software

Perform the following procedure to install into your computer the printer driver and other software that is appropriate to the operating system in use in that computer. For information on installing the required software, refer to the On-Line Manual that is located on the CD-ROM that is included with this product.

2. Set-up

2-3 Network (TCP/IP) settings

When the optional Network Card is installed and this machine is to be used as a network printer, it is necessary to set the corresponding IP address for the printer.

* To perform this setting for the 20 ppm copier, proceed to page 7.

Notes

- The IP address that should be registered here will differ depending upon your network environment. Check with your network administrator BEFORE performing this setting.
- If you are using a DHCP server to automatically configure the IP address, this setting will not be necessary because DHCP server configuration is already enabled as the factory default setting.

<15 ppm copier>

* To cancel the setting midway through it, press the Stop/Clear key.

- 1** Press the Printer key. The machine will switch to the printer mode and "P00" will appear in the copy quality/magnification display.



- 2** Use the numeric keys to enter "2" then "3", and then press the Enter key. The display will change to "P23" (the TCP/IP ON/OFF setting).



- 3** Use the ▲ and ▼ keys to select "1" (On) and then press the Enter key. The selected setting will flash twice and will then be registered.



- 4** Use the numeric keys to enter "2" then "4", and then press the Enter key. The display will change to "P24" (the DHCP ON/OFF setting).



- 5** Use the ▲ and ▼ keys to select "2" (Off) and then press the Enter key. The selected setting will flash twice and will then be registered.



- 6** Use the numeric keys to enter "2" then "5", and then press the Enter key. The display will change to "P25" (the IP address setting).



- 7** The numeric keys will be used to enter the 12-digit IP address in blocks of 3 digits each:
First, enter the appropriate 3 digits for the first block and then press the Enter key. Repeat this same procedure for the 3 remaining blocks of the address (4 blocks in all). Once the Enter key is pressed for the final 3-digit block, the display will flash twice and the IP address will be registered.



- 8** Use the numeric keys to enter "2" then "6", and then press the Enter key. The display will change to "P26" (the Subnet Mask setting). Enter the 12-digit Subnet Mask using the same procedure that you did for entering the IP address.



- 9** Use the numeric keys to enter "2" then "7", and then press the Enter key. The display will change to "P27" (the Gateway address setting). Enter the 12-digit Gateway address using the same procedure that you did for entering the IP address.



- 10** Once you are finished making all of the network settings, press the Printer key. The machine will switch back to the copier mode.

<20 ppm copier>

* To cancel the setting midway through it, press the Stop/Clear key.

- 1** Press the Printer key. The machine will switch to the printer mode.



- 2** Use the ▲ and ▼ cursor keys to select "MENU" and then press the Enter key.




- 3** Use the ▲ and ▼ cursor keys to select "Interface" and then press the Enter key.



- 4** Use the ▲ and ▼ cursor keys to select "Option" and then press the Enter key.



- 5** Use the ▲ and ▼ cursor keys to select "TCP/IP" and then press the Enter key.

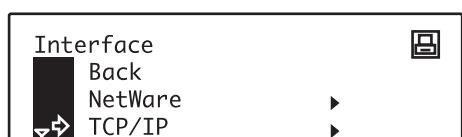


- 6** Use the ▲ and ▼ cursor keys to select "On" and then press the Enter key.




- 7** Use the ▲ and ▼ cursor keys to select "Change #" and then press the Enter key.




- 8** Use the ▲ and ▼ cursor keys to select "DHCP" and then press the Enter key.

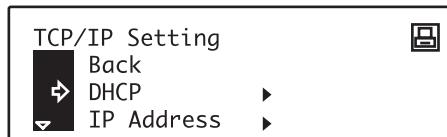

- 9** Use the ▲ and ▼ cursor keys to select "Off" and then press the Enter key.

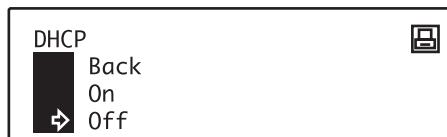

- 10** Use the ▲ and ▼ cursor keys to select "IP Address" and then press the Enter key.

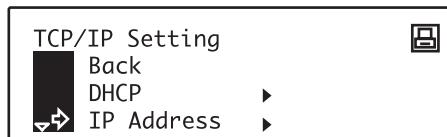

2. Set-up

- 11** The numeric keys will be used to enter the IP address:
First, enter the first 3 digits of the IP address.
* The numbers you enter will be input into the currently highlighted area of the display.

IP Address
0 . 0 . 0

- 12** Press the > cursor key and then enter the next 3 digits of the IP address into the next highlighted block.

IP Address
192 . 0 . 0

- 13** Continue the same procedure for the other 2 blocks and, once the IP address has been entered, press the Enter key.

IP Address
192 . 162 . 0 . 2

- 14** Use the ▲ and ▼ cursor keys to select "Subnet Mask" and then press the Enter key.

TCP/IP Setting
DHCP ►
IP Address ►
Subnet Mask ►

- 15** Repeat steps 11 - 13 in order to enter the Subnet Mask using the same procedure that you did for entering the IP address.

Subnet Mask
0 . 0 . 0

- 16** Use the ▲ and ▼ cursor keys to select "Gateway" and then press the Enter key.

TCP/IP Setting
IP Address ►
Subnet Mask ►
Gateway ►

- 17** Repeat steps 11 - 13 in order to enter the Gateway address using the same procedure that you did for entering the IP address.

Gateway
0 . 0 . 0

- 18** Once you are finished making all of the network settings, press the Printer key. The machine will switch back to the copier mode.

3. Troubleshooting

3-1 Canceling printing


Perform the following procedure when you want to stop printing or you want to clear data.

IMPORTANT!

- By performing this operation you will be canceling ALL print jobs that are currently waiting in the printer's memory to be printed.
- Always cancel the print job at your computer first. If the print job is not canceled in your computer, the data will be sent once again to the printer.

<15 ppm copier>

- 1 Press the Printer key. The machine will switch to the printer mode.

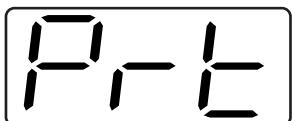

- 2 Press the Stop/Clear key. Printing will be canceled.



<20 ppm copier>

- 1 Press the Printer key. The machine will switch to the printer mode.



- 2 Use the ▲ and ▼ cursor keys to select "CANCEL".




- 3 Press the Enter key. Printing will be canceled.



3. Troubleshooting

3-2 When an error code or error messages appears...

If an error code or message appears on the operation panel, first check the following tables for cause of the trouble and then perform the corresponding procedure. For more detailed information, refer to the Instruction Handbook for your copier as well as the Instruction Handbook for any optional equipment that is installed in your machine.

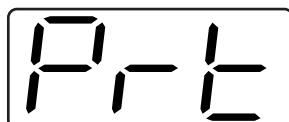

Error Indications in the 15 ppm copier

If "Prt" is displayed and the Memory Overflow / Data Error indicator flashes while the machine is in the copier mode, an error has occurred with the printer functions of this machine. Press the Printer key and check the cause of the error. Refer to the following tables for the corresponding error code and appropriate correction procedure.

Error code (15 ppm copier)	message (20 ppm copier)	Procedure
E01	—	A paper jam has occurred. Remove the jammed paper.
E02	—	The drawer has run out of paper or a paper jam has occurred. Add paper or remove the jammed paper, as appropriate.
E03	Set drawer. CLOSE PAPER DRAWER.	One or both drawers are not set properly in the printer. Insert both drawers securely.
E04	—	The size of paper selected for printing does not match the size of paper in the drawer. Replace the paper in the drawer with that of the correct size. * If you want to force-print onto the current size of paper, press the Start key. If you want to switch to and print from a different drawer, press the Paper Select key until the desired drawer is selected. If you want to cancel the printing operation completely, press the Stop/Clear key.
—	Add paper in drawer. XX size (XXX) ADD PAPER IN DRAWER. XX SIZE (XXX)	The size or type of paper selected for printing does not match the size or type of paper in the drawer. Replace the paper in the drawer with that of the correct size and type. 1. If you want to switch to and print from a different drawer, press the Paper Select key until the desired drawer is selected and then press the Enter key. 2. Otherwise, press the Printer key to switch to the printer mode. Three different commands will be displayed. Use the ▲ and ▼ keys to move the arrow ⇨ until it points to the desired command and then press the Enter key. GO: Force-prints onto the current size or type of paper. CANCEL: Cancels the printing operation completely. RESET: Resets the Printer Board. (Only printer functions will be reset.)
E05	Place paper in drawer. PLACE PAPER IN PAPER DRAWER.	The drawer has run out of paper. Add paper.
E06	—	One of the covers is open. Close the covers securely.
—	Out of staples. Add staples. STAPLER EMPTY. ADD STAPLES.	The finisher (option) has run out of staples. Refer to the Instruction Handbook for the finisher and replenish the staples.
—	Cannot staple different size	Stapling was not possible because there are different sizes of paper stacked together. Remove all paper from the finisher.
—	Cannot staple. CANNOT STAPLE.	The amount of paper stacked in the finisher has exceeded the acceptable capacity.

Error code (15 ppm copier)	Display message (20 ppm copier)	Procedure
—	No duplex from bypass	<p>Duplex printing is not possible using the Multi-Bypass. Select the drawer for paper feed.</p> <ol style="list-style-type: none"> If you want to switch to and print from a different drawer, press the Paper Select key until the desired drawer is selected and then press the Enter key. Otherwise, press the Printer key to switch to the printer mode. Three different commands will be displayed. Use the ▲ and ▼ keys to move the arrow → until it points to the desired command and then press the Enter key. <p>GO: Prints out on only one side of the paper. CANCEL: Cancels the printing operation completely. RESET: Resets the Printer Board. (Only printer functions will be reset.)</p>
—	Not from bypass to finisher	<p>The finisher cannot be used when paper is fed from the Multi-Bypass.</p> <ol style="list-style-type: none"> If you want to switch to and print from a different drawer, press the Paper Select key until the desired drawer is selected and then press the Enter key. Press the Printer key to switch to the printer mode. Three different commands will be displayed. Use the ▲ and ▼ keys to move the arrow → until it points to the desired command and then press the Enter key. <p>GO: Has the paper ejected into the Inner tray. CANCEL: Cancels the printing operation completely. RESET: Resets the Printer Board. (Only printer functions will be reset.)</p>
E23	<p>Paper capacity exceeded. Remove paper from Job sep.</p> <p>PAPER CAPACITY EXCEEDED. REMOVE PAPER FROM JOB SEP.</p>	<p>The amount of paper stacked in the optional Job Separator has exceeded the acceptable capacity. Remove all paper from the Job Separator.</p>
E25	<p>Paper capacity exceeded. Remove paper from Inner.</p> <p>PAPER CAPACITY EXCEEDED. REMOVE PAPER FROM INNER TRAY.</p>	<p><15 ppm copier> The amount of paper stacked in the Inner tray has exceeded the acceptable capacity. Remove all paper from the Inner tray and then press the Start key to continue printing.</p> <p>* If you want to cancel the printing operation completely, press the Stop/Clear key.</p> <p><20 ppm copier> The amount of paper stacked in the Inner tray has exceeded the acceptable capacity. Remove all paper from the Inner tray and then press the Printer key to switch to the printer mode. Next, select the "GO" command and then press the Enter key to continue printing.</p> <p>* If you want to cancel the printing operation completely, select the "CANCEL" command and then press the Enter key.</p>
E30	—	Trouble has occurred within the printer. Contact your service representative or an authorized service center.
E40	This code is not in use.	The department code you entered does not match the registered one. Check the department code that is registered in the printer driver.
—	<p>Exceeded print quantity limit.</p> <p>Exceeded pre-registered printing quantity.</p>	The amount of printing accomplished has exceeded the acceptable capacity as set under copy management. In order to print further, change the copy management setting in the printer.

3. Troubleshooting

Error code (15 ppm copier)	Display message (20 ppm copier)	Procedure
E60	RAM disk error Press GO	<p><15 ppm copier> A read- or write-error has occurred on the RAM disk. Press the Start key to erase the error indication.</p> <p><20 ppm copier> A read- or write-error has occurred on the RAM disk. First press the Printer key to switch to the printer mode. Next, select the “GO” command and then press the Enter key. The error indication will be erased.</p>
E70	MemoryCard err Press GO	<p><15 ppm copier> A read- or write-error has occurred in the Memory Card (CompactFlash). Press the Start key to erase the error indication.</p> <p><20 ppm copier> A read- or write-error has occurred in the Memory Card (CompactFlash). First press the Printer key to switch to the printer mode. Next, select the “GO” command and then press the Enter key. The error indication will be erased.</p>
E71	Memory Card err Insert again	<p>The Memory Card (CompactFlash) was removed during operation under the menu for printer-related settings. Reinsert the Memory Card.</p> <p>*BE SURE to turn the main switch OFF (O) BEFORE inserting the Memory Card.</p>
E72	Insert the same memory card	<p>The Memory Card (CompactFlash) could not be detected during an operation in which the printer was reading data from that card. Reinsert the Memory Card.</p> <p>*BE SURE to turn the main switch OFF (O) BEFORE inserting the Memory Card.</p>
E73	Format error Memory card	Initialization of the Memory Card (CompactFlash) currently inserted is necessary.
E80	Print overrun	<p><15 ppm copier> A data overrun error has occurred due to insufficient memory.</p> <ul style="list-style-type: none"> • If you want to force-continue the print job, press the Start key. If you want to cancel the printing operation completely, press the Stop/Clear key. • If “Auto Continue” (menu: P74) is turned “On” (setting: 1), the printing operation will be restarted automatically after the amount of time specified there. • Once this error message is displayed, “Page Protect” (menu: P42) will be turned “On” (setting: 1) automatically. <p><20 ppm copier> A data overrun error has occurred due to insufficient memory.</p> <ul style="list-style-type: none"> • Press the Printer key to switch to the printer mode. Three different commands will be displayed. Use the ▲ and ▼ keys to move the arrow → until it points to the desired command and then press the Enter key. GO: Continues printing. CANCEL: Cancels the printing operation completely. RESET: Resets the Printer Board. (Only printer functions will be reset.) • If “Auto Continue” is turned “On”, the printing operation will be restarted automatically after the amount of time specified there. • Once this error message is displayed, “Page Protect” will be turned “On” automatically.

Error code (15 ppm copier)	Display message (20 ppm copier)	Procedure
E82	Memory overflow	<p><15 ppm copier> The current print job could not be completed due to insufficient memory in the printer.</p> <ul style="list-style-type: none"> If you are using a RAM disk, reduce the size of the RAM disk. If this error occurs often, it is recommended that you install additional memory into the printer. For more detailed information on adding memory, contact your service representative or an authorized service center. If you want to force-continue the print job, press the Start key. The data that has already been processed will be printed out and the remaining portion of the print job will be printed onto the following page. If "Auto Continue" (menu: P74) is turned "On" (setting: 1), the printing operation will be restarted automatically after the amount of time specified there. <p><20 ppm copier> The current print job could not be completed due to insufficient memory in the printer.</p> <ul style="list-style-type: none"> Press the Printer key to switch to the printer mode. Three different commands will be displayed. Use the ▲ and ▼ keys to move the arrow ⇨ until it points to the desired command and then press the Enter key. GO: Continues printing. The data that has already been processed will be printed out and the remaining portion of the print job will be printed onto the following page. CANCEL: Cancels the printing operation completely. RESET: Resets the Printer Board. (Only printer functions will be reset.) <ul style="list-style-type: none"> If you are using a RAM disk, reduce the size of the RAM disk. If this error occurs often, it is recommended that you install additional memory into the printer. For more detailed information on adding memory, contact your service representative or an authorized service center. If "Auto Continue" is turned "On", the printing operation will be restarted automatically after the amount of time specified there.
E83	Interface occupied	The selected interface is currently in use. Wait for a while and then attempt the operation again.
EF1	checksum error	An error has been detected during operation. Turn the main switch to the printer OFF (O) and then back ON (I) again. If the same error message remains, contact your service representative or an authorized service center.
EF2	RAM error	An error has been detected during operation. Turn the main switch to the printer OFF (O) and then back ON (I) again. If the same error message remains, contact your service representative or an authorized service center.

3. Troubleshooting

3-3 Basic troubleshooting chart

If you experience trouble while you are using this machine as a printer, refer to the table below to perform minor adjustments. If trouble persists, contact your service representative or an authorized service center.

* For information in regard to general mechanical trouble with the machine, refer to the Instruction Handbook for your copier.

Problem	Check point	Procedure	Reference page
Nothing is printed out	Is the power cord loose?	Connect the power cord securely to a power source.	—
	Is the power ON () to the printer?	Turn the main switch to the printer ON ().	5
	Is the printer cable appropriate and is it connected properly?	Be sure to use a compliant printer cable and make sure it is connected properly.	5
	Did you connect the printer cable AFTER you turned the power to the printer ON?	Connect the printer cable BEFORE you turn the power to the printer ON.	—
	Is the printer off-line? (Is the Data On-line indicator out?)	Perform the appropriate procedure to light the Data On-line indicator and put the printer on-line. <15 ppm copier> ① Press the Printer key. The machine will switch to the printer mode. ② Press the Start key. ③ The Data On-line indicator will light. <20 ppm copier> ① Press the Printer key. The machine will switch to the printer mode. ② Select the "GO" command and then press the Enter key. ③ The Data On-line indicator will light.	3, 4
Text is not printed correctly	Is the printer cable appropriate and is it connected properly?	Be sure to use a compliant printer cable and make sure it is connected properly.	5
Print out is not correct	Is the setting configuration in your computer correct?	Confirm the settings in the printer driver as well as in the software application in use.	—

4. Specifications

CPU	PowerPC 405 (200MHz)
Printing Speed	15 ppm copier: WITHOUT Memory Board installed - 15 pages/min (A4 [8 1/2" x 11"]) WITH Memory Board installed - 18 pages/min (A4 [8 1/2" x 11"]) 20 ppm copier: 20 pages/min (A4 [8 1/2" x 11"])
Printing Resolution	With smoothing OFF: 600 dpi x 600 dpi With smoothing ON: interpolated 2400 dpi x 600 dpi
Maximum Printing Size	A3 (11" x 17")
RAM Memory Capacity	Installed: 8 MB Maximum: 136 MB (with an additional 128 MB of optional memory installed)
Interface	One parallel interface (IEEE 1284 compliant)
Installed Fonts	80

* Specifications are subject to change without notice.

Informations concernant les marques déposées

- Novell et NetWare sont des marques déposées de Novell, SA.
- IBM et IBM PC-AT sont des marques de fabrique d'International Business Machines Corporation.
- PowerPC est une marque de fabrique d'International Business Machines Corporation of America et autres sociétés commerciales.
- Adobe et Acrobat sont des marques de fabrique d'Adobe Systems Incorporated.
- CompactFlash est une marque de fabrique de SanDisk Corporation.

Tous les autres noms de sociétés ou produits contenus dans ce manuel d'instructions sont des marques de fabrique ou marques déposées de leurs compagnies respectives. Les indications TM et [®] ne seront pas utilisées dans ce manuel.

Au sujet de ce manuel d'instructions

Ce manuel d'instructions <Édition Installation> doit être lu lorsque la plaquette d'imprimante est installée dans votre copieur et que celui-ci sera utilisé principalement comme imprimante locale. Il contient des explications concernant les procédures d'installation pour utiliser le copieur comme imprimante.

Le réglage des paramètres et la configuration de l'imprimante étant différents selon la configuration matérielle utilisée par l'ordinateur connecté à l'appareil, veuillez lire les sections se rapportant spécifiquement à votre configuration matérielle et effectuer les réglages et la configuration décrits dans ces sections.

Ce manuel doit également être lu et utilisé conjointement avec le manuel d'assistance interactif correspondant des CD-ROM fournis. Ces manuels d'assistance interactifs contiennent des explications concernant l'imprimante, certains réglages et configurations, ainsi que les procédures devant être effectuées sur votre ordinateur.

Les mentions **copieur 15ppm** de ce manuel d'instructions se rapportent aux appareils ayant une vitesse de copie de 15 pages par minute (avec un affichage d'indications numériques) et les mentions **copieur 20ppm** se rapportent aux appareils ayant une vitesse de copie de 20 pages par minute (avec un affichage de messages complets).

A sujet du manuel d'assistance interactif

Le manuel d'assistance interactif de ce manuel d'instructions est enregistré sous forme de fichier FDC (format de document compatible) et se trouve dans le CD-ROM fourni avec ce produit. Le logiciel Adobe Acrobat Reader est nécessaire pour avoir accès au manuel d'assistance interactif. L'installateur d'Adobe Acrobat Reader est également fourni dans le CD-ROM permettant ainsi d'installer le logiciel dans votre disque dur.


Tous droits réservés. Aucune partie de ce document ne peut être reproduite ou transmise sous quelque forme ou par quelque moyen que ce soit, électronique ou mécanique, tel que par photocopie, enregistrement ou par un système quelconque de stockage et de rappel des informations, sans l'autorisation écrite de l'éditeur.

Limitations légales relatives à la copie


- Il peut être interdit de copier des documents protégés par des droits d'auteur sans l'autorisation préalable du propriétaire des droits d'auteur.
- Il est absolument interdit de copier des billets de banque nationaux ou étrangers.
- La copie d'autres articles peut être interdite.

Les connexions

Pour raccorder directement l'imprimante à votre ordinateur (avec un câble parallèle)...

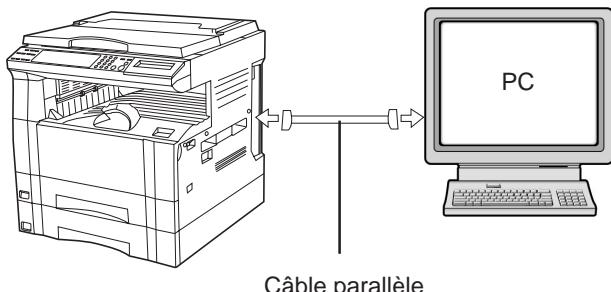


- ① Raccorder directement l'imprimante à votre ordinateur avec un câble parallèle **Page 5**

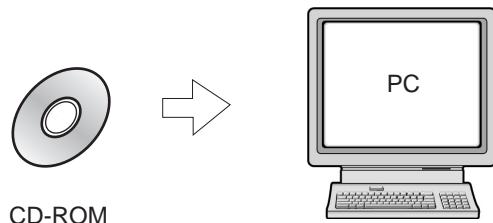


- ② Installation du pilote d'imprimante dans votre ordinateur Consultez le manuel d'assistance interactif

Pour raccorder l'imprimante à un réseau (la carte de réseau en option doit être installée)...


<Exemple de connexion>

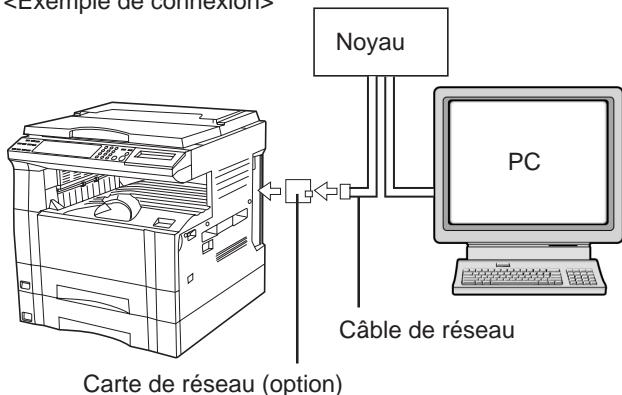

- ① Raccorder un câble de réseau (100Base-TX, 10Base-T, etc.) à l'imprimante **Page 5**

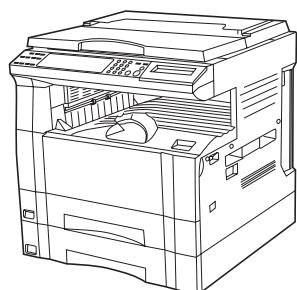

- ② Réglages de réseau (protocole TCP/IP) fonctionnant dans l'imprimante **Page 6**

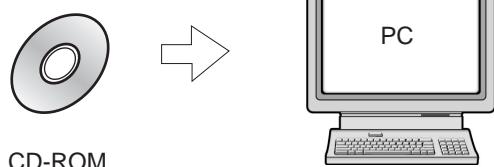

- ③ Installation du pilote d'imprimante dans votre ordinateur Consultez le manuel d'assistance interactif

Table des matières

1. Préparatifs	2
1-1 Accessoires	2
1-2 Pièces nécessaires	2
1-3 Nomenclature (corps principal)	2
1-4 Nomenclature (panneau de commande)	3
2. Installation	5
2-1 Raccordement du câble d'imprimante	5
2-2 Installation du logiciel	5
2-3 Réglages de réseau (protocole TCP/IP)	6
3. Dépannage	11
3-1 Annuler une impression	11
3-2 Lorsqu'un code d'erreur ou un message d'erreur apparaît...	12
3-3 Tableau de dépannage de base	16
4. Spécifications	17

1. Préparatifs

1-1 Accessoires


- 1 CD-ROM
- Ce manuel d'instructions

1-2 Pièces nécessaires

- Câble parallèle

1-3 Nomenclature (corps principal)


- ① Connecteur d'interface parallèle
Raccorder ici un câble parallèle bidirectionnel.
- ② Compartiment pour carte de mémoire (CompactFlash)
Insérer ici la carte de mémoire (CompactFlash) en option.
- ③ Interrupteur principal
Mettre d'abord cet interrupteur sur marche (|), avant d'utiliser l'imprimante. Toujours mettre cet interrupteur sur arrêt (O) lors du raccordement du câble d'imprimante, etc.
- ④ Panneau de commande
Utiliser ce panneau pour effectuer les réglages, etc., sur l'imprimante même.

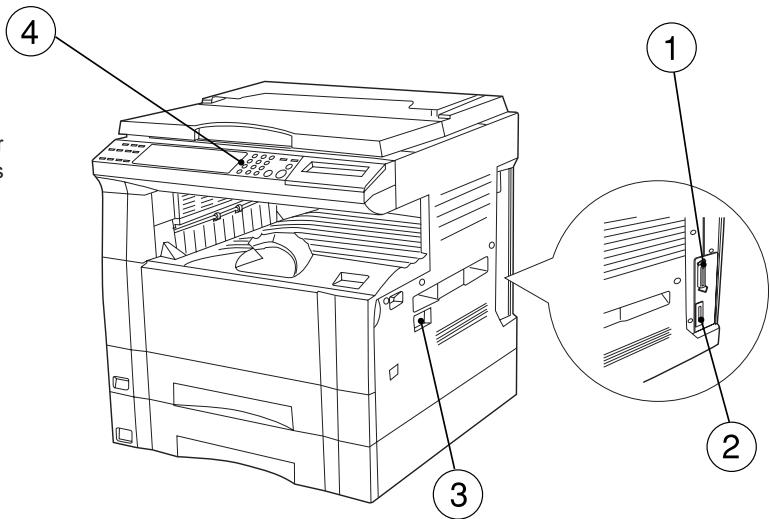


<L'illustration ci-dessus montre un copieur 15 ppm équipé du tiroir en option.>

1-4 Nomenclature (panneau de commande)

Copieur 15 ppm - Spécifications en pouces

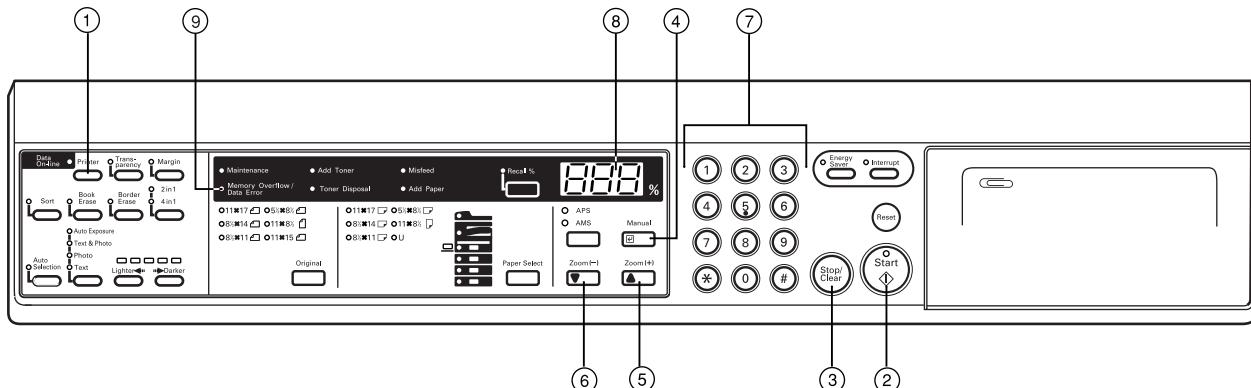

Copieur 20 ppm – Spécifications métriques

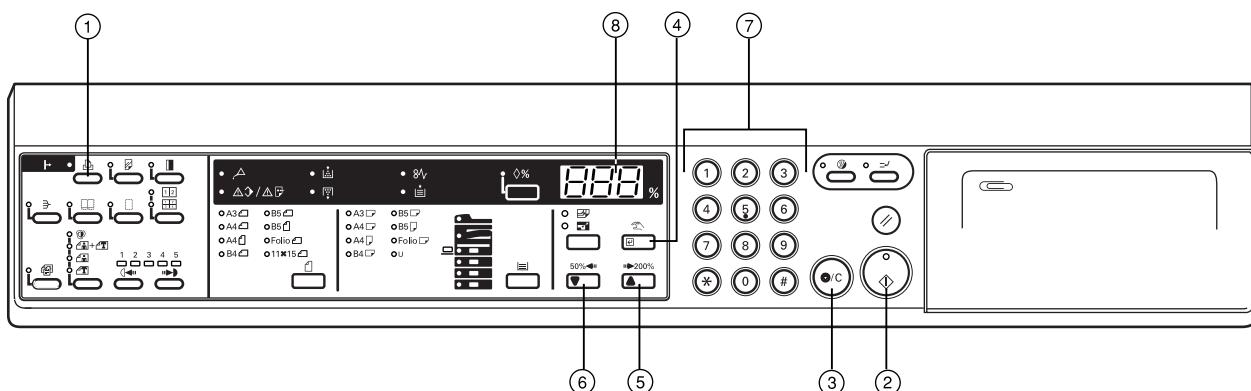

① Touche d'imprimante

Appuyer sur cette touche pour commuter au mode d'imprimante.

② Touche de démarrage [ACTION]

Appuyer sur cette touche pour redémarrer l'impression ainsi que pour engager l'opération d'alimentation de formulaire. Cette touche peut également être utilisée pour mettre l'imprimante en et hors ligne. L'indicateur de données en ligne sera allumé lorsque l'imprimante est en ligne.

③ Touche d'arrêt/annulation [ANNULEZ]

Appuyer sur cette touche pour arrêter l'impression, pour annuler un réglage en cours de procédure ou pour faire disparaître un message d'erreur.

④ Touche de validation [Manuel]

Appuyer sur cette touche pour enregistrer un réglage.

⑤ Touche ▲ [Zoom (+)]

Appuyer sur cette touche pour faire défiler vers le haut les diverses fonctions, réglages, etc.

⑥ Touche ▼ [Zoom (-)]

Appuyer sur cette touche pour faire défiler vers le bas les diverses fonctions, réglages, etc.

⑦ Touches numériques

Appuyer sur ces touches pour entrer la valeur désirée directement.

⑧ Affichage de qualité de copie/taux de reproduction

Indique l'état de l'imprimante ainsi que d'autres réglages. "P00" sera affiché lorsque l'appareil est en mode d'imprimante.

⑨ Indicateur de saturation de mémoire / erreur de données

Clignote lorsqu'une erreur survient pendant l'impression. Dans un tel cas, "Prt" et "E##" clignoteront également en alternance sur l'affichage de qualité de copie/taux de reproduction. Appuyer sur la touche d'imprimante et vérifier quelle est la cause de l'erreur. Pour plus de détails, voir "3-2 Lorsqu'un code d'erreur ou un message d'erreur apparaît..." à la page 12.


● Affichage de qualité de copie/taux de reproduction en mode d'imprimante

Pour entrer en mode d'imprimante, appuyer sur la touche d'imprimante. Les indications apparaissant sur l'affichage de qualité de copie/taux de reproduction lorsque l'appareil est en mode d'imprimante sont décrites dans le tableau ci-dessous.


Indication	Signification
P00	Ceci est l'affichage initial lorsque l'appareil est en mode d'imprimante.
P##	Indique le numéro de menu des réglages se rapportant à l'imprimante. Le numéro de menu du réglage actuellement sélectionné sera affiché à la place des symboles ##. Pour plus de détails, consulter le manuel d'assistance interactif.
Prt ↑ E##	"Prt" et "E##" clignoteront en alternance lorsqu'une erreur survient pendant l'impression. (Le numéro d'erreur correspondant sera affiché à la place des symboles ##.) Pour plus de détails, voir "3-2 Lorsqu'un code d'erreur ou un message d'erreur apparaît..." à la page 12.
Prt ↑ ##	"Prt" et un numéro à 2 chiffres clignoteront en alternance pour indiquer l'état actuel de l'imprimante. La signification des chiffres clignotant est comme suit: 01: L'imprimante est entrain d'effectuer un auto-diagnostic. Ceci apparaîtra lorsque l'interrupteur principal est mis sur marche () ainsi que lorsque l'imprimante est remise à zéro. 02: L'imprimante est entrain de modifier les réglages. Attendre la fin de l'opération. 10: L'imprimante est entrain de traiter des données. 15: L'imprimante est en attente de données. 20: Un temps d'arrêt est survenu durant l'alimentation de formulaires. 25: L'imprimante est entrain d'annuler des données.

1. Préparatifs

Copieur 15 ppm - Spécifications en pouces

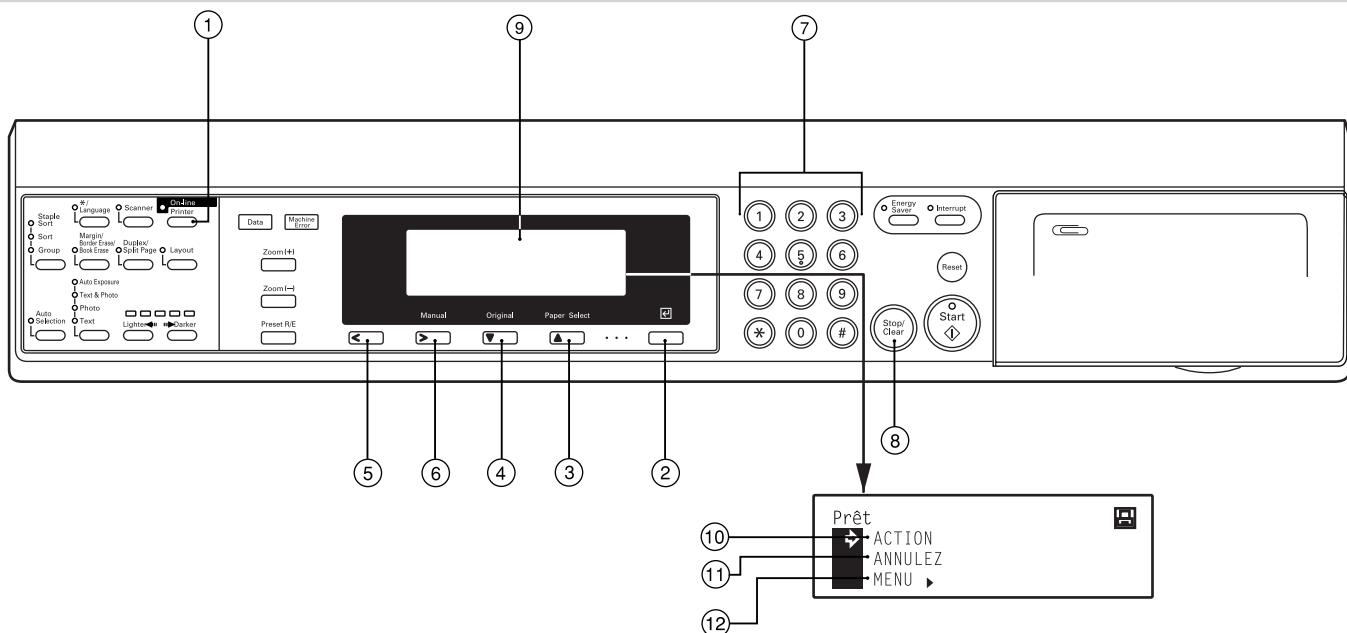

Copieur 20 ppm – Spécifications métriques

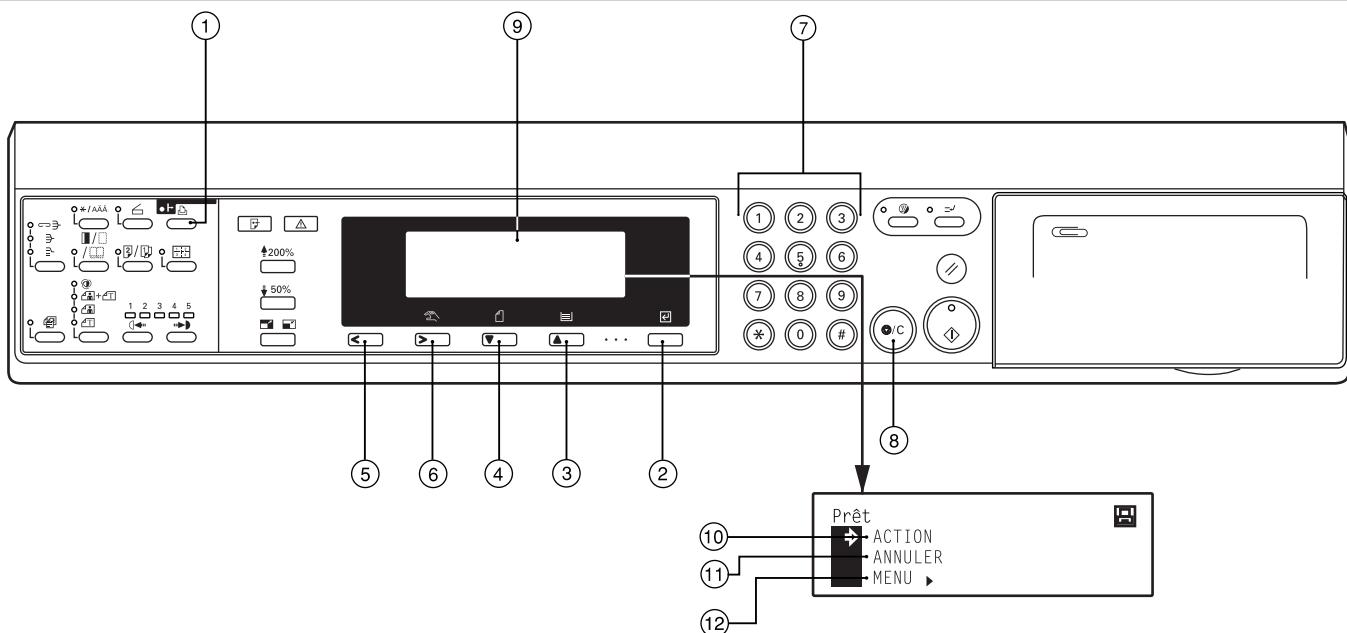

① Touche d'imprimante

Appuyer sur cette touche pour commuter au mode d'imprimante.

② Touche de validation

Appuyer sur cette touche pour enregistrer un réglage.

③ Touche ▲ (Curseur)

Appuyer sur cette touche pour faire défiler vers le haut les diverses fonctions, réglages, etc.

④ Touche ▼ (Curseur)

Appuyer sur cette touche pour faire défiler vers le bas les diverses fonctions, réglages, etc.

⑤ Touche > (Curseur gauche)

Appuyer sur cette touche pour se déplacer vers la gauche lors d'une procédure de réglage.

⑥ Touche < (Curseur droit)

Appuyer sur cette touche pour se déplacer vers la droite lors d'une procédure de réglage.

⑦ Touches numériques

Appuyer sur ces touches pour entrer la valeur désirée directement.

⑧ Touche d'arrêt/annulation

Appuyer sur cette touche pour annuler un réglage en cours de procédure.

⑨ Affichage de message

Indique l'état de l'imprimante ainsi que d'autres réglages.

● Affichage de message en mode d'imprimante

Pour entrer en mode d'imprimante, appuyer sur la touche d'imprimante. L'affichage de message changera et indiquera l'affichage correspondant au mode d'imprimante.

⑩ Commande "ACTION"

Sélectionner cette commande pour démarrer l'impression ainsi que pour engager l'opération d'alimentation de formulaire. Cette commande peut également être utilisée pour mettre l'imprimante en et hors ligne. L'indicateur de données en ligne sera allumé lorsque l'imprimante est en ligne.

⑪ Commande "ANNULEZ" ("ANNULER")

Sélectionner cette commande pour arrêter l'impression ou pour faire disparaître un message d'erreur.

⑫ Commande "MENU"


Sélectionner cette commande pour modifier les réglages par défaut de cette imprimante.

2. Installation

2-1 Raccordement du câble d'imprimante


ATTENTION: TOUJOURS mettre l'interrupteur principal de l'imprimante sur arrêt (O) AVANT de raccorder le câble d'imprimante.

- 1** Mettez l'interrupteur principal situé sur le côté droit de l'imprimante sur arrêt (O) puis mettez également votre ordinateur hors tension.

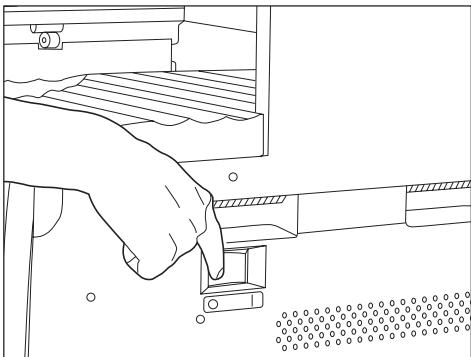


- 2** Connecter le câble d'imprimante au connecteur d'interface parallèle situé à l'arrière du côté droit de l'imprimante.

* Si la carte de réseau en option est installée dans l'imprimante, connecter le câble d'imprimante (100BASE-TX, etc.) et effectuer les réglages de réseau adéquats. Voir "2-3 Réglages de réseau (protocole TCP/IP)" à la page 6.

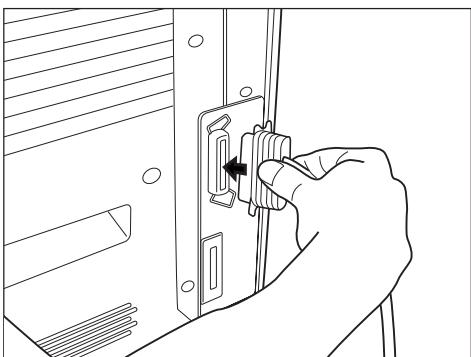

- 3** Connecter l'autre extrémité du câble d'imprimante au connecteur d'interface parallèle de votre ordinateur.

- 4** Remettre l'interrupteur principal de l'imprimante sur marche (|).

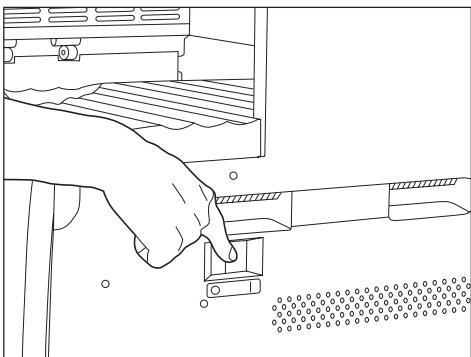

2-2 Installation du logiciel

Effectuez la procédure suivante pour installer, sur votre ordinateur, le pilote d'imprimante et autres logiciels nécessaires pour le système d'exploitation utilisé par cet ordinateur. Pour plus de détails concernant l'installation des logiciels nécessaires, consulter le manuel d'assistance interactif se trouvant dans le CD-ROM fourni avec ce produit.

2. Installation

2-3 Réglages de réseau (protocole TCP/IP)

Lorsque la carte de réseau en option est installée et que cet appareil doit être utilisé comme imprimante de réseau, l'adresse de protocole IP correspondante doit être réglée pour l'imprimante.

* Pour effectuer ce réglage pour un copieur 20 ppm, passer à la page 7.

Remarques

- L'adresse de protocole IP devant être enregistrée ici varie selon le contexte de réseau. Consultez votre administrateur de réseau AVANT d'effectuer ce réglage.
- Lorsqu'un serveur DHCP est utilisé et effectue automatiquement la configuration de l'adresse de protocole IP, ce réglage ne sera pas nécessaire car la configuration par serveur DHCP est déjà activée comme réglage par défaut en usine.

<Copieur 15 ppm>

* Pour annuler la procédure en cours, appuyer sur la touche d'arrêt/annulation.

- 1** Appuyer sur la touche d'imprimante. L'appareil commutera automatiquement au mode d'imprimante et "P00" apparaîtra automatiquement sur l'affichage de qualité de copie/taux de reproduction.



- 2** Entrer "2" puis "3" en utilisant les touches numériques, puis appuyer sur la touche de validation. L'affichage indiquera alors "P23" (réglage de marche/arrêt du protocole TCP/IP).



- 3** Sélectionner "1" (Actif) en utilisant les touches ▲ et ▼, puis appuyer sur la touche de validation. Le réglage sélectionné clignotera deux fois puis sera enregistré.



- 4** Entrer "2" puis "4" en utilisant les touches numériques, puis appuyer sur la touche de validation. L'affichage indiquera alors "P24" (réglage de marche/arrêt de DHCP).



- 5** Sélectionner "2" (Inactif) en utilisant les touches ▲ et ▼, puis appuyer sur la touche de validation. Le réglage sélectionné clignotera deux fois puis sera enregistré.



- 6** Entrer "2" puis "5" en utilisant les touches numériques, puis appuyer sur la touche de validation. L'affichage indiquera alors "P25" (réglage de l'adresse de protocole IP).



- 7** Les touches numériques seront utilisées pour entrer l'adresse de protocole IP à 12 chiffres en groupes de 3 chiffres: Tout d'abord, entrer les 3 chiffres du premier groupe et appuyer sur la touche de validation. Répéter cette procédure pour les 3 groupes restants de l'adresse (pour un total de 4 groupes). Une fois la touche de validation pressée pour le dernier groupe de 3 chiffres, l'affichage clignotera deux fois et l'adresse de protocole IP sera enregistrée.



- 8** Entrer "2" puis "6" en utilisant les touches numériques, puis appuyer sur la touche de validation. L'affichage indiquera alors "P26" (réglage de masque de sous-réseau). Entrer les 12 chiffres du masque de sous-réseau en suivant la même procédure que pour l'adresse de protocole IP.



- 9** Entrer "2" puis "7" en utilisant les touches numériques, puis appuyer sur la touche de validation. L'affichage indiquera alors "P27" (réglage de l'adresse de passerelle). Entrer les 12 chiffres de l'adresse de passerelle en suivant la même procédure que pour l'adresse de protocole IP.



- 10** Une fois tous les réglages de réseau terminés, appuyer sur la touche d'imprimante. L'appareil commutera de nouveau au mode de copieur.

<Copieur 20 ppm - Spécifications en pouces>

* Pour annuler la procédure en cours, appuyer sur la touche d'arrêt/annulation.

- 1** Appuyer sur la touche d'imprimante. L'appareil commutera automatiquement au mode d'imprimante.



- 2** Sélectionner "MENU" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 3** Sélectionner "Interface" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 4** Sélectionner "Option" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 5** Sélectionner "TCP/IP" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 6** Sélectionner "Actif" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 7** Sélectionner "Ch. Marge" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 8** Sélectionner "DHCP" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 9** Sélectionner "off" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 10** Sélectionner "IP Address" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



2. Installation

- 11** Les touches numériques seront utilisées pour entrer l'adresse de protocole IP:
Entrer tout d'abord les 3 premiers chiffres de l'adresse de protocole IP.
* Les chiffres étant entrés seront introduits dans la zone actuellement mise en évidence dans l'affichage.

IP Address 

0 . 0 . 0 . 0

- 16** Sélectionner "Gateway" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 12** Appuyer sur la touche de curseur >, puis entrer les 3 chiffres suivants de l'adresse de protocole IP dans la zone suivante mise en évidence.

IP Address 

192 . 0 . 0 . 0

- 17** Répéter les étapes 11 - 13 afin d'entrer l'adresse de passerelle en suivant la même procédure que pour l'adresse de protocole IP.

Gateway 

0 . 0 . 0 . 0

- 13** Répéter la même procédure pour les deux autres groupes, puis une fois l'entrée de l'adresse de protocole IP terminée, appuyer sur la touche de validation.

IP Address 

192 . 162 . 0 . 2

- 18** Une fois tous les réglages de réseau terminés, appuyer sur la touche d'imprimante. L'appareil commutera de nouveau au mode de copieur.

- 14** Sélectionner "Subnet Mask" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 15** Répéter les étapes 11 - 13 afin d'entrer le masque de sous-réseau en suivant la même procédure que pour l'adresse de protocole IP.

Subnet Mask 

0 . 0 . 0 . 0

<Copieur 20 ppm - Spécifications métriques>

* Pour annuler la procédure en cours, appuyer sur la touche d'arrêt/annulation.

- 1** Appuyer sur la touche d'imprimante. L'appareil commutera automatiquement au mode d'imprimante.



- 2** Sélectionner "MENU" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 3** Sélectionner "Interface" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 4** Sélectionner "Option" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 5** Sélectionner "TCP/IP" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 6** Sélectionner "Actif" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 7** Sélectionner "Changer #" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 8** Sélectionner "DHCP" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 9** Sélectionner "off" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 10** Sélectionner "IP Address" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



2. Installation

- 11** Les touches numériques seront utilisées pour entrer l'adresse de protocole IP:
Entrer tout d'abord les 3 premiers chiffres de l'adresse de protocole IP.
* Les chiffres étant entrés seront introduits dans la zone actuellement mise en évidence dans l'affichage.

IP Address

0 . 0 . 0

- 16** Sélectionner "Gateway" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 12** Appuyer sur la touche de curseur >, puis entrer les 3 chiffres suivants de l'adresse de protocole IP dans la zone suivante mise en évidence.

IP Address

192 . 0 . 0

- 17** Répéter les étapes 11 - 13 afin d'entrer l'adresse de passerelle en suivant la même procédure que pour l'adresse de protocole IP.

Gateway

0 . 0 . 0

- 13** Répéter la même procédure pour les deux autres groupes, puis une fois l'entrée de l'adresse de protocole IP terminée, appuyer sur la touche de validation.

IP Address

192 . 162 . 0 . 2

- 18** Une fois tous les réglages de réseau terminés, appuyer sur la touche d'imprimante. L'appareil commutera de nouveau au mode de copieur.

- 14** Sélectionner "Subnet Mask" en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation.



- 15** Répéter les étapes 11 - 13 afin d'entrer le masque de sous-réseau en suivant la même procédure que pour l'adresse de protocole IP.

Subnet Mask

0 . 0 . 0 . 0

3. Dépannage

3-1 Annuler une impression


Effectuer la procédure suivante pour arrêter l'impression ou pour annuler des données.

IMPORTANT!

- En effectuant cette procédure, vous effacerez TOUS les travaux d'impression étant actuellement en attente d'impression dans la mémoire de l'imprimante.
- Annulez toujours d'abord l'impression sur votre ordinateur. Si l'impression n'est pas annulée sur votre ordinateur, les données seront envoyées de nouveau dans l'imprimante.

<Copieur 15 ppm>

- 1** Appuyer sur la touche d'imprimante. L'appareil commutera au mode d'imprimante.

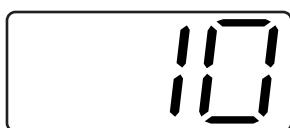

- 2** Appuyer sur la touche d'arrêt/annulation. L'impression sera annulée.



<Copieur 20 ppm - Spécifications en pouces>

- 1** Appuyer sur la touche d'imprimante. L'appareil commutera au mode d'imprimante.



- 2** Sélectionner "ANNULEZ" en utilisant les touches de curseur ▲ et ▼.



- 3** Appuyer sur la touche de validation. L'impression sera annulée.



<Copieur 20 ppm - Spécifications métriques>

- 1** Appuyer sur la touche d'imprimante. L'appareil commutera au mode d'imprimante.



- 2** Sélectionner "ANNULER" en utilisant les touches de curseur ▲ et ▼.



- 3** Appuyer sur la touche de validation. L'impression sera annulée.



3. Dépannage

3-2 Lorsqu'un code d'erreur ou un message d'erreur apparaît...

Lorsqu'un code ou un message d'erreur apparaît sur le panneau de commande, consultez tout d'abord les tableaux ci-dessous afin de déterminer la cause du problème. Pour plus de détails, consultez le manuel d'instructions de votre copieur ainsi que les manuels d'instructions des accessoires en option étant fixés sur votre appareil.



Indications d'erreur sur un copieur 15 ppm

Si "Prc" est affiché et que l'indicateur de saturation de mémoire / erreur de données clignote lorsque l'appareil est en mode de copieur, cela signifie qu'une erreur est survenue dans les fonctions d'imprimante de l'appareil.

Appuyer sur la touche d'imprimante et déterminer la cause de l'erreur. Reportez-vous aux tableaux ci-dessous pour le code d'erreur correspondant et effectuez la procédure de correction adéquate.

Code d'erreur (Copieur 15 ppm)	Message sur l'affichage (Copieur 20 ppm)	Procédure
E01	—	Il y a un bourrage de papier. Retirer le papier coincé.
E02	—	Le papier du tiroir est épuisé ou un bourrage de papier est survenu. Ajouter du papier ou retirer le papier coincé, selon le besoin.
E03	Règlez le tiroir. FERMER LE TIROIR PAPIER.	Un des tiroirs ou les deux tiroirs ne sont pas mis en place correctement. Insérer les deux tiroirs correctement.
E04	—	Le format du papier sélectionné pour l'impression ne correspond pas au format du papier mis en place dans le tiroir. Remplacer le papier du tiroir par du papier du format correct. * Pour imposer l'impression sur le format de papier actuel, appuyer sur la touche de démarrage. Pour sélectionner un autre tiroir et effectuer l'impression depuis ce tiroir, appuyer sur la touche de sélection de papier jusqu'à ce que le tiroir désiré soit sélectionné. Pour annuler toute l'opération d'impression, appuyer sur la touche d'arrêt/annulation.
—	Ajout. papier au tiroir. XX format (XXX) AJOUTER PAPIER DANS LE TIROIR. XX FORMAT (XXX)	Le format ou type du papier sélectionné pour l'impression ne correspond pas au format ou type du papier mis en place dans le tiroir. Remplacer le papier du tiroir par du papier du format et type correct. 1. Pour sélectionner un autre tiroir et effectuer l'impression depuis ce tiroir, appuyer sur la touche de sélection de papier jusqu'à ce que le tiroir désiré soit sélectionné puis appuyer sur la touche de validation. 2. Ou, appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. Trois commandes différentes seront alors affichées. Déplacer la flèche jusqu'à ce que celle-ci indique la commande désirée en utilisant les touches de curseur ▲ et ▼, puis appuyer sur la touche de validation. ACTION: Pour imposer l'impression sur le format ou le type de papier actuel. Annulez (Annuler): Pour annuler toute l'opération d'impression. Remise à zéro (Régler à nouveau): Pour remettre la plaque d'imprimante à zéro. (Seules les fonctions d'imprimante seront remises à zéro.)
E05	Placez papier dans le tiroir. AJOUTER PAPIER DANS TIROIR.	Le papier du tiroir est épuisé. Ajouter du papier.
E06	—	L'un des panneaux est ouvert. Refermer correctement les panneaux.
—	Agrafeuse vide. Veuillez ajouter des agrafes. AGRAFEUSE VIDE. VEUILLEZ METTRE DES AGRAFES.	Les agrafes du finisseur (en option) sont épuisées. Consulter le manuel d'instructions du finisseur et ajouter des agrafes.
—	Agraf. format impossible.	L'agrafage ne peut pas être effectué car des feuilles de papier de formats différents sont empilées ensemble. Retirer tout le papier du finisseur.
—	Agrafe impossible. IMPOSSIBLE D'AGRAFER.	La quantité de papier mis en place dans le finisseur dépasse la contenance autorisée. Retirer tout le papier du finisseur.

Code d'erreur (Copieur 15 ppm)	Message sur l'affichage (Copieur 20 ppm)	Procédure
—	R/V par bypass impossible	<p>L'impression recto-verso ne peut pas être effectuée avec le plateau d'alimentation manuelle. Sélectionner le tiroir pour alimenter le papier.</p> <ol style="list-style-type: none"> Pour sélectionner un autre tiroir et effectuer l'impression depuis ce tiroir, appuyer sur la touche de sélection de papier jusqu'à ce que le tiroir désiré soit sélectionné puis appuyer sur la touche de validation. Ou, appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. Trois commandes différentes seront alors affichées. Déplacer la flèche \Rightarrow jusqu'à ce que celle-ci indique la commande désirée en utilisant les touches de curseur \blacktriangle et \blacktriangledown, puis appuyer sur la touche de validation. <p>ACTION: Pour imprimer sur un seul côté du papier. Annulez (Annuler): Pour annuler toute l'opération d'impression. Remise à zéro (Régler à nouveau): Pour remettre la plaquette d'imprimante à zéro. (Seules les fonctions d'imprimante seront remises à zéro.)</p>
—	Err. form. boite aux lettres	<p>Le finisseur ne peut pas être utilisé lorsque le papier est alimenté depuis le plateau d'alimentation manuelle.</p> <ol style="list-style-type: none"> Pour sélectionner un autre tiroir et effectuer l'impression depuis ce tiroir, appuyer sur la touche de sélection de papier jusqu'à ce que le tiroir désiré soit sélectionné puis appuyer sur la touche de validation. Appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. Trois commandes différentes seront alors affichées. Déplacer la flèche \Rightarrow jusqu'à ce que celle-ci indique la commande désirée en utilisant les touches de curseur \blacktriangle et \blacktriangledown, puis appuyer sur la touche de validation. <p>ACTION: Pour que le papier soit éjecté dans le plateau interne. Annulez (Annuler): Pour annuler toute l'opération d'impression. Remise à zéro (Régler à nouveau): Pour remettre la plaquette d'imprimante à zéro. (Seules les fonctions d'imprimante seront remises à zéro.)</p>
E23	<p>Capacité en papier dépassée. Retirez papier du Sép. tr.</p> <p>CAPACITE EN PAPIER DEPASSEE. RETRIRER PAPIER DU SEP. TR.</p>	La quantité de papier mis en place dans le séparateur de travail en option dépasse la contenance autorisée. Retirer tout le papier du séparateur de travail.
E25	<p>Capacité en papier dépassée. Retirez papier du Interne.</p> <p>CAPACITE EN PAPIER DEPASSEE. RETRIRER PAPIER DU INTERNE.</p>	<p><Copieur 15 ppm> La quantité de papier mis en place dans le plateau interne dépasse la contenance autorisée. Retirer tout le papier du plateau interne et puis appuyer sur la touche de démarrage pour continuer l'impression. * Pour annuler toute l'opération d'impression, appuyer sur la touche d'arrêt/annulation.</p> <p><Copieur 20 ppm> La quantité de papier mis en place dans le plateau interne dépasse la contenance autorisée. Retirer tout le papier du plateau interne et puis appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. Sélectionner ensuite la commande "ACTION" et puis appuyer sur la touche de validation pour continuer l'impression. * Pour annuler toute l'opération d'impression, sélectionner la commande "Annulez" ("Annuler") puis appuyer sur la touche de validation.</p>
E30	—	Un problème est survenu à l'intérieur de l'imprimante. Adressez-vous à votre centre de service ou un centre de service agréé.
E40	<p>Code non utilisé. Ce code n'est pas valide.</p>	Le code de département ayant été entré ne correspond pas au code enregistré. Vérifier le code de département enregistré dans le pilote d'imprimante.
—	<p>Limite de quantité d'impression dépassée. Pre-enregistrement depasse quantite imprimée.</p>	Le volume d'impressions effectuées dépasse la limite autorisée déterminée par la gestion de copie. Pour continuer l'impression, modifier le réglage de gestion de copie de l'imprimante.

3. Dépannage

Code d'erreur (Copieur 15 ppm)	Message sur l'affichage (Copieur 20 ppm)	Procédure
E60	RAM DISQUE Err App. ACTION	<p><Copieur 15 ppm> Une erreur de lecture ou écriture est survenue dans le disque RAM. Appuyer sur la touche de démarrage pour faire disparaître l'indication d'erreur.</p> <p><Copieur 20 ppm> Une erreur de lecture ou écriture est survenue dans le disque RAM. Appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. L'indication d'erreur disparaîtra.</p>
E70	Carte Mém.Err App. ACTION Carte Mém.Err Appuyer ACTION	<p><Copieur 15 ppm> Une erreur de lecture ou écriture est survenue dans la carte de mémoire (CompactFlash). Appuyer sur la touche de démarrage pour faire disparaître l'indication d'erreur.</p> <p><Copieur 20 ppm> Une erreur de lecture ou écriture est survenue dans la carte de mémoire (CompactFlash). Appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. Sélectionner ensuite la commande "ACTION" puis appuyer sur la touche de validation. L'indication d'erreur disparaîtra.</p>
E71	Carte Mém.Erreur Insérez Carte Mém.Erreur Insérez	<p>La carte de mémoire (CompactFlash) a été retirée lors d'une opération dans le menu des réglages se rapportant à l'imprimante. Réinsérer la carte de mémoire. * TOUJOURS mettre l'interrupteur principal sur arrêt (O) AVANT d'insérer la carte de mémoire.</p>
E72	Insérez Carte Mém. Identique	<p>La carte de mémoire (CompactFlash) n'a pas pu être détectée lors d'une opération pendant laquelle l'imprimante devait lire des données de cette carte. Réinsérer la carte de mémoire. * TOUJOURS mettre l'interrupteur principal sur arrêt (O) AVANT d'insérer la carte de mémoire.</p>
E73	Erreur format Carte Mémoire	<p>L'initialisation de la carte de mémoire (CompactFlash) actuellement insérée doit être effectuée.</p>
E80	Erreur d'impression	<p><Copieur 15 ppm> Une erreur de dépassement de données est survenue car la mémoire ne suffit pas.</p> <ul style="list-style-type: none"> Pour imposer l'impression, appuyer sur la touche de démarrage. Pour annuler toute l'opération d'impression, appuyer sur la touche d'arrêt/annulation. Si la "Continuation automatique" (menu: P74) est réglée sur "Actif" (réglage: 1), l'opération d'impression sera automatiquement redémarrée après le laps de temps spécifié pour ce réglage. Lorsque ce message d'erreur apparaît, la "Protection de page" (menu: P42) sera automatiquement mise sur "Actif" (réglage: 1). <p><Copieur 20 ppm> Une erreur de dépassement de données est survenue car la mémoire ne suffit pas.</p> <ul style="list-style-type: none"> Appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. Trois commandes différentes seront alors affichées. Déplacer la flèche \Rightarrow jusqu'à ce que celle-ci indique la commande désirée en utilisant les touches de curseur \blacktriangle et \blacktriangledown, puis appuyer sur la touche de validation. ACTION: Pour continuer l'impression. Annulez (Annuler): Pour annuler toute l'opération d'impression. Remise à zéro (Régler à nouveau): Pour remettre la plaquette d'imprimante à zéro. (Seules les fonctions d'imprimante seront remises à zéro.) Si la "Continuation automatique" est réglée sur "On", l'opération d'impression sera automatiquement redémarrée après le laps de temps spécifié pour ce réglage. Lorsque ce message d'erreur apparaît, la "Protection de page" sera automatiquement mise sur "Actif".

Code d'erreur (Copieur 15 ppm)	Message sur l'affichage (Copieur 20 ppm)	Procédure
E82	<p>Débordement de mémoire</p> <p>Saturation de la mémoire</p>	<p><Copieur 15 ppm> Le travail d'impression en cours n'a pas pu être terminé car la mémoire de l'imprimante n'est pas suffisante.</p> <ul style="list-style-type: none"> • Si vous utilisez un disque RAM, diminuez le volume du disque RAM. Si cette erreur survient souvent, nous vous conseillons d'installer plus de mémoire dans l'imprimante. Pour plus de détails concernant l'ajout de mémoire, adressez-vous à votre centre de service ou un centre de service agréé. • Pour imposer l'impression, appuyer sur la touche de démarrage. Les données ayant déjà été traitées seront imprimées et le reste du travail d'impression sera imprimé sur la page suivante. • Si la "Continuation automatique" (menu: P74) est réglée sur "Actif" (réglage: 1), l'opération d'impression sera automatiquement redémarrée après le laps de temps spécifié pour ce réglage. <p><Copieur 20 ppm> Le travail d'impression en cours n'a pas pu être terminé car la mémoire de l'imprimante n'est pas suffisante.</p> <ul style="list-style-type: none"> • Appuyer tout d'abord sur la touche d'imprimante pour commuter au mode d'imprimante. Trois commandes différentes seront alors affichées. Déplacer la flèche \Rightarrow jusqu'à ce que celle-ci indique la commande désirée en utilisant les touches de curseur \blacktriangle et \blacktriangledown, puis appuyer sur la touche de validation. ACTION: Pour continuer l'impression. Les données ayant déjà été traitées seront imprimées et le reste du travail d'impression sera imprimé sur la page suivante. Annuler (Annuler): Pour annuler toute l'opération d'impression. Remise à zéro (Régler à nouveau): Pour remettre la plaquette d'imprimante à zéro. (Seules les fonctions d'imprimante seront remises à zéro.) • Si vous utilisez un disque RAM, diminuez le volume du disque RAM. Si cette erreur survient souvent, nous vous conseillons d'installer plus de mémoire dans l'imprimante. Pour plus de détails concernant l'ajout de mémoire, adressez-vous à votre centre de service ou un centre de service agréé. • Si la "Continuation automatique" est réglée sur "Actif", l'opération d'impression sera automatiquement redémarrée après le laps de temps spécifié pour ce réglage.
E83	Interface occupée	L'interface sélectionnée est actuellement occupée. Attendre un moment puis tenter de nouveau l'opération.
EF1	checksum error	Une erreur a été détectée pendant l'opération. Mettre l'interrupteur principal de l'imprimante sur arrêt (O) puis de nouveau sur marche (). Si le message d'erreur ne disparaît pas, adressez-vous à votre centre de service ou un centre de service agréé.
EF2	RAM error	Une erreur a été détectée pendant l'opération. Mettre l'interrupteur principal de l'imprimante sur arrêt (O) puis de nouveau sur marche (). Si le message d'erreur ne disparaît pas, adressez-vous à votre centre de service ou un centre de service agréé.

3. Dépannage

3-3 Tableau de dépannage de base

En cas de problème survenant lors de l'utilisation de cet appareil comme imprimante, consultez le tableau ci-dessous pour effectuer des réglages mineurs. Si le problème ne disparaît pas, adressez-vous à votre centre de service ou un centre de service agréé.

* Pour plus de détails concernant les problèmes mécaniques d'ordre général pouvant survenir dans votre appareil, consultez le manuel d'instructions de votre copieur.

Problème	Point à vérifier	Procédure	Page de référence
Rien n'est imprimé	Le cordon d'alimentation est-il lâche?	Branchez correctement le cordon d'alimentation sur une prise de secteur.	—
	L'imprimante est-elle sous tension ()?	Mettez l'interrupteur principal de l'imprimante sur marche ().	5
	Le câble d'imprimante est-il un câble adéquat et est-il raccordé correctement?	Utilisez toujours un câble d'imprimante adéquat et veillez à le raccorder correctement.	5
	Avez-vous connecté le câble d'imprimante APRÈS avoir mis l'imprimante sous tension?	Connectez le câble d'imprimante AVANT de mettre l'imprimante sous tension.	—
	L'imprimante est-elle hors ligne? (L'indicateur de données en ligne est-il éteint?)	Effectuer la procédure nécessaire pour que l'indicateur en ligne s'allume et connecter l'imprimante. <Copieur 15 ppm> ① Appuyer sur la touche d'imprimante. L'appareil commutera au mode d'imprimante. ② Appuyer sur la touche de démarrage. ③ L'indicateur de données en ligne s'allumera. ----- <Copieur 20 ppm> ① Appuyer sur la touche d'imprimante. L'appareil commutera au mode d'imprimante. ② Sélectionner la commande "ACTION" puis appuyer sur la touche de validation. ③ L'indicateur de données en ligne s'allumera.	3, 4
Le texte n'est pas imprimé correctement	Le câble d'imprimante est-il un câble adéquat et est-il raccordé correctement?	Utilisez toujours un câble d'imprimante adéquat et veillez à le raccorder correctement.	5
L'impression n'est pas correcte	La configuration des paramètres de votre ordinateur est-elle correcte?	Vérifier les paramètres du pilote d'imprimante et du logiciel utilisé. Raccorder le câble d'imprimante correctement.	—

4. Spécifications

Processeur central	PowerPC 405 (200 MHz)
Vitesse d'impression	Copieur 15 ppm:Lorsque la carte de mémoire N'est PAS installée - 15 pages/min (A4 [8 1/2" x 11"]) Lorsque la carte de mémoire EST installée - 18 pages/min (A4 [8 1/2" x 11"]) Copieur 20 ppm:20 pages/min (A4 [8 1/2" x 11"])
Résolution d'impression	Lorsque le lissage est désactivé: 600 ppp x 600 ppp Lorsque le lissage est activé: 2400 ppp x 600 ppp avec interpolation
Format d'impression maximal	A3 (11" x 17")
Capacité de mémoire RAM	Installée: 8 Mo Maximale: 136 Mo (avec 128 Mo supplémentaires de mémoire en option installés)
Interface	Une interface parallèle (de standard IEEE 1284)
Police installées	80

* Les spécifications peuvent faire l'objet de modifications sans préavis.

Información de marcas

- Novell y NetWare son marcas registradas por Novell, Inc.
- IBM e IBM PC-AT son marcas comerciales de International Business Machines Corporation.
- PowerPC es una marca comercial de International Business Machines Corporation de América y otras empresas.
- Adobe y Acrobat son marcas comerciales de Adobe Systems Incorporated.
- CompactFlash es una marca comercial de SanDisk Corporation.

Todos los demás nombres de empresas y productos mencionados en este manual de instrucciones son marcas comerciales o marcas registradas de sus respectivas empresas. Por lo tanto no emplearemos las denominaciones TM y [®] a lo largo de este manual.

Prefacio del manual de instrucciones

Este manual de instrucciones <Edición de instalación> se debe leer para la instalación de la tarjeta de impresora en su copiadora, utilizando principalmente la copiadora como impresora local. Incluye descripciones sobre los procedimientos de instalación para el uso de la copiadora como impresora.

Los ajustes y configuraciones de la impresora pueden ser diferentes según el sistema y programas utilizados en su computadora conectada; lea las secciones correspondientes a su computadora específica y realice los ajustes y configuraciones descritos en ellas.

Este manual también debe leerse y utilizarse junto con el manual en línea apropiado, es decir, en el que está en los CD-ROM incluidos. Ese manual en línea describe la impresión, realización de determinados ajustes y configuraciones y los procedimientos necesarios en su computadora.

Cuando este manual de instrucciones se refiere a una **copiadora de 15 ppm**, significa que tiene una velocidad de copiado de 15 páginas/minuto (con pantalla indicadora digital) y cuando se refiere a una **copiadora de 20 ppm**, se significa que tiene una velocidad de copiado de 20 páginas/minuto (con pantalla de mensajes completa).

Acerca del manual en línea

El manual en línea para este manual de instrucciones es un archivo PDF (Portable Document Format o formato de documentos portátil) en el CD-ROM incluido con este producto. Es necesario poseer el programa Adobe Acrobat Reader para tener acceso al manual en línea. El instalador para el Adobe Acrobat Reader también está en el CD-ROM y éste permite instalar el programa en su disco duro.


Todos los derechos reservados. Ninguna parte de este material puede reproducirse o transmitirse de ninguna forma o por ningún medio, electrónico o mecánico, incluyendo el fotocopiado, grabación o en un sistema de memorización y recuperación de la información, sin permiso por escrito del propietario de los derechos de autor.

Limitación legal sobre el copiado


- Puede estar prohibido la copia del material protegido por los derechos de autor, si no se ha recibido el permiso del propietario de los derechos de autor.
- Está prohibido en todo caso la copia de billetes nacionales o extranjeros.
- Puede estar prohibida la copia de otros elementos.

Conexión

Cuando conecte la impresora directamente a su computadora (con un cable paralelo)...

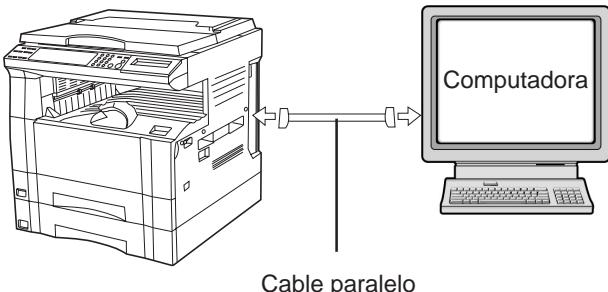


- ① Conexión de la impresora directamente a su computadora con el cable paralelo **Página 5**

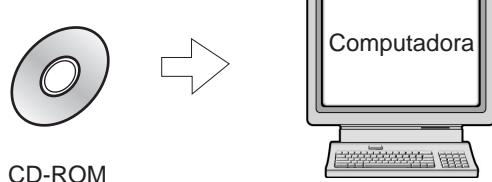


- ② Instalación del controlador de impresora en su computadora
..... Consulte el manual en línea

Cuando conecte la impresora a una red (deberá instalarse la tarjeta de red opcional)...


<Ejemplo de conexión>

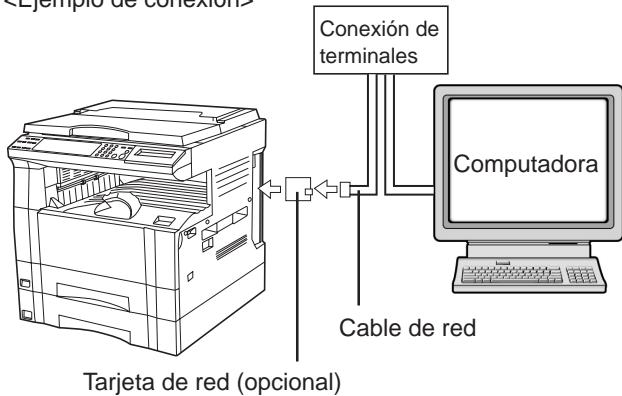

- ① Conexión de un cable de red (100Base-TX, 10Base-T, etc.) a la impresora **Página 5**

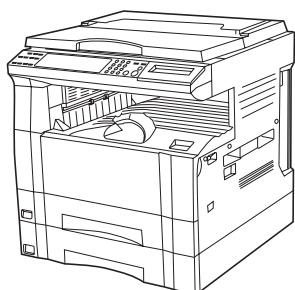

- ② Realización de los ajustes de red (TCP/IP) en la impresora ... **Página 6**

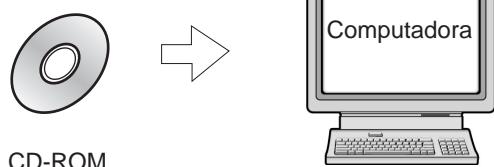

- ③ Instalación del controlador de impresora en su computadora
..... Consulte el manual en línea

Índice

1. Preparación	2
1-1 Accesorios	2
1-2 Ítems requeridos	2
1-3 Nombres de las piezas (cuerpo principal)	2
1-4 Nombres de las piezas (tablero de controles)	3
2. Instalación	5
2-1 Conexión del cable de impresora	5
2-2 Instalación de los programas	5
2-3 Ajustes de red (TCP/IP)	6
3. Localización de averías	11
3-1 Cancelación de la impresión	11
3-2 Cuando aparece un código de error o un mensaje de error...	12
3-3 Cuadro de localización de averías básicas	16
4. Especificaciones	17

1. Preparación

1-1 Accesorios


- 1 CD-ROM
- Este manual de instrucciones

1-2 Items requeridos

- Cable paralelo

1-3 Nombres de las piezas (cuerpo principal)


- ① Conector de interface en paralelo
Conecte un cable paralelo bidireccional aquí.
- ② Ranura para tarjeta de memoria (CompactFlash)
Inserte aquí la tarjeta de memoria (CompactFlash) opcional.
- ③ Interruptor principal
Primero conecte (|) este interruptor antes de utilizar la impresora. Desconecte (O) siempre este interruptor cuando conecte el cable de impresora, etc.
- ④ Tablero de controles
Utilice para hacer ajustes, etc., en la impresora en sí.

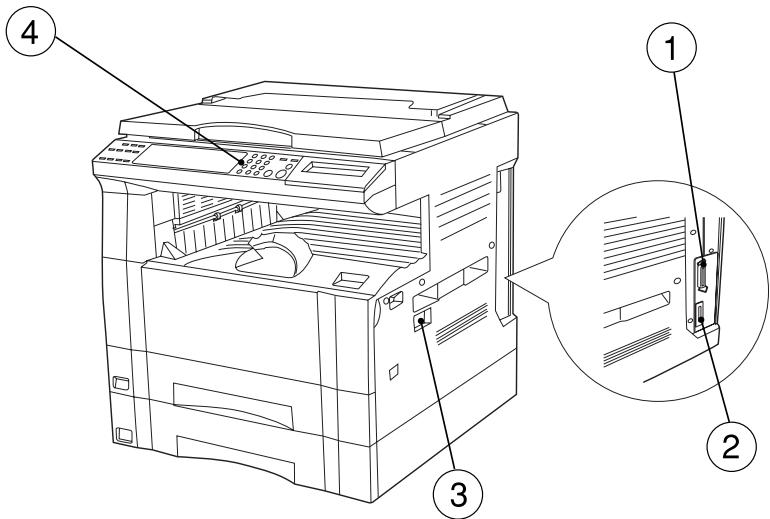


<Esta figura anterior muestra la copiadora de 15 ppm completa con cajón opcional.>

1-4 Nombres de las piezas (tablero de controles)

Copiadora de 15 ppm – Especificaciones de pulgadas

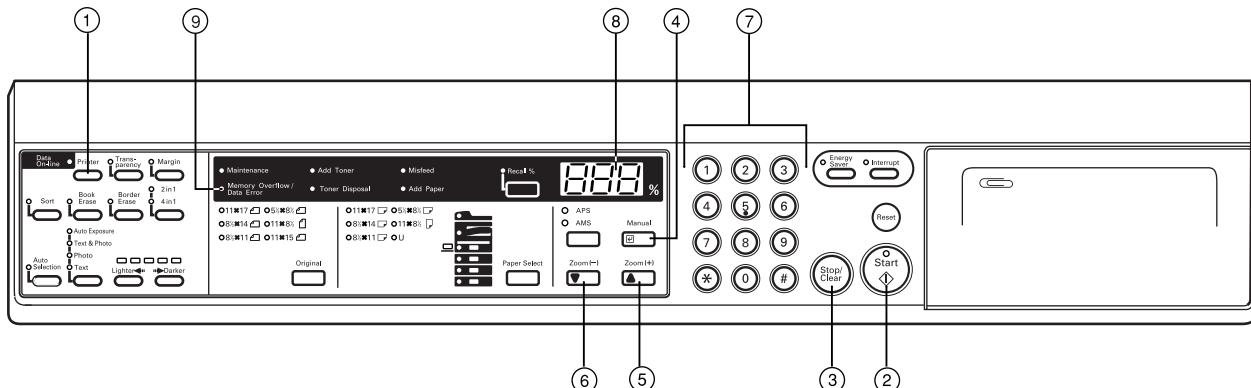

Copiadora de 15 ppm – Especificaciones métricas

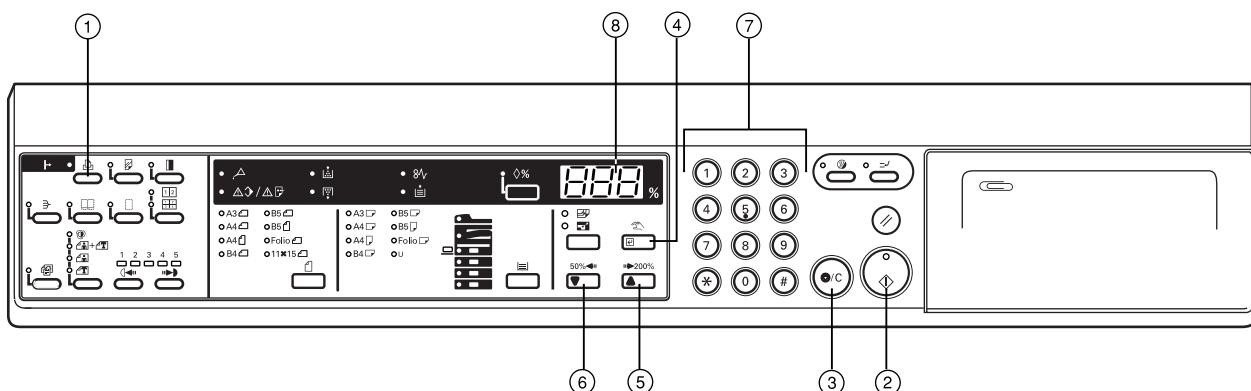

① Tecla de impresión

Pulse esta tecla cuando desea cambiar al modo de impresora.

② Tecla de inicio [GO]

Pulse esta tecla cuando desea continuar con la impresora o cuando desea inicializar la operación para la alimentación de formularios continuos. También se utiliza esta tecla para comutar la impresora en línea y fuera de línea. Cuando la impresora está en línea se encenderá el indicador de datos en línea.

③ Tecla de parada/cancelación [CANCELRL]

Pulse esta tecla cuando desea dejar de imprimir, cuando desea cancelar un ajuste en el medio de la impresión o cuando desea cancelar un mensaje de error.

④ Tecla de entrada [Manual]

Pulse esta tecla cuando desea registrar un ajuste.

⑤ Tecla ▲ [Zoom (+)]

Pulse esta tecla cuando desea que suban las distintas funciones, ajustes, etc.

⑥ Tecla ▼ [Zoom (-)]

Pulse esta tecla cuando desea que bajen las distintas funciones, ajustes, etc.

⑦ Teclas numéricas

Pulse estas teclas cuando desea entrar directamente el valor deseado.

⑧ Indicación de calidad/cambio de tamaño de la copia

Indica el estado de la impresora y los demás ajustes. Aparece "P00" cuando la máquina está en el modo de impresora.

⑨ Indicador de sobrelleido de memoria / error de datos

Destella cuando se produce un error de impresión. En este caso también destellan alternadamente "Prt" y "E##" en la indicación de calidad/cambio de tamaño de la copia. Pulse la tecla de impresión y compruebe la causa del error. Para más detalles, consulte "3-2 Cuando aparece un código de error o un mensaje de error..." en la página 12.


● La indicación de calidad/cambio de tamaño de la copia en el modo de impresora

Para entrar en el modo de impresora, pulse la tecla de impresión. Las indicaciones que aparecen en la indicación de calidad/cambio de tamaño de la copia cuando la máquina está en el modo de impresora se detallan en el cuadro a continuación.


Indicación	Significado
P00	Es la indicación inicial cuando la máquina está en el modo de impresora.
P##	Indica el número de menú de los ajustes relacionados con la impresora. El número de menú en sí del ajuste seleccionado aparecerá en lugar de ##. Para más detalles, consulte el manual en línea.
Prt E##	Destellan alternadamente "Prt" y "E##" cuando se produce un error de impresión. (El correspondiente número de error aparece en lugar de ##.) Para más detalles, consulte "3-2 Cuando aparece un código de error o un mensaje de error..." en la página 12.
Prt E##	Destellan alternadamente "Prt" y un número de 2 cifras para indicar el estado actual de la impresora. El significado de los números que destellan es el siguiente: 01: La impresora está en el medio de una autocomprobación. Aparece cuando se conecta () el interruptor principal y cuando se reinicia la impresora. 02: La impresora está cambiando los ajustes. Espere hasta que se complete el cambio. 10: La impresora está procesando los datos. 15: La impresora está esperando la entrada de datos. 20: Se acabó el tiempo de espera de la alimentación de formularios. 25: La impresora está cancelando datos.

1. Preparación

Copiadora de 20 ppm - Especificaciones de pulgadas

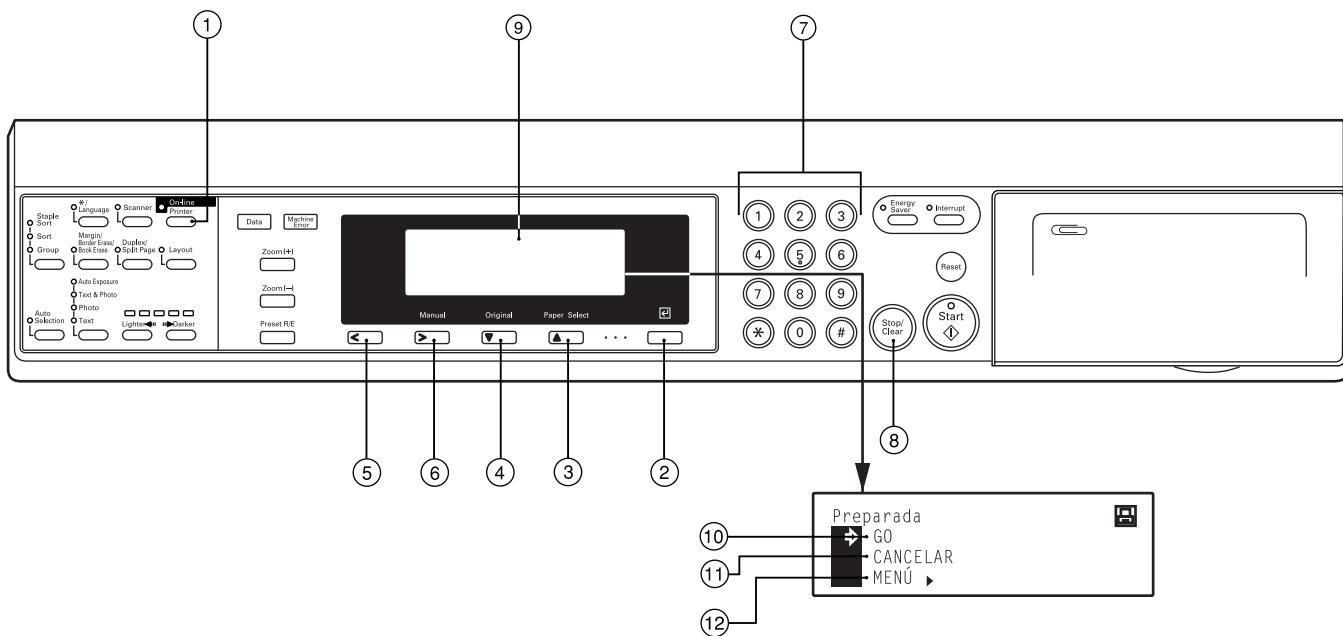

Copiadora de 20 ppm - Especificaciones métricas

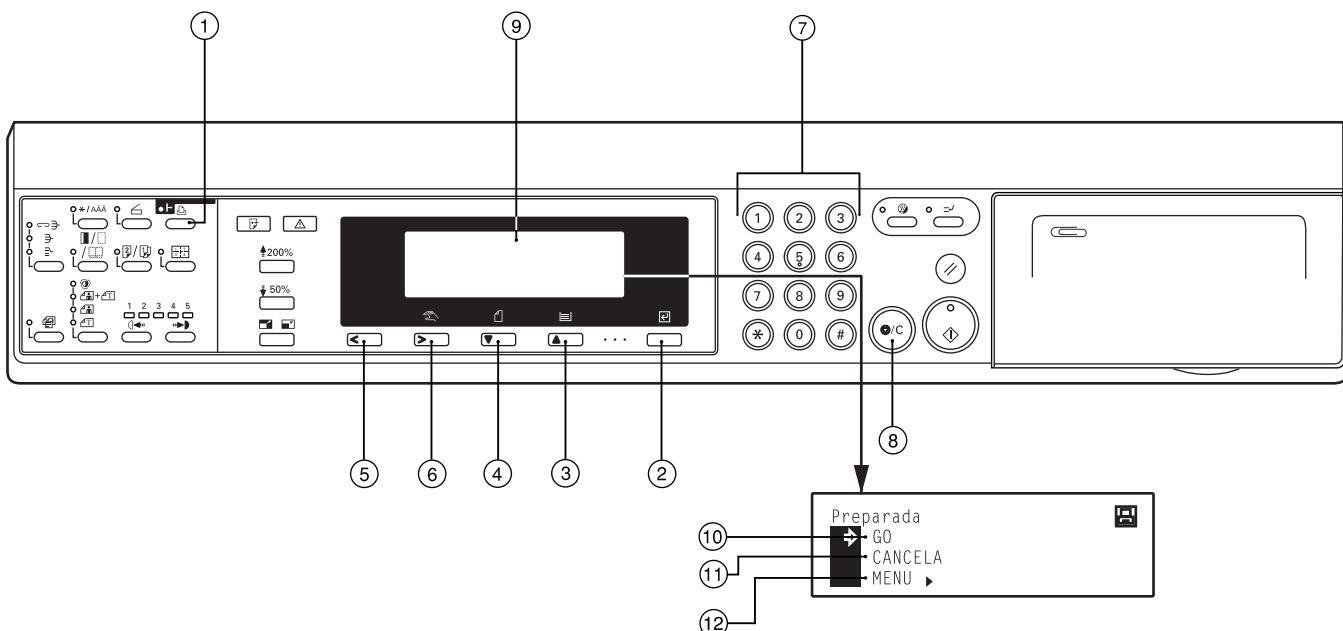


- ① Tecla de impresión
Pulse esta tecla cuando desea cambiar al modo de impresora.
- ② Tecla de entrada
Pulse esta tecla cuando desea registrar un ajuste.
- ③ Tecla ▲ (Cursor)
Pulse esta tecla cuando desea que suban las distintas funciones, ajustes, etc.
- ④ Tecla ▼ (Cursor)
Pulse esta tecla cuando desea que bajen las distintas funciones, ajustes, etc.
- ⑤ Tecla < (Cursor izquierdo)
Pulse esta tecla cuando desea que vaya a la izquierda durante un procedimiento de ajuste.
- ⑥ Tecla > (Cursor derecho)
Pulse esta tecla cuando desea que vaya a la derecha durante un procedimiento de ajuste.
- ⑦ Teclas numéricas
Pulse estas teclas cuando desea entrar directamente el valor deseado.
- ⑧ Tecla de parada/cancelación
Pulse esta tecla cuando desea cancelar el ajuste en el medio.
- ⑨ Pantalla de mensajes
Indica el estado de la impresora y los demás ajustes.
- **La pantalla de mensajes en el modo de impresora**
Para entrar en el modo de impresora, pulse la tecla de impresión. La pantalla de mensajes cambia a la correspondiente para el modo de impresora.
- ⑩ Comando "GO"
Seleccione este comando cuando desea empezar a imprimir y cuando desea iniciar la operación con alimentación de formularios. Este comando también sirve para cambiar entre la impresora en línea y fuera de línea. Cuando la impresora está en línea, se enciende el indicador de datos en línea.
- ⑪ Comando "CANCELAR" ("CANCELAR")
Seleccione este comando cuando desea dejar de imprimir o cuando desea cancelar un mensaje de error.
- ⑫ Comando "MENÚ" ("MENU")
Seleccione este comando cuando desea cambiar los ajustes por omisión de la impresora.

2. Instalación

2-1 Conexión del cable de impresora


PRECAUCION: Desconecte (O) SIEMPRE el interruptor principal de la impresora ANTES de conectar el cable de impresora.

- Desconecte (O) la impresora principal en el lado derecho de la impresora y desconecte también la computadora.

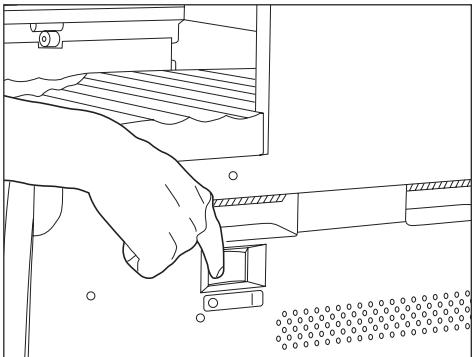


- Conecte el cable de impresora al conector de interface en paralelo atrás del lado derecho de la impresora.

* Si se ha instalado la tarjeta de red en la impresora, conecte el cable de impresora (100BASE-TX, etc.) y realice los ajustes apropiados para la red. Consulte "2-3 Ajuste de red (TCP/IP)" en la página 6.

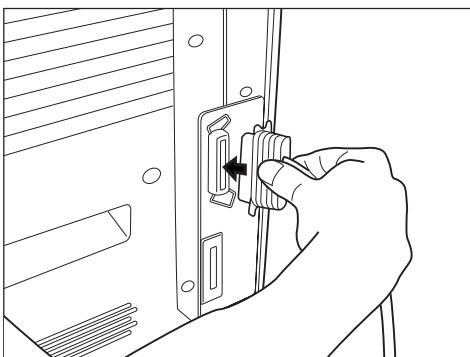

- Conecte la otra punta del cable de impresora en el conector de interface de su computadora.

- Vuelva a conectar (|) el interruptor principal de la impresora.

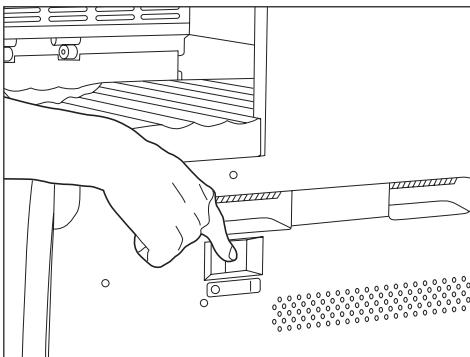

2-2 Instalación de los programas

Realice el siguiente procedimiento para instalar en su computadora el controlador de impresora y otros programas apropiados al sistema operativo de esa computadora. Para más detalles sobre la instalación del programa necesario, consulte el manual en línea en el CD-ROM incluido con este producto.

2. Instalación

2-3 Ajustes de red (TCP/IP)

Cuando se ha instalado la tarjeta de red opcional y se va a utilizar esta máquina como impresora de red, es necesario seleccionar la correspondiente dirección IP para la impresora.

* Para realizar esta selección en la copiadora de 20 ppm, vaya a la página 7.

Notas

- La dirección IP a registrar aquí será diferente según la configuración de red. Confirme con su administrador de red ANTES de hacer este ajuste.
- Si está utilizando un servidor DHCP para configurar automáticamente la dirección IP, este ajuste no será necesario porque la configuración del servidor DHCP ya fue activada como ajuste por omisión de fábrica.

<Copiadora de 15 ppm>

* Para cancelar el ajuste en el medio, pulse la tecla de parada/cancelación.

- 1 Pulse la tecla de impresión. La máquina cambia al modo de impresora y aparece "P00" en la indicación de calidad/cambio de tamaño de la copia.



- 2 Utilice las teclas numéricas para entrar "2" y "3", y pulse la tecla de entrada. La indicación cambia a "P23" (el ajuste de conexión/desconexión de TCP/IP).



- 3 Utilice las teclas ▲ y ▼ para seleccionar "1" (Sí) y pulse la tecla de entrada. El ajuste seleccionado destella dos veces y queda registrado.



- 4 Utilice las teclas numéricas para entrar "2" y "4", y pulse la tecla de entrada. La indicación cambia a "P24" (el ajuste de conexión/desconexión de DHCP).



- 5 Utilice las teclas ▲ y ▼ para seleccionar "2" (No) y pulse la tecla de entrada. El ajuste seleccionado destella dos veces y queda registrado.



- 6 Utilice las teclas numéricas para entrar "2" y "5", y pulse la tecla de entrada. La indicación cambia a "P25" (el ajuste de dirección IP).



- 7 Se utilizan las teclas numéricas para entrar la dirección IP de 12 cifras en bloques de 3 cifras cada uno: Entre primero las 3 cifras apropiadas para el primer bloque y pulse la tecla de entrada. Repita este mismo procedimiento para los restantes 3 bloques de la dirección (4 bloques en total). Cuando se ha pulsado la tecla de entrada para el último bloque de 3 cifras, la indicación destella dos veces y queda registrada la dirección IP.



- 8 Utilice las teclas numéricas para entrar "2" y "6", y pulse la tecla de entrada. La indicación cambia a "P26" (el ajuste de máscara de subred). Entre la máscara de subred de 12 cifras utilizando el mismo procedimiento que para entrar la dirección IP.



- 9 Utilice las teclas numéricas para entrar "2" y "7", y pulse la tecla de entrada. La indicación cambia a "P27" (el ajuste de dirección Gateway). Entre la dirección Gateway de 12 cifras utilizando el mismo procedimiento que para entrar la dirección IP.



- 10 Una vez terminados todos los ajustes de red, pulse la tecla de impresión. La máquina vuelve a cambiar al modo de copiadora.

<Copiadora de 20 ppm - Especificaciones de pulgadas>

* Para cancelar el ajuste en el medio, pulse la tecla de parada/cancelación.

- 1** Pulse la tecla de impresión. La máquina cambiará al modo de impresora.



- 2** Utilice las teclas de cursor ▲ y ▼ para seleccionar "MENÚ" y pulse la tecla de entrada.



- 3** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Interfaz" y pulse la tecla de entrada.




- 4** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Opción" y pulse la tecla de entrada.



- 5** Utilice las teclas de cursor ▲ y ▼ para seleccionar "TCP/IP" y pulse la tecla de entrada.



- 6** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Sí" y pulse la tecla de entrada.

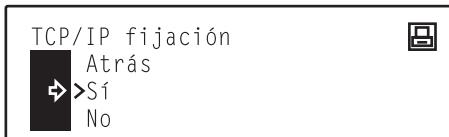


- 7** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Cambio #" y pulse la tecla de entrada.



- 8** Utilice las teclas de cursor ▲ y ▼ para seleccionar "DHCP" y pulse la tecla de entrada.



- 9** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Inactivo" y pulse la tecla de entrada.

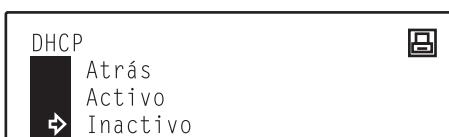

- 10** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Dirección IP" y pulse la tecla de entrada.




2. Instalación

- 11** Se utilizan las teclas numéricas para entrar la dirección IP:
Entre primero las primeras 3 cifras de la dirección IP.
* Los números entrados ingresarán en el área que está resaltada en la pantalla.

Dirección IP

0 . 0 . 0 . 0

- 16** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Gateway" y pulse la tecla de entrada.

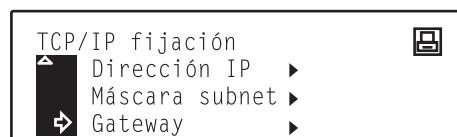

- 12** Pulse la tecla de cursor > y entre las siguientes 3 cifras de la dirección IP en el siguiente bloque resaltado.

Dirección IP

192 . 0 . 0 . 0

- 17** Repita los pasos 11 - 13 para entrar la dirección Gateway utilizando el mismo procedimiento que para entrar la dirección IP.

Gateway

0 . 0 . 0 . 0


- 13** Siga con el mismo procedimiento para los restantes 2 bloques y cuando se ha entrado la dirección IP, pulse la tecla de entrada.

Dirección IP

192 . 162 . 0 . 2

- 18** Una vez terminados todos los ajustes de red, pulse la tecla de impresión. La máquina vuelve a cambiar al modo de copiadora.

- 14** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Máscara subnet" y pulse la tecla de entrada.

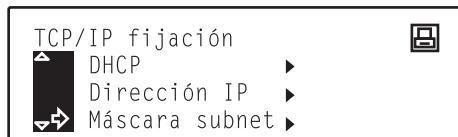

- 15** Repita los pasos 11 - 13 para entrar la máscara de subred utilizando el mismo procedimiento que para entrar la dirección IP.

Máscara subnet

0 . 0 . 0 . 0

<Copiadora de 20 ppm - Especificaciones métricas>

* Para cancelar el ajuste en el medio, pulse la tecla de parada/cancelación.

- 1** Pulse la tecla de impresión. La máquina cambiará al modo de impresora.



- 2** Utilice las teclas de cursor ▲ y ▼ para seleccionar "MENU" y pulse la tecla de entrada.



- 3** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Interfaz" y pulse la tecla de entrada.




- 4** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Opción" y pulse la tecla de entrada.



- 5** Utilice las teclas de cursor ▲ y ▼ para seleccionar "TCP/IP" y pulse la tecla de entrada.



- 6** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Sí" y pulse la tecla de entrada.

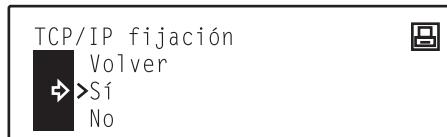

- 7** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Camb margen" y pulse la tecla de entrada.



- 8** Utilice las teclas de cursor ▲ y ▼ para seleccionar "DHCP" y pulse la tecla de entrada.



- 9** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Inactivo" y pulse la tecla de entrada.



- 10** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Dirección IP" y pulse la tecla de entrada.




2. Instalación

- 11** Se utilizan las teclas numéricas para entrar la dirección IP:
Entre primero las primeras 3 cifras de la dirección IP.
* Los números entrados ingresarán en el área que está resaltada en la pantalla.

Dirección IP

0 . 0 . 0 . 0

- 16** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Gateway" y pulse la tecla de entrada.

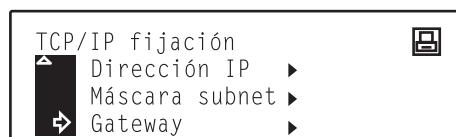

- 12** Pulse la tecla de cursor > y entre las siguientes 3 cifras de la dirección IP en el siguiente bloque resaltado.

Dirección IP

192 . 0 . 0 . 0

- 17** Repita los pasos 11 - 13 para entrar la dirección Gateway utilizando el mismo procedimiento que para entrar la dirección IP.

Gateway

0 . 0 . 0 . 0


- 13** Siga con el mismo procedimiento para los restantes 2 bloques y cuando se ha entrado la dirección IP, pulse la tecla de entrada.

Dirección IP

192 . 162 . 0 . 2

- 18** Una vez terminados todos los ajustes de red, pulse la tecla de impresión. La máquina vuelve a cambiar al modo de copiadora.

- 14** Utilice las teclas de cursor ▲ y ▼ para seleccionar "Máscara subnet" y pulse la tecla de entrada.

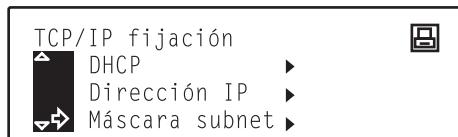

- 15** Repita los pasos 11 - 13 para entrar la máscara de subred utilizando el mismo procedimiento que para entrar la dirección IP.

Máscara subnet

0 . 0 . 0 . 0

3. Localización de averías

3-1 Cancelación de la impresión


Realice el mismo procedimiento para parar la impresión o cuando desea cancelar los datos.

¡IMPORTANTE!


- Con esta operación se cancelan TODOS los trabajos de impresión en espera para su impresión en la memoria de la impresora.
- Cancele siempre el trabajo de impresión primero en su computadora. Si no se ha cancelado el trabajo de impresión en su computadora, los datos vuelven a enviarse a la impresora.

<Copiadora de 15 ppm>

- 1** Pulse la tecla de impresión. La máquina cambia al modo de impresora.

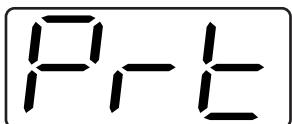

- 2** Pulse la tecla de parada/cancelación. Se cancela la impresión.

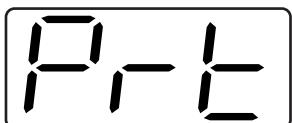

<Copiadora de 20 ppm - Especificaciones de pulgadas>


- 1** Pulse la tecla de impresión. La máquina cambia al modo de impresora.



- 2** Utilice las teclas de cursor ▲ y ▼ para seleccionar "CANCELAR".



- 3** Pulse la tecla de entrada. Se cancela la impresión.

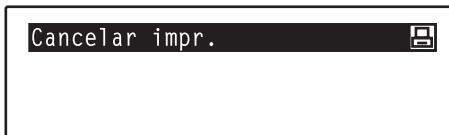

<Copiadora de 20 ppm - Especificaciones métricas>


- 1** Pulse la tecla de impresión. La máquina cambia al modo de impresora.



- 2** Utilice las teclas de cursor ▲ y ▼ para seleccionar "CANCELAR".




- 3** Pulse la tecla de entrada. Se cancela la impresión.

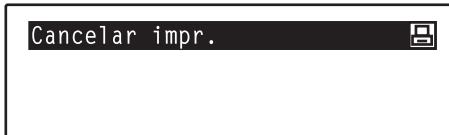

3. Localización de averías

3-2 Cuando aparece un código de error o un mensaje de error...

Si aparece un código o mensaje de error en el panel de controles, confirme primero en los siguientes cuadros la causa del problema y realice el correspondiente procedimiento. Para más detalles, consulte el manual de instrucciones de su copiadora y el manual de instrucciones de cualquier equipo opcional instalado en su máquina.

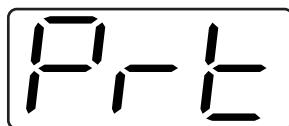

Indicaciones de error en la copiadora de 15 ppm

Si aparece "Prt" y destella el indicador de sobrelleñado de memoria/error de datos cuando la máquina está en el modo de copiadora, se produjo un error en las funciones de esta máquina. Pulse la tecla de impresión y confirme la causa del error. Consulte los siguientes cuadros para el correspondiente código de error y el procedimiento de corrección apropiado.

Código de error (copiadora de 15 ppm)	Indicación de mensaje (copiadora de 20 ppm)	Procedimiento
E01	—	Se produjo un atasco de papel. Retire el papel atascado.
E02	—	El cajón se quedó sin papel o se produjo un atasco de papel. Añada papel o retire el papel atascado, según corresponda.
E03	Coloque la gaveta. CIERRE CAJON DE PAPEL.	Uno o ambos cajones no están bien colocados en la impresora. Coloque bien ambos cajones.
E04	—	El tamaño del papel seleccionado para impresión no coincide con el tamaño de papel en el cajón. Cambie el papel en el cajón por el del tamaño correcto. * Si desea forzar la impresión en el tamaño de papel colocado, pulse la tecla de inicio. Si desea cambiar la impresión al papel en el otro cajón, pulse la tecla de selección de papel hasta que se seleccione el cajón deseado. Si desea cancelar completamente la impresión, pulse la tecla de parada/cancelación.
—	Añada papel en gaveta. XX tamaño (XXX) AÑADIR PAPEL EN EL CAJON. XX TAMAÑO (XXX)	El tamaño o tipo de papel seleccionado para impresión no coincide con el tamaño o tipo de papel en el cajón. Cambie el papel en el cajón por el de tamaño y tipo correctos. 1. Si desea cambiar la impresión al papel en otro cajón, pulse la tecla de selección de papel hasta seleccionar el cajón deseado y pulse la tecla de entrada. 2. En caso contrario, pulse la tecla de impresión para cambiar al modo de impresora. Aparecen tres comandos diferentes. Utilice las teclas de cursor ▲ y ▼ para mover la flecha → hasta que apunte al comando deseado y pulse la tecla de entrada. GO: Para forzar la impresión en el tamaño o tipo de papel colocado. Cancelar (Cancela): Para cancelar completamente la impresión. Reposición (Resetear): Para resetear la tarjeta de impresora. (Sólo se resetean las funciones de la impresora.)
E05	Coloque papel en la gaveta. PONGA PAPEL EN CAJON DE PAPEL.	El cajón está sin papel. Añada papel.
E06	—	Una de las cubiertas está abierta. Cierre firmemente las cubiertas.
—	Grapadora vacía. Agregue grapas. GRAPADORA VACIA. AÑADA GRAPAS.	El finalizador (opcional) se ha quedado sin grapas. Consulte el manual de instrucciones del finalizador y coloque grapas.
—	No grapa diferentes tamaños	No pudo grapar porque hay diferentes tamaños de papel juntos. Retire todas las hojas del finalizador.
—	No puede engrapar. NO PUEDE GRAPAR.	La cantidad de papel acumulado en el finalizador superó la capacidad aceptable. Retire todas las hojas del finalizador.

Código de error (copiadora de 15 ppm)	Indicación de mensaje (copiadora de 20 ppm)	Procedimiento
—	No modo duplex desde bypass	<p>No es posible la impresión duplex utilizando el alimentador multihojas. Seleccione la alimentación de papel del cajón.</p> <ol style="list-style-type: none"> Si desea cambiar la impresión al papel en el otro cajón, pulse la tecla de selección de papel hasta seleccionar el cajón deseado y pulse la tecla de entrada. En caso contrario, pulse la tecla de impresión para cambiar al modo de impresora. Aparecen tres comandos diferentes. Utilice las teclas de cursor ▲ y ▼ para mover la flecha → hasta que apunte al comando deseado y pulse la tecla de entrada. GO: Para imprimir en un solo lado del papel. Cancelar (Cancela): Para cancelar completamente la impresión. Reposición (Resetear): Para resetear la tarjeta de impresora. (Sólo se resetean las funciones de la impresora.)
—	No desde bypass a finaliz.	<p>No puede utilizar el finalizador cuando se alimenta el papel del alimentador multihojas.</p> <ol style="list-style-type: none"> Si desea cambiar la impresión al papel en el otro cajón, pulse la tecla de selección de papel hasta seleccionar el cajón deseado y pulse la tecla de entrada. Pulse la tecla de impresión para cambiar al modo de impresora. Aparecen tres comandos diferentes. Utilice las teclas de cursor ▲ y ▼ para mover la flecha → hasta que apunte al comando deseado y pulse la tecla de entrada. GO: Para salir el papel a la bandeja interior. Cancelar (Cancela): Para cancelar completamente la impresión. Reposición (Resetear): Para resetear la tarjeta de impresora. (Sólo se resetean las funciones de la impresora.)
E23	Excede capacidad papel Retire papel del Sep.Trb. EXCED CAPACIDAD PAPEL RETIRE PAPEL DEL SEP.TRB.	<p>La cantidad de papel acumulado en el separador de trabajos opcional superó la capacidad aceptable. Retire todas las hojas del separador de trabajos.</p>
E25	Excede capacidad papel Retire papel del Interno. EXCED CAPACIDAD PAPEL RETIRE PAPEL DEL INTERNO.	<p><Copiadora de 15 ppm> La cantidad de papel acumulado en la bandeja interior superó la capacidad aceptable. Retire todas las hojas de la bandeja interior y pulse la tecla de inicio para continuar la impresión. * Si desea cancelar completamente la impresión, pulse la tecla de parada/cancelación.</p> <p><Copiadora de 20 ppm> La cantidad de papel acumulado en la bandeja interior superó la capacidad aceptable. Retire todas las hojas de la bandeja interior y pulse la tecla de impresión para cambiar al modo de impresora. A continuación, seleccione el comando "GO" y pulse la tecla de entrada para continuar la impresión. * Si desea cancelar completamente la impresión, seleccione el comando "Cancelar" ("Cancela") y pulse la tecla de entrada.</p>
E30	—	<p>Se produjo un problema dentro de la impresora. Llame a su técnico de servicio o un centro de servicio autorizado.</p>
E40	Este cód. no está en uso. El código no está en uso.	<p>El código de departamento entrado no coincide con el registrado. Confirme el código de departamento registrado en el controlador de impresora.</p>
—	Exede cantidad impresión límite Exceso de entradas cantidad de impresiones	<p>La cantidad de impresiones supera la capacidad aceptable programada por la administración de copias. Para imprimir más, cambie el ajuste de administración de copias en la impresora.</p>

3. Localización de averías

Código de error (copiadora de 15 ppm)	Indicación de mensaje (copiadora de 20 ppm)	Procedimiento
E60	Err.Disco RAM Pulse GO	<p><Copiadora de 15 ppm> Se produjo un error de lectura o escritura en el disco RAM. Pulse la tecla de inicio para borrar la indicación de error.</p> <p><Copiadora de 20 ppm> Se produjo un error de lectura o escritura en el disco RAM. Pulse primero la tecla de impresión para cambiar al modo de impresora. A continuación, seleccione el comando "GO" y pulse la tecla de entrada. Se borra la indicación de error.</p>
E70	TARJ.MEM.err Pulse GO	<p><Copiadora de 15 ppm> Se produjo un error de lectura o escritura en la tarjeta de memoria (CompactFlash). Pulse la tecla de inicio para borrar la indicación de error.</p> <p><Copiadora de 20 ppm> Se produjo un error de lectura o escritura en la tarjeta de memoria (CompactFlash). Pulse primero la tecla de impresión para cambiar al modo de impresora. A continuación, seleccione el comando "GO" y pulse la tecla de entrada. Se borra la indicación de error.</p>
E71	TARJ.MEM.err Meter otra vez	<p>Se retiró la tarjeta de memoria (CompactFlash) durante el funcionamiento en los ajustes del menú relacionados con la impresora. Vuelva a colocar la tarjeta de memoria.</p> <p>* CERCIORESE de desconectar (O) el interruptor principal ANTES de colocar la tarjeta de memoria.</p>
E72	Meta la misma TARJ.MEMORIA	<p>No pudo detectarse la tarjeta de memoria (CompactFlash) durante la operación por la que la impresora estaba leyendo los datos de la tarjeta. Vuelva a colocar la tarjeta de memoria.</p> <p>* CERCIORESE de desconectar (O) el interruptor principal ANTES de colocar la tarjeta de memoria.</p>
E73	Error formato TARJ.MEMORIA	Inicialización de la tarjeta de memoria (CompactFlash) colocada, si fuera necesario.
E80	Exceso de impresión Impresión fuera de marco	<p><Copiadora de 15 ppm> Se produjo un error de exceso debido a que no hay suficiente memoria.</p> <ul style="list-style-type: none"> • Si desea forzar la continuación del trabajo de impresión, pulse la tecla de inicio. Si desea cancelar completamente la impresión, pulse la tecla de parada/cancelación. • Si se activa la "Continuación automática" (menú: P74) (ajuste: 1 [Sí]), la impresión continuará automáticamente después de transcurrir el tiempo especificado ahí. • Cuando aparece este mensaje de error, se activará automáticamente la "Protección de página" (menú: P42) (ajuste: 1 [Sí]). <p><Copiadora de 20 ppm> Se produjo un error de exceso debido a que no hay suficiente memoria.</p> <ul style="list-style-type: none"> • Pulse la tecla de impresión para cambiar al modo de impresora. Aparecen tres comandos diferentes. Utilice las teclas de cursor ▲ y ▼ para mover la flecha → hasta que apunte al comando deseado y pulse la tecla de entrada. GO: Para continuar la impresión. Cancelar (Cancela): Para cancelar completamente la impresión. Reposición (Resetear): Para resetear la tarjeta de impresora. (Sólo se resetean las funciones de la impresora.) • Si se activa la "Continuación automática", la impresora continuará automáticamente después de transcurrir el tiempo especificado ahí. • Cuando aparece este mensaje de error, se activará automáticamente la "Protección de página".

Código de error (copiadora de 15 ppm)	Indicación de mensaje (copiadora de 20 ppm)	Procedimiento
E82	Exceso de memoria Memoria llena	<p><Copiadora de 15 ppm> No pudo terminar el trabajo de impresión actual porque no hay suficiente memoria en la impresora.</p> <ul style="list-style-type: none"> • Si está utilizando un disco RAM, reduzca el tamaño del disco RAM. Si este error aparece frecuentemente, se recomienda instalar memoria adicional en la impresora. Para más detalles sobre la instalación de memoria adicional, llame a su técnico de servicio o un centro de servicio autorizado. • Si desea forzar la continuación del trabajo de impresión, pulse la tecla de inicio. Los datos ya procesados se imprimirán y la parte remanente del trabajo de impresión se imprimirá en la siguiente página. • Si se activa la "Continuación automática" (menú: P74) (ajuste: 1 [Sí]), la impresión continuará automáticamente después de transcurrir el tiempo especificado ahí. <p><Copiadora de 20 ppm> No pudo terminar el trabajo de impresión actual porque no hay suficiente memoria en la impresora.</p> <ul style="list-style-type: none"> • Pulse la tecla de impresión para cambiar al modo de impresora. Aparecen tres comandos diferentes. Utilice las teclas de cursor ▲ y ▼ para mover la flecha → hasta que apunte al comando deseado y pulse la tecla de entrada. GO: Para continuar la impresión. Los datos ya procesados se imprimirán y la parte remanente del trabajo de impresión se imprime en la siguiente página. Cancelar (Cancela): Para cancelar completamente la impresión. Reposición (Resetear): Para resetear la tarjeta de impresora. (Sólo se resetean las funciones de la impresora.) • Si está utilizando un disco RAM, reduzca el tamaño del disco RAM. Si este error aparece frecuentemente, se recomienda instalar memoria adicional en la impresora. Para más detalles sobre la instalación de memoria adicional, llame a su técnico de servicio o un centro de servicio autorizado. • Si se activa la "Continuación automática", la impresión continuará automáticamente después de transcurrir el tiempo especificado ahí.
E83	Interfaz ocupada	El interfaz seleccionado está en uso. Espere y trate nuevamente.
EF1	checksum error	Se detectó un error durante el funcionamiento. Desconecte (O) el interruptor principal de la impresora y vuelva a conectar () nuevamente. Si continua el mismo mensaje de error, llame a su técnico de servicio o un centro de servicio autorizado.
EF2	RAM error	Se detectó un error durante el funcionamiento. Desconecte (O) el interruptor principal de la impresora y vuelva a conectar () nuevamente. Si continua el mismo mensaje de error, llame a su técnico de servicio o un centro de servicio autorizado.

3. Localización de averías

3-3 Cuadro de localización de averías básicas

Si tiene problemas durante el uso este aparato como impresora, consulte el siguiente cuadro para realizar ajustes básicos. Si el problema no desaparece, llame a su técnico de servicio o centro de servicio autorizado.

* Para información sobre averías generales mecánicas en su aparato, consulte el manual de instrucciones de su copiadora.

Problema	Punto a inspeccionar	Procedimiento	Página de referencia
No se imprime nada	¿El cable eléctrico está mal enchufado?	Enchufe firmemente el cable eléctrico en el tomacorriente.	—
	¿La alimentación de la impresora está conectada ()?	Conecte () el interruptor principal de la impresora.	5
	¿El cable de impresora es el correcto y está bien conectado?	Compruebe que se utiliza un cable de impresora correcto y compruebe que está bien conectado.	5
	¿Se conectó el cable de impresora DESPUES de conectar la alimentación de la impresora?	Conecte el cable de impresora ANTES de conectar la alimentación de la impresora.	—
	¿La impresora está fuera de línea? (¿El indicador de datos en línea está apagado?)	Realice el procedimiento apropiado para que se encienda el indicador de datos en línea y ponga la impresora en línea. <Copiadora de 15 ppm> ① Pulse la tecla de impresión. La máquina cambia al modo de impresora. ② Pulse la tecla de inicio. ③ Se enciende el indicador de datos en línea. ----- <Copiadora de 20 ppm> ① Pulse la tecla de impresión. La máquina cambia al modo de impresora. ② Seleccione el comando "GO" y pulse la tecla de entrada. ③ Se enciende el indicador de datos en línea.	3, 4
El texto no se imprime correctamente	¿El cable de impresora es el correcto y está bien conectado?	Compruebe que se utiliza un cable de impresora correcto y compruebe que está bien conectado.	5
La impresión no se hace correctamente	¿Los ajustes de configuración en su computadora son los correctos?	Confirme los ajustes en el controlador de impresora y en el programa utilizado en la computadora.	—

4. Especificaciones

CPU	PowerPC 405 (200MHz)
Velocidad de impresión	Copiadora de 15 ppm: SIN tarjeta de memoria instalada - 15 hojas/min. (A4 [8 1/2" x 11"]) CON tarjeta de memoria instalada - 18 hojas/min. (A4 [8 1/2" x 11"]) Copiadora de 20 ppm: 20 hojas/min. (A4 [8 1/2" x 11"])
Resolución de impresión	Con suavización DESACTIVADA: 600 dpi x 600 dpi Con suavización ACTIVADA: interpolado 2400 dpi x 600 dpi
Máximo tamaño de impresión	A3 (11" x 17")
Capacidad de memoria RAM	Instalado: 8 MB Máximo: 136 MB (con una memoria adicional de 128 MB opcional instalada)
Interface	Una interface en paralelo (cumple con IEEE 1284)
Tipos instalados	80

* Las especificaciones están sujetas a cambios sin previo aviso.

Printing System (K)

INSTRUCTION HANDBOOK

<Functions Edition>

Introduction

Chapter 1 Printer-related operation

- 1. Printer Settings (15 ppm copier)
- 2. Printer Settings (20 ppm copier)
- 3. Memory Card / RAM Disk

Chapter 2 Software-related operation

- 1. Procedure for Installing and Printing
with a Printer Driver
- 2. Windows KX Driver
- 3. Printer Driver for Macintosh

Introduction

About this On-Line Manual

This On-Line Manual is included with your Printing System (K) and should be read in combination with the Instruction Handbook <Set-Up Edition> for that product.

This manual contains information on making settings in your printer, as well as on installing and setting the printing properties for the corresponding Printer Drivers.

The explanations in this manual were written with the assumption that the user has a basic understanding of how to work in Microsoft Windows. For further information on using Windows, refer to your Microsoft Windows manual.

Trademark Information

- PRESCRIBE is a registered trademark of Kyocera Corporation.
- PRESCRIBE 2e and KPDL2 are trademarks of Kyocera Corporation.
- Microsoft, MS-DOS, Windows and WindowsNT are registered trademarks of Microsoft Corporation of America and other countries.
- WINDOWS ME is a trademark of Microsoft Corporation.
- PCL and PJL are registered trademarks of Hewlett-Packard Company.
- PostScript is a registered trademark of Adobe Systems Incorporated.
- Ethernet is a registered trademark of Xerox Corporation.
- Novell and NetWare are registered trademarks of Novell, Inc.
- Centronics is a trademark of Centronics Data Computer Corporation.
- IBM and IBM PC-AT are trademarks of International Business Machines Corporation.
- PowerPC is a trademark of International Business Machines Corporation of America and other corporations.
- TrueType and Macintosh are registered trademarks of Apple Computer, Inc.
- AppleTalk is a trademark of Apple Computer, Inc.
- This product was developed using Tornado, the real-time operating system (ROTS) general development environment from Wind River Systems, Inc.
- This printer uses PeerlessPrintXL, a PCL compatibility system developed by Peerless Group, to emulate the HP LaserJet Printer Control Language (PCL6). PeerlessPrintXL is a trademark of Peerless Group (Redondo Beach, CA 90278, U.S.A.).
- **AGFA**  Contains UFST™ and MicroType® from Agfa Corporation.

All other company and product names contained in this Instruction Handbook are trademarks or registered trademarks of their respective companies. The designations ™ and ® will not be used in this handbook.

All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from the Publisher.

Legal Restriction On Copying

- It may be prohibited to copy copyrighted material without permission of the copyright owner.
- It is prohibited under any circumstances to copy domestic or foreign currencies.
- Copying other items may be prohibited.

IBM PROGRAM LICENSE AGREEMENT

THE DEVICE YOU HAVE PURCHASED CONTAINS ONE OR MORE SOFTWARE PROGRAMS ("PROGRAMS") WHICH BELONG TO INTERNATIONAL BUSINESS MACHINES CORPORATION ("IBM"). THIS DOCUMENT DEFINES THE TERMS AND CONDITIONS UNDER WHICH THE SOFTWARE IS BEING LICENSED TO YOU BY IBM. IF YOU DO NOT AGREE WITH THE TERMS AND CONDITIONS OF THIS LICENSE, THEN WITHIN 14 DAYS AFTER YOUR ACQUISITION OF THE DEVICE YOU MAY RETURN THE DEVICE FOR A FULL REFUND. IF YOU DO NOT SO RETURN THE DEVICE WITHIN THE 14 DAYS, THEN YOU WILL BE ASSUMED TO HAVE AGREED TO THESE TERMS AND CONDITIONS.

The Programs are licensed not sold. IBM, or the applicable IBM country organization, grants you a license for the Programs only in the country where you acquired the Programs. You obtain no rights other than those granted you under this license.

The term "Programs" means the original and all whole or partial copies of it, including modified copies or portions merged into other programs. IBM retains title to the Programs. IBM owns, or has licensed from the owner, copyrights in the Programs.

1. License

Under this license, you may use the Programs only with the device on which they are installed and transfer possession of the Programs and the device to another party. If you transfer the Programs, you must transfer a copy of this license and any other documentation to the other party. Your license is then terminated. The other party agrees to these terms and conditions by its first use of the Program.

You may not:

- 1) use, copy, modify, merge, or transfer copies of the Program except as provided in this license;
- 2) reverse assemble or reverse compile the Program; or
- 3) sublicense, rent, lease, or assign the Program.

2. Limited Warranty

The Programs are provided "AS IS."

THERE ARE NO OTHER WARRANTIES COVERING THE PROGRAMS (OR CONDITIONS), EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Some jurisdictions do not allow the exclusion of implied warranties, so the above exclusion may not apply to you.

SUPPLEMENT TO AGREEMENT FOR SOFTWARE BUNDLING AND DISTRIBUTION FOR ALDC

3. Limitation of Remedies

IBM's entire liability under this license is the following:

- 1) For any claim (including fundamental breach), in any form, related in any way to this license, IBM's liability will be for actual damages only and will be limited to the greater of :
 - a) the equivalent of U.S.\$25,000 in your local currency; or
 - b) IBM's then generally available license fee for the Program

This limitation will not apply to claims for bodily injury or damages to real or tangible personal property for which IBM is legally liable. IBM will not be liable for any lost profits, lost savings, or any incidental damages or other economic consequential damages, even if IBM, or its authorized supplier, has been advised of the possibility of such damages. IBM will not be liable for any damages claimed by you based on any third party claim. This limitation of remedies also applies to any developer of Programs supplied to IBM. IBM's and the developer's limitations of remedies are not cumulative. Such developer is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions, so they may not apply to you.

4. General

You may terminate your license at any time. IBM may terminate your license if you fail to comply with the terms and conditions of this license. In either event, you must destroy all your copies of the Program. You are responsible for payment of any taxes, including personal property taxes, resulting from this license. Neither party may bring an action, regardless of form, more than two years after the cause of action arose. If you acquired the Program in the United States, this license is governed by the laws of the State of New York. If you acquired the Program in Canada, this license is governed by the laws of the Province of Ontario. Otherwise, this license is governed by the laws of the country in which you acquired the Program.

Typeface Trademark Acknowledgement

All resident fonts in this printer are licensed from Agfa Corporation.

Helvetica, Palatino and Times are registered trademarks of Linotype-Hell AG.

ITC Avant Garde Gothic, ITC Bookman, ITC ZapfChancery and ITC Zapf Dingbats are registered trademarks of International Typeface

Corporation.

Agfa Japan License Agreement

1. "Software" shall mean the digitally encoded, machine readable, scalable outline data as encoded in a special format as well as the UFST Software.
2. You agree to accept a non-exclusive license to use the Software to reproduce and display weights, styles and versions of letters, numerals, characters and symbols ("Typefaces") solely for your own customary business. Agfa Japan retains all rights, title and interest to the Software and Typefaces and no rights are granted to you other than a License to use the Software on the terms expressly set forth in this Agreement.
3. To protect proprietary rights of Agfa Japan, you agree to maintain the Software and other proprietary information concerning the Typefaces in strict confidence and to establish reasonable procedures regulating access to and use of the Software and Typefaces.
4. You agree not to duplicate or copy the Software or Typefaces, except that you may make one backup copy.
5. This License shall continue until the last use of the Software and Typefaces, unless sooner terminated. This License may be terminated by Agfa Japan if you fail to comply with the terms of this License and such failure is not remedied within thirty (30) days after notice from Agfa Japan. When this License expires or is terminated, you shall either return to Agfa Japan or destroy all copies of the Software and Typefaces and documentation as requested.
6. You agree that you will not modify, alter, disassemble, decrypt, reverse engineer or decompile the Software.
7. Agfa Japan warrants that for ninety (90) days after delivery, the Software will perform in accordance with Agfa Japan-published specifications. Agfa Japan does not warrant that the Software is free from all bugs, errors and omissions. THE PARTIES AGREE THAT ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY, ARE EXCLUDED.
8. Your exclusive remedy and the sole liability of Agfa Japan in connection with the Software and Typefaces is repair or replacement of defective parts, upon their return to Agfa Japan. IN NO EVENT WILL AGFA JAPAN BE LIABLE FOR LOST PROFITS, LOST DATA, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES CAUSED BY ABUSE OR MISAPPLICATION OF THE SOFTWARE AND TYPEFACES.
9. New York, U.S.A. law governs this Agreement.
10. You shall not sublicense, sell, lease, or otherwise transfer the Software and/or Typefaces without the prior written consent of Agfa Japan.
11. Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252-227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c)(2).
12. YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTAND IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. NEITHER PARTY SHALL BE BOUND BY ANY STATEMENT OR REPRESENTATION NOT CONTAINED IN THIS AGREEMENT. NO CHANGE IN THIS AGREEMENT IS EFFECTIVE UNLESS WRITTEN AND SIGNED BY PROPERLY AUTHORIZED REPRESENTATIVES OF EACH PARTY.

1. Printer Settings (15 ppm copier)

IMPORTANT!

All setting items and the selection of their actual settings are accomplished in this machine based on a maximum 3-digit entry system. Refer to "1-2 List of settings" on page 1-3 for information regarding the various items as well as their corresponding menu numbers and available settings.

1-1 Procedure for making settings

- 1** Press the Printer key. The machine will switch to the printer mode and "P00" will appear in the copy quality/magnification display.



- 2** Use the numeric keys to enter the desired menu number and then press the Enter key.
Use the "▲" and "▼" keys to scroll through the menu numbers one number at a time.
(Any menu number that does not have a corresponding setting item will be skipped and the next viable menu number that DOES have an available setting will be displayed.)



- 3** Select the desired setting.

Note

Settings are normally changed by using the "▲" and "▼" keys to select a value (or the number that corresponds to the desired setting) and then pressing the Enter key.
When it is necessary to type in a value or number directly (such as with a network address or the time, etc.), use the numeric keys to enter the desired information and then press the Enter key. (When you enter a network address it necessary to press the Enter key after each block of 3 digits.)




- 4** Press the Printer key again to switch back to the copier mode.


1. Printer Settings (15 ppm copier)

■ Operation keys

<15 ppm copier - Inch version>

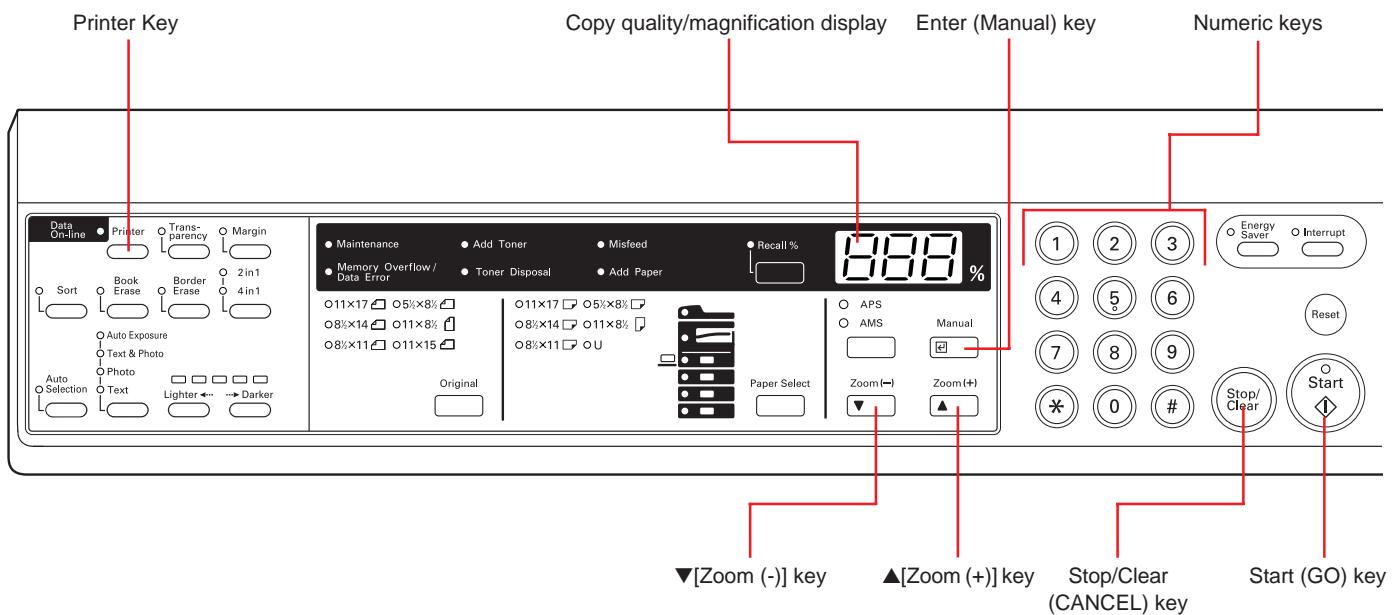

<15 ppm copier - Metric version>

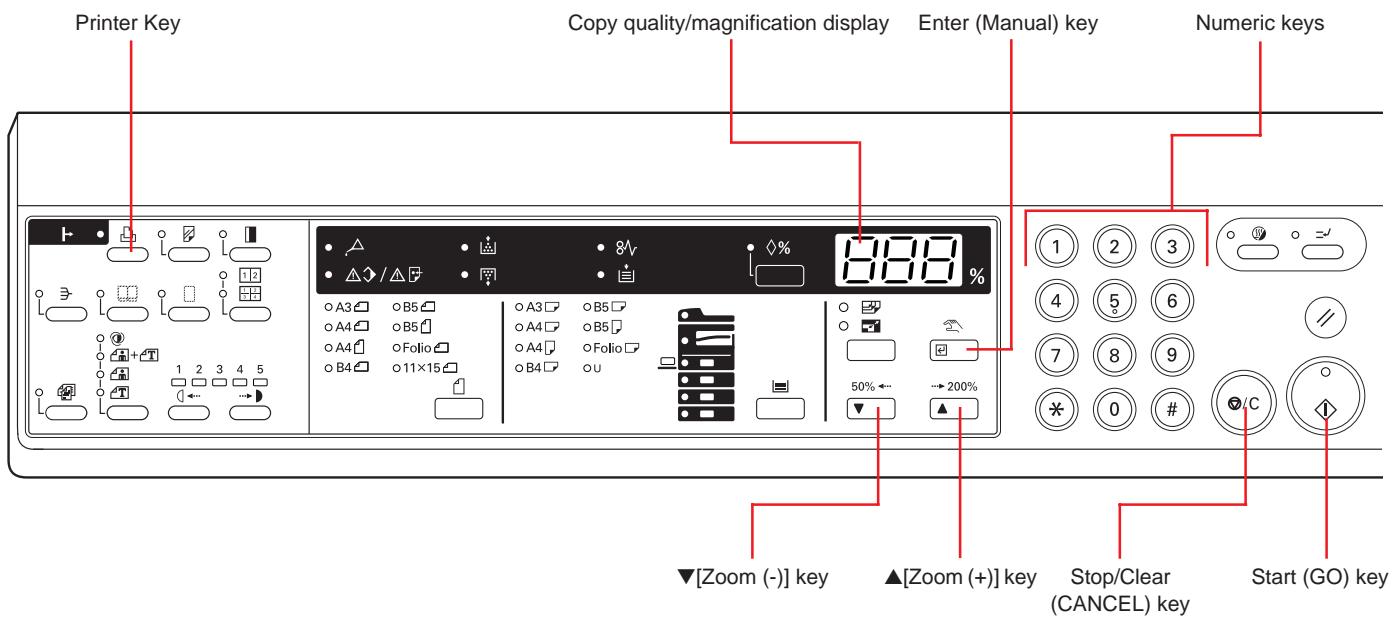

1. Printer Settings (15 ppm copier)

1-2 List of settings

Menu number	Item	Available settings	Remarks
P11	Printer Status Page print out Prints out a list of such items as the current printer default settings and memory volume, etc.	---	Print out will begin as soon as the corresponding menu number is displayed and the Enter key pressed.
P20	Parallel TX/RX mode Sets the transmission and reception mode when the printer is connected to your computer with a parallel interface.	(1) Auto (2) Normal (3) High Speed (4) Nibble (high)	
P21	NetWare ON/OFF	(1) On (2) Off	Available only when the Network Card is installed.
P22	NetWare frame type Sets the NetWare frame type.	(1) Auto (2) 802.3 (3) Ethernet II (4) 802.2 (5) 802.3 SNAP	Available only when the Network Card is installed.
P23	TCP/IP ON/OFF	(1) On (2) Off	Available only when the Network Card is installed.
P24	DHCP ON/OFF	(1) On (2) Off	Available only when the Network Card is installed.
P25	IP address	Enter the address.	Available only when the Network Card is installed.
P26	Subnet Mask	Enter the address.	Available only when the Network Card is installed.
P27	Gateway address	Enter the address.	Available only when the Network Card is installed.
P28	EtherTalk ON/OFF	(1) On (2) Off	Available only when the Network Card is installed.
P29	Network Card Status Page print out ON/OFF Sets whether a Status Page regarding conditions in the Network Card will be printed out as well when the standard Status Page for the printer (menu: P11) or that for use by your service representative (menu: P76) are printed out. A more detailed Status Page is printed out together with the "Service Rep Status Page print out" setting (menu: P76).	(1) On (2) Off	Available only when the Network Card is installed.
P30	Emulation protocol (parallel interface) Sets the emulation protocol that will be used.	(1) Line Printer (2) IBM Proprietary (3) DIABLO 630 (4) EPSON LQ-850 (5) PCL 6 (6) KPDL (7) KPDL (AUTO)	

1. Printer Settings (15 ppm copier)

Menu number	Item	Available settings	Remarks
P31	KPDL Error Report print out ON/OFF Sets whether an Error Report will be automatically printed out whenever a KPDL error occurs.	(1) On (2) Off	
P32	Auto emulation switching (parallel interface) Sets the back-up emulation that, depending upon the type of data received, may be switched to for printing out when "KPDL (AUTO)" (setting: 7) is selected under the "Emulation protocol" setting (menu: P30).	(1) Line Printer (2) IBM Proprinter (3) DIABLO 630 (4) EPSON LQ-850 (5) PCL 6	
P35	Emulation protocol (network interface) Sets the emulation protocol that will be used.	(1) Line Printer (2) IBM Proprinter (3) DIABLO 630 (4) EPSON LQ-850 (5) PCL 6 (6) KPDL (7) KPDL (AUTO)	Available only when the Network Card is installed.
P37	Auto emulation switching (network interface) Sets the back-up emulation that, depending upon the type of data received, may be switched to for printing out when "KPDL(AUTO)" (setting: 7) is selected under the "Emulation protocol" setting (menu: P30)	(1) Line Printer (2) IBM Proprinter (3) DIABLO 630 (4) EPSON LQ-850 (5) PCL 6	Available only when the Network Card is installed.
P40	Number of copies	001 - 999	
P42	Page Protect If "AUTO" (setting: 1) is selected here, the machine will monitor the data and, if necessary, will automatically turn Page Protect ON. If a "Print overrun" error (error code: E80) does happen to occur even then, the machine will automatically change the Page Protect setting to "ON" (setting: 2).	(1) Auto (2) On	
P43	Line Feed (LF) handling (parallel interface)	(1) LF only (2) CR and LF (3) Ignore LF	
P44	Line Feed (LF) handling (network interface)	(1) LF only (2) CR and LF (3) Ignore LF	Available only when the Network Card is installed.
P45	Carriage Return (CR) handling (parallel interface)	(1) CR only (2) CR and LF (3) Ignore CR	
P46	Carriage Return (CR) handling (network interface)	(1) CR only (2) CR and LF (3) Ignore CR	Available only when the Network Card is installed.

1. Printer Settings (15 ppm copier)

Menu number	Item	Available settings	Remarks
P47	Wide A4 ON/OFF Increases the printing area on A4 size paper.	(1) On (2) Off	
P48	Printing orientation (parallel interface)	(1) Portrait (2) Landscape	
P49	Printing orientation (network interface)	(1) Portrait (2) Landscape	Available only when the Network Card is installed.
P50	Smoothing ON/OFF Allows a printing resolution of an interpolated 2400 dpi x 600 dpi through the smoothing process.	(1) On (2) Off	
P51	EcoPrint ON/OFF Allows printing in a toner-saving mode. This mode is especially suited for test pages, etc., where high printing quality is not required.	(1) On (2) Off	
P52	Printing resolution	(1) 300 dpi (2) 600 dpi	
P55	RAM disk ON/OFF	(1) On (2) Off	At least 16 MB of additional memory (option) must be installed.
P56	RAM disk size Sets the amount of memory that will be used as a RAM disk. The maximum size that can be selected is the total amount of memory installed minus the amount used by the system (9 MB).	01 - 99 (MBytes)	
P61	A4 & Letter usage ON/OFF Allows both A4 and letter size paper to be utilized as though they are the same size.	(1) On (2) Off	
P62	Bypass mode If "First" (setting: 2) is selected here and there is paper set in the Multi-Bypass, paper feed will be accomplished from the Multi-Bypass.	(1) Cassette (2) First	
P70	Force-print time-out If "000" seconds is selected here, successive pages will not be printed until they are manually force-printed (by pressing the Start key in the printer mode).	000 - 495 (sec.)	

1. Printer Settings (15 ppm copier)

Menu number	Item	Available settings	Remarks
P71	Receive dump mode The data that the printer receives for debugging programs and files is turned into hexadecimal code and printed out. If "OK" (setting: 1) is selected here, this receive dump mode will be activated. The receive dump mode will be canceled under the following circumstances: <ul style="list-style-type: none"> • The Start key is pressed in the printer mode. • A force-print time-out occurs. 	(1) OK	
P72	Printer reset Resets the Printer Board only even without turning the power to the machine OFF.	(1) OK	
P73	Resource protect mode Protects the resource data of fonts and macros downloaded through PCL6 and, even if the emulation protocol is switched, the PCL resource will be saved in the printer's memory. If "Permanent" (setting: 2) is selected here, temporary resources will not be saved. If, however, "Permanent/Temporary" (setting: 3) is selected, temporary resources will also be saved. Permanent/Temporary	(1) Off (2) Permanent (3) Permanent/Temporary	At least 16 MB of additional memory (option) must be installed.
P74	Auto Continue ON/OFF If one of the following error messages appears and "On" has been selected here, the error state will be released and the printing operation will be restarted automatically after a specified amount of time. "Memory overflow (error code : E70)" "Print overrun (error code : E80)"	(1) On (2) Off	
P75	Recovery time for Auto Continue Sets the amount of time before Auto Continue engages when "On" (setting: 1) is selected under the "Auto Continue ON/OFF" setting (menu: P74). If "000" seconds is selected here, Auto Continue will engage immediately after the error.	000 - 495 (sec.)	
P76	Service Rep Status Page print out Prints out a Status Page for use by your service representative.	— — —	Print out will begin as soon as the corresponding menu number is displayed and the Enter key pressed.

2. Printer Settings (20 ppm copier)

2-1 Procedure for making settings

Press the Printer key. The machine will switch to the printer mode.

1



Use the “▲” and “▼” cursor keys to select “MENU” and then press the Enter key.

2



Select the desired setting.
(Refer to “2-2 Menu flow chart” on page 2-3 for a list of the various possible settings.)

Note

Settings are categorized into a hierarchy under the “MENU” command. Use the “▲” and “▼” cursor keys to select “MENU” and then press the Enter key to access the menu of available setting items. Once the desired setting is selected, press the Enter key once again.



Change the desired setting.
(Refer to “2-3 List of settings” on page 2-7 for information regarding each item and its possible settings.)

Note

Settings are normally changed (turned ON and OFF, etc.) by using the “▲” and “▼” cursor keys to move the selection cursor (➡) and select the desired setting, and then pressing the Enter key.

When it is necessary to type in a value or number directly (such as with a network address or the time, etc.), use the numeric keys to enter the desired information and the cursor left and right keys to change the location of the cursor. Once entry is complete, press the Enter key.




Press the Printer key again to switch back to the copier mode.

5


2. Printer Settings (20 ppm copier)

■ Operation keys

<20 ppm copier - Inch version>

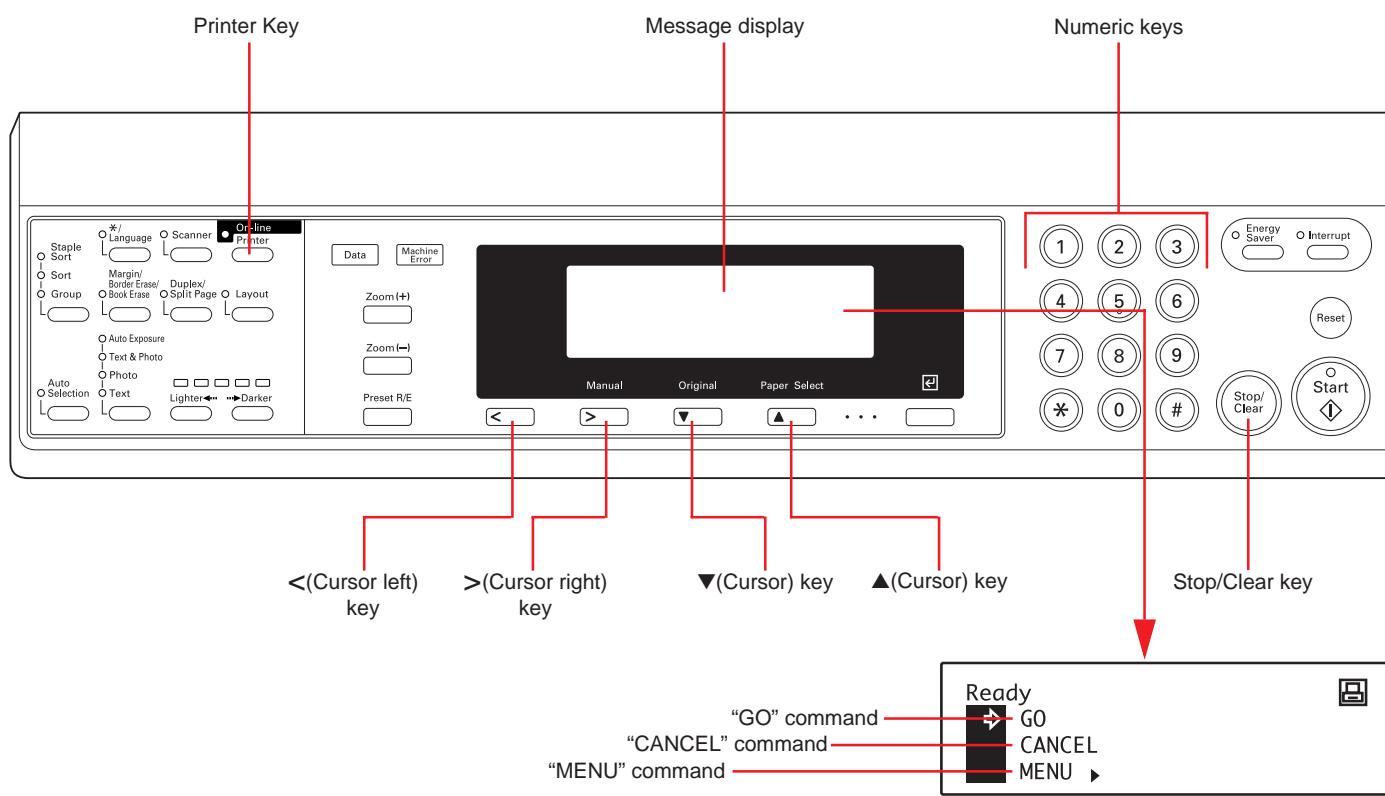


<20 ppm copier - Metric version>

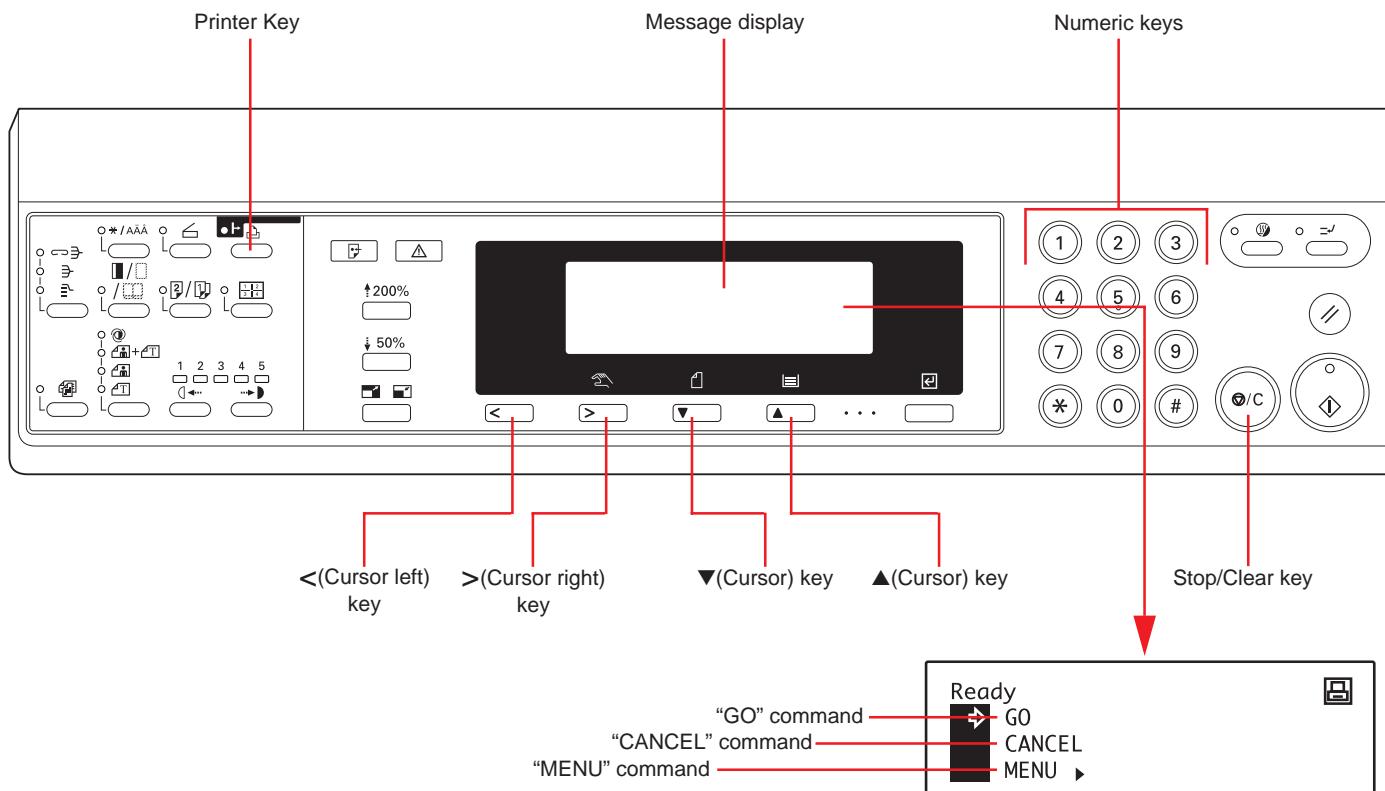

2. Printer Settings (20 ppm copier)

2-2 Menu flow chart

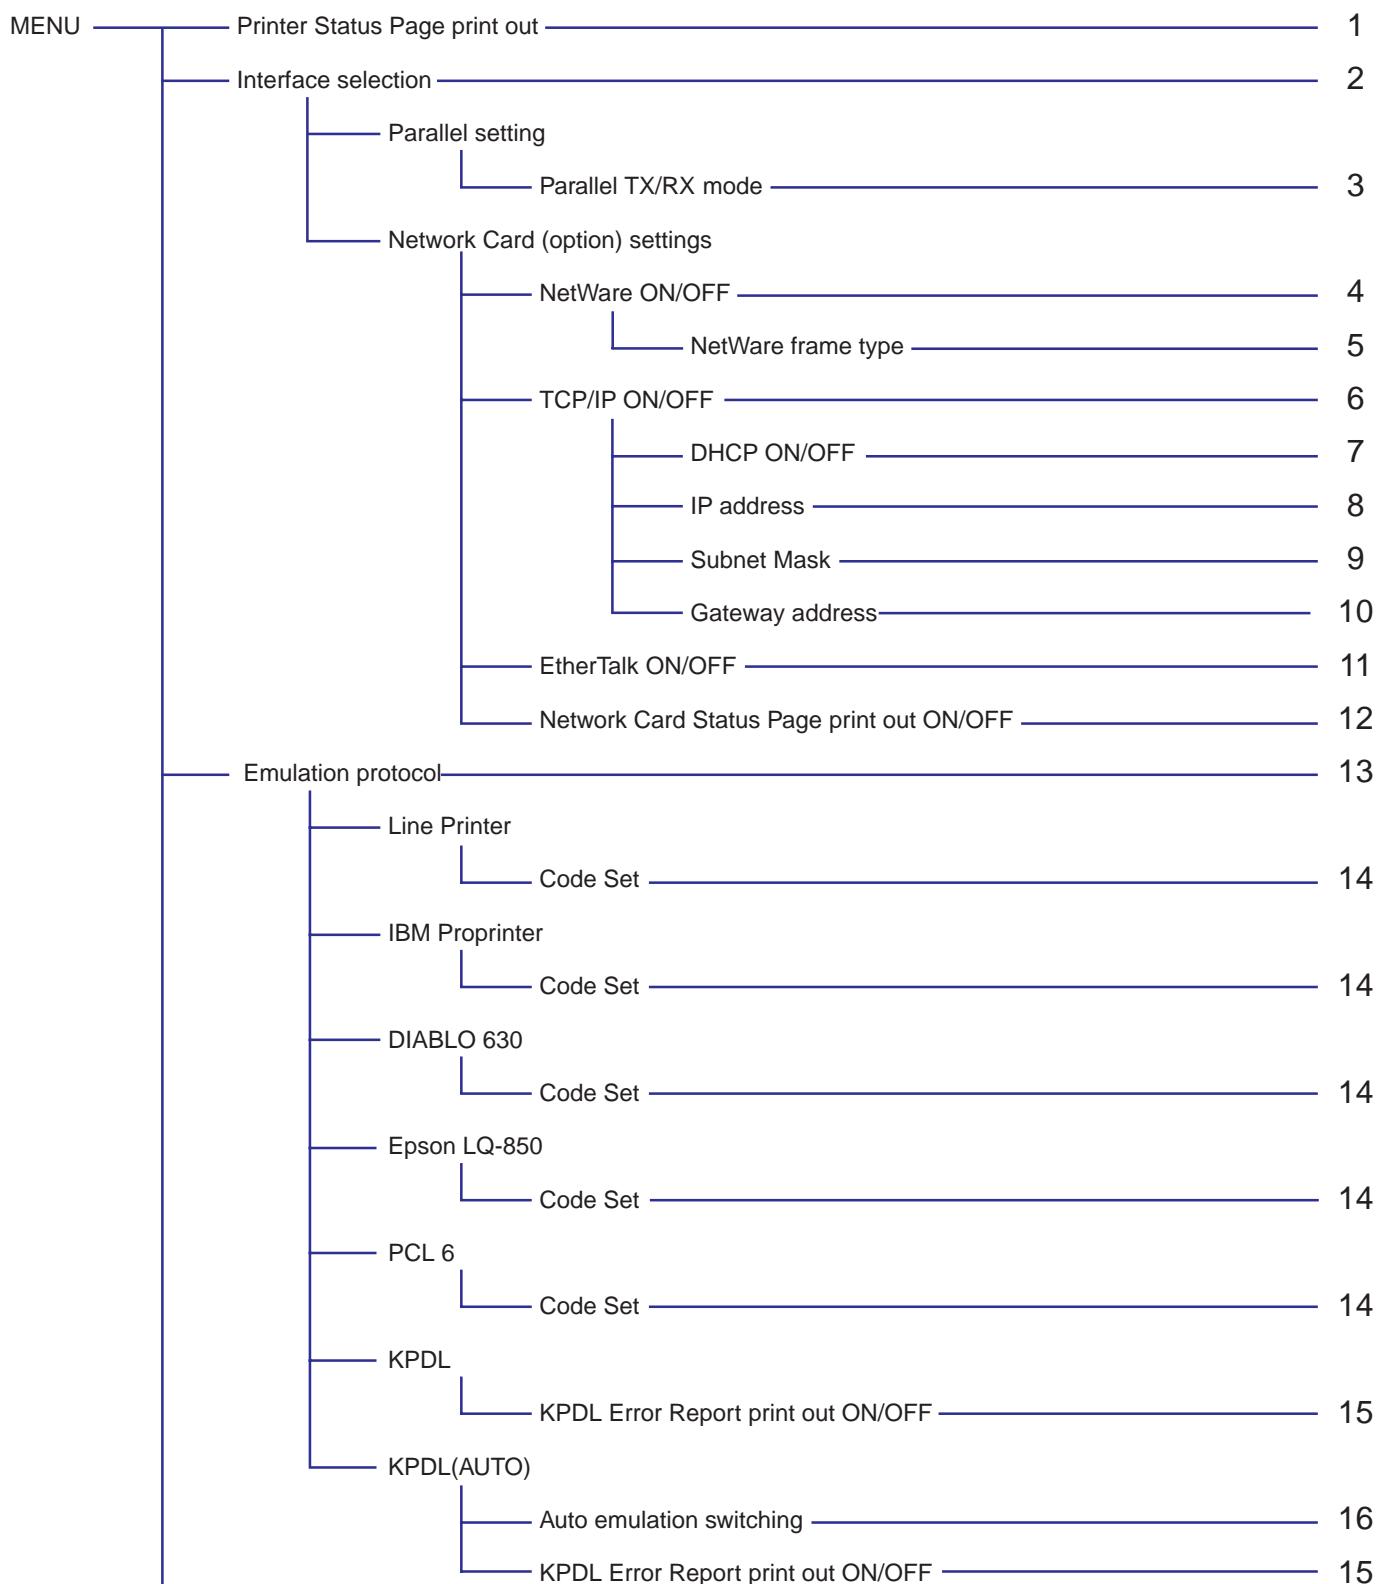

2. Printer Settings (20 ppm copier)

Font settings	
Internal	
Font selection	17
Courier font	18
Letter Gothic font	19
Font List print out	20
Option	
Font selection	17
Font List print out	20
Printing environment settings	
Number of copies	21
Printing orientation	22
Page Protect	23
Line Feed (LF) handling	24
Carriage Return (CR) handling	25
Wide A4 ON/OFF	26
Printing resolution settings	
Smoothing ON/OFF	27
EcoPrint ON/OFF	28
Printing resolution	29

↓

2. Printer Settings (20 ppm copier)

RAM disk ON/OFF	30
RAM disk size	31
Reading data	32
Reading program data	33
Writing data	34
Deleting data	35
Deleting font data	36
Deleting program data	37
Deleting macro data	38
Partition List print out	39
Memory Card settings	
Reading fonts	40
Reading macro data	41
Reading data	42
Reading program data	43
Writing data	44
Deleting data	45
Deleting font data	46
Deleting program data	47
Deleting macro data	48
Formatting the Memory Card	49
Partition List print out	50



2. Printer Settings (20 ppm copier)

Paper handling settings	
Duplex mode	51
A4 & Letter usage ON/OFF	52
Bypass mode	53
Other settings	
Form feed time-out	54
Receive dump mode	55
Printer reset	56
Resource protect mode	57
Auto Continue ON/OFF	58
Recovery time for Auto Continue	59
Service	
Service Rep Status Page print out	60

2. Printer Settings (20 ppm copier)

2-3 List of settings

Item No.	Item	Display message	Available settings	Remarks
1	Printer Status Page print out Prints out a list of such items as printer default settings and memory volume, etc.	Print Status Page	No, Print	
2	Interface selection When the optional Network Card is installed, the available interfaces are displayed. The arrow (>) will indicate the currently selected interface. The printer will automatically switch to the appropriate interface for printing.	Interface	Parallel, Option	"Option" is displayed only when the Network Card is installed.
3	Parallel TX/RX mode Sets the transmission and reception mode when the printer is connected to your computer with a parallel interface.	Parallel	Auto, Normal, High Speed, Nibble (high)	
4	NetWare ON/OFF	NetWare	On, Off	Displayed only when the Network Card is installed.
5	NetWare frame type Sets the NetWare frame type.	NetWare Frame	Auto, 802.3, Ethernet II, 802.2, 802.3 SNAP	Displayed only when the NetWare setting is turned "On".
6	TCP/IP ON/OFF	TCP/IP	On, Off	Displayed only when the Network Card is installed.
7	DHCP ON/OFF	DHCP	On, Off	Displayed only when the Network Card is installed.
8	IP address	IP Address	Enter the address.	Displayed only when the Network Card is installed.
9	Subnet Mask	Subnet Mask	Enter the address.	Displayed only when the Network Card is installed.
10	Gateway address	Gateway	Enter the address.	Displayed only when the Network Card is installed.
11	EtherTalk ON/OFF	EtherTalk	On, Off	Displayed only when the Network Card is installed.
12	Network Card Status Page print out ON/OFF Sets whether a Status Page regarding conditions in the Network Card will be printed out as well when the standard Status Page for the printer (item No.: 1) or that for use by your service representative (item No.: 60) are printed out. A more detailed Status Page is printed out together with the "Service Rep Status Page print out" setting (item No.: 1).	Opt. StatusPage	On, Off	Displayed only when the Network Card is installed.
13	Emulation protocol Sets the emulation protocol that will be used.	Emulation	Line Printer, IBM Proprietary, DIABLO 630, EPSON LQ-850, PCL 6, KPDL, KPDL (AUTO)	Allows you to set a different emulation for the parallel interface and the Network Card (option). Select the desired interface under the "Interface selection" setting (item No.: 2).

2. Printer Settings (20 ppm copier)

Item No.	Item	Display message	Available settings	Remarks
14	Code Set Selects the code set that will be used under each emulation protocol. (There is no selection for the code set under "KPDL" or "KPDL(AUTO)".)	Code Set	The code sets available for selection will differ depending upon the emulation protocol.	
15	KPDL Error Report print out ON/OFF Sets whether an Error Report will be automatically printed out whenever a KPDL error occurs.	Print KPDL Errs	On, Off	
16	Auto emulation switching Sets the back-up emulation that, depending upon the type of data received, may be switched to for printing out when "KPDL(AUTO)" is selected under the "Emulation protocol" setting (item No.: 13).	Alt. emulation	Line Printer, IBM Proprinter, DIABLO 630, EPSON LQ-850, PCL 6,	Allows you to set a different emulation for the parallel interface and the Network Card (option). Select the desired interface under the "Interface selection" setting (item No.: 2).
17	Font selection Selects the font that will be used for printing. This setting is made by entering the ID of the desired font. To select a font that is already installed in the printer, enter "I###" (with the corresponding font ID entered in place of the ####). To verify font IDs, print out a Font List by carrying out the "Font List print out" setting (item No.: 20). It is possible to select a font other than those already installed, such as those in the optional Memory Card.	Font ID	001 - 080	To select an installed font, select the "Internal" menu. To select a font other than those already installed, select the "Option" menu.
18	Courier font Allows you to select between "Regular" and "Dark".	Courier	Regular Dark	Displayed only when the "Internal" menu is selected.
19	Letter Gothic font Allows you to select between "Regular" and "Dark".	Letter Gothic	Regular Dark	Displayed only when the "Internal" menu is selected.
20	Font List print out Prints out a list of KPDL fonts when the emulation protocol has been set to "KPDL" or "KPDL(AUTO)".	List of Fonts	No, Print	
21	Number of copies	Copies	001 - 999	
22	Printing orientation	Orientation	Portrait, Landscape	Allows you to set a different printing orientation for the parallel interface and the Network Card (option). Select the desired interface under the "Interface selection" setting (item No.: 2).

2. Printer Settings (20 ppm copier)

Item No.	Item	Display message	Available settings	Remarks
23	Page Protect If "AUTO" is selected here, the machine will monitor the data and, if necessary, will automatically turn Page Protect ON. If a "Print overrun" error does happen to occur even then, the machine will automatically change the Page Protect setting to "ON".	Page Protect	Auto, On	
24	Line Feed (LF) handling	LF Action	LF only, CR and LF, Ignore LF	Allows you to set different line feed handling for the parallel interface and the Network Card (option). Select the desired interface under the "Interface selection" setting (item No.: 2).
25	Carriage Return (CR) handling	CR Action	CR only, CR and LF, Ignore CR	Allows you to set different carriage return handling for the parallel interface and the Network Card (option). Select the desired interface under the "Interface selection" setting (item No.: 2).
26	Wide A4 ON/OFF Increases the printing area on A4 size paper.	Wide A4	On, Off	
27	Smoothing ON/OFF Allows a printing resolution of an interpolated 2400 dpi x 600 dpi through the smoothing process.	KIR Mode	On, Off	
28	EcoPrint ON/OFF Allows printing in a toner-saving mode. This mode is especially suited for test pages, etc., where high printing quality is not required.	Ecoprint Mode	On, Off	
29	Printing resolution	Resolution	300 dpi, 600 dpi	
30	RAM disk ON/OFF	RAM DISK Mode	On, Off	At least 16 MB of additional memory (option) must be installed.
31	RAM disk size Sets the amount of memory that will be used as a RAM disk. The maximum size that can be selected is the total amount of memory installed minus the amount used by the system (9 MB).	RAM DISK Size	01 - 99 (MBytes)	Displayed only when "On" is selected under the "RAM disk ON/OFF" setting (item No.: 30).
32	Reading data Reads the selected data on the RAM disk.	Read Data	Select the name of the partition which holds the data from among those displayed.	Displayed only when there is appropriate data in the RAM disk.
33	Reading program data Reads the selected program data on the RAM disk.	Read Program	Select the name of the partition which holds the program from among those displayed.	Displayed only when there is appropriate program data in the RAM disk.
34	Writing data If "OK" is selected here, the machine will enter a "waiting for data" state until data is sent from the host computer. To exit this state, select the "GO" command in the printer mode and then press the Enter key.	Write Data	OK	Displayed only when "On" is selected under the "RAM disk ON/OFF" setting (item No.: 30).

2. Printer Settings (20 ppm copier)

Item No.	Item	Display message	Available settings	Remarks
35	Deleting data Deletes the selected data from the RAM disk.	Delete Data	Select the name of the partition which holds the data from among those displayed.	Displayed only when there is appropriate data in the RAM disk.
36	Deleting font data Deletes the selected font data from the RAM disk.	Delete Font	Select the name of the font from among those displayed.	Displayed only when there is appropriate font data in the RAM disk.
37	Deleting program data Deletes the selected program data from the RAM disk.	Delete Program	Select the name of the partition which holds the program from among those displayed.	Displayed only when there is appropriate program data in the RAM disk.
38	Deleting macro data Deletes the selected macro data from the RAM disk.	Delete Macro	Select the name of the partition which holds the macro from among those displayed.	Displayed only when there is appropriate macro data in the RAM disk.
39	Partition List print out	List of Partitions	No, Print	Displayed only when "On" is selected under the "RAM disk ON/OFF" setting (item No.: 30).
40	Reading fonts If "OK" is selected here, the font data in the Memory Card will be read all at once.	Read Fonts	OK	Displayed only when there is appropriate font data in the Memory Card.
41	Reading macro data If "OK" is selected here, the macro data in the Memory Card will be read all at once.	Read Macro	OK	Displayed only when there is appropriate macro data in the Memory Card.
42	Reading data Reads the selected data in the Memory Card.	Read Data	Select the name of the partition which holds the data from among those displayed.	Displayed only when there is appropriate data in the Memory Card.
43	Reading program data Reads the selected program data in the Memory Card.	Read Program	Select the name of the partition which holds the program from among those displayed.	Displayed only when there is appropriate program data in the Memory Card.
44	Writing data If "OK" is selected here, the machine will enter a "waiting for data" state until data is sent from the host computer. To exit this state, select the "GO" command in the printer mode and then press the Enter key.	Write Data	OK	Displayed only when the Memory Card is installed.
45	Deleting data Deletes the selected data from the Memory Card.	Delete Data	Select the name of the partition which holds the data from among those displayed.	Displayed only when there is appropriate data in the Memory Card.

2. Printer Settings (20 ppm copier)

Item No.	Item	Display message	Available settings	Remarks
46	Deleting font data Deletes the selected font data from the Memory Card.	Delete Font	Select the name of the font from among those displayed.	Displayed only when there is appropriate font data in the Memory Card.
47	Deleting program data Deletes the selected program data from the Memory Card.	Delete Program	Select the name of the partition which holds the program from among those displayed.	Displayed only when there is appropriate program data in the Memory Card.
48	Deleting macro data Deletes the selected macro data from the Memory Card.	Delete Macro	Select the name of the partition which holds the macro from among those displayed.	Displayed only when there is appropriate macro data in the Memory Card.
49	Formatting the Memory Card If "OK" is selected here, formatting of the Memory Card will begin.	Format	OK	Displayed only when the Memory Card is installed.
50	Partition List print out	List of Partitions	No, Print	Displayed only when the Memory Card is installed.
51	Duplex mode	Duplex Mode	None, Short edge bind, Long edge bind	Displayed only when the Duplex Unit (option) is installed.
52	A4 & Letter usage ON/OFF Allows both A4 and letter size paper to be utilized as though they are the same size.	Override A4/LT	On, Off	
53	Bypass mode If "First" is selected here and there is paper set in the Multi-Bypass, paper feed will be accomplished from the Multi-Bypass.	Bypass Mode	Cassette, First	
54	Form feed time-out If "000" seconds is selected here, successive pages will not be printed until they are manually force-printed (by selecting the "GO" command in the printer mode and then pressing the Enter key).	Form Feed Time out	000 - 495 (sec.)	

2. Printer Settings (20 ppm copier)

Item No.	Item	Display message	Available settings	Remarks
55	Receive dump mode The data that the printer receives for debugging programs and files is turned into hexadecimal code and printed out. If "OK" is selected here, this receive dump mode will be activated. The receive dump mode will be canceled under the following circumstances: <ul style="list-style-type: none"> • Form feed is initiated (by selecting the "GO" command in the printer mode and then pressing the Enter key). • A force-print time-out occurs. 	Print HEX-DUMP	OK	
56	Printer reset Resets the Printer Board only even without turning the power to the machine OFF.	Printer Reset	OK	
57	Resource protect mode Protects the resource data of fonts and macros downloaded through PCL6 and, even if the emulation protocol is switched, the PCL resource will be saved in the printer's memory. If "Permanent" is selected here, temporary resources will not be saved. If, however, "Per/Temp" is selected, temporary resources will also be saved.	Resource pro.	Off, Permanent, Per/Temp	At least 16 MB of additional memory (option) must be installed.
58	Auto Continue ON/OFF If one of the following error messages appears and "On" has been selected here, the error state will be released and the printing operation will be restarted automatically after a specified amount of time. "Memory overflow" "Print overrun"	Auto Continue	On, Off	
59	Recovery time for Auto Continue Sets the amount of time before Auto Continue engages when "On" is selected under the "Auto Continue ON/OFF" setting (item No.: 58). If "000" seconds is selected here, Auto Continue will engage immediately after the error.	Change #	000 - 495 (sec.)	Displayed only when "On" is selected under the "Auto Continue ON/OFF" setting (item No.: 58).
60	Service Rep Status Page print out Prints out a Status Page for use by your service representative.	Print Status page	No, Print	

3. Memory Card / RAM Disk

3-1 Memory Card

This machine comes equipped with a slot for inserting a Memory Card.


Use a Memory Card that contains fonts in order to print with fonts other than those already installed in the machine, or use the card to save and then read print data.

Inserting the Memory Card

Insert the Memory Card into the slot carefully with the front of the card facing the rear of the machine.

IMPORTANT!

BE SURE to turn the main switch OFF (O) BEFORE inserting or removing the Memory Card.

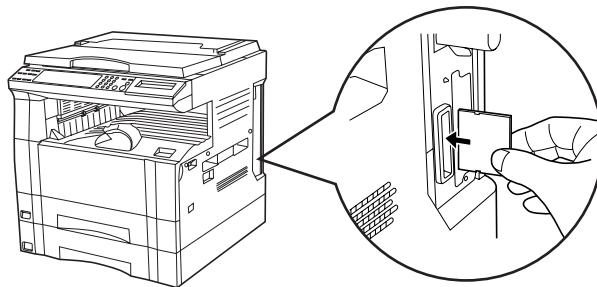

- * The Memory Card is managed through printer control commands received from your computer. Refer to "3-3 Printer control commands" on page 3-2.
- * In 20 ppm copiers, the Memory Card is managed from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

3-2 RAM Disk

In this machine, it is possible to create a RAM Disk, or a portion of memory that is used as a virtual disk. By creating a RAM Disk of a desired size from among the total memory in the printer, it is possible to perform electronic sorting (which shortens the overall time required for printing) as well as to save data to and retrieve data from that disk very quickly.

Additional memory (option) must be installed before a RAM Disk can be created.

IMPORTANT!

The RAM Disk is created from that portion of the printer's memory that is normally available to the user. Thus, if the size of the RAM disk created is too large, printing speed may actually be decreased or the machine may run out of available memory.

WARNING: Resetting the printer or turning the main switch OFF (O) will erase all data written to the RAM Disk.

The factory default setting for the RAM Disk is "OFF". In order to create a RAM Disk it is necessary to change the setting on the operation panel of the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1, or "1. Printer Settings (15 ppm copier)" on page 1-1, as appropriate to your machine, for information on the appropriate procedure.

- * The RAM Disk can be used for saving and reading print data.
- * Saving and reading data on the RAM Disk is managed through printer control commands received from your computer. Refer to "3-3 Printer control commands" on page 3-2.
- * In 20 ppm copiers, the RAM Disk is managed from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

3. Memory Card / RAM Disk

3-3 Printer control commands

It is possible to issue simple commands to the Memory Card and RAM Disk from the MS-DOS Prompt in Windows.

3-3-1 Using printer control commands

A printer control command line includes “!R!” (Command operation start), as well the actual commands and parameters that are to be implemented and that are entered after that.

The basic configuration of a printer control command line is as follows:

[Example] To delete the print data entitled “SAMPLE.txt” from the Memory Card

ECHO !R! RWER D,A,2,“SAMPLE.txt”; EXIT;>LPT1
A B C D E F

A: DOS command

B: Command operation start

C: Command (“RWER D” is the command to delete data)

D: Parameters (“A” refers to the Memory Card, “2” refers to the type of data [in this case print data] and “SAMPLE.txt” is the name of the corresponding partition)

E: Command operation end

F: Printer connection port (Network: “PRN”, Local: “LPT1”, etc.)

CAUTIONS

- When issuing DOS commands in the Japanese input mode, ALWAYS use JIS ASCII (JIS C6220) characters. Kanji Code and Kanji Half-Space Code input will not work.
- Enter all commands in uppercase (capital) letters.
- Be sure to enter a semi-colon (;) at the end of each standard command [shown as “C” in the example above] (or after the corresponding parameter, if included), and separate each individual parameter with a comma (,).
- Be sure to enter a space before and after the “!R!” command, as well as before “EXIT;”.

3. Memory Card / RAM Disk

3-3-2 Formatting the Memory Card

Perform the following procedure when you want to initialize the Memory Card from your computer.

- * In 20 ppm copiers, the Memory Card is initialized from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

IMPORTANT!

WARNING: Initializing the Memory Card will erase all data in the card. Make sure that you want to initialize that Memory Card before starting the procedure.

Procedure

- 1 Insert the Memory Card that you want to initialize into the Memory Card slot.

- 2 Open an MS-DOS Prompt in Windows.

- 3 Type in the command to format the Memory Card and then press the ENTER key.

```
C:\WINDOWS>ECHO !R! RWER F,A; EXIT;>LPT1
```

- 4 Once the Memory Card is formatted, the "FORMAT INFORMATION" report will be printed out.

3-3-3 Writing print data

Perform the following procedure when you want to write print data to a Memory Card or RAM Disk from your computer.

- * In 20 ppm copiers, print data commands are entered from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.
- * Verify beforehand that the Memory Card is in a write-enabled state and that the RAM Disk is turned ON.

Procedure

- 1 Open an MS-DOS Prompt in Windows.

- 2 Type in the command to write data and then press the ENTER key.

[Example] To write the print data entitled "SAMPLE.txt" to a Memory Card
* To write the data to a RAM Disk, simply change the "A" parameter to "0".

```
C:\WINDOWS>ECHO !R! RWER W,_A_,2,"SAMPLE.txt";>LPT1_
```

- 3 Send the print data from your computer.

```
C:\WINDOWS>COPY /b SAMPLE.txt LPT1
```

- 4 Once the print data is sent, the next command can be sent.

```
C:\WINDOWS>ECHO !R! WRED; EXIT;>LPT1_
```

- 5 Print out the Partition List to verify whether or not the data was written properly.

* Refer to "3-3-7 Printing out the Partition List" for information on printing that list.

* In 20 ppm copiers, Partition List print out is accomplished from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

3. Memory Card / RAM Disk

3-3-4 Writing font data

Perform the following procedure when you want to write font data to a Memory Card or RAM Disk from your computer. At the same time as the font data is written to disk, it will be sent to the printer as well.

* Verify beforehand that the Memory Card is in a write-enabled state and that the RAM Disk is turned ON.

* Only TrueType fonts can be written to the Memory Card or RAM Disk.

Procedure

1 Open an MS-DOS Prompt in Windows.

2 Type in the command to write data and then press the ENTER key.

[Example] To write the font data entitled "FONT1" to a Memory Card

```
C:\WINDOWS>ECHO !R! RWER S,A,0,"FONT1","FONT",45040;>LPT1  
①② ③ ④ ⑤
```

NOTES

The parameters contained within the command line are as follows:

1: "A" refers to the Memory Card and "0" refers to the RAM Disk

2: "0" refers to a TrueType font, "1" refers to a Japanese TrueType font, "2" refers to a Japanese TrueType Collection font

3: File name

4: Font name

5: Font data length (binary data bytes)

3 Send the font data from your computer.

```
C:\WINDOWS>COPY /b FONT1 LPT1_
```

4 Once the font data is sent, the next command can be sent.

```
C:\WINDOWS>ECHO !R! WRED; EXIT;>LPT1_
```

5 Print out the Partition List to verify whether or not the data was written properly.

* Refer to "3-3-7 Printing out the Partition List" for information on printing that list.

* In 20 ppm copiers, Partition List print out is accomplished from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

3. Memory Card / RAM Disk

3-3-5 Reading print data

Perform the following procedure when you want to read print data that has been saved on a Memory Card or RAM Disk.

- * In 20 ppm copiers, reading print data is accomplished from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.
- * Verify beforehand that the Memory Card is in a write-enabled state and that the RAM Disk is turned ON.
- * To verify saved data and the corresponding partition name, it is helpful to print out the Partition List. Refer to "3-3-7 Printing out the Partition List" for information on printing that list.
- * In 20 ppm copiers, Partition List print out is accomplished from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

Procedure

1 Open an MS-DOS Prompt in Windows.

2 Type in the command to read data and then press the ENTER key.

[Example] To read the print data entitled "SAMPLE.txt" from a Memory Card

* To read the data from a RAM Disk, simply change the "A" parameter to "0".

```
C:\WINDOWS>ECHO !R! RWER R,A,2,"SAMPLE.txt"; EXIT;>LPT1
```

3 Print out of the corresponding data will begin.

3-3-6 Deleting print data or font data

Perform the following procedure when you want to delete print data or font data that has been saved on a Memory Card or RAM Disk.

- * In 20 ppm copiers, deleting data is accomplished from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.
- * Verify beforehand that the Memory Card or RAM Disk contains the data that you want to delete.
- * To verify saved data and the corresponding partition name, it is helpful to print out the Partition List. Refer to "3-3-7 Printing out the Partition List" for information on printing that list.
- * In 20 ppm copiers, Partition List print out is accomplished from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

Procedure

1 Open an MS-DOS Prompt in Windows.

2 Type in the command to delete data and then press the ENTER key.

[Example] To delete the print data entitled "SAMPLE.txt" from a Memory Card

* To delete the data from a RAM Disk, simply change the "A" parameter to "0".

* To delete font data, simply change the "2" parameter to "1".

```
C:\WINDOWS>ECHO !R! RWER D,A,2,"SAMPLE.txt"; EXIT;>LPT1
```

3 Deletion of the corresponding data will begin.

4 Print out the Partition List to verify whether or not the data was deleted properly.

3.Memory Card / RAM Disk

3-3-7 Printing out the Partition List

Perform the following procedure when you want to print out the Partition List in order to verify the print data and font data that has been saved on a Memory Card or RAM Disk.

* In 20 ppm copiers, Partition List print out is accomplished from the operation panel on the copier itself. Refer to "2. Printer Settings (20 ppm copier)" on page 2-1 for information on the appropriate procedure.

Procedure

1 Open an MS-DOS Prompt in Windows.

2 Type in the command to print out the Partition List and then press the ENTER key.

[Example] To print out the Partition List for a Memory Card

* To print out the Partition List for a RAM Disk, simply change the "A" parameter to "0". If you do not include this parameter, both Partition Lists will be printed out.

```
C:\WINDOWS>ECHO !R! RWER L,A; EXIT;>LPT1_
```

3 Print out of the Partition List will begin.

3-3-8 Auto Partition List print out ON/OFF

It is possible to have a Partition List printed out automatically any time data is written to a Memory Card or RAM Disk. Perform the following procedure when you want to change the setting for automatic print out.

Procedure

1 Open an MS-DOS Prompt in Windows.

2 Type in the command to have the Partition List printed out automatically and then press the ENTER key.

[Example] To turn Auto Partition List print out ON

* To turn Auto Partition List print out OFF, simply change the "E" parameter to "D".

```
C:\WINDOWS>ECHO !R! RWER I,E; EXIT;>LPT1_
```

1. Procedure for Installing and Printing with a Printer Driver

1-1 Included printer drivers

The following printer drivers are included with this product.

- * Each type of printer driver has a version appropriate to a specific model of copy machine. Be sure to choose the driver that is appropriate for your copier.

Driver type	Description	Compatible OS
KX driver	By attaching optional equipment it is possible to easily extend printer functionality. This driver will enable you to use such compound printer functions to their fullest.	Windows 95/98 Windows NT4.0 Windows 2000 Windows Me
Macintosh PPD file	A PPD (PostScript Printer Description) file is included for use with this product. Use "LaserWriter 8" as the printer driver for your Mac OS.	Macintosh System 7.61 - 9.1

Note

- When using KPDL in Windows, set "Page Description Language" to the KPDL. See "2-6 Device Setting Tab" in Page 2-9 and 2-10.

1. Procedure for Installing and Printing with a Printer Driver

1-2 System Conditions

●Windows 95

		IBM PC / AT or compatible
System requirements	CPU	i486SX 25 MHz or more
	RAM	8 MB or more
	HDD	10 MB or more
Recomended requirements	CPU	Pentium 90 MHz or more
	RAM	16 MB or more
	HDD	10 MB or more

●Windows 98

		IBM PC / AT or compatible
System requirements	CPU	i486DX 66 MHz or more
	RAM	16 MB or more
	HDD	10 MB or more
Recomended requirements	CPU	Pentium 90 MHz or more
	RAM	32 MB or more
	HDD	10 MB or more

●Windows NT 4.0

		IBM PC / AT or compatible
System requirements	CPU	i486SX 25 MHz or more
	RAM	16 MB or more
	HDD	10 MB or more
Recomended requirements	CPU	Pentium 90 MHz or more
	RAM	32 MB or more
	HDD	10 MB or more

●Windows 2000

		IBM PC / AT or compatible
System requirements	CPU	Pentium 133 MHz or more
	RAM	64 MB or more
	HDD	10 MB or more
Recomended requirements	CPU	Pentium 133 MHz or more
	RAM	64 MB or more
	HDD	10 MB or more


●Windows Me

		IBM PC / AT or compatible
System requirements	CPU	Pentium 150 MHz or more
	RAM	64 MB or more
	HDD	10 MB or more
Recomended requirements	CPU	Pentium 200 MHz or more
	RAM	64 MB or more
	HDD	10 MB or more

1. Procedure for Installing and Printing with a Printer Driver

1-3 Screen that Appears when the CD-ROM is Inserted

This section explains the screen that appears when the CD-ROM supplied with the Printing System (K) is inserted into the CD-ROM drive.

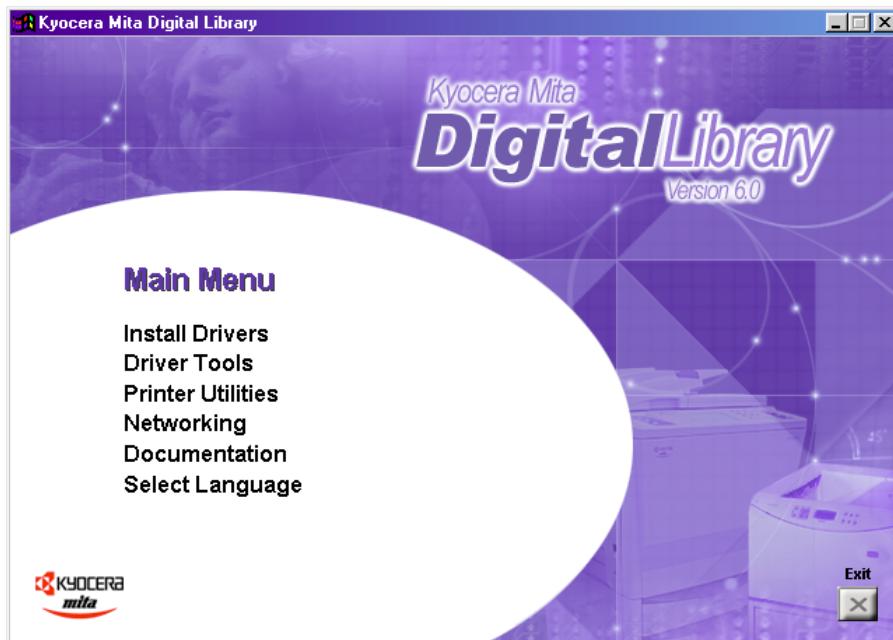

■ Install Drivers

Click to start installation of the printer driver. Follow the instructions displayed on the screen to install the printer driver.

■ Driver Tools

Click to display a menu including uninstallation of the printer driver.

[Remove Drivers]

Starts the uninstaller of the printer driver.

[Make Driver Disk]

Copies the installer program to a floppy disk. Use of this floppy disk allows you to install the printer driver without the need of the installer CD-ROM.

* Driver for Macintosh cannot be made.

■ [Network]

Click to display the KM-NET VIEWER's installation menu. Follow the instructions displayed on the screen to install the KM-NET VIEWER.

■ Documentation

Click to display the manual (PDF) supplied with the printer driver. To open this PDF manual, Adobe Acrobat Reader (developed to view PDF files) is required, so make sure that Adobe Acrobat Reader is installed before opening the manual.

[Install Acrobat Reader]

Installs Adobe Acrobat Reader.

[User's manual]

Displays the manuals (PDF) of the printer and printer driver. They explain the installation procedure of the printer driver and operation procedure of the printer.

[Release Notes], [Read me]

This file contains information which is not explained in the manuals. Please read this file before using the printer driver.

[Programming Manuals]

Displays the manuals (PDF) of the PRESCRIBE.

1. Procedure for Installing and Printing with a Printer Driver

1-4 Installing the Printer Driver (Windows)

Install the printer driver as follows:

- * The printer can be connected to the computer by one of the following two methods: local or network. If you want to connect them through network, refer to the operation manual of the operating system (OS).
- * The screens shown in the following explanation are those displayed when installing the printer driver for Windows 95/98.

1 Start Windows.

- * If any applications are currently running, exit them.

2 Insert the CD-ROM supplied with the printer into the CD-ROM drive.

A start window will appear.




3 Click Install Driver in the lower left corner of the window.

- * If the start window does not appear even if the CD-ROM is inserted, double-click My Computer on the desktop, then double-click the CD-ROM icon.


4 The Set-up Wizard window will appear, so click Next.

A list of printer models will appear.

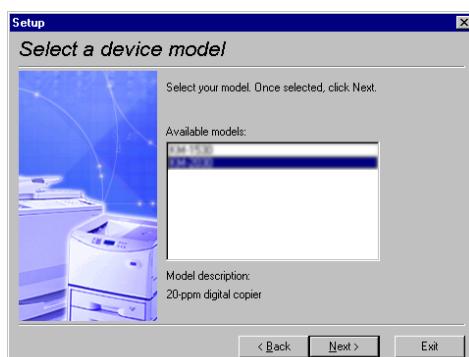

5 Select the printer you are using, then click Next.

The language to be used can be selected. Select the desired language from the box, then click Next.

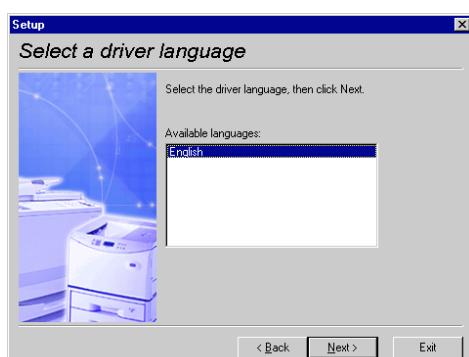


1. Procedure for Installing and Printing with a Printer Driver

Select the driver type.

7

From the list, select the type of driver to be installed, then click Next.

- * Refer to "1-1 Included printer Drivers" on page 1-1 for information regarding each printer driver.

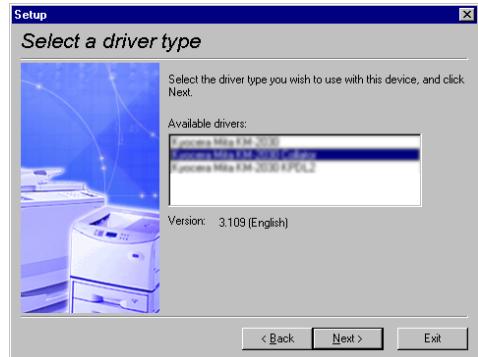


All available options will be displayed. Select the items that you want to install and then click on the [Next] button.

8

Select the connection type: Local or Network.

9

- Local: The printer is connected directly to the parallel port.
 - Network: The printer is connected to the printer via network (using a network interface).
- * If Local is selected, proceed to step 11. If Network is selected, proceed to step 10.

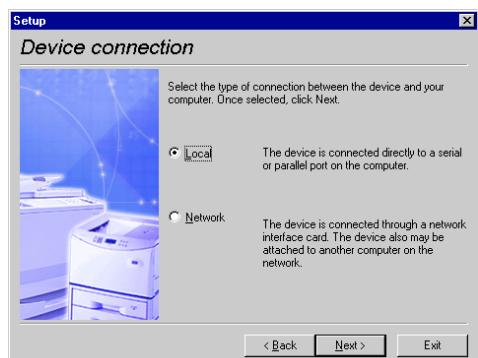


Enter the network queue name or the path for the network queue in the box.

10

To select another network queue name, press Browse.

If you are going to use a local port for the network queue, click the check box displayed below, then proceed to step 11.
Otherwise, proceed to step 12.

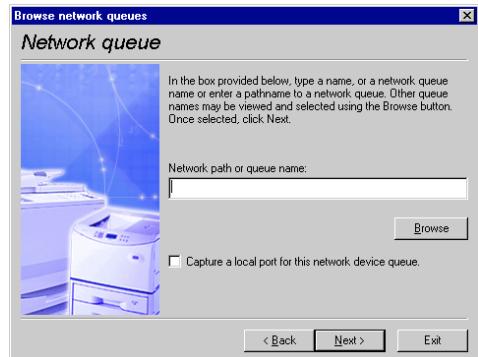


1. Procedure for Installing and Printing with a Printer Driver

11


Select a printer port. From the list, select the desired port, then click Next.

- * Normally, set to LPT1.
- * When installing the printer driver for Windows NT, the Add LPR Port button will appear below the box, so press the button to set the desired LPR printer.

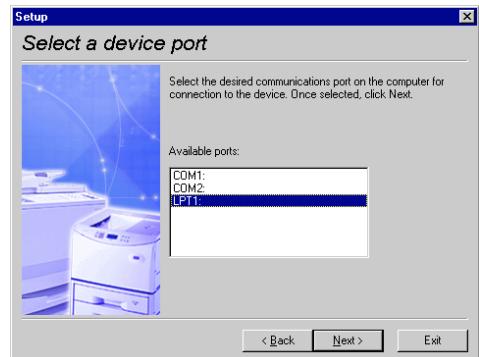

12

A name can be assigned to your printer.
Specify a new name or select the desired name from the list, then click Next.

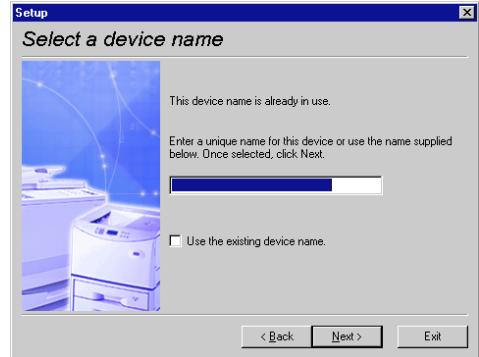


13

Specify whether this printer is to be used as the default printer.
Click Yes if so, or click No if not.



14

The settings you have made so far will appear. If they are correct, click Next.
Installation of the printer driver will start.

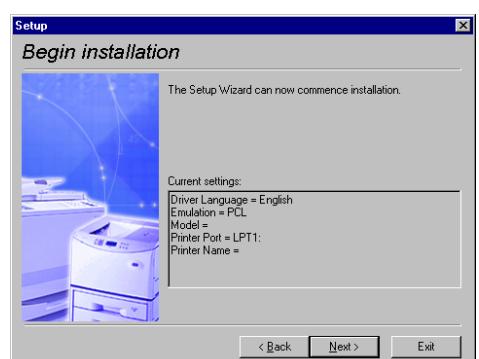


15

To exit installation, click Finish.

- * If you want to add another printer driver, click Add Printer and then repeat the same procedure.

Installation of the printer driver is now complete.

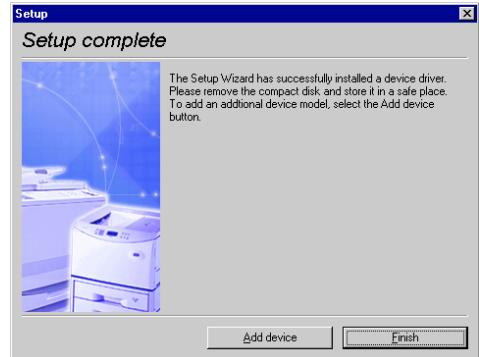

1. Procedure for Installing and Printing with a Printer Driver

1-5 Uninstalling the Printer Driver

This section explains how to uninstall the printer driver.

Use of the uninstaller supplied with the printer driver allows you not only to uninstall the printer driver, but also uninstall the printer driver related files and Windows registries.

- * Never delete Windows registries which do not relate to the printer to be uninstalled. Since Windows registries are deeply involved in the operation of the computer, the computer may malfunction if wrong registries are deleted.

1 Start Windows.

2

Insert the printer driver installer CD-ROM into the CD-ROM drive on your computer.



3

Click on [Driver Tools] and then on [Remove Drivers] from the subsequent menu.

The [Printer Deleter] dialog box will appear.

Clicking "+" mark will display printer drivers installed on the computer and Windows registries in a hierarchical (tree) structure.




4

Select the printer you are using, then select [Actions]-[Delete].

The selected printer driver will be removed.

- * The selected printer driver can also be removed by pressing the [Del] key, instead of selecting [Action]-[Delete].

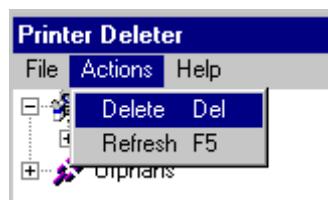

1. Procedure for Installing and Printing with a Printer Driver

1-6 Printing

The following is an example procedure for printing using a printer driver under the conditions and environment noted below.

- OS : Windows 98
- Printer driver : KX Driver
- Application : Wordpad
- Printing conditions : Print and staple

If you use a system or driver other than that noted above, use the following procedure simply as a reference tool. It is additionally recommended that you read the section corresponding to your operation system as it will contain further explanations specifically regarding that OS and other related drivers.

1

● Making the printer driver settings in Windows

Click on [Start] on the Task Bar.

The Start menu will appear.

2

Use the mouse to point to [Settings] and click on [Printers] in the corresponding submenu.


The [Printers] folder will open.

3

Use the right mouse button to click on the icon for this printer. A pop-up menu will be displayed.

Select [Properties] from that menu.

The Properties window will appear.

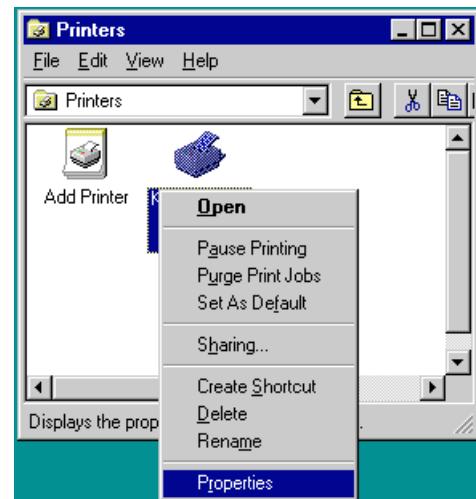

4

Click on the [Device settings] Tab.


5

Perform the following settings in order to staple your printed sets.

"Device Options" setting

- ① Select "Internal Finisher" as the "Device Options" setting.
- ② Set the "Memory" setting to more than 24 MB.
(It is necessary to increase the memory capacity of your printer.)
- ③ Select "RAM Disk".

Once you have completed these settings, click on [OK].

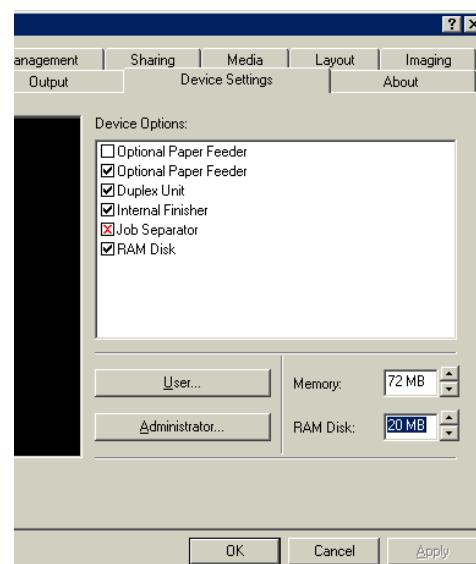


1. Procedure for Installing and Printing with a Printer Driver

6 ● Printing from the application

Use the application that you want to use to open the document that you want to print.

7 Select [Print] in the [File] menu.

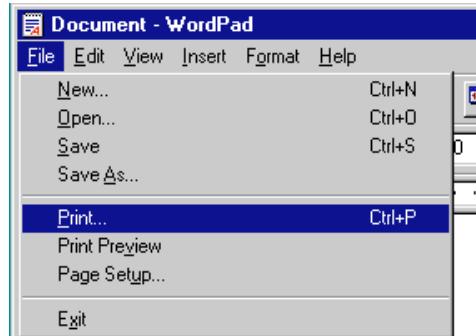


8 Select the desired number of copies that you want to make and which pages are to be printed.


Select this printer in the [Name] field.

Click on [Properties].

The Properties window will appear.

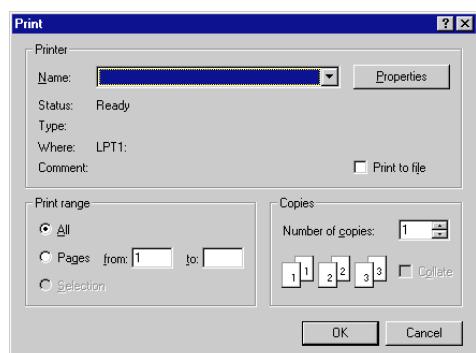

9 Click on the [Device Options] Tab.

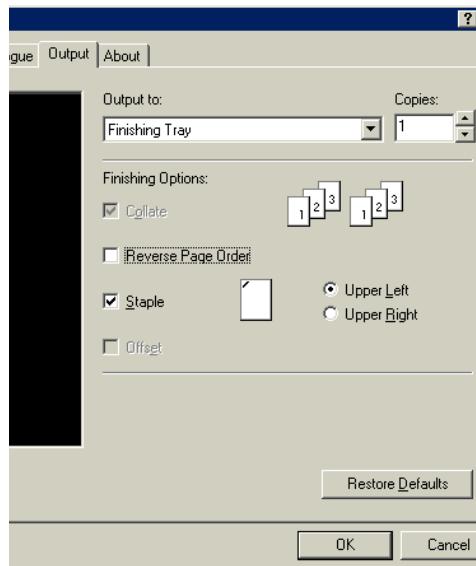

10 Perform the following settings in order to staple your printed sets.

“Output” setting

- ① Select “Finishing Tray” as the “Output to” setting.
- ② Select “Staple” as the “Finishing Options” setting.

11 Click on [OK]. You will be returned to the [Print] dialogue box. Click on [OK] once again. Printing will begin.

2. Windows KX Driver

The following section explains the functions of the KX driver.

- * The following procedure is explained as though it is being carried out in Windows 98. If you are using another operating system, use this procedure simply as reference.
- * Depending upon version upgrades of the printer driver, the screenshots shown here may differ somewhat from that of the actual printer driver.
- * Refer to the Instruction Manual for Windows regarding items that are not explained in this Instruction Handbook.

2-1 Making printing and property settings

1 Start up Windows.

2 Click on [Start] in the Task Bar.
The [Start] menu will be displayed.


3 Use the mouse to point to [Settings] and click on [Printers] in the submenu that is displayed. The [Printers] folder will open.

4 Use the right mouse button to click on the icon for this printer. A pop-up menu will be displayed.
Select [Properties] from the menu.
The Properties window will open.



2. Windows KX Driver

2-2 Media Tab

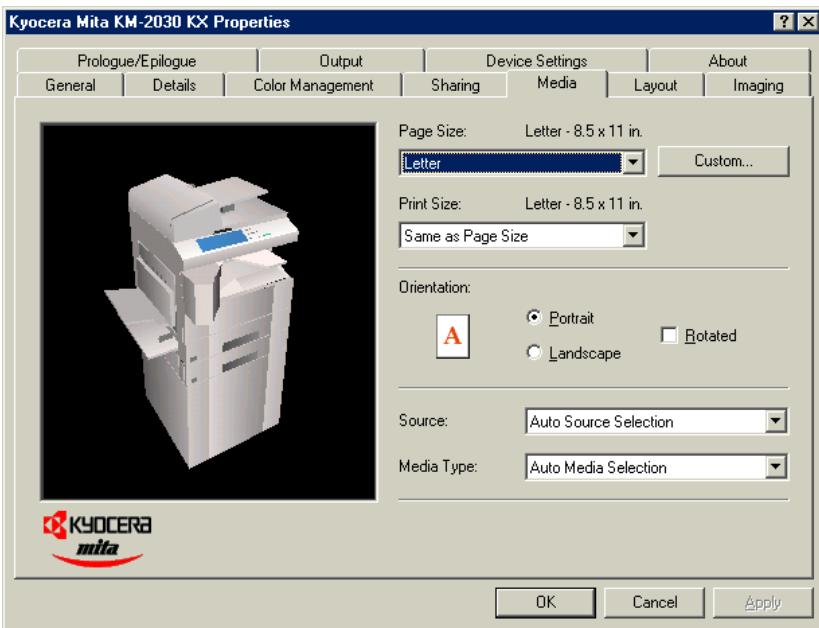

■ Paper Size:

Allows you to select a standard size of paper or an envelope size. The following sizes of paper or envelope can be used with this printer.

Standard-size paper sheet	Letter (8-1/2" x 11"), Legal (8-1/2" x 14"), Ledger (11" x 17"), Statement (5-1/2" x 8-1/2"), A3, A4, A5, A6, JIS B4, B5, JIS B6 and Folio
Envelope	COM-10, Monarch, DL and C5

■ Custom...

Click on this button when you want to print onto a non-standard size of paper. The [Custom Paper Size] dialog box will appear. Refer to "2-1 Custom Paper Size dialog box" on page 2-3 for more detailed information.

■ Print Size:

Allows you to select the size of the printed image. The image size will be enlarged or reduced according to difference in the setting made here and in the "Page Size" field.

■ Orientation:

Sets the orientation of printing.

[Portrait] The image will be printed vertically.

[Landscape] The image will be printed horizontally.

[Rotated] Select this checkbox by clicking on it and putting a check mark in the box in order to have the image printed upside-down.

■ Source:

You can select the source of paper feed according to the desired tray. Selection is possible from among the following items. If you select "Auto Source Selection", the printer will automatically choose the tray that contains the most appropriate paper for the job. The factory default setting is "Auto Source Selection".

Tray	Auto Source Selection, Tray 1, Tray 2, Tray 3, Tray 4, Bypass Tray
------	--------------------------------------------------------------------

* 20 ppm copier: Tray 3 and Tray 4 are available only when the Option Cassette is installed.

* 15 ppm copier: Tray 2, Tray 3 and Tray 4 are available only when the Option Cassette is installed.

■ Media Type:

You can select the source of paper feed according to the desired type of paper. Selection is possible from among the following items. If you do not want to designate a specific type of paper, select "Auto Media Selection". The factory default setting is "Auto Media Selection".

Paper type	Auto Media Selection, Plain, Transparency, Labels, Recycled, Rough, Letterhead, Color, Envelope, Cardstock
------------	------------------------------------------------------------------------------------------------------------

* Selection according to the desired type of paper is NOT available in 15 ppm copiers.

2. Windows KX Driver

2-2-1 Custom Paper Size dialog box

■ Setting a custom paper size

Perform the following procedure in order to register a custom size when you want to print onto a non-standard size of paper. The information registered here will be displayed under the "Page Size" setting in the Media Tab as well as in the Paper Size setting of your application. If you want to register a new custom paper size, click on the "Add" button. The "Edit Paper Size" dialog box will appear.


1

If you want to change a previously registered paper size, click on the registered size to select it and then click on the "Edit" button.

If you want to delete a registered paper size, click on the desired size to select it and then click on the "Remove" button.

Type into the "Name" field the name you want to use for this custom size of paper.

* It is the name that you register here that will actually be displayed under the "Page

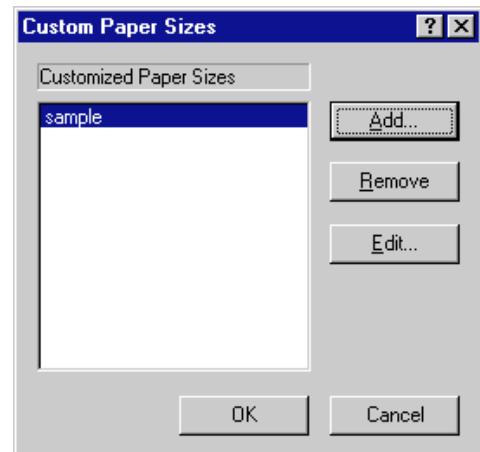

2

Size" setting.
Select the desired unit of measurement in the "Units" block and the desired dimensions of the paper in the "Size" block.



3

<Available settings>

Units: "Inches" or "Millimeters"


Height: 5.83 - 17.00 [Inches]
148.1 - 431.8 [Millimeters]

Width: 3.88 - 11.69 [Inches]
98.5 - 297.0 [Millimeters]



4


Click on the "OK" button. The "Custom Paper Sizes" dialog box will appear once again.
Click on the "OK" button.

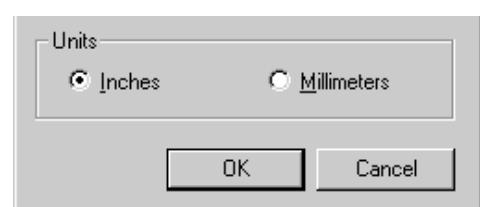

5

2. Windows KX Driver

2-3 Layout Tab

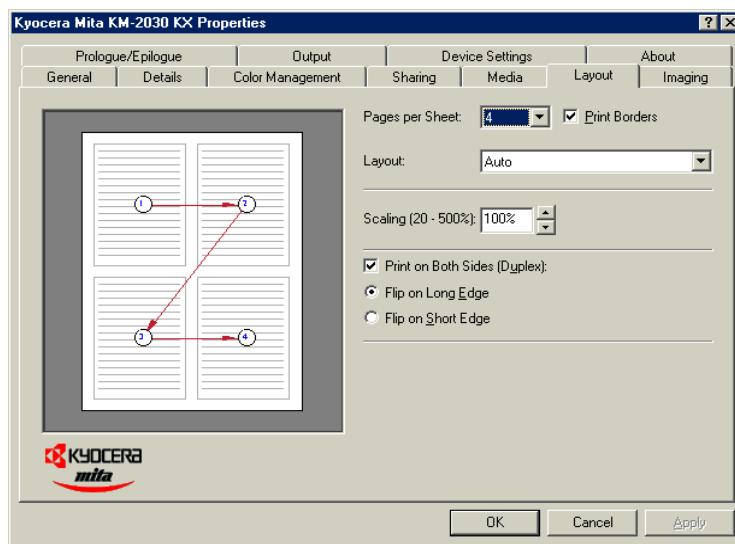


■ Pages per Sheet:

Allows you to print reduced images of multiple (1, 2, 4, 6, 9, 16 or 25) pages onto a single sheet of paper. This function is called "N-Up" printing (where "N" equals the number of image pages). Reduction of the images is calculated automatically so that all of the selected pages fit onto the single sheet of paper. The factory default setting is "1" (one page to each sheet of paper).

Example: With 2-Up printing

Prints reduced images of 2 full pages onto a single sheet of paper.

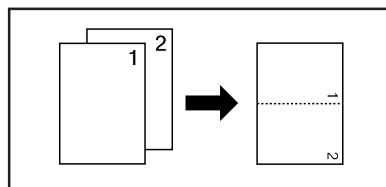

■ Print Borders

Prints border lines between the different images when the "Pages per Sheet" function is selected.

■ Layout

Specifies the order of display of the images when the "Pages per Sheet" function is selected.

■ Scaling

Allows enlargement or reduction of the image size.

Note

The image size will normally be enlarged or reduced according to the difference in the setting made in the "Page Size" and "Print Size" fields. If you then change the setting here, the actual magnification will be based on the original settings and the image may be even further enlarged or reduced.

■ Print on Both Sides [Duplex]

Select this checkbox by clicking on it and putting a check mark in the box in order to perform Duplex (2-sided) printing. You can then select the desired image direction for each side of the paper.

[Flip on Short Edge] Select this option when making duplex prints in order to have the image on the two sides of the paper printed in the opposite direction from each other, as though the paper was turned over along its shorter edge.

[Flip on Long Edge] Select this option when making duplex prints in order to have the image on the two sides of the paper printed in the same direction as each other, as though the paper was turned over along its longer edge.

* 20 ppm copier: Available only when the optional Duplex Unit is installed.

* 15 ppm copier: Duplex printing is NOT available.

* Paper sizes, types and source of paper feed that are acceptable for duplex printing are as follows:


Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Ledger (11" x 17"), Statement (5 1/2" x 8 1/2"), A3, A4, A5, Folio (210 mm x 330 mm), JIS B4 and JIS B5

Paper types: Plain, Recycled and Color

Source of paper feed: Any tray EXCEPT the Bypass Tray

2. Windows KX Driver

2-4 Imaging Tab

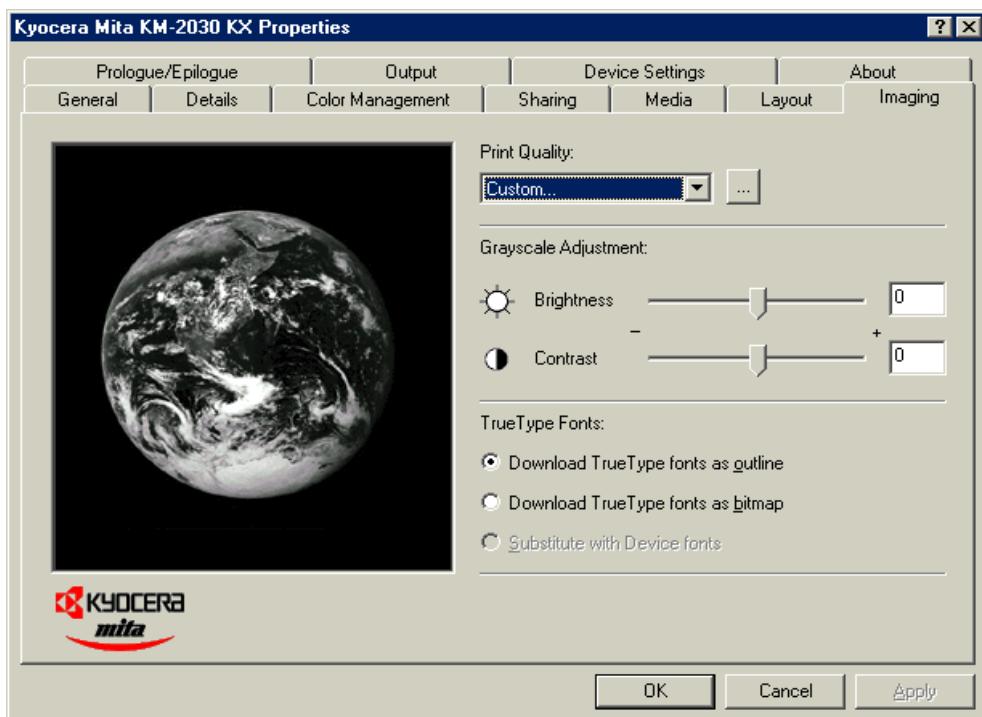

■ Print Quality

Selects the quality at which printing will be accomplished.

[High Quality]Enables printing at the highest quality possible for the printer being used.

[Draft]Saves on toner use. use this setting when quality printing is not needed such as with test prints.

[Custom...]Allows you to perform settings related to the quality of printing. Select "Custom" and then click on the "..." button to the right of that field in order to access the "Print Quality Settings" dialog box. For more detailed information on making settings in this dialog box, refer to "2-4-1 Print Quality Settings dialog box" on page 2-6.

■ Grayscale Adjustment

Adjusts the brightness and contrast of the printed image. The factory default for both settings is "0".

[Brightness]Adjusts the brightness of the image. When you want to print the image brighter than the actual original, drag the slider towards the plus "+" sign, or type in a positive number directly into the field at the right of the slider bar. Conversely, when you want to print the image darker than the actual original, drag the slider towards the minus "-" sign, or type in a negative number directly into that field.

[Contrast]Adjusts the contrast of the image. When you want to print at a sharper image contrast, drag the slider towards the plus "+" sign, or type in the desired value (a positive number) directly into the field at the right of the slider bar. Conversely, when you want to print at a softer image contrast, drag the slider towards the minus "-" sign, or type in a negative number directly into that field.

■ TrueType Fonts


Selects the method of printing with fonts. The factory default setting is "Download TrueType fonts as outline".

[Download TrueType fonts as outline] TrueType fonts will be downloaded to the printer as outline fonts for printing.

[Download TrueType fonts as bitmap] TrueType fonts will be downloaded to the printer as bitmap fonts for printing.

2. Windows KX Driver

2-4-1 Print Quality Settings dialog box

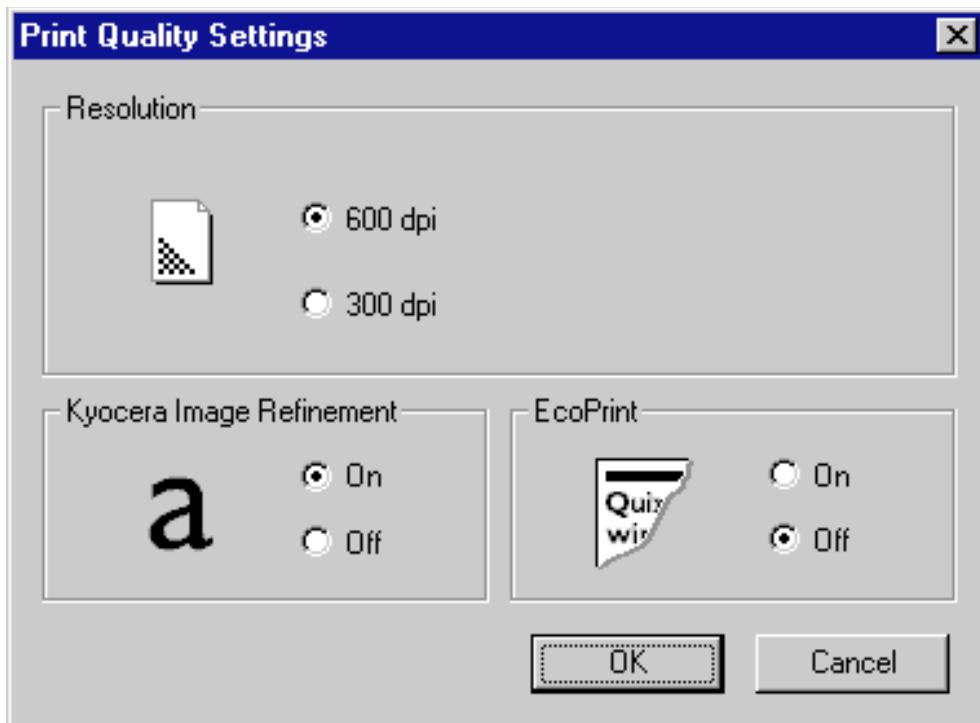

■ **Resolution**

Specifies the printing resolution (number of dots per inch) to be used when printing. Select between "600 dpi" and "300 dpi".

■ **Kyocera Image Refinement**


Turning this setting "On" allows the jaggies that appear around the edge of text and graphics to be evened out through the smoothing process.

■ **EcoPrint**

Saves on toner use. use this setting when quality printing is not needed such as with test prints.

2. Windows KX Driver

2-5 Output Tab

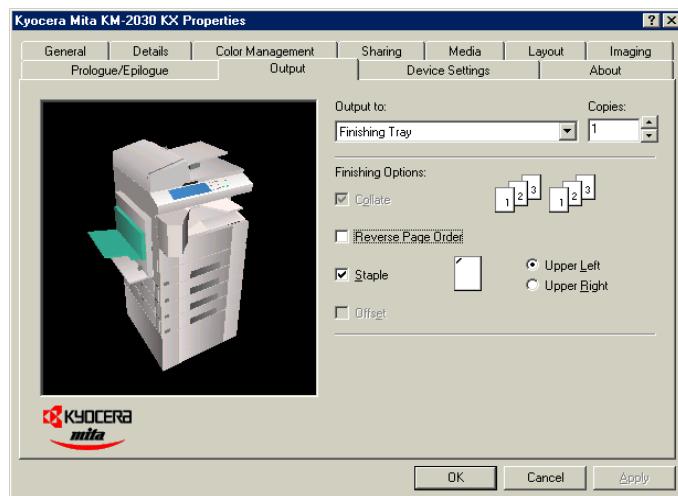

■ Output to:

Specifies the location of ejection of printed copies.

Selection is possible when the optional Job Separator and or Finisher are installed.

[Printer Default] Copies will be ejected onto the Inner tray.

[Inner Tray] Copies will be ejected onto the Inner tray.

[Separator Tray] Copies will be ejected into the optional Job Separator.

[Finishing Tray] Copies will be ejected into the optional Finisher. (Only available in the 20 ppm copier)

* In order to set the location of ejection for the Job Separator or Finisher, it is necessary to first perform the setting for that optional equipment under "Device Options" on page 2-8.

* Paper sizes and types that are acceptable for use with the Job Separator are as follows:

Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Ledger (11" x 17"), Statement (5 1/2" x 8 1/2"), A3, A4, A5, Folio (210 mm x 330 mm), JIS B4 and JIS B5

Paper types: Plain, Letterhead, Recycled and Color

* Paper sizes, types and source of paper feed that are acceptable for use with the Finisher are as follows:

Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Ledger (11" x 17"), A3, A4, Folio (210 mm x 330 mm), JIS B4 and JIS B5

Paper types: Plain, Letterhead, Recycled and Color

Source of paper feed: Any tray EXCEPT the Bypass Tray

■ Copies

Specifies the number of prints to be made. Select between 1 and 999 copies by clicking on the arrows at the right of the field or by typing the desired number directly into the field. The factory default setting is "1".


■ Collate

When you are printing more than one copy of one or more pages, it is possible to sort the printed copy sets.

* It is necessary to create a RAM disk. (Refer to "RAM disk" on page 2-8)

* If you select to turn on the "Staple" setting below, it is necessary to select "Collate" here.

Example: If the "Collate" option is selected, it is possible to print out 2 sets of the same copies.

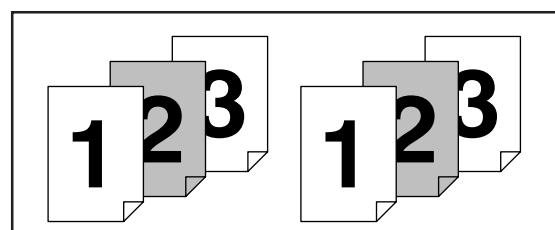

■ Staple

Stapling is possible if the optional finisher is installed.

* Stapling is only available with 20 ppm copiers.

* The following settings are required before stapling is possible:

(1) "Device Options" setting in the "Device Settings" Tab

Select "Internal Finisher" and "RAM Disk".

(2) "Output" Tab

Select "Finishing Tray" as the "Output to" setting and select "Collate" as well.

* Paper sizes, types and source of paper feed that are acceptable for stapling are as follows:

Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Ledger (11" x 17"), A3, A4, JIS B4 and JIS B5

Paper types: Plain, Letterhead, Recycled and Color


Source of paper feed: Any tray EXCEPT the Bypass Tray

Note

The location of the staples will depend upon the orientation of the paper and the direction of the printed image. Thus, when you click on either of the options ("Upper Left" and "Upper Right") a message will be displayed in order to verify the orientation of the paper.

2. Windows KX Driver

2-6 Device Settings Tab

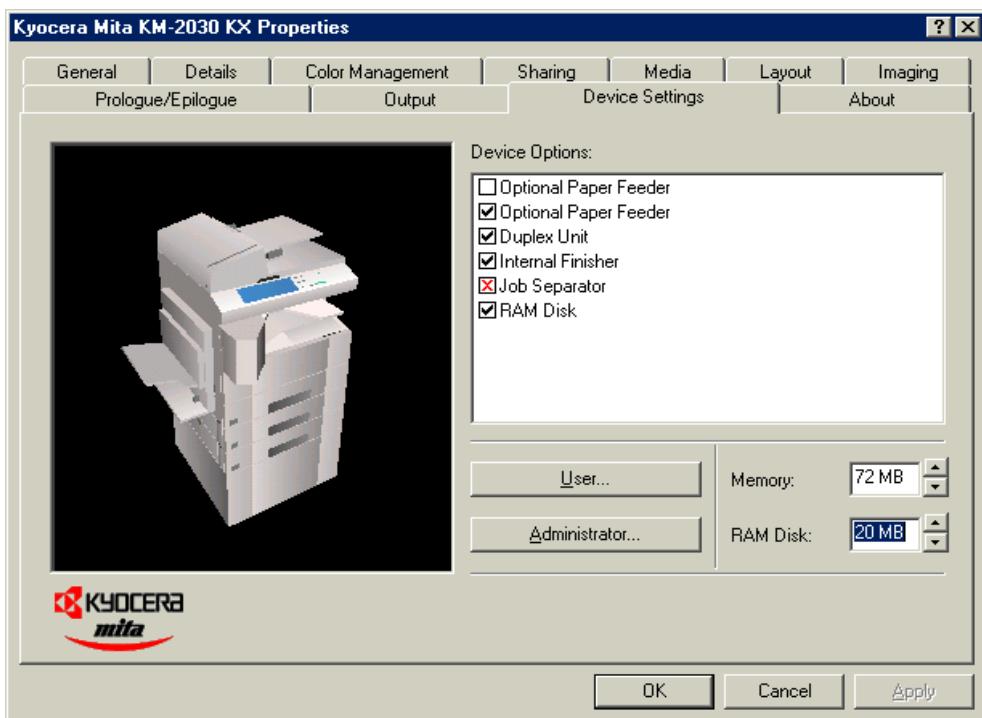

■ Device Options

Select and installed options here. Once you have completed the setting for each option, the functions of that option will be available for use.

● Optional Paper Feeder

Perform this setting according to the installed Option Cassette.

● Duplex Unit

Perform this setting when the optional Duplex Unit (only available with 20 ppm copiers) is installed.

● Internal Finisher

Perform this setting when the optional Finisher (only available with 20 ppm copiers) is installed.

● Job Separator

Perform this setting when the optional Job Separator is installed.

● RAM Disk

Perform this setting when you want to create a RAM disk. Refer to "Chapter 1, 3-2 RAM Disk" on page 3-1 for more detailed information on creating a RAM disk.

* In order to create a RAM disk, it is necessary to increase the memory capacity of your printer. After increasing memory, perform the setting here according to the "Memory" setting below.

■ Memory

Specifies the amount of memory installed in the printer. If you make a mistake in the setting here, it is possible that printing will not be accomplished properly.

■ RAM Disk


Specifies the amount of memory to be used for the RAM disk. This setting will only be available when you have selected "RAM Disk" in the "Device Options" list.

■ User...

Click on this button when you want to register a user and/or department name. The [User Settings] dialog box will appear. It is also possible to select the "GDI compatible mode" from that dialog box.

2. Windows KX Driver

2-6-1 User Settings

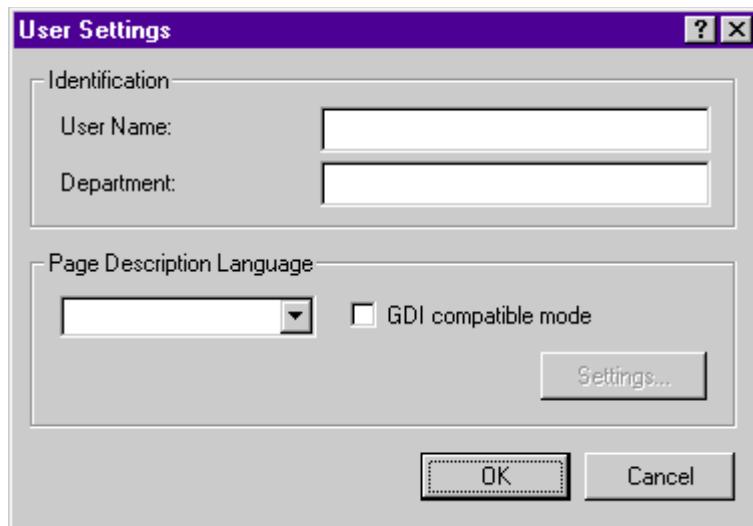

■ Identification

Register the desired user and/or department name.

■ Page Description Language

The emulation modes that can be used with this product will be displayed in the dropdown list. If multiple modes are displayed, it is possible to select the desired mode.


When using the KPDL emulation, select the KPDL.

* the "Settings..." button can be used when selecting KPDL. Particular function of Post Script Printer is available for KPDL dialogue that is appeared by selecting the "Settings..." button.

■ GDI compatible mode

Select this mode in order to accomplish printing that is more accurate to the data shown on your monitor. Select this mode if text corruption, etc., does happen to occur or if the image is in any other way not printed correctly.

2-6-2 Administrator Settings

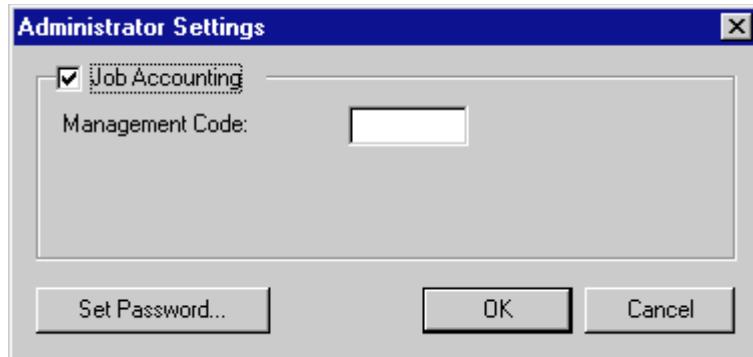

■ Job Accounting

This setting is used when Copy Management is turned ON in the printer. If the Management code that you enter in the "Management Code" field here and that registered in the printer itself do not match, printing will not be possible.

* If Copy Management is turned ON and this setting does not match the setting made in the printer itself, it will not be possible to make test prints. Thus, when you install the printer driver, you will need to check the Copy Management settings and make a test print AFTER the installation procedure is complete.

* When Copy Management is turned ON, even if you send a print command with a DOS "COPY" command, printing will not be possible if you do not use a printer driver.

■ Set Password


Click on this button if you want to add a password to this setting. The [Set Password] dialog box will appear.

Note

If, for any reason, you lose reference to this password, you will not be able to change the Management Code. Therefore, you should exercise DUE CAUTION in the management of the password that you register here.

2. Windows KX Driver

2-7 Prologue/Epilogue Tab

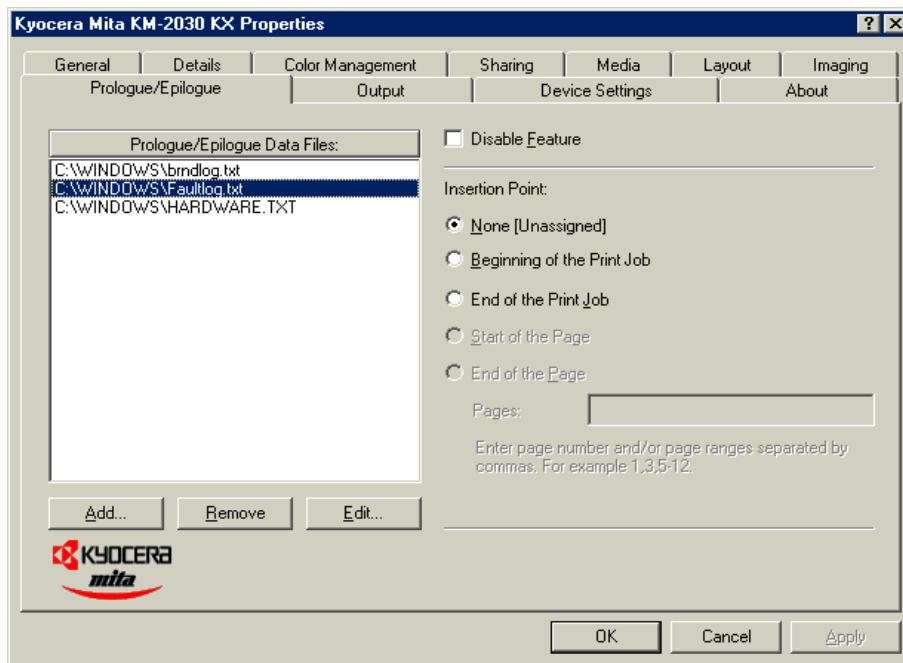

■ Disable Feature

Make sure there is NO check mark in this checkbox if you want to use the printer's overlay function. The overlay function will allow you to have selected macro data printed out on top of your documents.

■ Add

Click on this button when you want to add the data of the file that is selected in the displayed list.

■ Remove

Click on this button when you want to delete the selected file from the list.

■ Edit

Click on this button when you want to edit the contents of the selected file.

Insertion point:

By REMOVING the check mark from the checkbox next to [Disable Feature], select a registered file from the list and click on the [Add] button, the following settings will become available.

■ None [Unassigned]

Print without using registered files.

■ Beginning of the Print Job

The data for the selected file will be transmitted once, and embedded at the beginning of the print job data.

■ End of the Print Job

The data for the selected file will be transmitted once, and embedded at the end of the print job data.

■ Start of the Page

In the case of a multiple-page print job, the data for the selected file will be transmitted (embedded) at the beginning of the data for each page.

■ End of the Page

In the case of a multiple-page print job, the data for the selected file will be transmitted (embedded) at the end of the data for each page.

■ Pages

When [Start of the Page] or [End of the Page] are selected, designate the desired page number here.

3. Printer Driver for Macintosh

When using unit as a network printer, it is possible to print PostScript files from a Macintosh Computer. This section contains explanations regarding the procedure to install the Macintosh PPD files and select this printer, as well as explanation about the computer environment required to run the installed files.

Attention (Macintosh)


- * When using the Printer driver, change the emulation setting KPDL or KPDL (AUTO).

3-1 Required computer environment

OS: Between system 7.61 and 9.1
CPU: Minimum Power PC
RAM: Minimum 24 MB
Free hard disk space: Minimum 10 MB
CD-ROM drive: 1 drive

3-2 Installing the PPD files

This section explains the screen that appears when the CD-ROM supplied with the Printing System (K) is inserted into the CD-ROM drive.
* All the screens to use for explanation are samples, and a screen may be different by a version of utilized software to some extent.

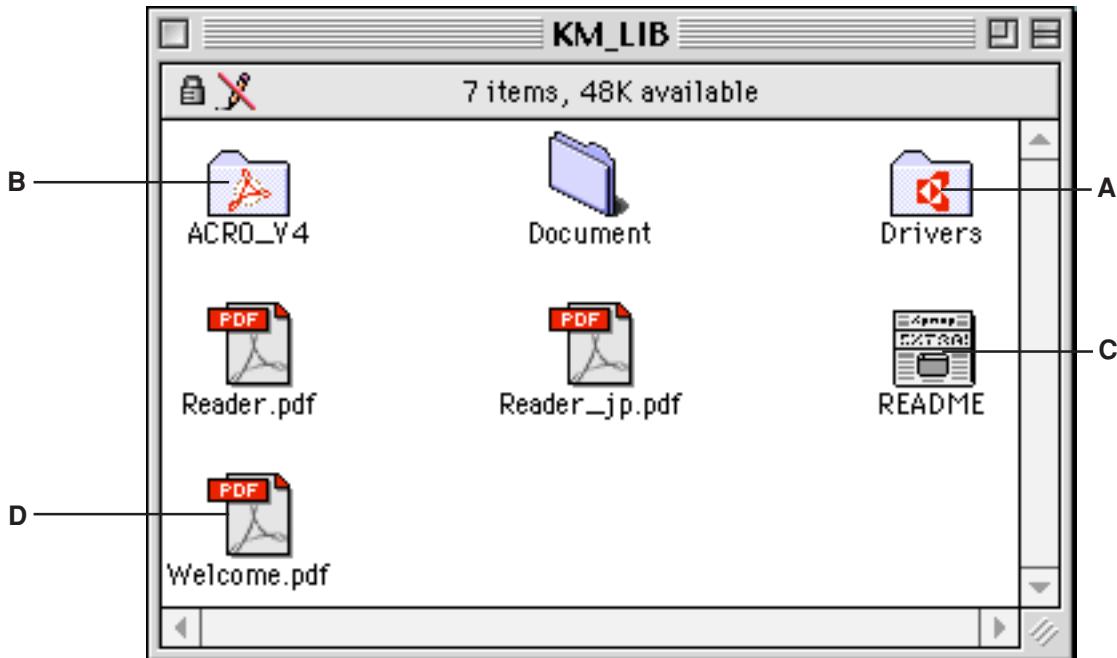

A: [Install Drivers]

The installer by country and by language is supplied in this folder.

B: [ACRO_V4]

The installer of Adobe Acrobat Reader is supplied in folder.

C: [README]

This file contains information which is not explained in the manuals. Please read this file before using the printer driver.

D: [Welcome.pdf]


Kyocera Mita Digital Library screen will appear. Click the available model on screen. The online manual (PDF File) will appear. Installation and operation procedure for printer driver is explained in online manual.
It is necessary to install the Adobe Acrobat Reader in advance to appear the online manual.

1

- Start up your Macintosh computer.
Insert the CD-ROM disk that is included with this product into a CD-ROM drive.
*If there is starting other program, please be finished.
*Screens are things of Mac OS 8.1.


3. Printer Driver for Macintosh

2 Double-Click on the icon for the CD-ROM disk.
The content of the CD-ROM will be displayed.

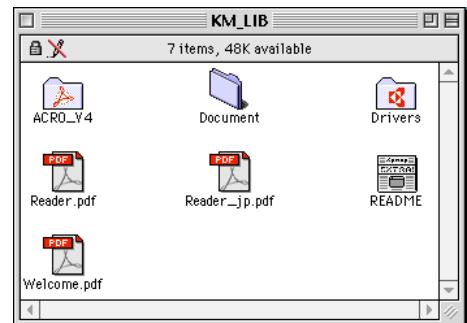


3 The installer by country and by language is supplied in "Driver" folder.
Double-Click the available driver installer to start. The installation screen will appear.

4 Click on "Continue".

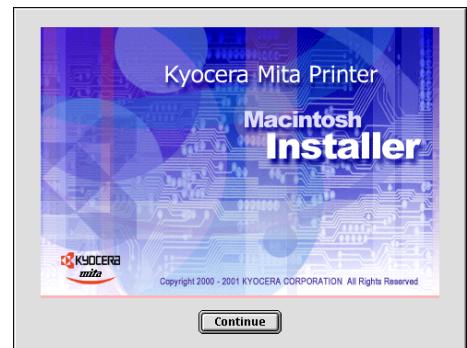

5 A The notice for installation will appear.
Read the notice, and click "Continue".

6 Select the available model, and click on "Install". Installation is started.

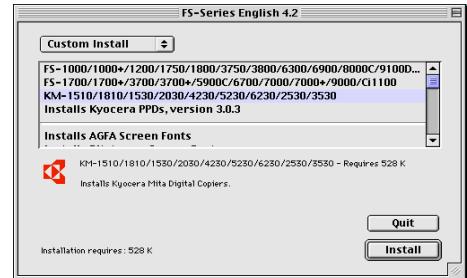


7 Installation was finished. Click on "Quit" to finish the installation completely.

3. Printer Driver for Macintosh


8

Access the Apple Menu at the far left of the Menu of Bar and select Chooser.
The Chooser will appear.
Click once on the LaserWriter 8 icon.

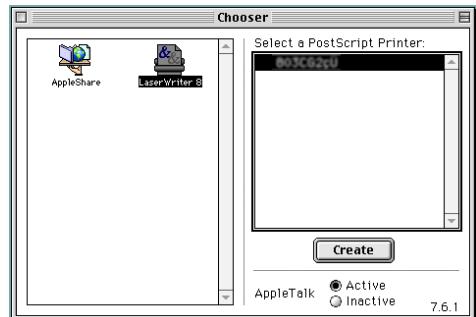


9

Select the name of this printer in the [Select a PostScript Printer] list and then click on the [Create] button.
* The name of this printer can be verified by printing out a Status Page from the printer's operation panel.

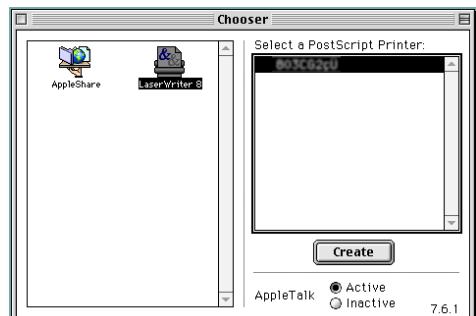


10

A dialog box for selecting the appropriate options will appear.
Select the option that are currently installed in or on your printer.

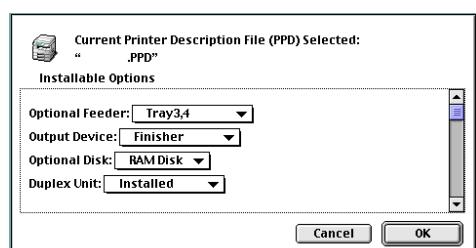

11

Once you're finished with the settings, click on [OK], the chooser will be displayed again.

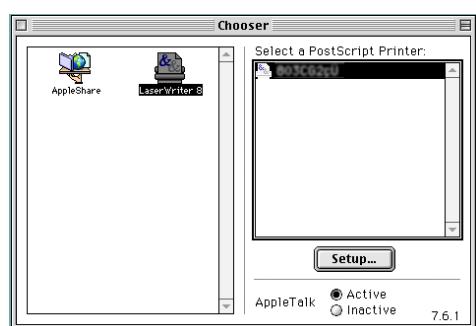


12

Make sure that the name of this printer is selected (highlighted) in the [Select a PostScript Printer] list and close the Chooser.
Once installation is complete, a "Readme" file will appear on the desktop. Be sure to read this file as it contains important information in regard to this product.

3. Printer Driver for Macintosh

3-3 General Dialog Box

*The actual layout of each dialog box and the available option and settings may differ somewhat depending upon the application and version of LaserWriter that you are using.

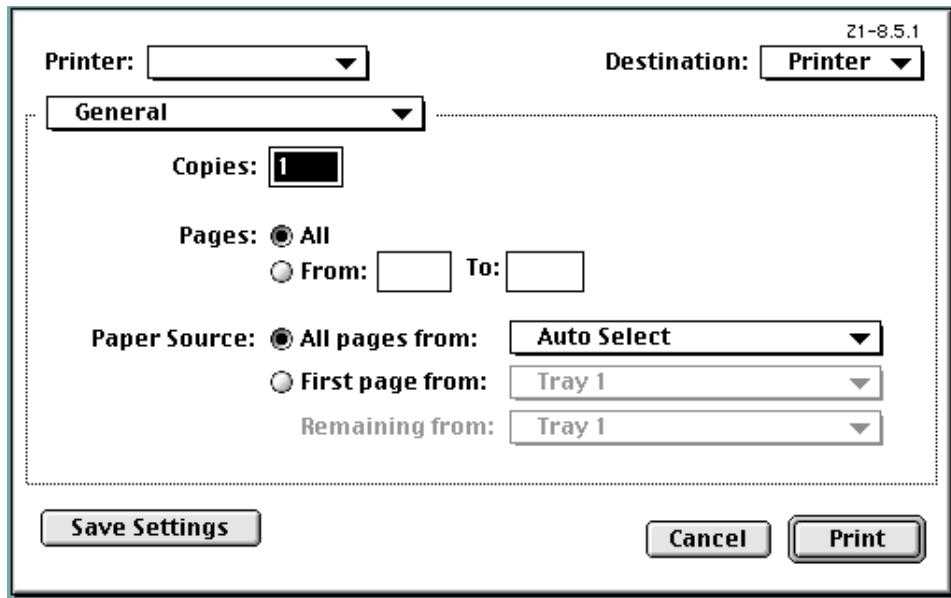


- **Printer:**
Selects the desktop printer to be used for printing your document.
- **Copies:**
Type the desired number of prints to be made (or the number of files to be saved to disk) directly into this field.
Select a number between 1 - 999.
- **Pages:**
To print all of the pages in a file, select the All radio button. To print only certain pages, type in from what page (in the From field) to what page (in the To field) you want to print.
- **Paper Source:**
You can select the source of paper feed according to the tray or the desired type of paper. Selection is possible from among the following items. If you select "Auto Select", the printer will automatically select the tray that contains the most appropriate paper for the job. The factory default setting is "Auto Select".

Paper type	Plain, Transparency, Labels, Recycled, Rough, Letterhead, Color, Envelope, Card Stock
Tray	Auto Select, Tray 1, Tray 2, Tray 3, Tray 4, Bypass Tray

- * It is necessary to perform the settings under "Page Policy" on page 3-6 BEFORE making settings here. If you want to select the source of paper feed according to the type of paper, select "Auto Size Select" there. If you want to select the source of paper feed according to the tray, make sure that "Cassette Base" is selected there. In addition, if you select "Auto Select" here, be sure that the "Page Policy" setting is set to "Auto Size Select" or there is a possibility that printing will be accomplished onto paper that is difference the expected.
- * 20 ppm copier: Tray 3 and Tray 4 are available only when the Option Cassette is installed.
- * 15 ppm copier: Tray 2, Tray 3 and Tray 4 are available only when the Option Cassette is installed.
- * Selection according to the desired type of paper is NOT available in 15 ppm copiers.

3. Printer Driver for Macintosh


3-4 Layout Dialog Box

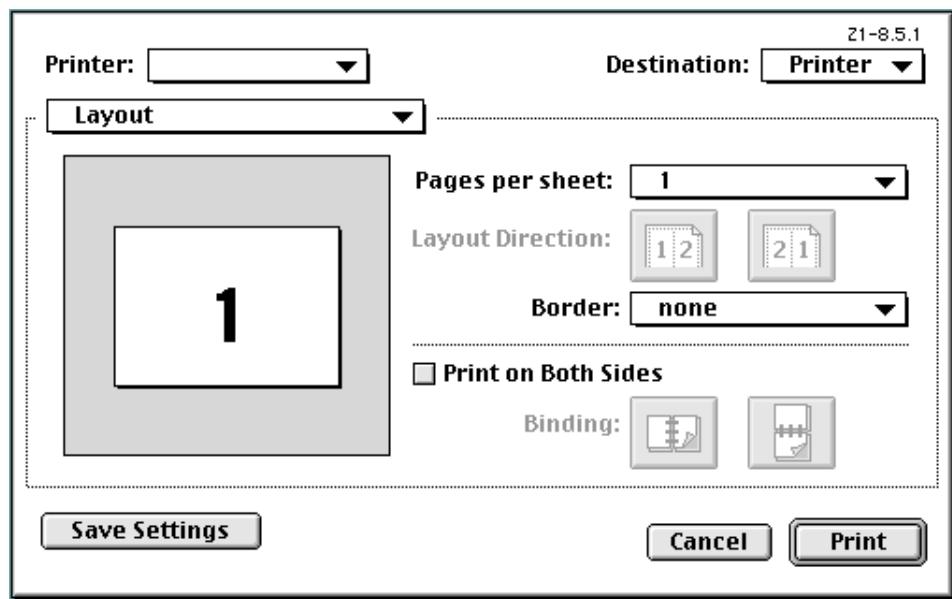

- **Pages per sheet:**
Sets the number of pages to be printed on each sheet of paper.
- **Layout Direction:**
A button of either is clicked, and a layout direction is decided. If right button is selected, the pages are laid out from right to left.
- **Border:**
Sets the type of line to appear around the page.
- **Print on Both sides**
When this checkbox is selected, the printer will print on both sides of the paper.
[Binding]
Enable selection of the desired the binding orientation. If left button is selected, the binding orientation is along the side of the paper.
 - * 20 ppm copier: Available only when the optional Duplex Unit is installed.
 - * 15 ppm copier: Duplex printing is NOT available.
 - * Paper sizes, types and source of paper feed that are acceptable for duplex printing are as follows:
 - Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Ledger (11" x 17"), Statement (5 1/2" x 8 1/2"), A3, A4, A5, Folio (210 mm x 330 mm), JIS B4 and JIS B5
 - Paper types: Plain, Recycled and Color
 - Source of paper feed: Any tray EXCEPT the Bypass Tray

3. Printer Driver for Macintosh

3-5 Printer Specific Options

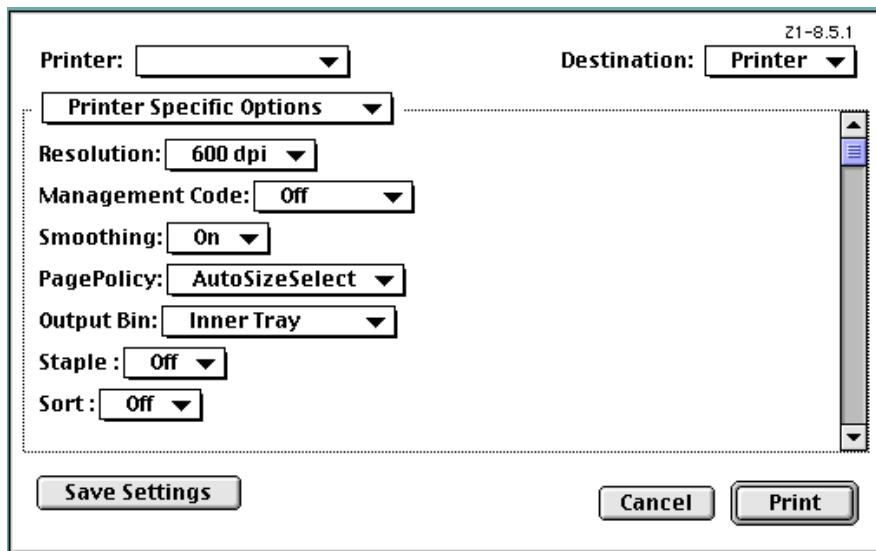

■ Resolution:

Specifies the printing resolution (number of dots per inch) to be used when printing. Select between "600 dpi" and "300 dpi". The factory default setting is "600 dpi".

■ Management Code:

This setting is used when Copy Management is turned ON in the printer. If the Management code that you selected from the dropdown list here and that selected in the printer itself do not match, printing will not be possible.

■ Smoothing:

Turning this setting "On" allows the jaggies that appear around the edge of text and graphics to be evened out through the smoothing process.

■ PagePolicy:

Perform this setting in conjunction with the settings to be made under "Paper source" on page 3-4.

[Auto Size Select] Select this setting when you want to select the source of paper feed according to the type of paper (you are going to select "Auto Select" under "Paper source").

[Cassette Base] Select this setting when you want to select the source of paper feed according to the tray under "Paper source".

* If you are going to select "Auto Select" under "Paper source", be sure to select "Auto Size Select" here or there is a possibility that printing will be accomplished onto paper that is difference the expected.

■ Output Bin:

Specifies the location of ejection. Depending upon which option you have installed, you can select between the Job Separator and the Finisher (only available in the 20 ppm copier).

[Inner Tray] Copies will be ejected onto the Inner tray.

[Job Separator] Copies will be ejected into the optional Job Separator.

[Finisher] Copies will be ejected into the optional Finisher. (Only available with 20 ppm copiers.)

* In order to set the location of ejection for the Job Separator or Finisher, it is necessary to first perform the setting for that optional equipment under "Installable options" in step 9 on page 3-3.

* Paper sizes and types that are acceptable for use with the Job Separator are as follows:

Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Ledger (11" x 17"), Statement (5 1/2" x 8 1/2"), A3, A4, A5, Folio (210 mm x 330 mm), JIS B4 and JIS B5

Paper types: Plain, Letterhead, Recycled and Color

* Paper sizes, types and source of paper feed that are acceptable for use with the Finisher are as follows:

Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Ledger (11" x 17"), A3, A4, Folio (210 mm x 330 mm), JIS B4 and JIS B5

Paper types: Plain, Letterhead, Recycled and Color

Source of paper feed: Any tray EXCEPT the Bypass Tray

3. Printer Driver for Macintosh

■ **Staple:**

It is possible to staple your copy sets if the optional Finisher is installed.

* Stapling is only available with 20 ppm copiers.

* The following settings are required before stapling is possible:

- (1) Change the "Installable Options" setting in step 9 on page 3-3 to the following.

Select "Finisher" as the "Output Device" setting and "RAM Disk" under "Optional Disk".

- (2) "Printer Specific Options" setting on page 3-6.

Select "Finisher" as the "Output Bin" setting and "On" under "Sort".

* Paper sizes, types and source of paper feed that are acceptable for stapling are as follows:

Paper sizes: Letter (8 1/2" x 11"), Legal (8 1/2" x 14"), Tabloid (11" x 17"), A3, A4, JIS B4 and JIS B5

Paper types: Plain, Letterhead, Recycled and Color

Source of paper feed: Any tray EXCEPT the Bypass Tray

■ **Sort:**


Allows you to select whether to sort the copies in the case of multiple copy.

[Off] Does not sort.

[On] Prints in the order of 1st, 2nd, 3rd copies and so on.

* It is necessary to create a RAM disk. (Refer to step 10 on page 3-3.)

* If you selected any of the "Staple" settings above, it is necessary to select "On" here.

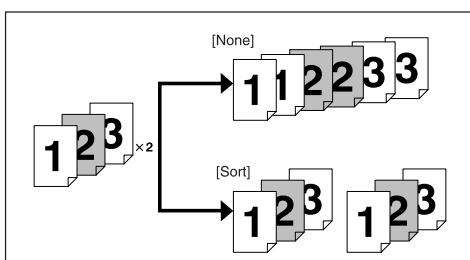

■ **180 Rotate:**


Selecting this option prints upside down.

3. Printer Driver for Macintosh

3-6 Page Setup dialog Dialog Box

Settings for paper size, page layout, magnification ratio and print direction (orientation) are performed in the **Page Setup** dialog box. To display the **Page Setup** dialog box, select **Page Setup...** in the **File** menu of the corresponding application.

- * The actual layout of each dialog box and the available options and settings may differ somewhat depending upon the application and the version of **LaserWriter** that you are using.
- * For the user using **Mac OS 7.6.1**, we strongly recommend that you update the **LaserWriter8.3.2** to **Laser Writer 8.5.1**.

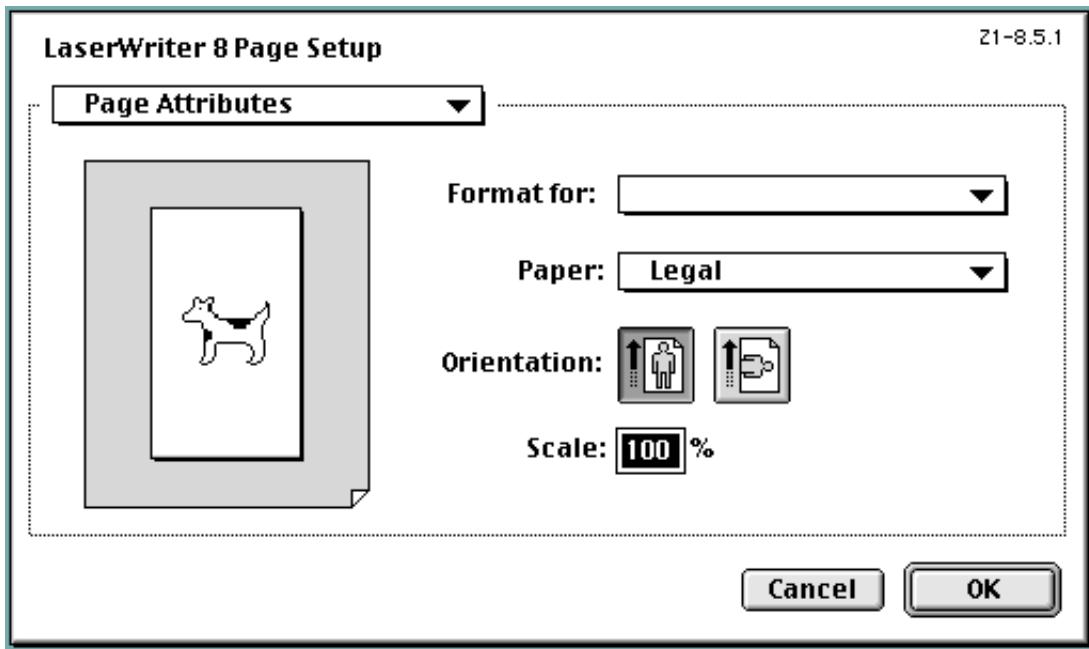

■ Format for:

Use this pop-up menu to select the Printer that you want to use.

■ Paper:

Select in this pop-up list the desired paper size. Choose from among Letter, Legal, Ledger, Folio, Statement, A3, A4, Custom, B4(JIS), A5, A6, B5(JIS),B6(JIS) and Envelopes (Monarch, Com 10, DL, C5)

* ALWAYS use the multi-bypass to feed the following sizes:A6,B6(JIS),Envelopes (Monarch, Com 10, DL, C5)

■ Orientation:

Enable selection of the desired print direction.


■ Scale:

Type the desired magnification ratio directly into this field. Select a ratio between 25% - 400%.

3. Printer Driver for Macintosh

3-7 PostScript Dialog Box

The actual layout of each dialog box and the available options and settings may differ somewhat depending upon the application and the version of LaserWriter that you are using.

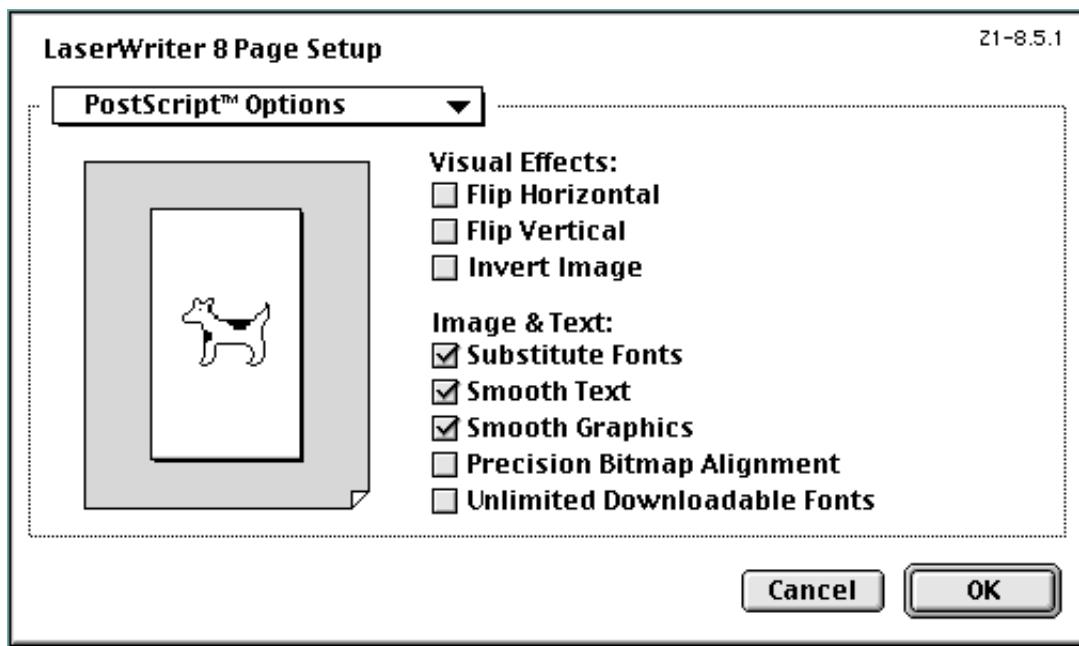

■ Visual Effects:

Visual effects such as horizontal and vertical flip and image inverting can be selected here. Place a check in the check box next to the desired visual effects to select that effect.

■ Image & Text:


Place a check in the check box next to the desired printing options to select that option.

3. Printer Driver for Macintosh

3-8 Custom paper sizes Dialog Box

When a paper sizes is selected in "Custom paper sizes" Dialog Box , the paper size can be set as desired.

* The actual layout of each dialog box and the available options and settings may differ somewhat depending upon the application and the version of LaserWriter that you are using.

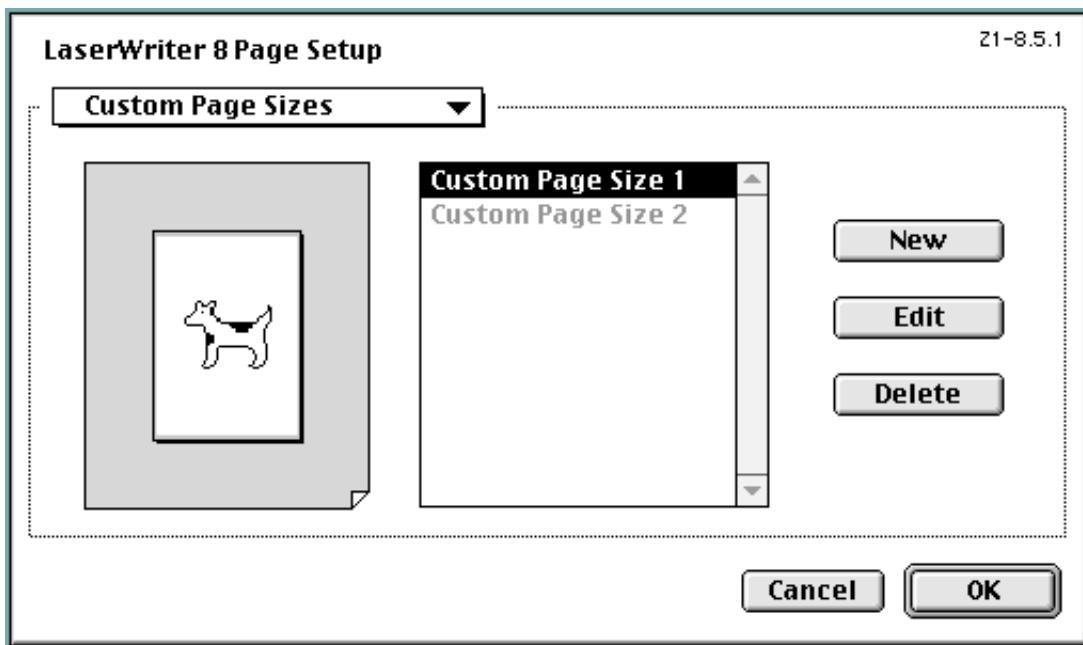

■ New button

To create a new custom page size, click this button.

* The acceptable paper width is between 9.81 - 29.7 cm (metric) or 3.86" - 11.69" (inches). The acceptable paper length is between 14.82 - 43.18 cm (metric) or 5.83" - 17" (inches).

■ Edit button

To edit the selected custom page size, click this button.

■ Delete button

To delete the selected custom page size, click this button.