

User Manual

Programmable DC power supply

IT6870B series

Model IT6872B/IT6873B/IT6874B



© Copyright 2014 All Rights Reserved
Ver1.1/JUN, 2014/ IT6800B-603

Security	3
Security regulation	3
Safety symbols	3
Certification and Quality Assurance	3
Chapter1 Inspection and Installation	6
1.1 Inspection	6
1.2 To Rack Mount the Instrument	7
1.3 The size of the power supply	8
Chapter 2 Quick Start	9
2.1 The front and rear panel description	9
2.2 Keypad introduction	10
2.3 VFD Description	11
Chapter 3 power on check	12
3.1 power on Pre-check	12
1. Power on the power supply	12
2. System self-test	13
3.2 Output Verification	14
2. Current Output check	15
Chapter 4 specification	16
4.1 main technical parameters	16
4.2 supplementary characteristic	17
Chapter5 Front-panel Operations	18
5.1 Local/remote	18
5.2 Dual-range switch	18
5.3 Voltage setting	18
5.4 Current setting	19
5.5 Output on/off	19
5.6 switch the actual/setting value display	19
5.7 CC/CV mode	19
5.8 Save/Recall	19
5.9 Trigger operation	20
5.10 Menu Operation	20
1. Menu structure	20
2. Menu Function	22
5.11 OVP Function	26
5.12 KEY LOCK	27
5.13 Remote Sense Function	27
Chapter6 Remote Operation	28
6.1 RS232 interface	28
6.2 USB interface	30

IT6870B Series Programmable DC Power Supplies

Security

Please do not install replacement parts in the instrument, or perform any unauthorized modification. Please send the instrument to our company's maintenance department for maintenance, to ensure its security features.

Please refer to the manual for specific information warning or precautions to avoid personal injury or equipment damage.

There is no part that the operators can maintenance. If maintenance service is required, please contact trained service personnel.

Security regulation

To prevent electric shock, a non-authorized personnel is strictly not allowed to open the machine.

This equipment is strictly prohibited for use in life support systems or any other device with security requirements.

We cannot accept responsibility for any direct or indirect financial damage or loss of profit that might occur when using the electronic load.

Safety symbols

Warning

It reminds the user, note some operating procedures, practices, conditions and other matters, that may lead to human casualties.

Notes:

It reminds the user of some operating procedures, practices, conditions and other matters that may result in instrument damage or data lose forever.



Connect it to safety earth ground using the wire recommended in the user manual.



The symbol on an instrument indicates that the user should refer to the operating instructions located in the manual.



High voltage danger

Certification and Quality Assurance

IT6800B series programmable DC power supply fully meet all of the technical specification in the manual.

Warranty

Our Company gives one year warranty for the materials and manufacturing of the product since the date of shipment.

Warranty Service

For the warranty service or repair the product, the product must be returned to the designated maintenance units. Return the product to us for warranty service, the customer should pre-pay the one-way Freight to the maintenance department. And our company is responsible for the return shipping cost.

If products are returned from other countries for maintenance service, then the customer should pay all freight, duties and other taxes.

Guarantee limit

The guarantee does not apply to the damage caused by the following conditions:

Improper or inadequate maintenance to the products by customer;

Customers use their own software or interface;

Unauthorized modification or misuse;

Operate this product not in the specified environment, or at the wrong place configuration and maintenance.

Damage from Customer self-installation of circuit, or defects due to customers use their products.

Product model or serial number of the fuselage has been altered, deleted, removed or made illegible;

Damage caused by accidents including but not limited to lightning, water, fire, abuse or neglect.

Notice

If the content of this manual is subject to change, we will not notice additionally.

Introduction

IT6870B series power supply is single output dual range DC programmable power supply, which can replace two ordinary ones. The front panel keys and the control knob provide a convenient interface for adjusting voltage and current, storing and recalling operation. Built-in RS232/USB/GPIB communication interface is suitable for either bench or rack mounted operation. Can be designed and tested according to your needs and provide multi-purpose solutions.

- Dual range output
- VFD display
- Digital keypad operation
- High accuracy and high resolution
- Low ripple and low noise
- Intelligent fan control, energy conservation, noise reduction
- Can be monitored by computer software
- Output voltage and current values accordance with procedure
- Can use the knob to adjust the voltage and current
- Can adjust the numbers steps using the cursor
- Can set the output timer(0.1~9999.9S)
- Standard RS232/USB/GPIB communication interface
- Rich SCPI orders and IT6820 compatible frame protocol to facilitate the formation of intelligent test platform

Model	Voltage	Current	Power
IT6872B	0~35V/ 0~15V	0~4A/ 0~7A	0~140W/ 0~105W
IT6873B	0~75V/ 0~32V	0~2A/ 0~4A	0~150W/ 0~128W
IT6874B	0~150V/ 0~60V	0~1.2A/ 0~2A	0~180W/ 0~120W

Chapter1 Inspection and Installation

Power supply is high level safety equipment; there is a protected ground terminal. Before Installation or operation, please read the safety signs and instructions in this manual

1.1 Inspection

After received the power supply, follow these steps to check it:

1. Check for damage in the equipment during transport


If the frame, panel is damaged, or abnormal working, ext. Please contact immediately with our authorized dealer or service department. Do not return the instrument before positive response has not been got.

2. Check the attachment


Make sure you receive the power and the following components at the same time, if any missing, please contact your nearest dealer.

- ☐ a power cord (in accordance with the standard voltage used in the region, see the below picture)
- ☐ an operating manual.
- ☐ a factory calibration report
- ☐ USB cable


Power cord type

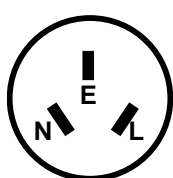


China
IT-E171

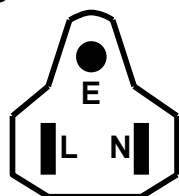

USA, Canada
IT-E172

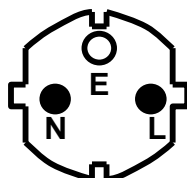

Europe
IT-E173

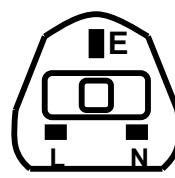

England
IT-E174

3. The power input requirements

There are two kinds of working voltage for the power supply: 110V and 220V, so please pay attention to the working input voltage. There is a power cord which matches with your local power in the attachment. If that does not match, please do not hesitate to contact with our authorized dealer or service department.

AC input levels (select by change the AC power switch on the bottom of the power supply)

Option Opt.01: 220VAC \pm 10%, 47 to 63 Hz


Option Opt.02: 110 VAC \pm 10%, 47 to 63 Hz

1.2 To Rack Mount the Instrument


You can mount IT6870B series power supply in a standard 19-inch rack cabinet using the IT-E151 rack mount kit.

The procedure:


Remove the carrying handle before rack-mounting the instrument. To remove the handle, grasp the handle by sides and pull outwards and rotate it to a special position (vertical to the Power supply), then pull the handle outward. After removing the handle, you can tear the labels on both side, and then you can see the screw holes.

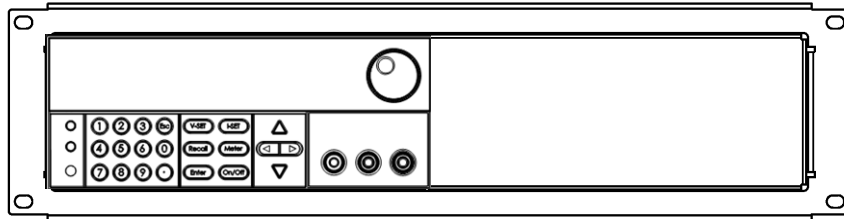

PIC 1.1 Rack mount a single instrument with rack mount kit IT-E151

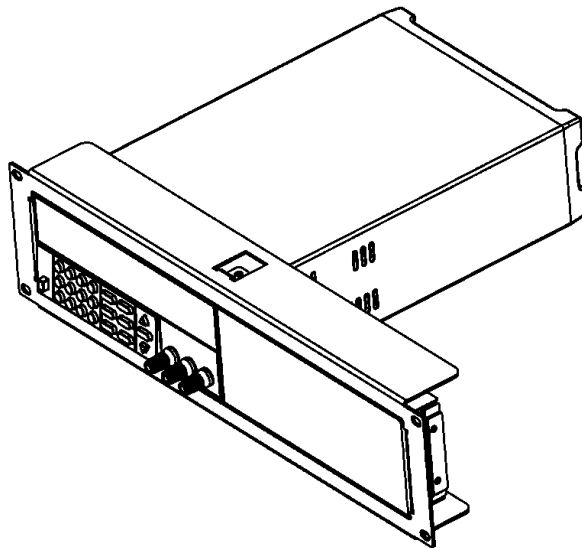

PIC1.2 Side view of rack mounting a single instrument

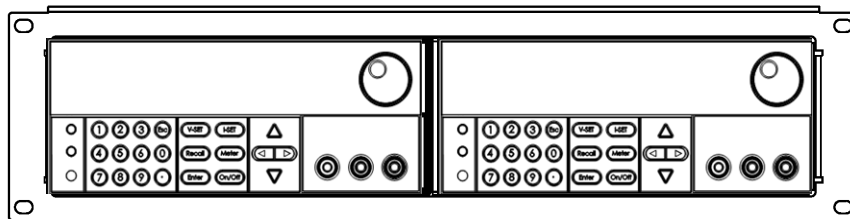





PIC 1.3 To rack mount two instruments side-by-side, order rack mount kit IT-E151, you needn't to use the front cover panel.

1.3 The size of the power supply

1. The size of IT6870B series power supply

214.5mmW×88.2mmH×354.6mmD

* refer to the Dimensions below:

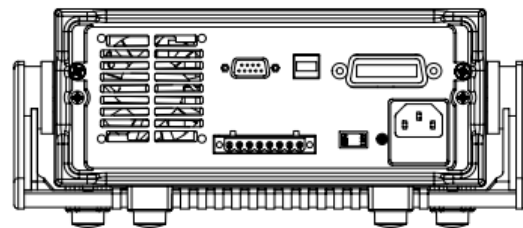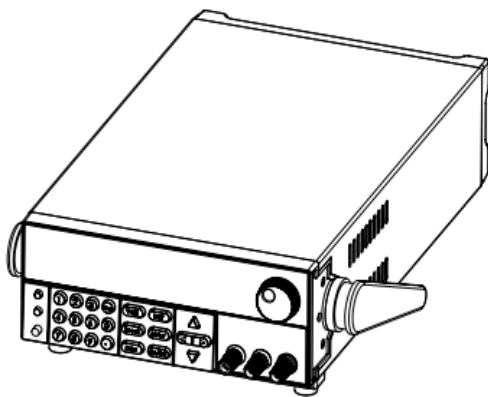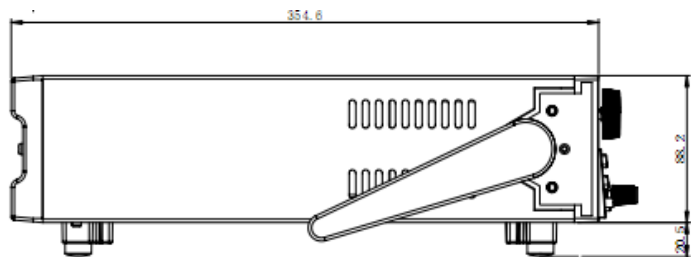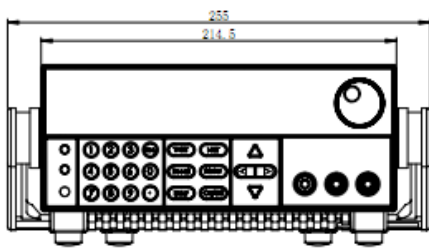


Unit: MilliMeter (mm)

PIC 1.4 The dimension of IT6870B power supply


Chapter 2 Quick Start

This chapter introduces the front panel, the rear panel, key functions and VFD display function of the IT6870B power supply, make sure that you can quickly know the appearance, instruction and the key function before you operate the power supply, Help you make better use of this series of power supply.

2.1 The front and rear panel description

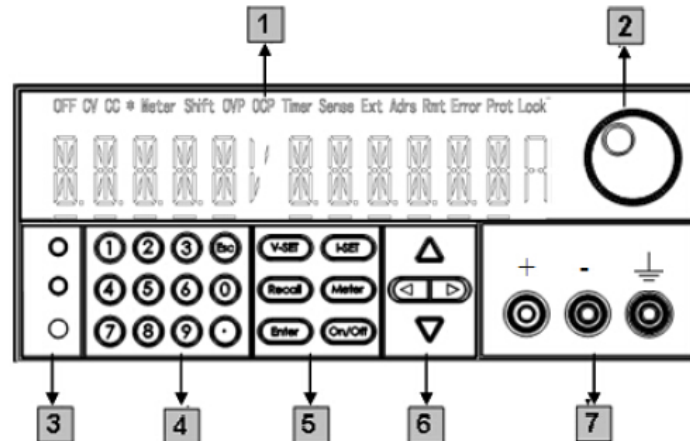


- 1 VFD display
- 2 Rotary knob
- 3 Compound key, the local switch key and power switch
- 4 Number keys and ESC escape key
- 5 Function keys
- 6 UP、DOWN, LEFT and RIGHT key, to move cursor
- 7 Output terminals

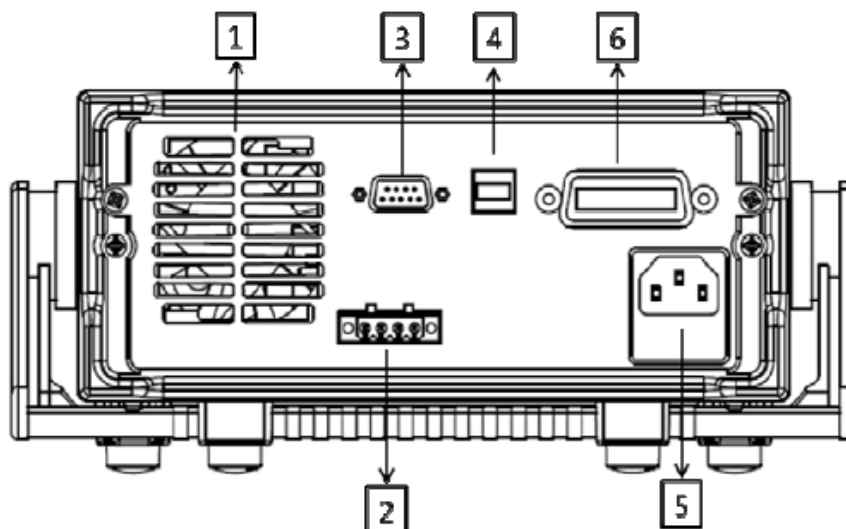











- 1 Cooling window
- 2 Remote sense terminal
- 3 RS232 communication interface
- 4 USB communication interface
- 5 AC power socket (fuse contained)
- 6 GPIB communication interface

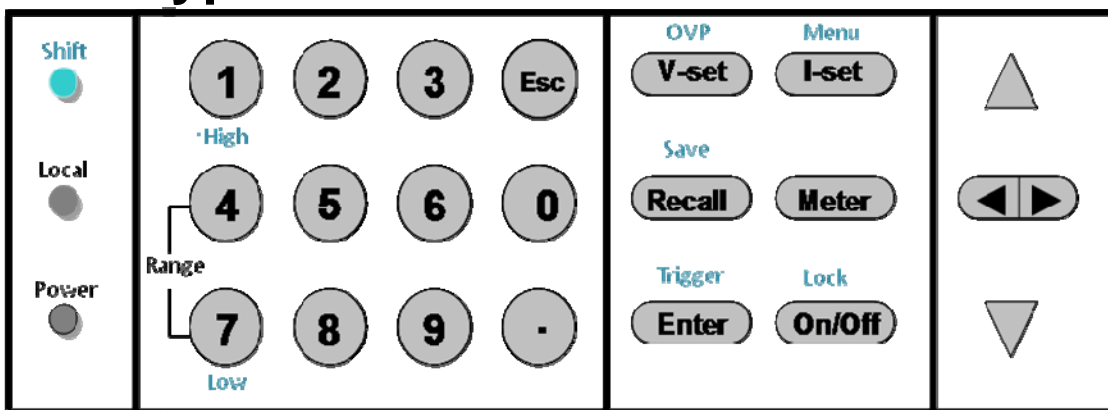

Note: the AC power switch is at the bottom of the power supply. To avoid any damage, please make sure it is in the right position before you power on the supply.

2.2 Keypad introduction

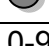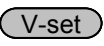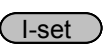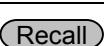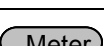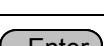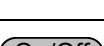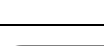

Keypad description, see the table below:

Keys	Name and the function
 Shift	Compound key, co-work with OVP、Menu、Save、Trigger、Lock、and numeric key 4 and 7
 Local	Local switch key, switch from remote mode to local operation mode
 Power	Power on key
0-9	Numeric keys
 OVP	Voltage set key, set the output voltage/over voltage protection point for the power supply
 Menu	Current set key, set the output current/menu function key, to set the relevant Parameters for the power supply
 Save	Callback key to call up a set value of system parameters already stored / storage key, to save system parameter settings
	Meter key, to switch from value set panel and the actual output value display
 Trigger	Enter key, to confirm the number entered and operation / trigger button, which is used to trigger the List test.
 Lock	Output on (off) keys, control power output state / keypad lock function keys, used to lock the panel buttons
	Left and right movement keys, used to set the value, to adjust the cursor to the specified location

	Up and down keys, used to select a item in the menu or increase (decrease) the output voltage or current values
	Escape key

2.3 VFD Description



char	Function	char	Function
OFF	Output is off	Timer	Output on timer function is enabled
CV	The power supply is in constant voltage mode	Sense	Not in use
CC	The power supply is in constant current mode	Ext	Not in use
*	The power supply is in high voltage range	Adrs	(USB) light when the address match or (RS232) received order
Meter	"Meter" key is pressed	Rmt	The power supply is in remote mode
Shift	Shift key is pressed, Use compound keys	Error	The power supply has error or fault
OVP	OVP function is enabled	Prot	The power supply is in OVP /OTP protection
OCP	Not in use	Lock	Keypad is locked

Chapter 3 power on check

This chapter will introduce the procedure of power on check for IT6870B, including pre-check and output check, to make sure the power supply can power on and work normally on the original state.

3.1 power on Pre-check

Before operation the power supply, please read the following safety guide:



Warning: The AC input voltage is 110V or 220V, please check the switching at the bottom of the power supply, to make sure it matches the voltage in your city. Otherwise, the power supply may be damaged.



Warning: The power supply provides a three-wire power cord, you should plug it to a three cord junction box. You should also make sure the power supply is well grounded.



Warning: The connection wire should have enough current capacity that it can bear the max rated current/short current of the power supply and not get too hot.



Warning: To avoid any fire or electric shock, please ensure the AC input voltage fluctuation not exceed 10% of the working voltage range.

Note: In some situation, use the misconfigured main voltage for the instrument may cause the main fuse blew.

Note: If the power supply is used to charge a battery, please pay attention to the positive and negative polarity to avoid any damage.

Power on pre-check includes two parts: power on the supply and system self check.

1. Power on the power supply

If Power Supply Does Not Turn On

Use the following steps to help solve problems you might encounter when turning on the instrument.

(1) Verify that there is AC power to the power supply.

First, verify that the power cord is firmly plugged into the power receptacle on the rear panel of the power supply. You should also make sure that the power source you plugged the power supply into is energized. Then, verify that the power supply is turned on.

(2) Verify the power-line voltage setting.

Make sure the voltage selector switch is set according to the present line voltage (110VAC or 220VAC) when the power supply is shipped from the factory. Change the voltage setting if it's not correct.

(3) Verify that the correct power-line fuse is installed.

If the fuse was damaged, please see the table below to replace the fuse for your power supply.

Model	Fuse Specifications (110VAC)		Fuse Specifications (220VAC)	
IT6872B	T6.3A	250V	T3.15A	250V
IT6873B				
IT6874B				


(4) How to exchange the fuse

Open the small plastic cover below the power supply input socket on the back panel with a screwdriver, and you can see the fuse in it, please use the specifications in line fuse.

Remove the power cord and then use a screwdriver to remove the fuse box.



Use the same specification of fuse to replace the old one, install it to the fuse box and then insert .

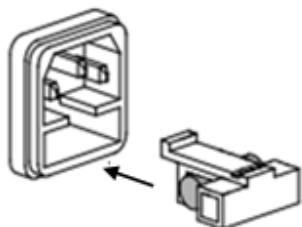

2. System self-test

After power on normally, the supply will enter self -test first.

During this time, the following should be displayed:

INIT....

SCAN SYSTEM

If the self-test is pass, then the VFD will display:

OFF

0.000V 0.0000A

In case the self-test is not successful, you may see one of the followings:

About 1second after power on, if the EEPROM was damaged, the VFD will display (about 1 S):

EEPROM FAIL

If the last power status in EEPROM is lost, then VFD will display information (about 1 S) as below:

SYST LOST

If the calibration data in EEPROM is lost, then VFD will display (about 1S) as below:

CAL LOST

If the factory calibration data in EEPROM is lost, and then the VFD will display (about 1 S) as below:

FACT LOST

3.2 Output Verification


IT6870B is dual range output, the following procedures verify that the power supply outputs the correct voltage and current levels and properly responds to entries from the front panel.

■ 1. Voltage Output Check



The following steps verify basic voltage functions without load.

High voltage range voltage check:

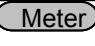- 1) Turn on the power supply
- 2) Press **I-set** to set the current value ($\geq 0.0001A$).
- 3) Enable the outputs
Press **On/Off** to let the ON annunciator and the CV annunciator turn on to light.
- 4) Turn on Meter mode

Press  to light the button, the Meter status Mark light on the display is turned on.




Notice: if the voltage value flash, then the power supply is in Set mode, “Set mode” means that the VFD display shows the setting output voltage and current. Or the power supply is in Meter mode, “Meter mode” means that the VFD display shows the actual output voltage and current.

- 5) Press  (Shift) +4 to switch to high voltage range, and then set the voltage level. Set different voltage values, check the voltage value displayed on the VFD is close to the voltage value you set, and to check if the VFD displayed current value is nearly zero.
 - 6) Ensure that the voltage can be adjusted from zero to the full rated value
- Low voltage range voltage check:**
- 7) Press  (Shift) +7 in the above step 5 instead to switch to low voltage range, and then repeat step 5~6


2. Current Output check

The following steps check basic current functions with a short across the power supply's output.

High voltage range current check:

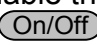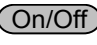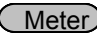- 1) Turn on the power supply
 - 2) Enable the output
- Press  key to ensure that the output is disabled. At the same time, the OFF status mark is on the VFD.
- 3) Connect a short across (+) and (-) output terminals with an insulated test lead, use a wire sufficient to handle the maximum current.
 - 4) Adjust the voltage value to 1V.
 - 5) Turn on the power output.
- Press  key to ensure the output is enabled, at the same time there is CC status sign on the VFD.
- 6) Turn on Meter mode
- Press  to light the button, the Meter status Mark light on the display is turned on.
- 7) Adjust the current value
- Set some different current values, check whether the voltage value on VFD is near 0v, and the current on it is close to the value you set.
- 8) Make sure that the current can be adjusted from 0 to full rated value.

Low voltage range current check:

- 9) Press  (Shift)+4 to switch to high voltage range, repeat step 7~8 above, verify if the current can adjust from 0 to full rated value
- 10) Turn off the output of the power supply, and remove the short wire.

Chapter 4 specification

This chapter will introduce the main technical parameters of IT6870B, such as rated voltage/current/power and so on. Besides, we will introduce the working environment and storage temperature.

4.1 main technical parameters

Model		IT6872B	IT6873B	IT6874B
Output Ratings	Dual range output	0-35V,4A /0-15V,7A	0-75V,2A /0-32V,4A	0-150V,1.2A /0-60V,2A
Load regulation	Voltage	$\leq 0.01\% + 5\text{mV}$	$\leq 0.01\% + 4\text{mV}$	$\leq 0.01\% + 4\text{mV}$
	Current	$\leq 0.01\% + 3\text{mA}$	$\leq 0.01\% + 2\text{mA}$	$\leq 0.01\% + 2\text{mA}$
Line regulation	Voltage	$\leq 0.01\% + 5\text{mV}$	$\leq 0.01\% + 4\text{mV}$	$\leq 0.01\% + 4\text{mV}$
	Current	$\leq 0.01\% + 3\text{mA}$	$\leq 0.01\% + 2\text{mA}$	$\leq 0.01\% + 2\text{mA}$
Programming Resolution	Voltage	1mV	1mV	1mV(<100V) 10mV($\geq 100\text{V}$)
	Current	0.1mA	0.1mA	0.1mA
Readback resolution	Voltage	1mV	1mV	1mV(<100V) 10mV($\geq 100\text{V}$)
	Current	0.1mA	0.1mA	0.1mA
Programming accuracy 12 month (25°C \pm 5°C)	Voltage	$\leq 0.04\% + 8\text{mV}$	$\leq 0.04\% + 8\text{mV}$	$\leq 0.05\% + 20\text{mV}$
	Current	$\leq 0.1\% + 5\text{mA}$	$\leq 0.1\% + 5\text{mA}$	$\leq 0.1\% + 5\text{mA}$
Readback accuracy 12 month (25°C \pm 5°C)	Voltage	$\leq 0.04\% + 8\text{mV}$	$\leq 0.04\% + 8\text{mV}$	$\leq 0.05\% + 20\text{mV}$
	Current	$\leq 0.1\% + 5\text{mA}$	$\leq 0.1\% + 5\text{mA}$	$\leq 0.1\% + 5\text{mA}$
Ropple&Noise	Normal mode Voltage	$\leq 3\text{mVp-p} / 1\text{mVrms}$	$\leq 3\text{mVp-p} / 1\text{mVrms}$	$\leq 5\text{mVp-p} / 1.5\text{mVrms}$
	Normal mode Current	<6mA _{rms}	<6mA _{rms}	<6mA _{rms}
	Common mode Current	<1.5uA _{rms}	<1.5uA _{rms}	<1.5uA _{rms}
Transient response time	Recover to 75mV (50%~100%load)	<50us	<50us	<100us
Rise time	10%-90%	<90ms	<120ms	<150ms
Fall time	90%-10%	<350ms	<450ms	<2s

4.2 supplementary characteristic

State storage Memory	9×8 groups
Calibration frequency	1year
Cooling	Fans
Operation temperature	0 to 40 °C
Storage temperature	-20 to 70 °C
Environmental condition	Designed for indoor use, max humidity 80%, and no condensation

Max AC input power

IT6872B	IT6873B	IT6874B
750VA	750VA	750VA

Chapter5 Front-panel Operations

This chapter introduces the basic operations of IT6870B. It is divided into following parts:

- local/remote
- Voltage setting
- Current setting
- Output on/off
- Switching the setting value and actual value
- Dual-range switch
- Adjust voltage/current/power
- Save operation
- Trigger operation
- Menu operation
- OVP function
- Keyboard lock function


5.1 Local/remote

 (Local) button on the front panel is used to switch remote mode to local mode.

After power on the power supply, it defaults in local mode. In this mode, all buttons are enabled. While in remote control mode, all buttons are forbidden except local button. Local and remote control mode can be switched by PC. It will not change the output parameters when mode is changed.

5.2 Dual-range switch


Operation: Press  (shift) + number 4 or 7




Take IT6872B as an example, press (Shift)+number 4, VFD will appear a mark "*", it represents in high voltage level (0-32V, 4A). Press  (shift)+number 7, mark "*" will disappear which indicates in low voltage level now (0-15V, 7A).



In high voltage level, setting voltage is higher than the max voltage in low voltage level. At this moment, if customer switch to lower voltage level. Then the voltage will default to be limited at the max voltage value of low voltage level.

In low voltage level, working current is higher than in high voltage level. So, when customer switch to high voltage level (with lower current range), the current will default to be limited at the max current value of high voltage level.

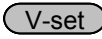5.3 Voltage setting

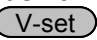IT6870B series power supply enables customer to set voltage from 0V to rated value. Press  button, it will be lit. Now, there are three ways to set the voltage:


Solution1: press  button-----press  button to adjust the cursor's position-----press  button to increase or decrease the setting value.

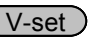



Solution2: press  button-----press  button to adjust the cursor's position-----adjust the knob to increase or decrease the setting value.

Solution3: press  button+ number  to  to set the voltage value. Then press

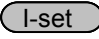


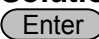
 button to confirm.

5.4 Current setting




IT6870B series power supply enables customer to set current from 0V to rated value. Press  button, it will be lit. Now, there are three ways to set the voltage:


Solution1: press  button-----press  button to adjust the cursor's position-----press  and  button to increase or decrease the setting value.

Solution2: press  button-----press  button to adjust the cursor's position-----adjust the knob to increase or decrease the setting value.

Solution3: press  button+ number  to  to set the voltage value. Then press  button to confirm.


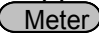
5.5 Output on/off

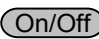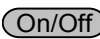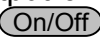 button is used to control the output of power supply. When  button is lit, it represents output has been turned on. If  button is dark, it indicates that output is off. In output on mode, the indicator light CV or CC will be lit.

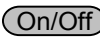Note: Please ensure the power supply and determinand has been connected well and then press  button to turn on the output.

5.6 switch the actual/setting value display

 button is used to switch the display between actual and setting value.

- (1) When  button is lit, it shows actual voltage and current on front panel. Meanwhile, VFD will appear a marker of "meter".
- (2) When  button is dark, it shows setting voltage and current on front panel.

5.7 CC/CV mode


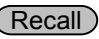
According the ohm's law, output current is determined by output voltage and the resistance of load. When actual current is less than the setting value, power supply will function in CV mode. And CV status indicator lamp will be lit.

If actual current is above the setting value or rated value, power supply will change to CC mode, and CC status indicator lamp will be lit.

5.8 Save/Recall


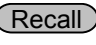
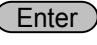
IT6870B series power supply enables customer to store up to 9*8 groups of different operating parameters in a non-volatile memory.

Each operating parameters includes a constant voltage value, constant current value and OVP setting value.


You can save or recall parameters by  (Shift) +  (Save) buttons directly from the front panel or through command *SAV,*RCL.

Save operation:

Set the desired Voltage and Current value

Press the  (Shift) +  +number 1 to 9 to assign a memory location. Press  to confirm.


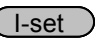


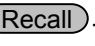Recall operation:

Keep group setting unchanged, press  +number 1 to 9 to select the memory location where the settings you want to recall are stored.

Group Concept:

When storage amount exceeds 9,you have to enter into menu and select MEM item to change the group set. Meanwhile, to recall a pre-stored parameter should be coordinated with correct group set. For example, if you want to recall parameters which are stored in memory location from 10 to 19, then MEM should be set to group 1.


To change group set:

(1) Press  (Shift) +  button to enter the menu,press  button to select SYST SET,press  to confirm.

(2) Press  to select MEM,enter a numerical value,press  to confirm.


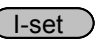



5.9 Trigger operation

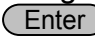IT6870B series power supply supports two different trigger modes Manual and Bus. Configure one of the trigger sources before performing trigger operation.



This operation is often used with list operation. It provides a trigger signal to start running a list file. During the process of running a list file, trigger button  (Trigger) will keep blinking until finished.

5.10 Menu Operation

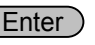1. Menu structure

Press  (Shift) +  (Menu) to enter menu mode. Use the ,  or knob to scroll through the menu list and press  to select a item and view the parameters. Press Esc button to return to the higher level menu and to quit the menu setting.

MAX VOLT	Set the Maximum Voltage		
SYST SET	P-MEM (RESET)	Reset	Return to the factory default setup value
		Keep	“Remembers” and restores the operating parameters of power supply (voltage, current settings...) before power was turned off. The next time you power up the unit, the parameters will be recalled automatically.
	P-OUT (OFF)	OFF	Set the Power to OFF state after power up.
		Keep	“Remembers” and restores the power ON/OFF state of power supply before power was turned off. The next time you power up the unit, the

			on/off state will be recalled automatically.			
	COMM	GPIO	ADDR	Set GPIO address		
		RS232	BAUD	Baudrate set		
				4800		
				9600		
				19200		
				38400		
				57600		
				11.52K		
			NONE 8BIT	NONE 8BIT	8BIT None parity	
				EVEN 8BIT	8BIT Even parity	
			ODD 8BIT	8BIT Odd parity		
	USB					
	CMD	SCPI	Set to SCPI protocol			
			SIG	Single unit to communicate with PC		
			MUX	Multiple units to communicate with PC		
		ADDR		Address range is 0-30		
		FRAME	Set to frame protocol			
	ADDR		Address range is 0-30			
	BEEP (ON)	OFF	Disable key sound			
		ON	Enable key sound			
	KNOB (ON)	LOCK	Lock the rotary knob			
		ON	Unlock the rotary knob			
	TRIG (MANUAL)	MANU	Press  (Shift)+  (Trigger) to generate a trigger pulse.			
		BUS	Remote command trigger mode			
	MEM (GROUP1)	GRP1-8	Group set, used with Save/Recall operation			
	TIMER SET	OFF	Disable timer function			
		ON	Enable timer function(0.1-9999.9S)			
	RESET	NO	Remain unchanged of previous menu setup			
		YES	Return to factory default setup			
	EXIT	Quit system menu				
	LIST SET	LIST STATE	OFF	Disable list function		
			ON	Enable list function		
		LIST LOAD	Recall list operation file (FILE0-FILE3)			
		LIST EDIT	TIME	SEC	Select second as time unit	

		(SEC)	MIN	Select minute as time unit
		VSET	Set step voltage	
		ISET	Set step current	
		SEC	Set step delay time(0.1-9999)	
		NEXT (YES)	YES	Continue to edit the next step
			NO	finish list file edit
		REPET	1-65535	Set repeat count
		SAVE	NO	Do not save the current list file. In this mode, the file can only run for one time. Once you quit the list mode or turn off the unit, the file cannot be recalled.
	FILE0-FILE3		save list file to assigned memory location	
	EXIT	Quit list menu		
POWER INFO	MODEL	Model information		
	VER	Firmware version		
	SN-1	First six number of SN		
	SN-2	Middle six number of SN		
	SN-3	Last six number of SN		
	EXIT	Quit information menu		
EXIT MENU	Quit menu			


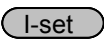
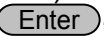
Note: Press  button can help to quit Menu setup and any function button operation.


2. Menu Function

Maximum voltage (>MAX VOLT)

The maximum voltage can be adjusted from 0A to maximum rated voltage of each model.

To set max volt:

(1) Press  (Shift) +  (Menu) button to enter menu setup, scroll to >MAX VOLT item and press  to confirm.

(2) Using  button to adjust cursor position and set max voltage.

Output voltage set will be limited within the range of max voltage.

MAX VOLT default set is the rated voltage of each model.

Power up setting (>P-MEM)

P-MEM item is used to set operation parameters state of power supply after power up.

If select RESET, means to initialize output parameters to factory default setup. Every time you power up the unit, the output parameters is always 0V, 0A.

If select KEEP, means to remember last shutdown parameters. The next time you power on the unit, the output parameters are kept as the same with last shutdown setup.

Factory default set is KEEP.

On/Off state after power up (>P-OUT)

P-OUT item is used to set the output state of power supply after power up.

If select KEEP, means to remain the output state of last shutdown. In this selection if you power off the unit in output on state, then the next time you power up the unit, the output is kept in on state.

If select OFF, means every time you power up the unit, it defaults in output OFF state.

Factory default set is OFF.

Communication set (>COMM)

IT6870B series power supply has built-in standard RS232/USB/GPIB communication interface.>COMM item is used to set the communication mode (by RS232 or USB).

It includes six kinds of baudrate set in RS232 communication mode

(4800,9600,19200,38400,57600,11.52K).When operating the power supply in remote mode, make sure that you configure identical baud rate settings for the power supply and the computer.

KEY Sound Set (>BEEP)

>BEEP item is used to set the key sound.

If select On, means enable the key sound. If select Off, means disable the key sound.

Factory default set is ON.

KNOB State (>KNOB)

>KONB item is used to set the state of KONB.


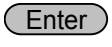
If select ON, means unlock the rotary knob. You can use knob to scroll menu or set a value.

If select LOCK, means disable rotary knob function.

Factory default set is ON.

Trigger Mode (>TRIG)

IT6870B series power supply supports two different trigger modes (MANU and BUS).

If select MANU, press  (Shift) +  (Trigger) can generate a trigger signal.

If select BUS, then sending command *TRIG can generate a trigger signal.

Factory default set is MANU.


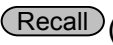
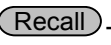
Group set (MEM GROUP)

IT6870B series power supply enables customer to store up to 9*8 groups of different operating parameters in a non-volatile memory for quick recall.

How to understand 9*8

9*8: There are 8 groups; each group includes nine different memory locations. The definition of group is as follows:

GRP1: means to Save/Reall parameters in memory location from 1 to 9.

Operation: Press  (Shift) +  (Save) + numeric keys 1 to 9 ( + numeric keys 1 to 9)

GRP2: means to Save/Reall parameters in memory **location from 10 to 18.**

GRP3-GRP8 is counted on the analogy of the same rule.

Timer setup (>TIMER SET)

TIMER SET item is used to enable or disable timer function.

If select ON, means to enable output Timer. Output will turn off after value set in menu "Timer set" counted down to zero. Meanwhile, VFD will appear a mark of "Timer".

If select OFF, means to disable Timer function.

Factory default set is ON.

Reset to factory setting (>RESET)

RESET is used to return to the factory default setup.

If select YES, means to return to factory default setup.

If select NO, means to keep the current setup unchanged.

Factory default setup is as follows:

P-MEM=KEEP

P-OUT=OFF

COMM=RS232

CMD=SCPI

BEEP= ON

KNOB=ON

TRIG=MANU

MEM=GROUP1

TIMER=OFF


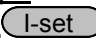

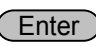
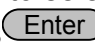

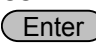
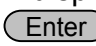




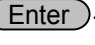











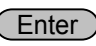



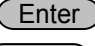

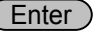
List Function (>List Set)

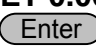List mode allows you to create a sequence of steps, store it into the power supply's non volatile memory and execute it. The input parameters for generating a list include the time unit (min or sec), the step voltage, step current, step time and whether continue to the next step, repeat count and whether save the file. Each list file can be edit up to 150 steps.

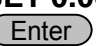
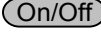



Once a trigger signal is received, the programmed list will be executed once. Once finished, the instrument will pause until the next trigger signal is received.

Operation:

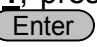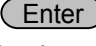
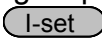





Generate file:five steps:


- 1) Press  (Shift)+  (Menu) into menu operation
- 2) VFD displays **MAX VOLT**, press  to select **LIST SET**, press  to confirm
- 3) VFD displays **LIST STATE**, press  to confirm. VFD displays **LIST>OFF**, press  to select **>LIST >ON**, press  to confirm. Then  button will be lit. You have enables list mode.
- 4) Press  to select **LIST EDIT**, press  to confirm.
- 5) VFD displays **TIME SEC**, press  to confirm. Continue to next step, or press  to select **>TIME MIN**. Press  to confirm. Note: no matter you select SEC or MIN, the adjustable range is 0.1~9999.9
- 6) VFD displays **VSET 0.000**, press numeric keys  to  or adjust rotary knob to set voltage, press  to confirm.
- 7) VFD displays **ISSET 0.0000**, press numeric keys  to  or adjust rotary knob to set current, press  to confirm.
- 8) VFD displays **SEC 0.1**, press numeric keys  to  or adjust rotary knobs to set time press  to confirm.
- 9) VFD displays **NEXT >YES**, press  to confirm.
- 10) Repeat steps from 5) ~8) for four times. The last time, when VFD shows **NEXT >YES**, press  to select **NEXT >NO**, press  to confirm.
- 11) VFD displays **REPET 1**, press numeric keys  to  or adjust rotary knob to set cycle counts, press  to confirm.
Repeat count range:1~65535.
- 12) VFD displays **SAVE >NO**, press  to confirm.
In this condition, the current list file does not be saved. It can only run once. As long as you quit the list mode or turn off the unit, the list file will not exist anymore.
You also can press  to select **>SAVE FILE0** to save the file into assigned memory location for quick recall. Press  to confirm.
There are four memory areas to save a list file (FILE0~FILE3).
- 13) If you intends not save the list file, VFD will directly display **LIST EDIT**.

If you select to save the list file, VFD will display **LIST EDIT** after blinking contents of SAVE DONE for about three seconds.

- 14) Press  two times to exit menu operation.
- 15) After you edit a list file, set the trigger source in the menu to "**MANUAL**"
- 16) Press  button to turn on the output. Press  (Shift) +  (Trigger) to generate a trigger signal to execute a list file.
- 17) If you have saved multiple list files. **LIST LOAD** item can help you to recall assigned file that you need. Then press  two times to escape menu operation. Then the same operation as step 16)


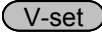
Note: In LIST mode, I-SET and V-SET buttons are forbid. To release list function, please refer to the following steps:

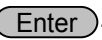
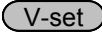
Press  (Shift) +  (Menu) into menu setup-----press  to select **LIST SET**, press  to confirm-----VFD displays **LIST STATE**, press  to confirm-----press  to select **LIST >OFF**,  to confirm.

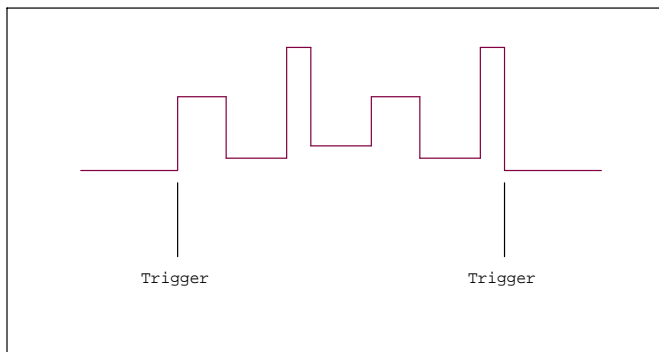

5.11 OVP Function

IT6870B series power supply provides OVP function.

Press  (Shift) +  (OVP) button to set OVP value. After setup, a mark of "ovp" will appear on the VFD which means you have successfully open OVP function.

Press  (Shift) +  (OVP) again will release OVP function. Factory default set is off OVP function.


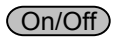
Reasons to trigger OVP:

Customer's wrong operation, internal circuit error or over high external voltage will cause OVP. Once OVP is triggered, the power supply will off the output immediately. Meanwhile, the VFD displays "OVER VOLT" and there will be a mark of "PROT" appearing on the top right corner of VFD.

The operator should avoid adding an external voltage over 120% of rated voltage across the power supply. Or it will damage the internal components.

When OVP is triggered, you should inspect the external causes and remove it firstly. Then press ON/OFF button to restart the output. If in remote control mode, you should clear the "PROT" state by sending command and then turn on the output.


5.12 KEY LOCK

Press  (Shift) +  (Lock) button to lock the function keys. If successfully be locked, a mark of “LOCK” will appear on the front panel. Meanwhile, all the function keys will be disabled except ON/OFF, Meter and Shift buttons.

Press  (Shift) +  (Lock) again can release the key lock function.

5.13 Remote Sense Function

Remote sense is used to maintain good regulation at the load and reduce the degradation of regulation that would occur due to the voltage drop in the leads between the power supply and the load. By connecting the supply for remote voltage sensing, voltage is sensed at the load rather than at the supply's output terminals. This will allow the supply to automatically compensate for the voltage drop in the load leads and improve regulation.

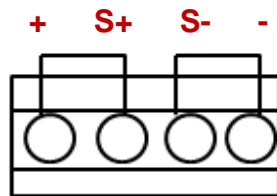

S+, S- : remote sense terminals

+, -: output pins. These pins are identical to the output terminals in the front.

Disable remote sense function:


When you do not use remote sense function, please refer to the below

1. Using short clip to connect + and S+,- and S-
2. Connect device under test with output terminals on front of power supply.

Enable remote sense function:

1. Disconnect + and S+,- and S-
2. Connect sensing wires from S+ and S- to the load input terminals
3. Connect output wires from + and – on front panel to the load input terminals

Note: To ensure the system stability, please using twisted-pair cables to connect sensing terminals and loads input terminals.

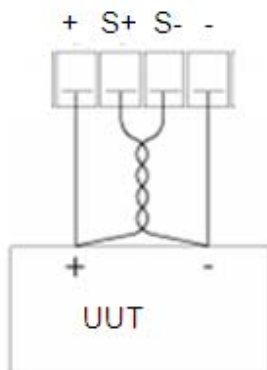
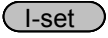



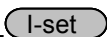
Chapter6 Remote Operation

IT6870B series power supply provides two standard communication interfaces: RS232、USB、GPIB. User can select anyone to communicate with the computer.



6.1 RS232 interface

There is a COM port (DB9)connector at the rear of the power supply, when connect to computer, you need to connect a cable with COM port on both side;


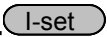
To active connection, you need to press the front panel composite key  (Shift)+  to configurate settings the same as computer configuration settings. RS-232 interface can be used to program all of the SCPI commands.

Note: The RS232 settings on the computer side must match the settings in the system menu of the instrument. If any change, please press  (Shift)+  key to enter the system menu and then implement the changes.

RS-232 data format

RS-232 data is 10-bit words contain a start bit and a stop bit. The start bit and stop bit can't be edited. However, you can select the parity items by pressing  (Shift) +  key on the front panel and enter the system menu(SYSTEM SET). Parity options are stored in nonvolatile memory


Baud Rate

The front panel  (Shift)+  button allows the user to select a baud rate which is stored in the non-volatile memory: 4,800,960,019,200 3,840,057,600,115,200

RS-232 connection

Use a RS232 cable with DB-9 interface, RS-232 serial port can connect with the controller (eg PC). Do not use blank Modem cable. Table 2-2 shows the plug pins.

If your computer is using a RS-232 interface with DB-25 connector, you need an adapter cable with a DB-25 connector at one end and the other side is a DB-9(not blank modem cable)

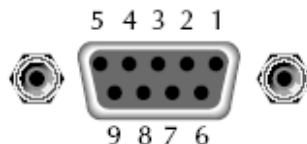

Pin introduction of RS-232 connector

Pin number	Description
1	No connection
2	TXD, transfer data
3	RXD, receive data
4	No connection
5	GND, ground
6	No connection
7	CTS, clear transfer
8	RTS, ready to transfer
9	No connection

RS-232 Troubleshooting:

If there is RS-232 connection problem, check the following:

Computer and power supply must configure the same baud rate, parity, data bits and flow control options. Note that the power configuration as a start bit and a stop bit (these values are fixed).

As described before in RS-232 connector, you must use the correct interface cable or adapter. Note that even if the cable has the right plug, the internal wiring may be wrong.

Interface cable must be connected to the correct serial port on the computer (COM1, COM2, etc.).

Communication Settings

Before communication, you should first make the following parameters on the power supply and PC matches.

Baud Rate: 9600 (4800,9600,19200,38400,57600,115200). You can enter the system menu from the front panel, and then set the baud rate.

Data bits: 8

Stop Bits: 1

calibration (none, even, odd)

EVEN 8 data bits, have even parity

ODD 8 data bits have odd parity

NONE 8 data bits, no parity

MODE: (SIG,MUX)

SIG a single instrument is connected to the communication

MUX 多 multiple sets of instrument communication with PC at the same time, in this situation, instrument address must be set to distinguish among all the units(address 0 ~ 30, default set is 0)

Local Address: (0 ~ 30, the factory default setting is 0)

Parity=None	Start Bit	8 Data Bits	Stop Bit
-------------	-----------	-------------	----------

6.2 USB interface

Use a Cable with two USB port to connect the power and the computer. All power functions can be programmed via USB.


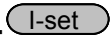

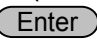

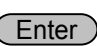



The USB488 interface functions of the power supply described as below:

- ◆ interface is 488.2 USB488 interface.
- ◆ Interface Receive REN_CONTROL, GO_TO_LOCAL, and LOCAL_LOCKOUT request.
- ◆ Interface receive MsgID = TRIGGER USBTMC order information, and will pass TRIGGER order to the functional layer.

Power USB488 device functions described as follows:


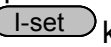


- ◆ device can read all of the mandatory SCPI orders.
- ◆ device is SR1 enabled.
- ◆ device is RL1 enabled.
- ◆ device is DT1 enabled.

To communicate via USB interface, you should first select the communication interface as USB in the system menu, the detailed operation is:

Press  (Shift)+  to enter the menu, press  to select SYST SET, and then press , "P-MEM KEEP" is displayed, then press  to select COMM RS232, press , then  to select USB, and  to confirm. Press  to escape the menu.

Note: when communicate via USB interface, only SCPI commands are supported, so you should make sure the LANG(SCPI/FRAME) item in the system menu is selected as SCPI, if not, please change to "SCPI".

6.3 GPIB interface

First, Connect the GPIB interface on the power supply and the GPIB card on computer via IEEE488 bus, must be full access and tighten the screws. Then set the address, the address range of the power : 0 to 30, can set by the function key on the front panel, press the  (Shift)+  key to enter the system menu function, find the GPIB address setting by  button, type the address,  key to confirm. GPIB address is stored in nonvolatile memory line.

Note: Forbidden to connect DB9 connector in power supply directly with PC or other RS232 port.

Q&A

1. Specification of leads

The following table enumerates the max current which AWG copper could bear:

AWG	10	12	14	16	18	20	22	24	26	28
Max current(A)	40	25	20	13	10	7	5	3.5	2.5	1.7

Note: AWG is the short of American Wire Gage which indicates X lead (it is marked on the lead). The parameters on the above table are for single lead in 30℃ working temperature. This is for your reference only.


2. Could not set CC mode

The power supply has auto switch function between CC mode and CV mode. Due to this function, the power supply could keep continuous operation by switching from CV mode to CC mode when the load changes.

According to the present load, power supply works under CV mode; it provides controlled output voltage which keeps constant when resistance of load diminish; and it will switch until the actual current is above the set value.

If power supply switches to output current, output voltage will scale down according to resistance of load.

The power supply will be back to CV mode when the current is below the setting.

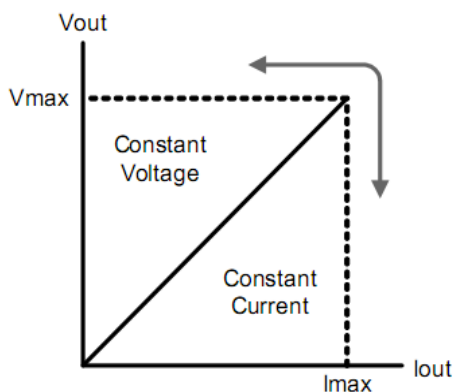

The working mode of power supply could be indicated via the VFD marked zone; if it displays CV, the power supply works under CV mode; if it displays CC, the power supply works under CC mode.


3. No output

Please check the status of current in SET whether it is zero; if it is set as zero, please modify to non-zero value; if still no output, please connect ITECH directly.

4. How to avoid it couldn't start when test battery

When test battery, the main reason of no start is that battery (residual voltage) discharges capacitors of positive and negative terminals of the power supply.


Method to avoid no start: connect a switch which is parallel with a current limiting discharging resistor. Close the switch after all the all leads connected well. The wiring diagram as follows:

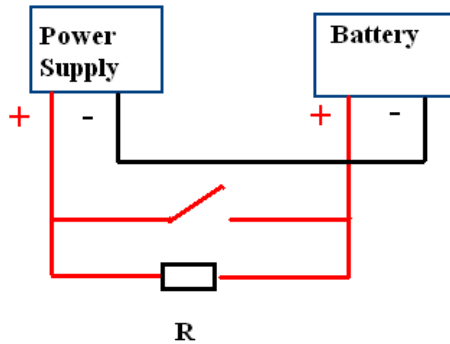

5. No output after working for a certain time
Please check the status of timer; and please close it if it is open.

Postscript

Mark

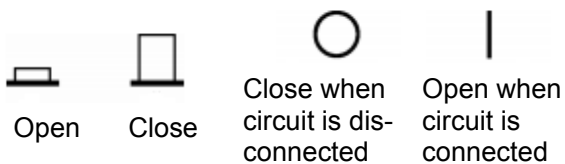

Support process

If you have a problem, follow these steps:

- 1 Check the documentation that come with the product
- 2 Visit the ITECH online service Web site is www.itechate.com , ITECH is available to all ITECH customers. It is the fastest source for up-to-date product information and expert assistance and includes the following features:

Fast access to email AE

Software and driver updates for the product

Call ITECH support line 4006-025-000

