Thank you for purchasing our product. Before using this watch, read this instruction manual carefully to ensure correct use. After reading this manual store it in a safe place for future reference.

Safety precautions (Instructions to be followed at all time)

This manual contains the following instrutions that should be strictly followed at all times to prevent injury to yourself and other persons as well as damage to property

■ Injuries and damages which might be caused by using the watch improperly or neglecting any of the instructions or precautions contained in this mar classified with the following symbols.



WARNING Can cause serious injury or death

0510

Important instructions that should be followed are classified with the following symbol.



Hour hand

0510

Hour hand

Warning (caution) symbol followed by instructions that should be followed or precautions that should be observed

■ Main components

■ Setting the watch

Minute hand

1. Wait till small second hand is on "0" sec, then crown position (2) it stops the small second hand

* For the 0530 model, the watch will stop when the crown is in position (1) to save power.

* For the 0510 model, the date changes at 0 AM. Besure to set the time with AM or PM preperty selected

Hour hand

Small second hand

0530

CAUTION Can or will cause minor or moderate injury or damage

<Before Using the watch>

Confirm the caliber. No of your watch by the stamp on its case back or by checking its face with the illustrations in section" Main components" in this instruction manual.

This instruction manual explains how to use calibers: 0510, and 0530.



[Case back]

Minute hand

Minute hand

0530

Chronograph Second

RESET

Chronograph Minute hand

⚠ WARNING Water Resistance

• Note that water can penetrate the watch

when the crown is pulled out, regardless of

Refer to the watch dial and the case back

for the indication of the water resistance of your watch. The following chart provides

examples of use for reference to ensure that

• Water-resistance for daily use (to 3 atmospheres) means that the watch may be worn while washing your face or

in the rain, but is not to be immersed in water.

• Upgraded water-resistance for daily use (to 5 atmospheres) means that the watch may be worn while swimming, but is not to worn while skin diving

Everyday-use

watch Upgraded every use water-resist

watch Upgraded everyday

watch

use water-resi

water-resistan

• Upgraded water-resistance for daily use (to 10/20 atmospheres) means that the watch may be worn while skin diving, but not while scuba or saturated diving using helium gas.



5 atmospheres

10 or 20

■ Precautionary Items And Usage Limitations







X

X

X

and skin diving | Scuba diving to the watch | washing work when the watch washing your (kitchen work and or in rain) swimming, etc. Specification Water-resistant to X X X X 3 atmospheres

WATER RESIST(ANT) xx bar may also be indicated as W.R. xx bar

X

riangle Caution

your watch is used properly

Water Resistance:

Always use the watch with the crown pushed in (normal position). If the crown is of the screw-lock type, make sure it is securely locked.

(The unit"bar" is roughly equal to 1 atmosphere.)

Indication

Dial or Case back

WATER RESIST

(ANT)

WATER RESIST(ANT)

WATER RESIST(ANT

10/20bar

- Do NOT operate the crown or button when the watch is wet. Water may penetrate into the watch, causing deterioration of water resistance.
 The durability of a leather band may be affected when wet, owing to the properties of the material. In the case of a watch of upgraded water resistance for daily use that is frequently used in
- water, fading, peeling of adhesive or other problems may occur. It is therefore recommended to use another type of band (metal or rubber watchband).

 If a watch of upgraded water resistance for daily use is immersed in sea water or subjected to excessive perspiration, thoroughly rinse with fresh water and wipe completely dry with a soft
- If water enters the watch or the watch fogs up and does not clear up even after a long time, consult your dealer or Citizen Consumer Help Desk, Customer Support Center for inspection and/
- of separater enters the watch, place the watch in a box or plastic bag and immediately take it in for repair. Otherwise, pressure inside the watch will increase, and parts (crystal, crown, buttons,

/ WARNING Handling of the Battery

- Keep the battery out of the reach of small children.
- In the event a battery is swallowed immediately consult a physician
- Do not dispose of the battery with ordinary garbage. Please follow your local government disposal regulations to prevent the risk of fire or environmental contaminations

CAUTION Battery Replacement

- If a depleted battery is left in your watch, damage may be caused by leakage of battery fluid. Be sure to replace the battery promptly.
- Always be sure to select a battery of the correct specifications when replacing the battery.

CAUTION Always Keep your Watch Clean

- Small amounts of dirt may become trapped in the tiny gap between the crown and case, making it difficult to pull out the crown. It is recommended to occasionally turn the
- crown in its normal position to remove any dirt.

 The case and band of the watch come into direct contact with the skin in the same manner as undergarments. Corrosion of the metal or unnoticed soiling such as that caused by perspiration and dirt can soil sleeves and other portions of clothing.
- Keep your watch clean at all times.

 Wearing this watch may cause itching or rash if you have sensitive skin or certain physical conditions. If you think there is something wrong, discontinue wearing the watch immediately and consult your physician.
- Possible causes of rashes include: 1. Allergy to certain metals or leather
- Rust, dirt or perspiration present on the watch's body or band
 Leather bands may become discolored by perspiration or dirt. Always keep your leather band clean by wiping with a dry cloth.

 • Do NOT wear the band too tightly. Try to leave enough space between the band and your
- skin to allow adequate ventilation

<Caring for your Watch>

- Wipe any dirt or moisture such as perspiration from the case and crystal with a soft cloth.
- Remove any dirt from a leather band with a dry cloth.
 For a metallic, plastic or rubber watchband, wash any dirt off with water. Remove the
- small amounts of dirt trapped between the crevices of the metallic band with a soft brush.
- Do NOT use solvents (such as paint thinner or benzene) for cleaning, since they may mar

CAUTION When Wearing your Watch

- Be particularly careful when wearing your watch while holding a small child, to avoid
- Be particularly careful when engaged in strenuous exercise or work, to avoid injury to
- yourself and others.

 Do NOT wear your watch while in a sauna or other location where your watch may become excessively hot, since there is the risk of burns.
- When using the urethane band, dye from clothes or dirt may get on the band and be impossible to remove. Be careful when wearing the watch with clothes or bags that lose their color.

Also, solvents or air humidity may cause the urethane band to deteriorate. Replace the band if its flexibility has deteriorated or cracks have appeared on it.

CAUTION Handling the Band (Putting on and Taking off Band)

• Be careful when putting on and taking off your watch, since there is a risk of damaging your fingernails, depending on the manner in which the band is fastened.

<Luminous dial and hands>

The paint on the dial and hands helps you with reading the time in a dark place. The luminous paint stores light (daylight or artificial light) and glows in a dark place.

It is free from any radioactive substance or any other material harmful to a human body or

- The light emission gradually becomes weaker as time passes
- The duration of the light ("glow") will vary depending on the brightness, types of and distance from a light source, exposure time, and the amount of the paint.
- The paint may not glow and/or may dissipate quickly if exposure to light was not sufficient.

<Temperature>

- The function of the watch may be impaired or the watch may even stop if the ambient temperature is outside the range of -10° C to $+60^{\circ}$ C.
- Avoid using the watch in a manner outside the range of the specifications.
- If the watch is left for an extended period under temperatures outside the normal range (+5°C to +35°C), fluid may leak from the battery, resulting in considerable shortening of battery life.

<Magnetism>

• Analog quartz watches are powered by a step motor that uses a magnet. Subjecting the watch to strong magnetism from the outside can cause the motor to operate improperly and prevent the watch from indicating the correct time. Do not allow the watch to come into close proximity to magnetic health devices (magnetic necklaces, magnetic elastic bands, etc.) or the magnets used in the latches of refrigerator doors, clasps used in handbags, the speaker of a cell phone, electromagnetic cooking devices and so on.

<Static Electricity>

• The integrated circuits (IC) used in quartz watches are sensitive to static electricity. Please note that the watch may not indicate the correct time if exposed to intense static electricity.

<Strong Shock>

Avoid dropping the watch or subjecting it to other strong impact.

<Chemicals, Corrosive Gasses and Mercury>

• If paint thinner, benzene or other solvents or products containing these solvents (including gasoline, nail-polish remover, cresol, bathroom cleaners and adhesives) are allowed to come into contact with the watch, they may discolor, dissolve or crack the materials. Be careful when handling these chemicals. Contact with mercury such as that used in thermometers may also cause discoloration of the band and case.

• If you will not be using your watch for an extended period of time, carefully wipe off any perspiration, dirt or moisture and store in a proper location, avoiding locations subject to excessively high or low temperatures and high humidity. Do NOT leave a depleted battery in the watch for a long time. Be sure to replace it with new one. If battery fluid leaks out, it is

Adjusting the Chronograph

Chronograph operation

RESET


RESTART

0510 0530

STOP

If the chronograph hands do not return to "0" position when the chronograph is reset.

repeatedly by pressing

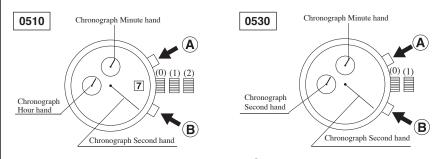

- 1. Pull out the crown to position (2) and then press button (A) Adjusting the chrono second hand to
- * For the 0530 model, pull the crown out to position (1).
- * This second hand move quickly if the (A) button is pressed continuously. 2. Press the button (B) to reset minute/hour hands to "0" position(12:00 position).

The stopwatch can measure

<Standard measurement>

START

START

up to 12 hours in one second

STOP

STOP

4. Push the crown back to position (0).

Tachymeter



Chronograph Second hand

Knowing in how many seconds the car covers a distance of 1km, the meter can measure the approximation average speed per hour during a journey (up to the maximum measurable range of; 60 seconds.)

The tachymeter is the device

automobile

which measures the speed of an

If the chronograph is started at the same time as measurement, and stopped after 1km, the average speed per hour can be determined according to the position of the second hand. f the car covers the distance of 1km in 45 seconds, the average hourly speed during the journey will be

0510 change properly 7 Crown

* For the 0530 model, pull the crown out to position (1).

2. Turn the crown to set the minute/hour hands to the desired time.

* Reduction of power-consumption: Crown at (2) movement stop.

3. To start the small second hand, push the crown back to position (0).

1. Pull out the crown to position (1)

Setting the date

- 2. Turn the crown until the desired date appears
- * Do not set the date between 9:00 PM and 1:00 AM Otherwise, the date may not

Hour hand

Small second

- 3. The crown back to position (0) after set the date
- * The calendar function operates on a 31-day cycle. It is necessary to change the date to the first day of the following month manually by turning the crown for months having 30 days as well as for February

Specifications

Caliber	0510	0530		Caliber	0510	0530
1. Type	Analog quartz Watch		7. Calendar		Date	Without
2.4	±20 seconds per month at normal temperature		8. Additional	Stopwatch	12 hours measurment	
2. Accuracy	(+5°C to +35°C)		features	Other	Power-saving switch	
3. Quartz oscillation frequency	32,768Hz		9. Battery life		About 2 years	
4. IC	1C/MOS/LSI		10. Battery number		280-44(SR927W) 1pce	
5. Effective Temperature Range	-10°C~+60°C	* For product improvement, specifications may be subject to change without notice.				
6. Converters	Bi-polar step motor x 2 pcs					

In the case a malfunction has occurred during the course of normal use while the watch is still under warranty, the watch will be repaired free of charge in accordance with the conditions of the warranty included with this manual

2. Stock Period of Repair Parts

Citizen's standard period for stocking repair parts for each model is generally seven years. When an exterior part such as the watch case, glass, dial, hand, crown or band is damaged, a spare part with different appearance may sometimes be used.

3. Repair Period

Repairs can be performed on your watch within the repair parts stock period even after the free guarantee has expired. However, you will be charged for these repairs. Please take the watch to the shop where your purchased it and ask whether it can be repaired because the repair period varies according to the conditions of use, environment and so forth. Moreover, there are cases in which it is difficult to restore the watch to its original accuracy when decreased accuracy has resulted from long-term use.

4. Change of Address or Receiving as a Gift

■ Warranty And Service

In the event that you have moved or have received your watch as a gift, and are not able to bring your watch to the shop where it was purchased for servicing, please consult Citizen Consumer Help Desk or Customer Support Center.

5. Periodic Inspection(Charge basis)

You should have your watch inspected(Charge basis) every 2-3 ears to extend its life and ensure safety. When replacing parts, always make sure to request genuine parts. When it becomes necessary to replace packings and springs, it may sometimes also be necessary to inspect other parts or to make repairs in addition to replacing the parts. Please ask for more detailed information on repair or replacement expenses at the shop where you purchased your

watch or Citizen Consumer Help Desk, Customer Support

6. Batteries

- * The battery which was installed in your watch at the factory is a monitor-use battery which monitors the functions and special features of your watch. You should keep in mind that the life of your battery could be shorter than the specified period is up.
- * Even in the event that the battery runs out before the time specified in the guarantee, there will be a fee for replacing the battery.

7. Other Inquiries

If you have any questions regarding the warranty, repairs or other matters, please inquire at the shop where you purchased your watch or Citizen Consumer Help Desk, Customer

	LMO			
•		 		