

i-mobile
i-STYLE 7.5/7.5A

USER MANUAL

Welcome

Thank you for purchasing this product.

For your cellular phone works properly, please follow the instructions in this manual. To prevent any possible incidents or malfunctions, please follow all safety warnings.

Screen displays and illustrations in this user's manual are designed to help you operate this phone to its optimum performance

Contents

1	Welcome	1
1.1.	Exciting Features	1
1.2.	Technical Specification	1
2	Phone Layout	3
2.1.	Keys and Parts	3
2.2.	Icons and Indicators	3
3	Getting Started	5
3.1.	Insert SIM card	5
3.2.	Insert Memory card	6
3.3.	Unlock the Phone	7
3.4.	Using the Touch screen	8
3.5.	Using the Phones Buttons	9
3.6.	Context Menus	10
3.7.	Options menus	10
3.8.	Menu Icons	11
4	Placing and Receiving Calls	12
4.1.	Make a Call	12
4.2.	Disable Phone Calls (Airplane mode)	13
4.3.	Disable SIM card	13
5	The Home Screen	15
5.1.	Open and Close the Launcher	15
5.2.	Switch to Recently Used Application	17
5.3.	Customize Home Screen	17
6	Connect to the Internet	20

6.1. To configure your Internet	20
6.2. Access Internet via Wi-Fi	21
7 Managing Notifications	22
7.1. Open the Notifications Panel	22
7.2. Respond to Notifications	23
7.3. Close Notifications Panel	23
8 Messaging	24
8.1. Message environment & Settings	24
8.2. Using the Onscreen Keyboard	26
8.3. Create and Send Multimedia Message	27
8.4. Operation on a message	28
8.5. Lock a Message	29
9 Multimedia	30
9.1. Camera	30
9.2. Gallery	31
9.3. Share an Album	31
9.4. Music	31
9.5. FM Radio	32
9.6. Record Sounds	32
9.7. Make Screenshots	33
10 Connect to Networks and Devices	34
10.1. Connect to PC	34
10.2. Connect to Internet	35
10.3. Connect to Wi-Fi Networks	35
10.4. Pair With Bluetooth Devices	35
10.5. Connect to Internet via your Phone	36

10.6. Install Secure Certificate from SD Card	37
11 Download Applications	38
12 Phone Settings	39
13 Health and Safety Information	43
13 System Upgrade (SW upgrade)	49
14 Battery Informations	57
15 Condition Of Warranty	58

1 WELCOME

1.1. Exciting Features

Congratulations on becoming a proud owner of the I-STYLE 7.5 Android mobile phone. You have now joined the millions of satisfied customers spread across the Globe. Your I-STYLE 7.5 device offers you these exciting features and much more:

- Android 4.2.2
- 5.0 inch Screen
- Cameras (front and back)
- 1GHz Dual core Processor
- External Memory (Expandable to 32 GB)
- Dual SIM
- Multimedia player
- GPS
- Gravity sensor
- Wi-Fi
- Bluetooth 3.0

1.2. Technical Specification

GENERAL:

- Android 4.2.2
- 1800mAh Li-ion battery, 6h autonomy in communication

SCREEN:

- 5.0" TFT capacitive touch screen
- 800*480pixels

HARDWARE:

- 1GHz Processor / 512MB RAM
- External SD-card slot up to 32GB
- 5 MPx Back Camera + 5 MPx Front Camera
- White LED flash

COMMUNICATION:

- DUAL SIM. Sim1: 3G / SIM2: 2G
- Support GPRS, EDGE networks. GSM900 1800MHz /
- HSDPA WCDMA 2100MHz
- Support GPS and AGPS
- Bluetooth 3.0
- Wi-Fi 802.11 b/g/n
- 3.5mm Jack Plug
- Micro-USB 2.0 receiver









2 PHONE LAYOUT

2.1. Phone Layout



2.2 Icons and Indicators

Icon	Indicators	Icon	Indicators
	Signal strength indicator		Alarm Indicator

Icon	Indicators	Icon	Indicators
	New missed calls		Wi-Fi Indicator
	USB is connected		Bluetooth Indicator
	The headphone is being used		Battery charging Information
	New message from SIM 1		Airplane mode Indicator


3 GETTING STARTED

3.1. Insert SIM card

The I-STYLE 7.5 is a Dual SIM mobile phone allowing you to use the facility of two networks. To insert SIM card(s):

- Switch off the mobile phone and remove the rear cover and battery.
- Insert the SIM card correctly in the card slot(s) (See figure below). WCDMA slot is for 3G network; GSM is for 2G.

 Insert SIM card carefully!

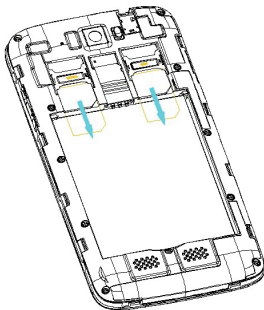


- Finally insert the battery and replace the rear cover of the mobile phone.

3.2. Insert Memory card

The I-STYLE 7.5 allows you to expand internal memory with a micro SD card, up to 32GB.

 - Power off the mobile phone, and then remove the rear cover and battery.
- Insert the memory card into the slot.

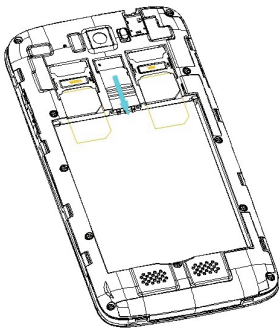

- Finally insert the battery and the rear cover of the mobile phone.

 
Use only compatible memory cards approved by with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

3.3. Unlock the Phone

You may need to provide PIN, Password, or draw a pattern to unlock your phone.

To unlock the screen:

- Press the power key to wake up the phone.
- Hold and drag the unlock icon to the right to unlock.

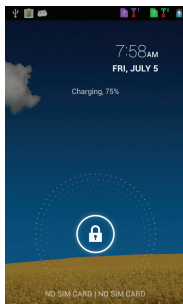

You may be required to unlock your phone based on the unlock method in settings.

To set the unlock method:

- On the main menu, touch Settings > Security.
- Touch screen lock.
- Choose the type of locking as desired. You can set your screen lock on the basis of pattern, PIN, Password or none.

3.4. Using the Touch screen

You can use the touch screen in the following ways:



 
- **Touch:** Acts on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons.
- **Touch and hold:** Touch and hold an item on the screen until an action occurs.
- **Drag:** Touch and hold an item and move your finger on the screen until you reach the target position.
- **Swipe or slide:** Quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list,
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. You can also double-tap to control t zoom, in Maps, and in other applications.



- **Pinch:** In some applications (Such as Maps, Browser, and Gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen:** On most screens, the orientation of the screen changes as you rotate it. You can turn this feature on and off.



3.5. Using the Phone's Buttons



The phone's buttons offer a lot of functions and shortcuts.

Button	Press
	Menu: opens context menu with further options and actions, content depends directly on applications.
	Home: returns to Home screen. Hold it to access the list of last used applications.
	Back: returns to the previous screen you were working in, even if it was in a different application. Can be used to hide the keyboard.

The phone provides you with Context menus and Options menus for accessing the features in an intuitive way.

3.6. Context Menus

  You can open context menu by touching  key. Not all screens have context menus. If you touch  key inside application that has no context menu, nothing happens.

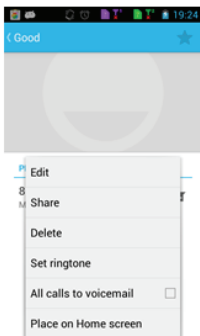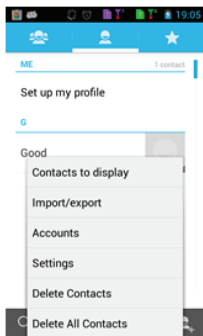

3.7. Options menus

Options menus contain tools that apply to specific items on the screen. You can open an option by touching and holding an item on the screen. Not all items have options menus.

When you touch and hold some items on a screen, an Options menu opens.

3.8. Menu Icons

You have the following menu icons to easily let you access its important features:



Opens the dialer



Opens the contacts list



Opens the main menu



Opens messaging








Opens the browser

4 PLACING AND RECEIVING CALLS

You can dial a phone number or touch a number in your contacts. You can also place from the call log or contacts.

4.1. Make a Call

- Tap the  icon on main menu or the home screen to dial the desired number.
- Touch the  icon on main menu or the home screen to make a call from call log, contact, groups or favorites.
- To dial an international number, touch and hold the 0 key to enter the Plus (+) symbol, and then enter the international country prefix, followed by the phone number
- Touch the  or  icon to call with SIM 1 or SIM 2.
- Press the Volume Up/ Down keys to adjust the call volume.
- You can access Call Logs, Contacts from the dialer screen.
- While during a call, touch the  icon to end a call.

4.2. Disable Phone Calls (Airplane mode)

Some locations like airplanes may require you to turn off your mobile, Wi-Fi, and Bluetooth wireless connections.

- Press and hold the Power button.
- Touch the Airplane mode.

4.3. Disable SIM card

 
You may have only one SIM card and you want to close the SIM card.

To do it go to:

Settings

> SIM card management

>SIM1/SIM2

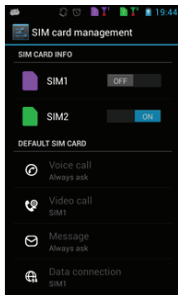


Then you can choose which SIM card enable or disable:

- SIM 1 is for 3G
(WCDMA slot)
- SIM 2 is for 2G
(GSM slot)

5 THE HOME SCREEN

 When you sign in, the home screen opens.

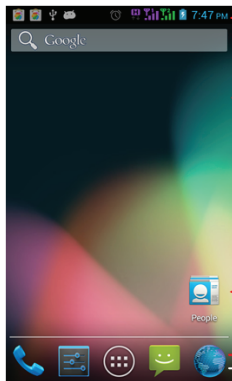

The status bar shows the time, signal strength, battery status, and notification.


Touch and hold an empty spot to change wallpaper.
Swipe left / right to change desktop screen.

Touch and hold to move or remove an icon or a widget.

Touch an icon to launch the corresponding application; bottom icons are accessible from all desktop screens.

The Home screen is your starting point to access all the features on your phone. Touch the main menu icon at the bottom of the screen to view all installed applications.

 
5.1. Open and Close the Launcher

- Touch the Launcher Icon  to open the main menu.
- You have access to all applications installed on your device and their widgets when available.
- Touch an application to open and launch it.
- To add an application shortcut to the desktop screen, press and hold it until it vibrates and enters Home screen. Place it and release your finger.
- Slide the Launcher left or right to bring more icons into view.
- As soon as you install a new application, it comes in this list.


 
Widgets come at right of applications panel. You can directly touch WIDGETS at top of the screen

You cannot launch widget like an application; you can only place it on desktop screen.

Press and hold it until it vibrates and enters Home screen. Place it and release your finger. A context menu opens to configure the widget or resize it, naturally, it depends on the widget.

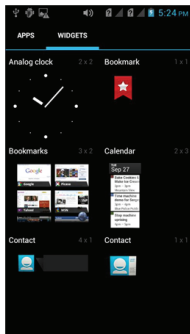



5.2. Switch to Recently Used Application

- Press and hold the  icon for a few seconds.
- Touch an icon to open its application. Or press  to return to the current application.



5.3. Customize Home Screen

You can add applications, shortcuts, widgets, and other items to any part of the Home screen or change the wallpaper.

Applications:

- Press  to open the Home screen.
- Touch the Launcher Icon  to open the main menu.
- To add an application shortcut to the desktop screen, press and hold it until it vibrates and enters Home screen. Place it and release your finger.

Widgets:

- Press  to open the Home screen.
- Touch the Launcher Icon  on your home screen.
- Touch widgets on the top of screen.

You are in the main widgets screen, you can

- Move between screens: Swipe left or right
- Drag a widget to a home screen: Touch and hold the widget's icon, slide your finger where you want to place

it, and lift your finger.

- You may be asked to make further choices before the widget activates. If there isn't room where you dropped it, the widget won't get added to the Home Screen.

Wallpapers: Wallpapers are images from Gallery, still images included with the system, and live images. They take the place of the default background for your Home Screen.

- Touch and hold anywhere on a desktop Home screen that's not occupied. A list of options appears.
- Touch one of the following wallpaper source:

Gallery: Choose from pictures that you've taken with camera or downloaded to your device.

Live Wallpaper: Choose from a scrolling list of animated wallpapers.

Wallpaper: Choose from thumbnails of default images.

- For set wallpaper, touch CROP at the top of the screen (for Gallery images) or set wallpaper.

Folders: You can very easily regroup desktop icons in a folder on screen to save space and access more applications.

- Touch and hold any icon on desktop screen to move it.
- Go on another icon and release to create a folder

containing both icons.

- Then add as many icons as folder can hold, give it a name, move it where you want.

You have all the tools to customize your I-STYLE 7.5 Smartphone.

6 CONNECT TO THE INTERNET

6.1. To configure your Internet:

- Go to Settings> Wireless & Networks >More > Mobile Networks >Tap Data Enabled.
- By default, your network provider sends the Access Point Name settings via SMS, or it comes automatically with your SIM card. You may need to install these settings. After this, you can choose from the listed access point names. If the access point names are not listed by default, please contact your network provider for the same.
- To add any operator Access point Name, go to settings > More > Mobile networks > Access Point Name.

WARNING:

to avoid any over cost contact your operator to know more about Access Point Name regarding your subscription.

- After you have selected or configured the access point name, go to Settings> Wireless & Networks >Data usage >Tap Mobile Data to enable Internet connection.

6.2. Access Internet via Wi-Fi

To browse the Internet via Wi-Fi:



- Go to Menu> System settings> wireless & networks and then tap Wi-Fi.
- Next, go to Menu> settings> wireless & networks > Wi-Fi Settings and then enable Wi-Fi. Next, select the WIFI connection listed under Wi-Fi networks.

7 MANAGING NOTIFICATIONS

Notification icons inform you of new messages and events. When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

7.1. Open the Notifications Panel

  Drag the status bar down from the top of the screen as shown below:

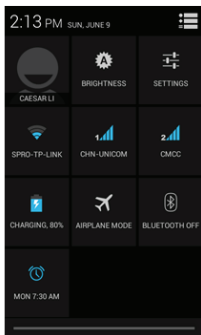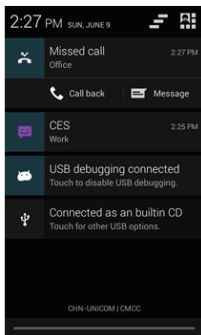

The Notifications panel displays your network provider name and a list of your current notifications.

7.2. Respond to Notifications

Open the notification panel and touch a notification to respond to it. What happens next depends on the notification.

 
7.3. Close Notifications Panel

Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you touch a notification to respond to it.

8 MESSAGING

8.1. Message environment & Settings

You can use Messaging to exchange text messages and multimedia messages with your friends.





Touch to open a messaging conversation




Touch to compose a new text or multimedia

  You can also press the  key and open the context menu to work on messages and their settings.



 Take a tour and explore messages settings, you'll find interesting things.

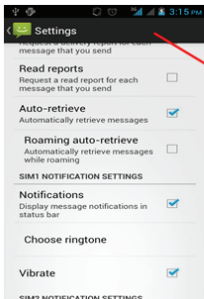

The messages settings allow you to set SMS/MMS limits, notifications, vibrate or ringtones, delivery reports and many others.

8.2. Using the Onscreen Keyboard

Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.

 
Write your message here.

 
After typing, press ↩ icon to close the keyboard.

Touch and hold the text field to open a menu and to copy/cut texts.

Touch once to capitalize the next letter you type. Touch and hold or double tap for CapsLock.

Secondary characters panel (special, symbols, numbers)

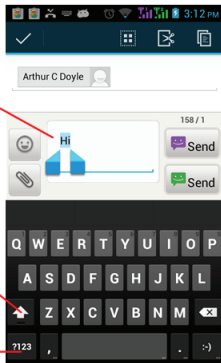

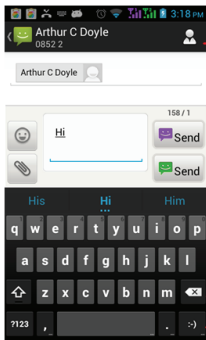

Recipient zone: write the name, the number or tap the icon on right to access the contacts list


Chose the SIM card you want to send your message with.

This is to erase characters

This is smiley menu, hold to develop and see more

8.3. Create and Send Multimedia Message

A Message becomes an MMS if you send it to an email address, or add multimedia media file(s).

- Touch compose new message.
- Enter or select a mobile phone number.
- Touch the composition text box and write your message.
- Touch the  key to open the context menu.
- Touch Attach to attach various types of files.
- Send the MMS.

 
8.4. Operation on a message:

- Open the message thread containing the message you want to operate.
- Touch and hold this message until a context menu opens.
- Make your choice.

To forward a message:

- Touch Forward in this menu.
- Add a contact.
- Touch Send to send the message.

You can also Copy message text, Save message to SIM card, View message details and delete message.

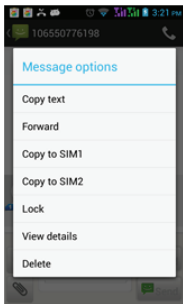

8.5. Lock a Message

You can lock a message so it won't be deleted if you reach your storage limits.

- Touch and hold message in a message window.
- Touch Lock message in the menu that opens.

 
Unlock a message by touching and holding it and then touch Unlock message.

9 MULTIMEDIA

9.1. Camera

Your camera's pictures and videos are stored in both the SD card and device. You can copy pictures and videos from both the SD card and device to a PC and vice versa.

Change between front and back camera

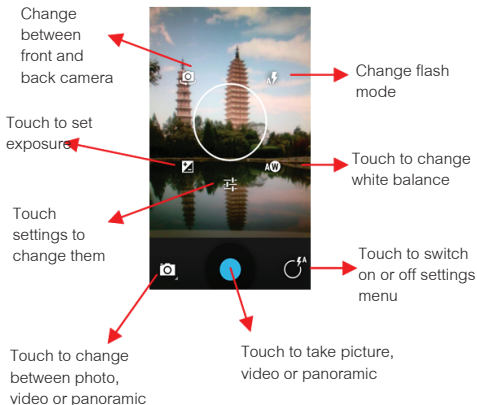


9.2. Gallery

You can use the Gallery to view pictures and play videos and share files.


- Touch the Gallery icon in the main menu.
- Touch an album to open and view its contents.
- Touch a picture or a video in an album to view it.

9.3. Share an Album

- Open the main Gallery window.
- Check or uncheck the albums you want to share.
- Touch the  icon at the top of screen to share via Bluetooth, Email. Or touch the message icon at the top of screen to Share via MMS.

9.4. Music


You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

Touch the  key or the intuitive buttons and icons on the phone in music interface to enjoy the features of your music player.

Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

9.5. FM Radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone and a corded earphone (the wire is used as antenna).

Touch the  key or the intuitive buttons and icons on the phone in Radio interface to explore and enjoy the features of your inbuilt FM radio:


- Record sound
- Save your favorites FM stations
- Enable speaker

Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

Troubleshooting:

it happens sometimes that applications crash and stop working. When FM radio crash you keep hearing the current FM station but you are not able to change it, in this case the phone must be reboot.

9.6. Record Sounds

- Touch the Sound Recorder in the main menu.
- Tap  to start recording a voice clip. "Recording" appears when it is recording a voice clip.

- Tap  to stop and save the recording.

9.7. Make Print screens

Press and hold for 1 second both Volume Down and Power buttons together.

10 CONNECT TO NETWORKS AND DEVICES

Your phone can connect to a variety of networks and devices, including Wi-Fi, GPRS, Bluetooth, devices, such as headsets. You can also transfer files to/from your PC through the data cable.

10.1. Connect to PC

Plug the phone to a computer with the supplied cable.

- Go to Notifications bar
- Touch "USB connected"
- Then touch "Turn on USB storage" (see below).

This mounts the external SD card and internal memory as USB keys. Then you can manage your files directly from your computer.

Once finished, click again ("Turn off USB storage") to unmount SD card from computer and use it with phone again.

WARNING:

during USB connection, SD card is no longer available to the phone, all apps using SD card cannot work. Don't erase/move applications data also.



10.2. Connect to Internet

Refer to section 6 for details.

10.3. Connect to Wi-Fi Networks

Refer to Section 6 for details.

10.4. Pair With Bluetooth Devices

- Go to Settings > Wireless & networks> Bluetooth settings.
- If Bluetooth is off, check Bluetooth to turn it on. Your

phone scans and displays the Bluetooth devices in range.

- If the device you want to pair with is not in the list, make it discoverable.
- If your phone stops scanning before you make the other device discoverable, touch Scan for devices.
- Touch the ID of the other device in the list Settings to pair them. If you are prompted to for a password, enter any password on one device and enter the same password you entered in the other device to be paired.), If the pairing is successful, your phone connects to the device.

10.5. Connect to Internet via your Phone

You can browse the Internet on your PC using your mobile phone. To do this:

- Connect your mobile phone to your PC via the USB adaptor.
- Go to Settings> Wireless & Networks>More >Tethering & portable hotspot and then touch USB Tethering.

A prompt for installation will appear on your PC. Proceed as suggested.

In case of Linux, Windows 7 and Vista OS, the drivers get automatically installed. However, in case of Windows XP,

you need to manually install the drivers.

10.6. Install Secure Certificate from SD Card

If your VPN or Wi-Fi Network relies on secure certificates, you must obtain the certificates and store them in your phone's storage, before you can configure access to those VPN or Wi-Fi networks on your phone.

 
You may need to download the certificates from a website.

- Copy the certificate from your computer to the root of the SD card.
- Touch Settings> Security.
- Touch Install from SD card under Credential Storage.
- Touch the file name of the certificate to install. Only the names of certificates that you have not already installed on your phone are displayed.
- If prompted, enter the certificate's password and touch OK.
- Enter a name for the certificate and touch OK.

11 DOWNLOAD APPLICATIONS

The phone has a default configuration which includes some applications. Discover all others apps by using Google play. You will be able to connect with 3G or Wi-Fi for example, and by signing in the application with just an email.

This is what it looks like:

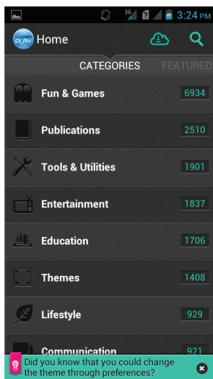

12 PHONE SETTINGS

You can go to Settings to customize your phone's preferences and behavior in a variety of ways:

Wi-Fi	Lets you configure and manage connections to networks and devices by Using Wi-Fi.
Bluetooth	Lets you manage Bluetooth to with other Bluetooth devices, such as headsets and other portable devices.
SIM card management	Lets you turn on or turn off your SIM card and configure your SIM card to be used to voice call, video call, SMS send and data connection.
Data usage	Data usage refers to the amount of data uploaded or downloaded by your device during a given period.
More...	Lets you configure and manage connections to networks and devices.
Call settings	Lets you configure phone call settings, such as call forwarding, call waiting,

	Call filter and other special features offered by your carrier.
Sound	Lets you configure how and at what volume the phone rings, vibrates etc.
Display	Lets you configure brightness and other screen settings.
Storage	Lets you see and manage available space on your phone and on your SD card.
Battery	Lets you check the battery level and status.
Apps	Lets you view all applications downloaded or on SD card and mange all running applications in devices.
Accounts & sync	Lets you set the location related settings like Wi-Fi and mobile network, GPS settings for your phone and check to take account of your location in search results and other services.

Accounts & sync	Lets you set the location related settings like Wi-Fi and mobile network, GPS settings for your phone and check to take account of your location in search results and other services.
Security	Lets you protect personal information, like adjust your phone's lock, set SIM card lock etc.
Language & input	Lets you select the language for the text on your phone and for configuring the onscreen keyboard.
Backup & reset	Lets you backup your personal data and settings and reset your phone.
Date & time	Lets you choose preferences such as format and time zones.
Accessibility	Enable your installed accessibility applications and adjust related settings.
Developer options	Lets you enable or disable USB debug and set interface animation effect.

About phone	View information about your phone, such as signal strength, status, phone information and battery use.
-------------	--

13 HEALTH AND SAFETY INFORMATION

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Certification Information (SAR)

Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines include safety margins designed to assure the protection of all persons, regardless of age and health.

SAR (specific absorption rate) is the unit of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.

The true SAR level during phone usage will be far lower than this level.

The SAR value of the phone may change depending on factors such as how close you are to a network tower, use of accessories and other enhancements.

The highest SAR value of the device is 0.811 W/kg (head) and 0.905 W/kg (body) averaged over 10 gm of human tissue.

The SAR value may differ depending on national reporting, testing requirements and the network band.

SAR Recommendations

Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.

Prefer to use your cell phone when the signal quality is good.

People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant. Maintain a preferable distance of 15 mm from the device.

Safe Driving

Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

Flight is influenced by interference caused by the phone. It

is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations instruct you to do so.

Do not carry the wireless device in the Chest pocket. Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone: Keep the device dry. If your device gets wet, remove the

battery without turning on the device, wipe it with a dry cloth and take it the service center.

Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.

Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged. Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations

Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.

If the time span of the battery after charging becomes

much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.

Use manufacturer approved batteries, chargers, accessories and supplies. I-mobile will not be responsible for user's safety when using unapproved batteries or accessories.

Recycle Your Phone

The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of such hazardous waste.



Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help

preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

Disclaimers

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the later shall govern.

I-mobile keeps the right to make modifications to any of the content in this user guide without public announcement or prior notification.

For devices with external power supplies, plug socket should be placed in short distance and easily accessible. Using the wrong type battery replacement there is a danger of explosion, be sure to follow the instructions disposal of used batteries.

13 System Upgrade (SW upgrade)

Notice:

 
Before testing, please make sure:

1. WIFI is available.
2. Battery power is more than 40%.

Check the firmware:

Check the firmware version before the System Software Update.


Settings -> About phone -> Build number

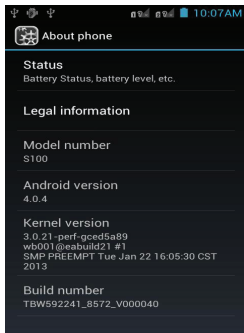


Pic. 1

Android Mode:

 1. Click the icon “System Software Update” in Application Manager(Pic.2) System Software Update initializing interface will pop up (Pic.3)

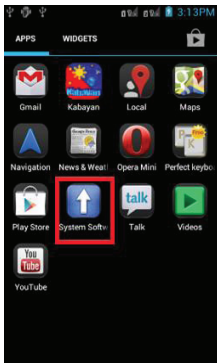

Pic. 2

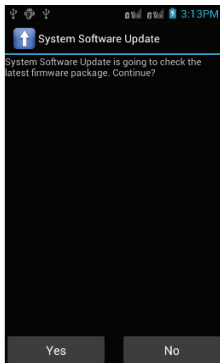 


Pic. 3


2. Pic.3->Press Yes, will try to connect to server, 3 cases will happen:

Case 1: Connect to server successfully, a new firmware is found on server.

 Pic.4->Pic.5, will show you the information and description of the new firmware package.

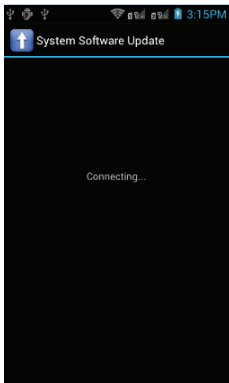


Pic. 4

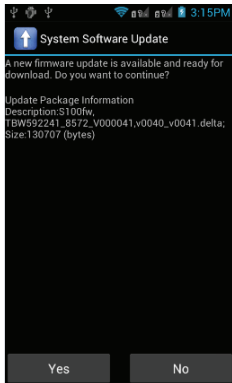 


Pic. 5

 Case 2: There is no new firmware available on server. It will pop up "The current system is up-to-date", if you press "OK", the application will exit. (Pic.6)

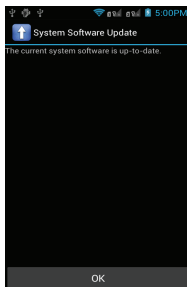


Pic. 6

 Case 3: Fail to connect to server. It will pop up "Error occurred" , then if you press "OK", the application will exit. (Pic.7)

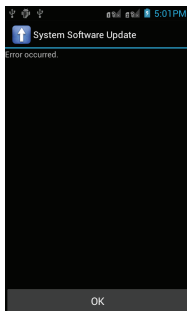

Pic. 7

 
3. Pic.5->Press Yes, will show up the downloading interface, or if you press "Cancel", the application will exit.

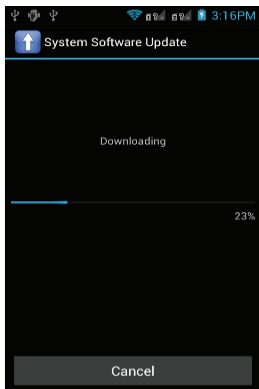


Pic. 8

4. Updating interface:

 
4.1 Update Now->Update confirmation interface. If you press "Yes", the phone will reboot, enter the Recovery Mode.(Pic.9->Pic.10->Pic.11)

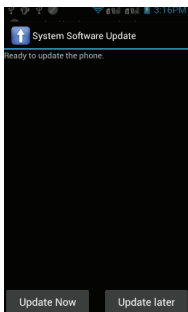

Pic. 9

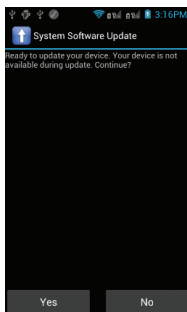 

Pic. 10

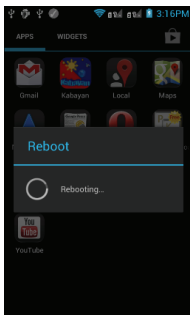 

Pic. 11

4.2 Update later: Will exit the application. When you enter the application next time, will show you Step 4 directly.

Recovery Mode:

Some codes and a progress bar will show in phone screen. Phone will reboot after the recovery is finished. Then the phone will enter the Android mode again.

Android Mode:

Report server update statues: System software has been successfully updated.




Pic. 12

Check the firmware again:

Check the firmware version again after the System Software Update.

 Settings -> About phone -> Build number

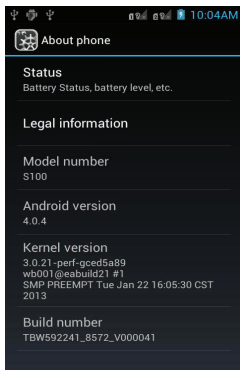

Pic. 13

14 Battery Informations

Type	Capacity
Li-ion	1800 mAh

- The battery life depends on many factors, including the SIM card, network conditions, settings, usage and environment.
- Making calls, turning on the backlight and music player will consume more battery power.
- The standby time is shorter when the network is not available than in the standard status.
- For power saving, the backlight turns off automatically if your phone stands idle for an assigned time.
- The performance of battery varies with the charging status, temperature, local radio wave and backlight status.

15 Condition Of Waranty

1. Mobile phone device, portable charger, charger, memory card, wireless headset are in-warranty of 12 months after the date of purchase.
2. Battery, headset, USB data connector are in-warranty of 6 months after the date of purchase.
3. This warranty shall apply to mobile phone and accessory under "i-mobile" brands that are purchased from Shop namely, I-mobile by Samart and Authorized Distributor or Authorized Service Center as appointed in Thailand only.
4. The condition of the warranty for mobile phone and accessory that are purchased in other countries, except Thailand. It shall be applied in accordance with the applicable law. For Thailand, the purchaser acknowledges the end of warranty period as stated in the warranty sticker or purchase's record of i-mobile system.
5. Within the warranty period, maintenance or parts replacement is free of charge. Should be noted that

i-mobile reserves the rights no return the damaged part.

6. i-mobile provides warranty for mobile phone and accessory with the terms and conditions that are stated in the law excluding the commerce, product satisfaction, lost of benefit or expected profit, loss or damages from the violation of personal rights in conversation, and working discontinuance or loss of information arising of the use or inability to use.
7. In cellular network / signal and sounds that are used with mobile phone and accessory is the service of independent operators, not i-mobile. Therefore, i-mobile will not be responsible for the working process, the readiness of the service, and the area covered.
8. Any mobile phone and accessories that are already repaired or had parts replacement, the warranty period will continue from the remaining warranty onward or 60 days from the repaired date whichever is longer.
9. Customer has to pay for the repair cost and cost of

replacement parts provided that the said repair are not in the warranty conditions.

10. The warranty sticker on the mobile phone must not be torn, tattered, scraped or crossed out.

THIS WARRANTY IS VOID UNDER THE FOLLOWING CONDITIONS

1. Mobile phone and accessory are damaged due to the abnormal use, improper use, being stored in the damped or overheated area, or other inappropriate environment, the interference that can cause damage, including unforeseeable accident, spill with liquid or food, or any actions that cause damages to mobile phone and accessories.
2. Mobile phone and accessory are damaged due to the natural disaster.
3. Mobile phone and accessory are repaired, changed parts, adjusted, modified, connected, customized without any authorization by i-mobile.
4. Using of mobile phone and accessory together with, or connect with the mobile phone or accessory that

are neither provided nor certified by i-mobile including any accessory are inappropriate to use together with mobile phone and accessory.

5. Small alteration in the brightness and color on the screen might occur in each mobile phone and accessory, might results in bright or dark dots on the screen. This is called as pixel defect. It can occur when these pixels are malfunction and cannot be modified. The Pixel defect of 2 pixels is considered acceptable. Small alteration in a picture taken by a camera might occur in each mobile phone and accessory is considered normal and it is not the camera module to be deemed as malfunction.
6. Editing, scarping, crossing over the IMEI number of the mobile phone or accessory, including the warranty number will be deemed as the termination of the warranty.
7. Damaging of the label, warranty sticker on the mobile will be deemed as termination of the warranty.
8. i-Mobile will not assure provided that the software from i-mobile will be up to your wishes or the working process

of the software will not be discontinued or flawless.

9. i-mobile will not assured provided that the additional software to download or install by you for the purpose of work or entertainment will be up to your wishes without mistakes and flaw that is out of control of i-mobile.
10. The warranty and responsibilities of i-mobile are not covered the malfunction of any software or access of information from virus, or unauthorized access, which cause the damage in the banking transaction, E-banking, or any important information, or using the mobile phone illegally.
11. The warranty will not cover the loss of personal information during the use or during the installation, software remove, including applications, songs, videos, and any memberships that Customer has already purchased.
12. The warranty will not cover the responsibility of the loss of any personal information during the repair at Authorized Service center of i-mobile, including the applications, songs, videos, and any memberships that

Customer has already purchased.

13. The warranty will not cover the damage that occurs from the use of any device under “i-mobile brand” with other products which are not the product of i-mobile.
14. The warranty will not cover any expenses in the co-ordination with i-mobile for solving the problem and the process of delivering for examination and repair service.