



## Contents

 
■ Function	P.1	• Function
■ Introducing the player	P.2	• Screen display
■ Overview	P.3	• Overview
■ Basic operation	P.4	• Basic operation
■ Play Music	P.5	• Play Music
■ How to Copy Audio Files	P.7	• How to Copy Audio Files
■ Playing Movie	P.8	• Playing Movie
■ Recording	P.9	• Recording
■ FM FUNCTION	P.10	• FM Function
■ PHOTO BROWSER	P.12	• Photo Browser
■ E-BOOK READER	P.14	• E-Book Read
■ PLAY GAME	P.15	• Play Game
■ SYSTEM SETUP	P.16	• System Setup
■ TROUBLE SHOOTING	P.18	• Trouble Shooting
■ SPECIFICATIONS	P.19	• Specifications

## FUNCTION:


- Unique Video movie playing function
- Supports multi audio format playing
- MP3/WMA/OGG music format playback
- JPEG picture browser
- Play music and movie list
- Recording/Repeating
- FM Tuner function, which can also record live radio and save as an audio file.
- Music player can display song lyrics while the song is being played.
- Seven display modes
- Seven different sound EQ settings
- Store data on the player like a hard drive
- Cartoon menu

## 1. Introducing the player

### Screen display

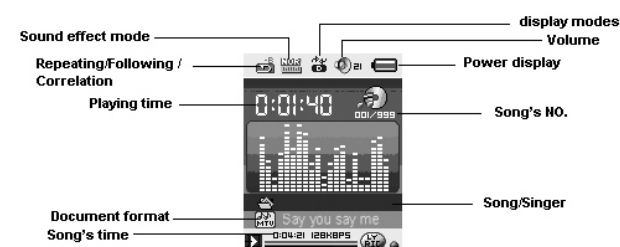

## ● Overview

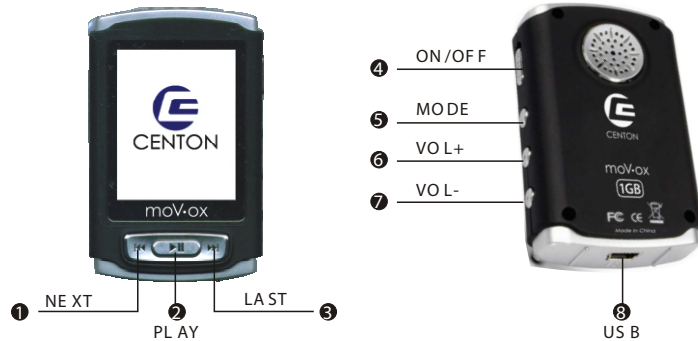 

## ● Keys functions

1. NEXT (▶▶): Hold to Fast forward; press to skip to next item
2. PLAY (▶|): Press to Pause/Play; Hold to Power on/off
3. LAST (◀◀): Hold to Rewind; press to skip to previous item
4. ON/OFF: Power key, control power on /power off
5. MODE(M): Mode key, Access the menu, enter work mode. Hold to access Main Menu.
6. VOL+ (▲): Increase the volume.
7. VOL- (▼): Decrease the volume.
8. USB

3

## ● PLAYING STATUS

- ▶ Status display, Song is playing.
- ⏸ Status display, Song is paused.

## 2. Basic operation .

### ● Power on /Power off

Slide the power switch to the ON position and hold the PLAY button to power on. To power off, slide the power switch to the OFF position and hold the PLAY button.

### Menu

Through press MODE key to enter different sub-menus. The menus are divided into main menu, sub-menu and stopping sub-menu.

### Play or pause

While playing, press the PLAY button to pause.

While paused, press the PLAY button to resume play.

### Adjust the volume

Under music, movie, speech (play or record) or radio mode:

 
Shortly press VOL-, decrease the volume

Shortly press VOL+, increase the volume

4

## ● 3. Play Music

Press the MODE button to enter the Music Menu. You will see options including: "Local Folder", "Delete File", "Delete All", and "Exit". Anytime in this menu, pressing the PLAY/PAUSE button will cause you to return to Music Mode.

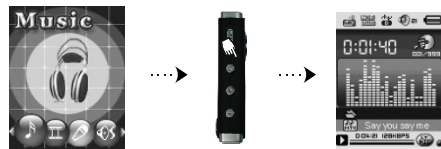

### 1. Locating a song/file

- In the Music Menu, highlight "Local folder" and press the MODE button. This will bring you to the folder/file selection menu. Here you can scroll up and down using the NEXT/LAST buttons, and using the MODE button to select.

(You will notice a folder called "ROOT"; this is the main folder of the player. Also a folder marked with a "\ " means you are going back up a folder. For example, if you are in the RECORD folder, and select the folder marked "\ ", you will be brought to the main menu, or the ROOT folder.

### 2. Deleting a song/file.

- In the Music Menu, highlight "Delete file", and press the MODE button.

This will bring you to the last folder you were viewing in the "Local folder". This menu will give you various options to Here, highlight a song/file and press the MODE button.

 
● Then you will be prompted to choose "yes" or "no". Highlight "yes" and press the MODE button to delete the selected song/file.

### 3. Delete All Files \*\*\* CAUTION – This feature will erase all of your files. \*\*\*

- In the Music Menu, highlight "Delete all" and press the MODE button. Then using the NEXT/LAST buttons, select "yes" and your files will be completely deleted.

### MUSIC MENU OPTIONS

While music is playing, press the MODE button to access the Music Menu. customize your listening experience.

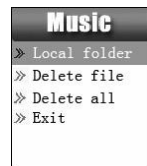

5

### 1. Repeat

- In this section, you have the following options : normal, repeat one, repeat folder, repeat all, random or intro.

### 2. Equalizer

- Your EQ options here include: Natural, Rock, Pop, Classic, Soft, Jazz, and DBB.

### 3. SRS WOW Effects - This is an effects system which includes: 3D sound, TruBass, and FOCUS.

Each of these features can be customized in the menu.

- In the Music Menu, highlight "SRS WOW mode" and press the MODE button. Here your options will be to enable SRS WOW mode, customize the user settings of each effect, and to disable SRS WOW mode.

Navigation is the same in this menu; using the NEXT/LAST buttons to scroll and the MODE button to select.

### ●

### 4. Tempo Rate

- This option gives you the ability to adjust the tempo of a live song

This only works with MP3 format files and gives you a range from 8-8.

### 5. Replay

- Here you can choose between A-B repeating, Following mode, and Contrast. Simply press the MODE button

when "Replay" is highlighted and use the NEXT/LAST buttons to scroll through the settings.

### 6. Replay times

- This options allows you to adjust the number of times a song is replayed.

### 7. Replay gap

- Here you are able to adjust the replay gap.

### DISPLAY LYRICS AND SONGS AT THE SAME TIME

This player supports LRC document for displaying lyrics. This gives you the ability to see the lyrics during playback.

### 1. How to use the lyrics document

- Keep the LRC file and the song file in the same folder and make sure they have the same name.

Example:

 
Song name: Rock.mp3

Lyric name: Rock.lrc

6

## 12. How to Copy Audio Files

There are three kinds of display mode after connecting with PC:

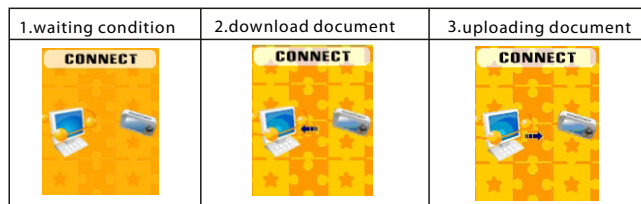

The player has a standard USB disk function, which is supported by both Windows and Mac OS. (Windows 98 requires driver installation.)

Windows systems above Windows 2K require no driver installation, as well as Mac OS systems above 10.3 and Linux systems above Linux Kernel 2.4

While connected to the computer via the USB cable, the battery will be recharging and the player is still functional. Press the MODE button to return to the Main Menu.


### ADDING FILES TO THE PLAYER WITH YOUR COMPUTER

 1. Open the drive in your computer.

2. Select files you want to copy to the player.


3. Drag the files to the drive of the player.

\* Note this player will only support up to 99 files per folder. Copy remaining files in excess of 99 to a new or another folder.

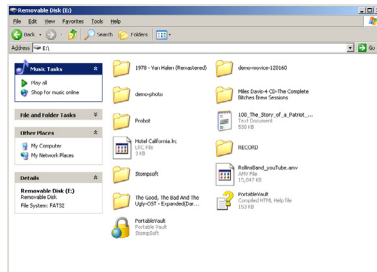

7

## 4. Playing a Movie

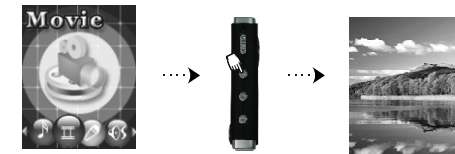 

From the main menu, select MOVIE and press the MODE button.

The player includes full version software of AMV Converter Tool, which will convert most media file types to AMV.

\* The player is only compatible with AMV movies. ( File types supported: .AVI, .MPEG, .MPG, .WMV, .RM, .QT

\*AMV Convert Tool is only compatible with decrypted movies. .MOV, and .SWF)

### MOVIE MODE CONTROLS

- PAUSE/PLAY Play/Pause the selected movie
- NEXT/LAST Scroll between movies in the same folder
- Vol+/Vol- Adjust the volume level

MOVIE MODE MENU (press the MODE button to access Movie Mode Menu)

Local folder

-This is the same browsing function as in Music mode. Here you will find the movies loaded on your player.

Delete

- Here you can select a movie to delete.

Delete All

- Here you can delete all the movies on your player.

Repeat

 
- In this section, you have the following options : normal, repeat one, repeat folder, repeat all, random or intro.

Exit

- Return to Movie mode.

8

## 5. Recording

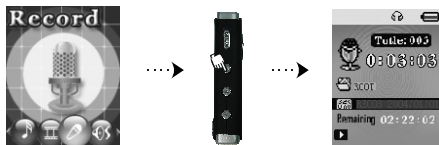

From the main menu, select RECORD and press the MODE button.

This player supports live recording of the user's voice through the built-in microphone.

Supported file formats include .WAV and .ACT.

### 1. AUDIO RECORDING

- Once in Recording Mode, press the PLAY/PAUSE button to begin recording. You can push the PLAY/PAUSE button to pause the recording, then press the PLAY/PAUSE button again to resume the recording.
- Once finished, hold down the MODE button to save the recording and return to the main menu.

### 2. MP3/WAV Music Recording

 
The player can record music from an external source such as an MP3 player connected through the line input from the earphone jack of the other device. The recording will be saved as a WAV format audio file.

9


## 6. Play the recording

1. From the main menu, select VOICE and press the MODE button.

2. This section controls are the same as the Music mode. Use PLAY/PAUSE to play and pause the current clip, NEXT/LAST browse between the clips that have been recorded, and the MODE button will load a folder finder and also delete files. The volume controls also function the exact same way as they do in Music mode.

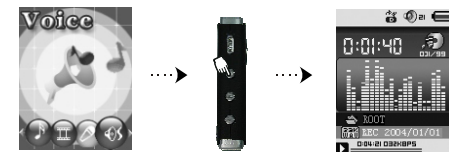


## 7. FM FUNCTION

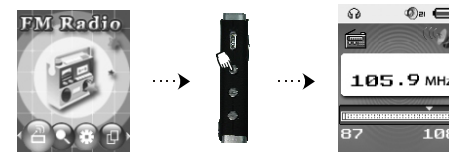 

From the main menu, select FM RADIO, and press the MODE button.

10

## ● FM INTERFACE

 : Current frequency place. It changes depending on current frequency change in the frequency scale

 : Frequency scale list

105.9MHZ : Current frequency number

## ● FM TUNER CONTROLS

Long press NEXT/LAST	Forward or backward to Search frequency then play. If it is the scheduled channel, the frequency will show on the display.
Short press NEXT/LAST	Tiny adjustment forward or backward per every 0.1MHZ.
Press VOL+/VOL-	Adjust the volume.
Short press PLAY	Enter the next frequency or return to the first frequency if there is any scheduled frequency. If not, it is unnecessary to short press PLAY.
Short press MODE	Enter FM submenu
Long press MODE	Return to Main Menu.

FM TUNER MENU (hold the MODE button to access the menu)

Save Frequency

-This will allow you to save up to 20 different radio stations as presets.

Frequency Recording

-Select this to switch to the recording mode and press the PLAY/PAUSE button to begin recording. Once finished, hold the MODE button to save and return to FM TUNER mode. The recording can be played back in the VOICE mode.

Frequency deletion

-Press the MODE button to delete the current frequency and go back to FM TUNER mode.

11

Delete all saved frequencies

-Delete all save channels and switch back to FM TUNER mode.

AUTO SEARCH

-This will scan for any available stations, then return to the station you were just listening to.

NORMAL BAND

- Browse frequencies ranging from: 87MHz to 108MHz

JAPAN BAND

- Browse frequencies ranging from: 76MHz to 90MHz

 
EXIT

- Return to FM TUNER mode.

## 8. PHOTO BROWSER

From the main menu, select PHOTO and press the MODE button.

The player is compatible with JPEG and BMP picture files.

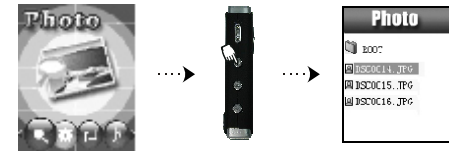

12

## FILE SELECTION

Press the PLAY/PAUSE button to view a selected picture. Once in viewing mode, you can press NEXT/LAST to scroll through the pictures in the same folder. Press the PLAY/PAUSE button again to return to the Photo Browsing mode.

PHOTO BROWSER MENU (press the MODE button to access the menu)

Local folder

-This is the same browsing function as in Music mode. Here you will find the pictures loaded on your player.

Play set

- You can either select manual or auto. (auto is a slide show and you can adjust the length of time between each picture)

Delete

- Here you can select a picture to delete.

Exit

- Return to Photo Browser mode.

13

## 10. E-BOOK READER

From the main menu, select E-BOOK and press the MODE button.



In this mode you can upload text files to your player and view them as E-Books. (supports .txt files only)

E-BOOK MENU (press the MODE button to access the menu)

Local folder

-This is the same browsing function as in Music mode. Here you will find the E-Books loaded on your player.

Play set

- You can either select manual or auto. (auto is a slide show and you can adjust the length of time between each page)

Delete

- Here you can select an E-Book to delete.

 
Exit

- Return to Photo Browser mode.

14

## 11. GAME


From the main menu, select GAME and press the MODE button.

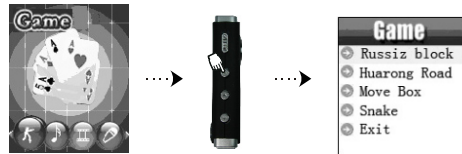

15

## 9. SYSTEM SETUP

 From the main menu, select SETUP and press the MODE button.

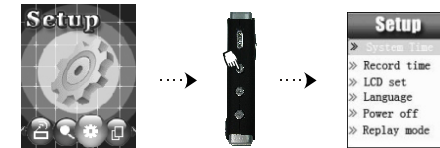

### SETUP MENU

#### Clock

- Here you can set the date and time. Use the Volume controls to scroll between each part the NEXT/LAST controls to change each field.

#### LCD set

- Here you can use the NEXT/LAST controls to change the brightness function of the LCD screen. This also functions as a power saving feature which the user to control the amount of time before the screen will either dimm or turn off all together. Setting options for timeout are from 0-30 (which are represented in seconds). Setting the value to 0 will disable the LCD timeout (screen will remain on permanently).

#### Language

- Use the NEXT/LAST controls to choose which language you want the player to display.

#### Power off

- Here you can select the amount of time before the player turns off or falls asleep.

16

### Replay Mode

Select whether you want manual or auto replay

### Online Mode

- Here you can select how you want to divide and protect your player. Choosing multi drive will let you split the player into different parts, while normal leaves it as just one. Encrypting you player will keep it safe from unwanted users.

\* Applies only to Windows 2000 SP2 or older.

\*\* Encryption requires "MP3 Player utilities" software.

### Memory info

- This will display how much memory you have left and what percent you have currently used up.

### Firmware version

- This will display the current firmware version you have installed.

### Firmware upgrade

- This will allow you to connect through your computer and download a newer firmware version.

### Ear protection

- This will allow you to enable/disable the ear protection option and select between low, medium, and high.

This will protect you from unwanted volume changes.

### Exit

- Return to the SETUP menu.

17

## TROUBLE SHOOTING

No display	1. Check whether the battery has been properly charged. 2. Check if it is powered on.
No Audio from earphones	1. Check if volume is "ZERO" status or earphone is connected properly. 2. Make sure the earphone clear. 3. Make sure file is completed and not damaged.
Characters in LCD are corrupted	Make sure you have chosen the correct language
Poor FM reception	1. Adjust the position between earphone and player, or move the player to another location and try 2. Turn off power equipment nearby 3. Earphone works as antenna
Music download fails	1. Check whether USB cable is damaged and is connected properly or whether the driver is installed 2. Make sure there are no more than 99 files per folder 3. Check whether the player's memory is full
Play Displays "Format Error"	1. Unsupported file format, or file is Copy-protected w/DRM. Make sure file is supported & not DRM protected.

18

## SPECIFICATION

Dimension	69*43.5*15 mm	
Weight	42g	
LCD	1.8"	
PC connection	High speed USB2.0	
Memory	Flash memory:128 M~1G	
Power supply	max play time: 8hrs	
Record	Sample rate	8KHz
	Recording format	WAV (32K bps) 、ACT (8K bps)
	Recording time	35hrs (ACT , 128M Flash)
MP3,WMA, OGG	Max earphone output	(L) 10mW + (R) 10mW (32Ohm)
	MP3 bit rate	8K bps 320K bps
	WMA bit rate	5K bps 128K bps
	Frequency response	20Hz~20KHz
	SNR	85dB
FM radio	Receiving frequency range	76MHz96MHz / 87MHz 108MHz
	max earphone output	(L) 10mW + (R) 10mW (32Ohm)
	SNR	45dB
Music format	MP3,WMA,OGG	
Temperature	-5 ~ 40 degree	
Multi-language	Simple Chinese, English and traditional Chinese etc.	
Operating System	Windows98/SE/ME/2K/XP,Mac OS 10,Linux 2.4.2	