

 LAKELAND

USER MANUAL




TIMELESS
COMPACT BLENDER

Lakeland

Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

Model: 16048
Helpline No: 015394 88100

INTRODUCTION

Thank you for choosing this Lakeland Compact Blender. Soups, sauces, milkshakes, dips and purees are all blended to velvety smoothness, and this handy-sized blender will also chop ingredients such as breadcrumbs, nuts, vegetables and meat. Please take a few moments to read these instructions before using your blender for the first time, and keep them in a safe place for future reference.



FEATURES

1. Lid with opening
2. 800ml glass jug
3. Jug base with stainless steel blades
4. Power unit
5. Pulse button
6. Speed selector

Working capacity: 800ml

Operating voltage: 220-240V~50/60Hz

Power: 300W

IMPORTANT SAFEGUARDS

When using this blender, please follow these basic safety precautions.

1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. This blender is for household use only. It is not suitable for commercial use, or for use outdoors. It must only be used for its intended purpose.
4. Place the blender on a flat, dry surface. Do not let the power cord hang over the edge of the worktop or table, or touch hot surfaces, such as stovetops. This appliance should not be used with an extension cable.
5. To avoid electric shock, do not immerse the power unit, cord or plug in water or any other liquid. Never

allow the cord or plug to get wet. Do not touch with wet hands.

6. Always switch off and unplug the blender before adding or removing parts, when not in use and before cleaning. Grasp the plug, not the cord.
7. Before switching on the blender, make sure the jug is correctly positioned and the lid is securely on.
8. The blender will only work when the jug is placed on the power unit. Do not switch the blender on if the jug is empty.
9. The blades are extremely sharp; please take great care when emptying and cleaning the jug. Never put your hands or any utensils inside the jug when the blender is plugged in.
10. Let hot liquids such as soups cool to room temperature before blending. Never blend hot liquids.
11. Using attachments not supplied by the manufacturer may lead to electric shock, fire or injury.
12. The blender is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the blender. It must not be left unattended during use.
13. Do not use the blender if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair by an authorised repairer, or a replacement. Never try to repair the blender yourself as this may cause electric shock.

BEFORE USING FOR THE FIRST TIME

Carefully unpack the blender and remove any packaging. Please see CARE AND CLEANING for instructions on cleaning the blender before preparing food.

USING YOUR BLENDER

This compact blender has been designed for soups, sauces, batter, milkshakes, smoothies and more. It will puree fruit and cooked vegetables; mix pâtés and dips; chop breadcrumbs, nuts, vegetables and meat; and crush ice. There are two speed settings and a pulse feature which gives an instant burst of extra power, and will also crush ice.

1. Place your ingredients inside the blender jug, taking care not to fill above 800ml. Some liquid should always be added to dry/solid ingredients and also when crushing ice. Let soups, sauces and cooked foods cool to room temperature before blending.
2. Press the lid onto the jug. The small opening in the lid is useful for drip-feeding small quantities of liquid or oil as you blend.
3. Make sure the power unit is switched off and unplugged. Carefully place the jug onto the power unit. Plug into the mains socket.
4. Placing your hand on top of the jug lid, over the opening, switch on the blender by turning the speed selector knob. Select 1 for low speed and 2 for high speed. Select P for pulse.
5. When the food is processed, switch off the blender.
6. Wait until the blades have stopped rotating, then unplug before lifting off the jug, emptying and cleaning. Lift the jug straight up; do not twist. PLEASE NOTE: food should not be stored in the jug after blending.

HELPFUL HINTS

- The blender has anti-slip feet to help keep it steady on your worktop. For added safety, always keep your hand on top of the blender lid whenever it is running.
- When working with dry/solid ingredients, cut them into small pieces and always add some liquid.
- Let soups, sauces and cooked foods cool to room temperature before blending.
- For crushed ice, add just a few cubes at a time, with a small amount of water.
- Solid or thick ingredients may need scraping down from the jug sides with a spatula. Remember to switch off and unplug the blender first. If the mixture is difficult to process, add a little liquid or select the pulse feature.
- To avoid overheating, do not run the blender for more than 1 minute at a time. Let the motor rest for a few minutes before continuing.

CARE AND CLEANING

- Wash before first use in hot, soapy water and dry.
- Always switch off and unplug the blender before cleaning.
- Remove the lid, then lift the jug off the power unit and empty the contents.
- Carefully remove the blade unit from the base of the jug by turning it clockwise. Please use caution when doing this as the blades are very sharp. The jug, lid, filler cap, blade unit and sealing ring can all be washed in warm, soapy water, or in the dishwasher. Please use a washing-up brush to protect your fingers from the sharp blades.
- Rinse all parts thoroughly, and dry.
- Fit the sealing ring back over the blade unit, then fit the blade unit back into the jug by turning it anticlockwise until it is thoroughly secured in place.
- Wipe the power unit with a dry cloth.
- Do not immerse in water or any other liquid, and do not use abrasive cleaners or scourers as they will damage the product.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point.




ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

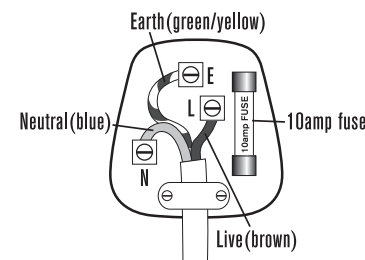

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

10 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 10 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).

