

# jumbl™ Super Slim Portable Stereo Speaker

## MANUAL



www.itsjumbl.com  
JUMBL is a trademark of CSA IP Holdings, LLC  
©2013 All Rights Reserved  
MADE IN CHINA

Distributed by CSA Marketing, Inc.  
2 Bergen Turnpike, Ridgeland Park  
NJ 07860  
1-866-849-3049

### A. Introduction

Thank you for purchasing our Super Slim Portable Stereo Speaker, and welcome to the Jumbl™ family. This user manual is meant to offer you a brief walkthrough of the device's features and usage protocols. We hope you find this manual helpful. For additional information and technical support, please feel encouraged to contact our help team at 1-866-849-3049.

### B. Features

- Alarm Clock w/Calendar
- FM Radio
- MicroSD Card Slot
- Radio Recording to Card
- 2 RMS Watt Speaker
- Built-In Display
- 3.5mm Headphone Jack
- Mini USB Port
- Rechargeable 600mAh Lithium Ion Battery (Included)
- Wrist/Hanging Strap

### C. Box Contents

- 1 x Portable Stereo Speaker
- 1 x USB-to-Mini USB Cable
- 1 x Wrist Strap
- 1 x User Manual

### E.4. System Settings

- Switch power toggle to On position
- Press Setup button to access Menu
- Scroll through Menu list using Back/Vol- and Forward/Vol+ buttons
- Select System Settings by pressing Setup button

**System Time** adjusts the device's time and date information.

**Backlight** controls the amount of time, in seconds, until backlight auto-shuts.


**Language** toggles system display language between English and Chinese.

**Tool** gives you control over auto-off battery saving feature; Alarm Clock settings; complete FM Radio settings; and contrast levels of built-in display screen.

### F. Technical Specifications

Dimensions:	5.5" x 2.5" x 1.0"
Weight:	4.6 Ounces
Audio Format:	Mp3, WMA, WAV
Lyric Display:	LRC Format
Display Size:	0.96"
Card Reader:	MicroSD, 32GB Max
Battery-Saving:	Auto-Off Features
Radio Tuner Range:	87.5-108MHz
Channel Save:	40 Presets
Power Requirements:	600mAh Lithium Ion Battery (Included)
Speaker Cone:	40mm Diameter
Output Power:	2 RMS Watts
Signal-to-Noise Ratio:	<80db
Frequency Range:	150Hz-20Hz

### D. Parts & Controls

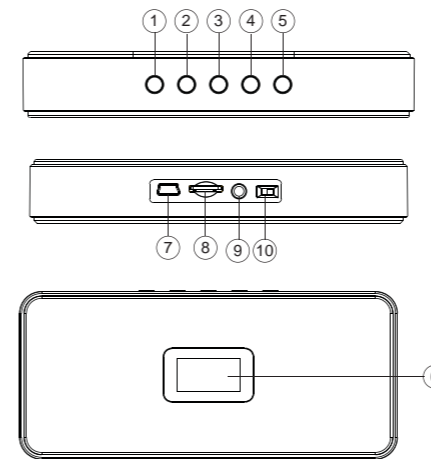

1. Play/Pause Button
2. Mode Button
3. Setup/Enter Button
4. Back (Short Press)/Volume- (Long Press)
5. Forward (Short Press)/Volume+ (Long Press)
6. Built-In Display Screen
7. Mini USB Port
8. MicroSD Card Slot
9. 3.5mm Headphone Jack
10. Power On/Off Toggle

### G. Troubleshooting

#### Blank Display:

- Ensure power toggle is set to On position
- Check for adequate battery charge level
- Press any button on top of device

#### No Sound:

- Ensure power toggle is set to On position
- Check for adequate battery charge level
- Increase volume level by pressing Forward/Volume+ button
- If connected, unplug headphones from device
- Press Play/Pause button

#### White Noise or Feedback:

- Look for interference e.g. brick walls, nearby mobile devices
- Try another radio channel
- Check integrity of music files on card

### E. Operation

#### E.1. Basics

- 1 To listen to music/radio using headphones, insert a 3.5mm headphone cable into the designated jack. When headphones are in use, built-in loudspeaker will be muted for discrete listening.
- 2 To charge the included lithium ion battery, connect a standard mini USB cable to designated port. Plug other end into computer USB port, or connect to AC adapter and plug into wall outlet.

#### E.2. FM Radio

- Switch power toggle to On position
- By default, Clock will turn on upon device startup
- Press Setup button to access Menu
- Scroll through Menu list using Back/Vol- and Forward/Vol+ buttons
- Press Setup button to select FM Radio

**Auto Search** starts the FM Tuner scan

**Save Channel** stores your current radio station for future recall

**FM Record** digitally records the current station

- Ensure SD card has enough available memory. To finish recording and save file, long-press Setup button. Recordings are stored on microSD card under "Voice" folder.

**Delete Channel** erases current saved channel preset

**Delete All** clears your entire list of saved channels

**Warning:** Changes or modifications to unit other than those expressly approved by party responsible for compliance could void user's authority to operate this equipment.

**Note:** Clean device with dry, soft, lint-free cloth. Never use chemical agents or abrasive cleaners on unit.

### H. FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modification to this product are not authorized and could void the FCC compliance as well as negate your authority to operate this product.

### E.3. Music Player

- Switch power toggle to On position
- Press Mode button to change from Clock to Music Player
- Press Setup button to access Menu
- Scroll through Menu list using Back/Vol- and Forward/Vol+ buttons
- Press Setup button to select your microSD card
- Scroll through song list using Back/Vol- and Forward/Vol+ buttons
- Press Setup to select song, then press Play/Pause to begin playback

**Repeat Mode** allows you to quickly record a particular piece of music and set it to continuous repeat playback.

- Press Setup button and choose "Repeat Mode". The letter "A" will blink on the built-in display. To begin recording current playback, press Forward/Vol+ button. The letter "B" will then blink on the built-in display. To finish recording, press Forward/Vol+ button again. Your recorded piece (the portion between "A" and "B") will then play repeatedly. To exit this mode, press Setup button.

**Delete Files** erases music files.

- Scroll through song list using Back/Vol- and Forward/Vol+ buttons. Select item by pressing Setup button. Press Setup button again to confirm delete.