 

greenworks™
TOOLS

120 Bar / 340 L/H ELECTRIC PRESSURE WASHER

51017

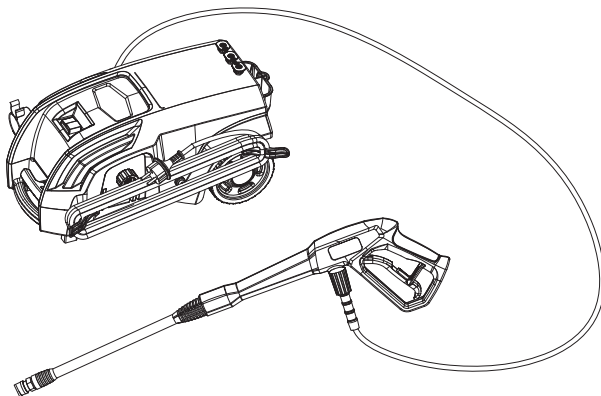

OPERATOR'S MANUAL

 Read all safety rules and instructions carefully before operating this tool.

ENGLISH(Original Instructions)

INTENDED USE

The cleaner is intended only for the cleaning of vehicles, boats, buildings, etc., by the removal of stubborn dirt using clean water and chemical detergents.

For domestic use only, not for professional use, and only for operation at temperature above 0°C

INTRODUCTION

This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

When using power tools, basic safety precautions should always be taken to reduce the risk of fire, electric shock and personal injury. Also, please read and heed the advice given in the additional safety instructions.

IMPORTANT SAFETY INSTRUCTIONS



WARNING:

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

- Learn the machine's applications and limitations as well as the specified potential hazards related to this tool by studying this manual.
Follow the maintenance instructions specified in this manual.
- Never operate the pressure washer with any guard or cover removed or damaged.
- **Do not operate the product while under the influence of drugs, alcohol, or any medication.**
- Do not wear loose clothing, gloves, neckties, or jewellery. They can get caught and draw you into moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Also wear protective hair covering to contain long hair. Wear footwear that will protect your feet and improve your grip on slippery surfaces.
- **Always wear safety glasses with side shields.**
- **Don't overreach or stand on unstable support.** Keep proper footing and balance at all times.



WARNING:

High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animals, electrical devices, or the machine itself.



WARNING:

This Appliance has been designed for use with the cleaning agent supplied or recommended by the manufacturer. The use of other cleaning agents or

chemicals may adversely affect the safety of the appliance.



WARNING:

Don't use the appliance within range of persons unless they wear protective clothing

- The electric supply connection shall be made by a qualified electrician and comply with IEC60364-1.
 - Only connect this machine only to a supply circuit protected by a residual current device (RCD) with a tripping current of not more than 30mA.
 - Use only extension cords that have watertight connections and are intended for outdoor use. Use only extension cords having an electrical rating not less than the rating of the product. Examine extension cord before using and replace if damaged. Do not abuse extension cord and do not pull on any cord to disconnect. Keep cord away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.
- Do not direct the jet against yourself or others in order to clean clothes or foot-wear.
- Disconnect from the electrical power supply before carrying out user maintenance.
- To ensure appliance safety, use only original spare parts from the manufacturer or approved by the manufacturer.
- Do not use the appliance if a supply cord or important parts of the appliance are damaged, e.g. safety devices, high pressure hoses, trigger gun.



WARNING:

Inadequate extension cords can be dangerous.



WARNING:

To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands.

- **To reduce the risk of injury,** High pressure cleaners shall not be used by children or untrained personnel. Keep children and visitors away. All visitors should wear safety glasses and be kept a safe distance from work area.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

ENGLISH(Original Instructions)

- **Use correct product.** Don't force product or attachment to do a job it was not designed for. Don't use it for a purpose not intended.
- **Use only recommended accessories.** The use of improper accessories may cause risk of injury.
- **Never leave product running unattended. Turn power off.** Don't leave product until it comes to a complete stop.
- **Keep the motor free of grass, leaves, or grease** to reduce the chance of a fire hazard.
- **Keep product dry, clean, and free from oil and grease.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any solvents to clean product.
- **Check the work area before each use.** Remove all objects such as rocks, broken glass, nails, wire, or string which can be thrown or become entangled in the machine.
- **Do not use product if switch does not turn it off.** Have defective switches replaced by an authorized service centre.
- **Avoid dangerous environments.** Don't expose to rain. Keep work area well lit.
- **Do not abuse the cord.** Never use the cord to carry the product or to disconnect the plug from an outlet. Keep cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.
- **Inspect extension cords periodically and replace if damaged.** Keep handles dry, clean, and free from oil or grease.
- **Before starting any cleaning operation,** close doors and windows. Clear the area to be cleaned of debris, toys, outdoor furniture, or other objects that could create a hazard.
- **Do not use acids, alkalines, solvents, flammable material, bleaches, or industrial grade solutions** in this product. These products can cause physical

injuries to the operator and irreversible damage to the machine.

- **Keep the motor away from flammables and other hazardous materials.**
- **Check bolts and nuts** for looseness before each use. A loose bolt or nut may cause serious motor problems.
- **Before storing,** allow the motor to cool.
- **When servicing use only identical replacement parts.** Use of any other parts may create a hazard or cause product damage.
- **ONLY** use cold water.
- Make sure minimum clearance of 1 metre is maintained from combustible materials.
- **Connect pressure washer only to an individual branch circuit.**
- **Hold the gun and lance securely with both hands.** Expect the gun to move when the trigger is pulled due to reaction forces. Failure to do so could cause loss of control and injury to yourself and others.
- **Save these instructions.** Refer to them frequently and use them to instruct other users. If you lend someone this product, lend them these instructions also.














WARNING:

High pressure hoses, fittings and couplings are important for the safety of the appliance. Use only hoses, fittings and couplings recommended by the manufacturer.

ENGLISH(Original Instructions)




SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
min	Minutes	Time
~	Alternating Current	Type of current
n ₀	No Load Speed	Rotational speed, at no load
	Class II Construction	Double-insulated construction
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Read The Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear safety goggles or safety glasses with side shields and, as necessary, a full face shield when operating this product.
	Risk of Injection	To reduce the risk of injection or injury, never direct a water stream towards people or pets or place any body part in the stream. Leaking hoses and fittings are also capable of causing injection injury. Do not hold hoses or fittings.
	Kickback	To reduce the risk of injury from kickback, hold the spray lance securely with both hands when the machine is on.
	Electric Shock	Failure to use in dry conditions and to observe safe practices can result in electric shock.
	Risk of Explosion	Fuel and its vapours are explosive and can cause severe burns or death.
	Risk of injury	Warning! Never point the gun to human, animals, the machine body, power supply or any electric appliances
	Do not connect to drinking water supply without backflow preventer	Appliance not suitable for connection to the drinking water mains without backflow preventer.


ENGLISH(Original Instructions)


The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION:	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to the nearest **AUTHORIZED SERVICE CENTRE** for repair. When servicing, use only identical replacement parts.

 **WARNING:**
To avoid serious personal injury, do not attempt to use this product until you read thoroughly and understand completely the operator's manual. If you do not understand the warnings and instructions in the operator's manual, do not use this product. Call greenworks Tools customer service for assistance.


 **WARNING:**
The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full face shield.

SAVE THESE INSTRUCTIONS

ELECTRICAL

DOUBLE INSULATION

Double insulation means that exposed metal parts are isolated from the internal metal motor components with protecting insulation. Double insulated products do not need to be grounded.

 **WARNING:**
The double insulated system is intended to protect the user from shock resulting from a break in the product's internal insulation. Observe all normal safety precautions to avoid electrical shock.

NOTE: Servicing of a product with double insulation requires extreme care and knowledge of the system

and should be performed only by a qualified service technician. For service, we suggest you return the product to your nearest authorized service centre for repair. Always use original factory replacement parts when servicing.

 
ELECTRICAL CONNECTION

This product has a precision-built electric motor. It should be connected to a **power supply that is 220-240 volts, 50 Hz, AC only (normal household current)**. Do not operate this product on direct current (DC). A substantial voltage drop will cause a loss of power and the motor will overheat. If the product does not operate when plugged into an outlet, double-check the power supply.

EXTENSION CORDS (See Figure 1.)

The cross-section of any extension cables used must be proportional to their length, i.e. the longer the extension cable, the greater the cross-section; cables with a protection level of "IPX5" must be used.

Use the chart to determine the minimum wire size required in an extension cord.

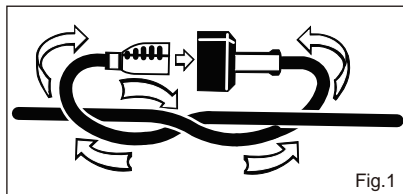

Motor	Voltage	Extension cable up to 25m	Extension cable up to 50m
	220-240v	section 3 x 1.5mm ²	section 3 x 2.5mm ²

ENGLISH(Original Instructions)



WARNING:

keep the extension cord clear of the working area. Position the cord so that it will not get caught on lumber, tools or other obstructions while you are working with a power tool. Failure to do so can result in serious personal injury.



WARNING:

Check extension cords before each use. If damaged replace immediately. Never use the product with a damaged cord since touching the damaged area could cause electrical shock resulting in serious injury.

SPECIFICATIONS

Maximum Water Temperature

Rated Voltage	220-240V ~ 50 Hz
Rated Pressure	9.5 MPa
Permissible Pressure	12 MPa
Power Rating	1600W
Rated Water Flow	4.5 l/min
Maximum Water Flow	5.6 l/min
Maximum Water Inlet Pressure	0.7 MPa
Maximum Water Inlet Temperature	40 °C
LPA(sound pressure level)	82 dB(A) K=3dB(A)
LWA(sound power level)	94 dB(A)
Protection Degree	IP X5
Vibration	4.0 m/s ² K=1.5 m/s ²

DESCRIPTION

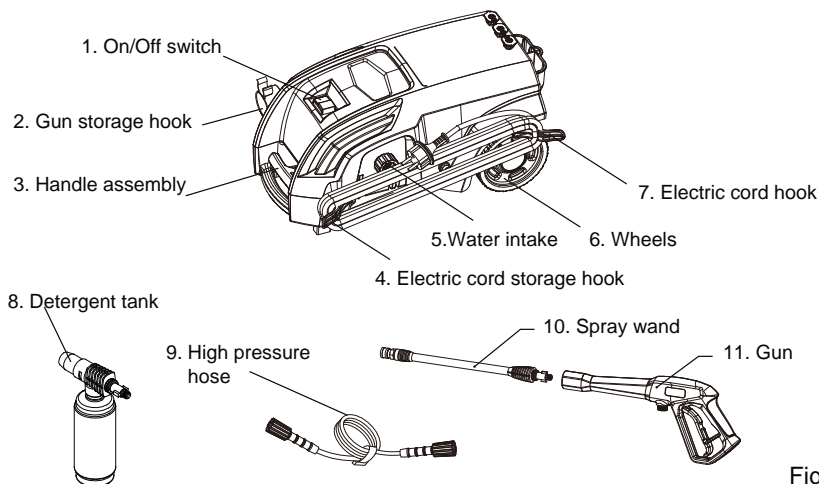 


Fig. 2

ENGLISH(Original Instructions)

DETERGENT TANK

Remove the nozzle from the detergent tank and pour the detergent into tank

HIGH PRESSURE HOSE STORAGE

Once the high pressure hose is rolled, hang it on the back of the machine using the hook-and-loop strap to secure in place.

ON/OFF SWITCH

This switch turns the pressure washer on and off.

GUN

The pressure washer gun has a gripping surface that provides added control of the lance and helps reduce fatigue.

TRIGGER WITH LOCK OUT

The trigger lock-out prevents accidental use of the high-pressure trigger.

ASSEMBLY

UNPACKING

This product requires assembly.

- Carefully cut the box down the sides then remove the product and any accessories from the box.



WARNING:

This new product has been shipped in a partially assembled condition as described below.

If in doubt, call Greenworks Tools Customer Service for assistance. Operation of a product that may have been improperly preassembled could result in serious personal injury.

- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call Greenworks Tools Customer Service for assistance.



WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.



WARNING:

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.



WARNING:

Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

ASSEMBLING WAND TO WASHER GUN.

(See Figure 3.)

- Installing Wand to Pressure Washer Gun

Insert the male bayonet end(1) of the wand into the female bayonet outlet(3) firmly. While pushing in the wand firmly, turn clockwise(2) until tabs lock into place to ensure a leak-free connection.

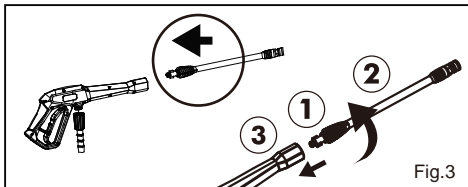 


Fig.3

CONNECTING HIGH PRESSURE HOSE TO TRIGGER HANDLE (See Figure 4.)

- Connect the high pressure hose to the trigger handle.

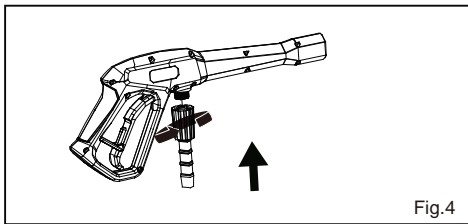 


Fig.4

CONNECTING THE WATER SUPPLY TO PRESSURE WASHER (See Figure 5.)

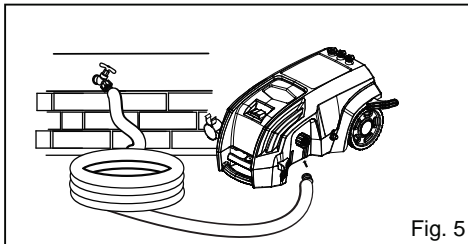 


Fig. 5

The water supply must come from a water main. NEVER use hot water or water from ponds, lakes, etc. For ease of use, a self-coiling hose is provided.

ENGLISH(Original Instructions)

NOTE: When using the self-coiling hose, be sure that the hose does not become crimped during use as this may cause damage to the pump.



CAUTION:

When connecting the appliance to the water supply mains (not public drinking water supply mains), please observe the local regulations of local boards or local water supplier.

To ensure that there is no feedback of contaminant into the water supply, the appliance must not be connected directly to the public drinking water supply mains.

If the appliance is connected to potable water mains, backflow prevention devices should be incorporated in or fixed to the water supply system. The installation should be accepted by local boards or water supplier and should be conducted by professional technical personnel. The backflow prevention devices should be appropriate to fluid categories and comply with the requirement to avoid back siphonage according to EN 60335-2-79:2009

Before connecting the garden hose to the pressure washer:

- Run water through the hose for 120 seconds to clean any debris from the hose.
- Inspect the filter in the water intake.
- If the filter is damaged, do not use the machine until the filter has been replaced.
- If the filter is dirty, clean it before connecting the garden hose to the machine.

NOTE: There must be a minimum of 3 metres of unrestricted hose between the pressure washer intake and the garden tap.

- With the garden tap turned completely off, attach the end of the garden hose to the threaded tap connector.

OPERATION

Applications

This pressure washer can be used for the purposes listed below:

- Removing dirt and mould from decks, cement patios, and walls
- Cleaning cars, boats, motorcycles, outdoor furniture and barbecues

ADDING DETERGENT TO THE PRESSURE WASHER

(See Figure 6.)

Use only detergents designed for pressure washers; household detergents, acids, alkalines, bleaches, solvents, flammable material, or industrial grade solutions can damage the pump. Many detergents may require mixing prior to use.

Prepare cleaning solution as instructed on the solution bottle.

NOTE: Use a funnel, if needed, to prevent accidental spilling of the detergent outside the tank. If any detergent is spilled during the filling process, make sure the unit is cleaned and dried before proceeding.

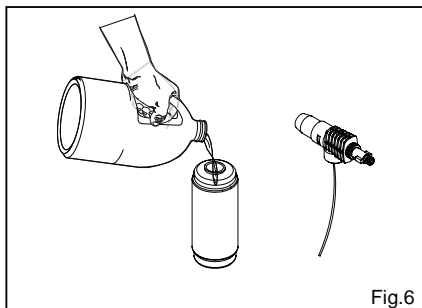 


Fig.6

STARTING AND STOPPING THE PRESSURE WASHER



CAUTION:

Do not run the pump without the water supply connected and turned on.

- Connect the garden hose.
- Turn the garden hose on then squeeze the high pressure trigger to relieve air pressure. Once a steady stream of water appears, release the trigger.
- After ensuring the switch is in the OFF position, connect the pressure washer to the power supply.
- Press **ON (I)** on the switch to start the motor.
- To stop the motor, release the trigger and press **OFF (O)** on the switch.

NOTE: Use a funnel, if needed, to prevent accidental spilling of the detergent outside the tank. If any detergent is spilled during the filling process, make sure the unit is cleaned and dried before proceeding.

USING THE GUN

For greater control and safety, keep both hands on the gun at all times.

ENGLISH(Original Instructions)

- Pull back and hold the trigger to operate the pressure washer.
- Release the trigger to stop the flow of water through the nozzle.

To engage the lock out:

- Push down on the lock out until it clicks into the slot.

To disengage the lock out:

- Push the lock out up and into its original position.

For the most effective cleaning, the spray nozzle should be between 20 cm and 60 cm from the surface to be cleaned. If the spray is too close it can damage the cleaning surface.

USING THE NOZZLES

Before starting any cleaning job, determine the best nozzle for the job. The 25° nozzle is for general purpose cleaning.



CAUTION:

NEVER change nozzles without engaging the lock out on the gun and NEVER point the lance at your face or at others. The Quick Connect collar contains small springs that could eject the nozzle with some force. Failure to heed this may cause personal injury.

Using the Quick Connect collar, changing nozzles is easy.

To connect a nozzle to the lance:

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock out on the gun by pulling down on the lock out until it clicks into the slot.
- Pull back the quick-connect collar.
- Push the nozzle into place in the spray wand.
- Push the collar forward so that the nozzle is secured properly. Check to see that the nozzle is secure.

To disconnect a nozzle from the lance once the cleaning job is complete:

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock out on the gun by pushing down on the lock out until it clicks into the slot.
- Remove the nozzle by placing hand over nozzle then pulling back the Quick Connect collar. Place nozzle in the nozzle storage area.

OPERATING THE PRESSURE WASHER

(See Figure 7.)

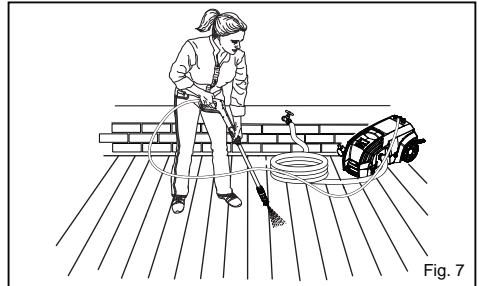 


Fig. 7

To apply soap:

- Pour detergent in the detergent tank.
- Install the detergent bottle on the spray wand
- Start the pressure washer and spray the detergent on a dry surface using long, even, overlapping strokes. To prevent streaking, do not allow detergent to dry on the surface.

To clean:

- Using the 25° nozzle, spray away from the target surface for approximately 10 seconds to allow any remaining detergent to be flushed from the hose.
- Start at the top of the cleaning area and work down, overlapping the strokes.

MAINTENANCE



WARNING:

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.



WARNING:

Before inspecting, cleaning, or servicing the machine, shut off motor, wait for all moving parts to stop, and disconnect plug from power source. Failure to follow these instructions can result in serious personal injury or property damage.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

ENGLISH(Original Instructions)



WARNING:

Do not at any time let brake fluids, petrol, petroleum based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury. Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced at an authorized service centre.

POWER SUPPLY CORD REPLACEMENT

If replacement of the power supply cord is necessary, this must be done by an authorized service centre in order to avoid a safety hazard.

NOZZLE MAINTENANCE (See Figure 8.)

Excessive pump pressure (a pulsing sensation felt while squeezing the trigger) may be the result of a clogged or dirty nozzle.

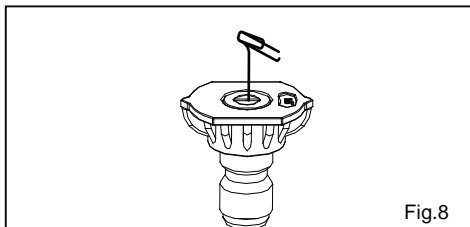 


Fig.8

- Unplug the pressure washer.
- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Remove the nozzle from the lance.

NOTE: Never point the spray lance at your face.

- Using a straightened paper clip or nozzle cleaning tool, free any foreign materials clogging or restricting the nozzle.
- Using a garden hose, clear/flush debris out of nozzle.
- Reconnect the nozzle to the lance.
- Turn on the water supply.

STORING THE PRESSURE WASHER

Store in a dry, covered, frost-free area where the weather can't damage it. Always empty water from gun, hose and pump.

NOTE: The use of a pump protector is recommended to prevent cold weather damage during storage over the winter months.



Fig.10

Telescopic handle use: (See Figure 10.)

- Pull up and fully extend handle for use.
- For transporting, pull as shown.
- To lower handle; push handle until it lock into place for storage.



IMPORTANT

This handle is for pulling the unit. Do not lift the unit by this handle.

ENGLISH(Original Instructions)

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor will not start.	On/Off switch is in the "OFF" (O) position.	Turn switch to the "ON" (I) position. Squeeze gun trigger.
	Power cord is not plugged in.	Plug in power cord.
	Defective extension cable.	Try without extension cable.
	Electrical outlet does not supply adequate power.	Try a different outlet.
Unit does not reach high pressure.	Diameter of garden hose is too small.	Replace with a 1" (25 mm) or 5/8" (16 mm) garden hose.
	Water supply is restricted.	Check garden hose for kinks, leaks and blockage.
	Not enough water supply	Open water source fully.
	Water inlet filter is clogged.	Remove filter and rinse in warm water.
	Power nozzle is in low-pressure position.	Turn power nozzle to high-pressure position.
	Pump is sucking air.	Check that hoses and fittings are airtight. Turn "OFF" machine, and purge pump by squeezing trigger gun until a steady flow of water emerges through the nozzle.
Output pressure varies high and low.	Not enough inlet water supply.	Turn water on fully. Check garden hose for kinks, leaks or blockage
	Pump is sucking air.	Check that hoses and fittings are airtight. Turn "OFF" machine, and purge pump by squeezing trigger gun until a steady flow of water emerges through the nozzle.
	Water inlet filter is clogged.	Remove filter and rinse with warm water.

ENGLISH(Original Instructions)

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>SOLUTION</u>
Unit does not reach high pressure.	Diameter of garden hose is too small.	Add more detergent.
	Detergent bottle or suction tube not properly connected.	Check connections.
	Detergent is too thick.	Dilute detergent.
	Filter on detergent suction tube is clogged.	Run warm water through filter to remove build-up.
	Damaged or clogged detergent suction tube.	Remove obstruction or replace detergent suction tube.
	Nozzle is in high-pressure position.	Turn nozzle tip to low-pressure position.
	Discharge nozzle is obstructed.	Blow out or remove debris with a fine needle.
Garden hose connection leaks.	Loose fittings.	Tighten fittings.
	Missing/worn rubber washer.	Insert new washer.
Spray wand, extension, or nozzle leaks.	Broken o-ring or plastic insert.	Call the Toll-Free Hotline.
Pump is noisy	Pump is sucking air	Check that hoses and fittings are airtight. Turn off machine and purge pump by squeezing trigger gun until a steady flow of water emerges through the nozzle.
	Water filter is clogged.	Remove water filter and rinse in warm water.
Water leaks from pump (up to 10 drops per minute is permissible).	Loose fittings.	Check that all fittings are tight.
	Water seals are damaged or worn.	Call the Toll-Free Hotline
Oil is dripping	Oil seals are damaged or worn.	Call the Toll-Free Hotline

ENGLISH(Original Instructions)

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor buzzes but fails to run.	Supply voltage below minimum.	Verify that only the pressure washer is running on this circuit.
	System has residual pressure.	Turn unit "OFF", squeeze trigger on spray wand to release pressure, then turn unit "ON"
	Voltage loss due to extension cord.	Unplug any extension cords attached and plug the unit directly into the outlet.
	Pressure washer not used for long periods.	Call the Toll-Free Hotline.
	Residual friction among components. Unit might hum.	Disconnect water supply and power ON for 2 to 3 seconds, repeat couple times or until the motor starts.
No Water	Quick connect assembly is attached in reverse.	Verify that Inlet adapter (G2) is attached to machine's water inlet and that the quick connect coupler (G1) is attached to garden hose.
	Water supply is OFF.	Turn ON water supply.
	Kink in the garden hose.	Remove kink in garden hose.

DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

LIMITED WARRANTY

EN LIMITED WARRANTY

Warrants this outdoor product to be free of defects in material and workmanship for 24 months from the date of purchase by the original purchaser, subject to the limitations below. Please keep your invoice as proof of date of purchase.

This warranty is only applicable where the product is used for personal and non-commercial purposes.

This warranty does not cover damage or liability caused by / due to misuse, abuse, accidental or intentional acts by user, improper handling, unreasonable use, negligence, failure by end user to follow operating procedures outlined in the user's manual, attempted repair by non-qualified professional, unauthorized repair, modification, or use of accessories and/or attachments not specifically recommended by authorized party. Please see your local dealer for list of authorized service centers in your area. This warranty does not cover belts, brushes, bags, bulbs or any part which ordinary wear and tear results in required replacement during warranty period. This warranty does not cover transportation cost or consumable items such as fuses and batteries. This limited warranty is void if the product's original identification (trade mark, serial number) markings have been defaced, altered or removed or if product is not purchased from an authorized reseller or if product is sold AS IS and / or WITH ALL FAULTS.

Where permitted, the provisions of this limited warranty are in lieu of any other written warranty, whether express or implied, written or oral, including any warranty of MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL WE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES. OUR MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT.

This warranty is valid only in the European Union, Australia and New Zealand. Outside these areas, please contact your authorized GreenworksTools dealer to determine if another warranty applies.
AUTHORISED SERVICE CENTRE

EN

EC DECLARATION OF CONFORMITY FOR MACHINERY

Manufacturer: Changzhou Globe Tools Co., Ltd.

Address: No.65 Xinggang Road Zhonglou Zone Changzhou, Jiangsu 213000 P.R.China

Name and address of the person authorised to compile the technical file:

Name: Dennis Jacobson (Director of Outdoor Power Equipment)

Address: GLOBE TOOLS EUROPE AB,

ätbyggargatan 14

120 68 Stockholm

Sweden

Herewith we declare that the product

CategoryHigh Pressure Washer

Model51017

Serial numberSee product rating label

Year of ConstructionSee product rating label

- is in conformity with the relevant provisions of the Machinery Directive
- is in conformity with the provisions of the following other EC-Directives
2006/95/EC (LVD-Directive)
2004/108/EC (EMC-Directive), and
2000/14/EC (Noise-Directive) incl. modifications (2005/88/EC)

And furthermore, we declare that

- the following (parts/clauses of) European harmonised standards have been used
EN 60335-2-79:2009
EN 60335-1:2002+A11:2004+ A1:2004+A12:2006+A2:2006+A13:2008+A14:2010+15:2011
EN 62233:2008
EN 55014-1:2006+A1:2009
EN 55014-2:1997+A1:2001+A2:2008
EN 61000-3-2:2006+A1:2009+A2:2009
EN 61000-3-3:2008
- the following (parts/clauses of) other technical standards and specifications have been used
EN ISO 3744:1995

Measured sound power level

LWA: 91.5 dB(A)

Guaranteed sound power level

94 dB(A)

Conformity assessment method to Annex V/ Directive 2000/14/EC

Place, date: Changzhou, 30/12/2011

Signature: Gary Gao Naixin (BEng, CEng, MIET)

Vice president of Engineering

