

# AEO Head Movement Tracker X-GYRO 1000 USER MANUAL

--- v 1.15

## Introduction



X-GYRO 1000 is a two axis head tracking system, based on G sensor technique, designed for tracking complicated three-dimensional motion like head movement and so on, it can also be used on the areas of controlling drones and robots, transferring three-dimensional motion signals from hands, head of human to corresponding movement system on RC model, drone or robot

The basic version of X-GYRO 1000 is specially designed for RC models with FPV(First Personal Version), it can be used perfectly with main stream transmitters that gets self defining trainer channel on market or to be co-operated with wireless high frequency modular independently. It can transfer the checked movement signals to transmitter, and the transmitter can send out signals of head movement or position of head(on two axis), so that the real synchronization can be realized when screen on the goggles displayed video pictures, users can look around as if he were inside the RC model. Since it is compatible with transmitters on nowadays market, it is easy and simple to use it and grasp it, its best advantage is that no need any fixed reference object to check and measure the inflection position of RC model, and no drift at all when it in stationary state compared with other facilities that need to make use of very complicated reference facilities or manual controlled transmitter, mechanical arms or other tools are heavy and not easy to be carried along, it greatly limited users' freedom.

## Specifications:

- requirement for power: X-GYRO needs 8V to 12V DC power supply. Some transmitters, especially those FYTABA ones, can supply power directly by trainer connector.(ex. T9Z FF9C). Some transmitters cannot supply power to X-GYRO, for ex. T14MZ and 12FG. The simplest solution is to use an extra battery for those RC transmitters. The connector is already included in package.
- Size: 25mmX35mm
- Weight: 20g
- Range for measuring:  $\pm 90^\circ$ /second rotational speed movement.

## Default Setting:

- Channels: X axis-channel 7 Y axis-channel 8
- Detective range: 45 degree

## Conditions of usage:

### 1. Choice for transmitters :

#### **FUTABA:**

X-GYRO is compatible with high end FUTABA transmitters (FF-7,FF-8,FF-9, T9Z, T12MZ, T14MZ) supporting trainer/student function by using 6 pins square trainer connector. Some of these transmitters can supply power directly to X-GYRO, no need external power, but some transmitters using need external power for X-GYRO. The external power wire has included in package.

X-GYRO can generate standard PPM signal and send it through your radio to receiver.(the default channel: channel 7 and 8, its programmable.) your transmitter need support trainer function and channels need to be programmable. The system can send standard PPM signal to those unused channels.

Since the FUTABA transmitters(especially the FF9/9C series), trainer switch is spring switch, only if you leave it always "on" can realize its function. The simplest way for it is to hold the switch on with a rubber band. Other high-end transmitters such as (T9Z T14MZ)have already put the trainer channel to always "on" channel.

Other notice is the trainer function of some models of FUTABA need to reset after you change model.

#### **GRAUPNER:**

High-end Graupner transmitters can be used with X-GYRO(MC20,MC24,MX22), and they are actually support selective trainer channel merging. You can also check the manual of the transmitter and get the procedure correspondingly, but these expensive transmitters didn't take the trainer connector as a standard feature, You need to purchase a trainer connector module to active the function. Once the appropriate module is installed in the transmitter, the X-GYRO, equipped with a 3.5mm stereo JACK connector may be used. These connectors don't supply power, you need to connect an external power for it. The simplest way is to use a 9V battery, since the current drawn by the X-GYRO is low enough that a single battery should last a long time, of course, it will be economical if you use a 7.4V high capacity Li-Po battery.

#### **Multiplex :**

High-end Multiplex transmitter series(Royal Evo, Cockpit SX, MC4000) can also compatible with X-GYRO. The different with Graupner is Multiplex Tx can supply power to X-GYRO without external power. You need right connector for Multiolex, please read user's manual to know the detail specifications about transmitter setting.

#### **JR and other transmitters:**

Some JR transmitters can support selective merging trainer channel, some of them can't, but it is so pity it appears that only the first 4 channels are supported (the JR 9303, 9X is one example of this). So users can only use X-GYRO on those simple 2-3 channel models with JR transmitter. The problem can be solved by applying high frequency transmitter system to transfer control signal independently (it is on research now) Now we are developing connector device that can fit all RC transmitters (including fit JR and 4VF transmitters not compatible at present time), the time won't be too long.

### 2. X-GYRO 1000 Setting

If your transmitter can program their channel setting and also can program student's channel setting while turn on trainer function. You don't need to change the setting the X-GYRO. If your transmitter can't change the student's channel setting, you can use the programming function of X-GYRO. More detail about X-GYRO setting, please read the section "X-GYRO Programming".

### 3. Install X-GYRO

This module checks angular positions around 2 axis, just like showed on the picture below, It's very important to align them to your head's rotation axes, so that the measured movements are independently. If it is not aligned properly, the sensor will report false information which is very troublesome during use. The unit should be mounted

so that it is flat when you look straight, and the cable exits either in front or at the back. To ease installation, you can attach it to a cap, or directly fix it to your video goggles. That way you won't have to think about it again, and you'll be able to transfer it to another pilot easily.

#### 4. Install Camera


For use with the X-GYRO, your camera needs to be mounted on a pan/tilt, and that can be 2 RC servos controlled. Standard RC servos will get about a 90° total throw, which is enough for the tilt axis. However, it would be very useful if the pan servo can throw over a wider range. Those can be done by hardware servo modification, but in order to ease the challenge, we have developed the Servo Expansion module that can double the movement command received from the TX once plugged between the receiver and the servo. This allows using the maximal throw the servo's mechanical limits will accept, usually around 180°. We recommend using it on the Pan axis.

#### 5. Preparing:

The X-GYRO sensor is a plug-and-play device that can be used very easily. There will however be several settings to be done like for a model's controls. First, your transmitter's trainer function must be activated. Appoint the sensor's channels (7 and 8 by default, see "Programming" to change them) to the student, and the rest channels to the trainer.

#### 6. Using:

The package included additional connectors. (see picture) Two type FUTABA adapter and one external power connector.

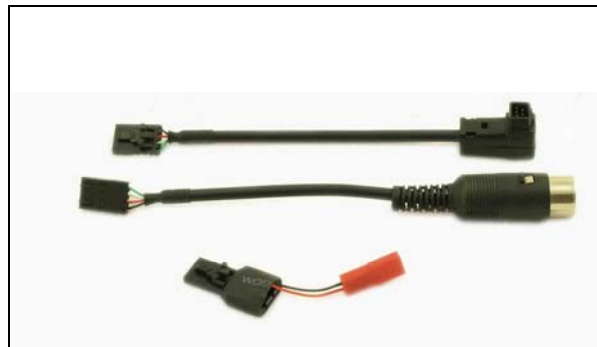

Plug the X-GYRO cable in your transmitter's trainer plug, and lay the sensor on a stable surface so that it doesn't move at all while powering up.

If your FUTABA transmitter has less than 8 channels, such like 4VF or 6EX, you need use PPM signal mixer.



If your transmitter is FUTABA 8 CH or upper, Just direct connect and play.

If your transmitter is FUTABA T12MZ or T14MZ, you need to use external power connector (included in box)

and 2 cell Li-Po with JST connector.



Turn the TX on. The sensor's LED will blink just one second (the fastest response in the world at the present time). It can be saved as "zero movement" for reference. During this time; the module stores the "zero movement reference. Its very important NOT to move the sensor at that moment, as any little measurement error will cumulate over time and create drift.

After few seconds, move your X-GYRO. Your camera ptz should be moving synchronize with X-GYRO. If you leave X-GYRO static in 30 sec but can see ptz moving. although the system is designed by our excellent engineer, almost, so that head movement cannot match up the position of the camera, you can simply look straight and press the button shortly, the system will rememorize central position and correct its output signal instantly to secure movement synchronism. The processing is so short that you make no influence during flying.

The temperature change may cause the center moving.

If the center has deviation, Just short press the button to re-center X-GRYO

## 7. Programming:

The configuration menu is entered at power-up, when power is applied, the LED will blink with high brightness and it indicates entering menu options, following high brightness blinks comes with continuous and interval low brightness blinks, it indicates the present menu options, you can select your desired option in turn from them continuously and periodically by a short button press, A long press (more than 2 sec) will store it and the next setting then appears, the same setting interface can be repeated and periodical, if you want to finish the present settings, you can just shut off the power and then turn on it again.

## 8. Entering setting mode:

Please press the re-center button continuously, then connect with the power and wait for 5 seconds, so you can enter setting mode, the sensor's LED will blink for reminding the entering setting mode afterwards.

You can see two signal lights blinking with different brightness.

The times of high brightness blinks indicates serial numbers of menu and the times of continuous low brightness blinks indicate option numbers on menu.

### Option 1: Options for X axis(pan axis)working channel---one high brightness blink.

One blink of low brightness indicates Channel 1

Two blinks of low brightness indicate channel 2

Three blinks of low brightness indicate channel 3

Four blinks of low brightness indicate channel 4

Five blinks of low brightness indicate channel 5

Six blinks of low brightness indicate channel 6

Seven blinks of low brightness indicate channel 7

Eight blinks of low brightness indicate channel 8

**Option 2: Options for Y axis (tilt axis) working channel, two blinks of high brightness, it is same as the above, please select the channels that are different with X axis.**

One blink of low brightness indicates Channel 1

Two blinks of low brightness indicate channel 2

Three blinks of low brightness indicate channel 3

Four blinks of low brightness indicate channel 4

Five blinks of low brightness indicate channel 5

Six blinks of low brightness indicate channel 6

Seven blinks of low brightness indicate channel 7

Eight blinks of low brightness indicate channel 8

**Option 3: Angles for tracking head movement on X axis----3 blinks of high brightness**

One blink with low brightness indicates the angle of 45° for tracking.

Two blinks with low brightness indicate the angle of 90° for tracking

Three blinks with low brightness indicate the angle of 180° for tracking

Four blinks of low brightness indicate the angle of 360° for tracking

**Option 4: It is 4-blink with high brightness for tracking angles of head movement on Y axis(tilt axis), the options is same as the above.**

One blink with low brightness indicates the angle of 45° for tracking.

Two blinks with low brightness indicate the angle of 90° for tracking

Three blinks with low brightness indicate the angle of 180° for tracking

Four blinks of low brightness indicate the angle of 360° for tracking

**Option 5 : X axis(pan axis) reversed---5 blinks with high brightness**

One blink with low brightness indicates normal

Two blinks with low brightness indicate reversed

**Option 6 : Y axis(Tilt axis) reversed--- 6 blinks with high brightness**

One blink with low brightness indicates normal

Two blinks with low brightness indicate reversed

**Option 7: Go default setting --- 7 blinks with high brightness**

Default X axis is for up and down, Y axis is for right and left.

(Long process: over 2 Sec Short process: less than 1 Sec)

## 8. Notice:

1. X-GYRO is integrated with high precision sensor which is very sensitive to shock and moisture. Please keep its storage environment dry and take good care of it.

2. Please take extreme care of polarity when connecting the X-GYRO with the trainer connector and battery, it will burn the IC device.

3. The interface of trainer cord of T14MZ&T12MZ is different with other types. You need use the external power connector with 3 cell Li-Po battery to supply power for X-GYRO.

4. Please don't try to open the X-GYRO case, or it will damage and destroy the module and lost free repair.

5. Even though the external power it not necessary for every transmitter, but we still recommend use it.

## 9. Servo moving range:

The stand PPM signal define servo angle in 90-120 degree. If the head tracker sends the signal over this range probably will cause transmitter error. The human head movement is over this range. If you need extend servo range, you need to buy our servo signal extension. More detail. Please read the manual of servo extension.

