ENGLISH

téléphone portable. Maintenez-le pour la référence future. Veuillez lire attentivement ce manuel avant d'utiliser votre

noitseilisation O228 21











LG 8550 USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

P/N: MMBB0266601(1.0)



FRANÇAIS

Copyright ©2007 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! Violation of the instructions may cause serious injury or death.



 Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



- Never place your phone in a microwave oven as it will cause the battery to explode.
- 3. Never store your phone in temperatures less than -4°F or greater than 122°F.
- 4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



- 6. Do not use a hand-held phone while driving.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



 Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.




- Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.
- Do not use your phone in high explosive areas as the phone may generate sparks.



Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

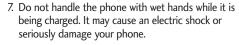



8. Do not disassemble the phone.



- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- Do not hold or let the antenna come in contact with your body during a call.



Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



- 4. Store the battery out of reach of children.
- Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



- Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

Table of Contents

Important Safety	
Precautions	1
Table of Contents	4
Welcome	9
Technical Details	10
FCC RF Exposure Information	12
Phone Overview	14
Right side view	15
Left side view	15
Rear view	15
Menus Overview	16
Getting Started with You	ır
Phone	18
The Battery	10

Installing the Battery	18
Removing the Battery	18
Charging the Battery	19
Battery Charge Level	19
Turning the Phone On and Off	19
Turning the Phone On	19
Turning the Phone Off	20
Signal Strength	20
Screen Icons	20
Touch Sensitive Keys	20
Navigation Wheel	21
Key Guard	21
Making Calls	22
Correcting Dialing Mistakes	22
Redialing Calls	23
Receiving Calls	23

Some of content in this user guide may be different from your phone depending on the software of the phone or your service provider. Features and specifications might be subject to change without prior notice.

Quick Access to	
Convenient Features	24
Vibrate Mode	24
Lock Mode	24
Mute Function	24
Volume Quick Adjustment	24
Call Waiting	24
Caller ID	25
Speed Dialing	25
Using Phone Menus	
Contacts	26
Contacts	26
1. New Contact	26
2. Contact List	27
3. Groups	27
4. Speed Dials	28
5. My Name Card	28

Call History	29
1. Missed Calls	30
2. Received Calls	30
3. Dialed Calls	30
4. Blocked Calls	31
5. All Calls	31
6. View Call Timers	31
Messaging	32
1. Voicemail	32
2. Create Message	33
3. Inbox	35
4. Sent	36
5. Drafts	36
6. Web Alerts	37
7. E-mail	37
8. IM & Chat	37
9. Short Codes	37
Wireless Web	38
Music & Media	39

1. TELUS mobile music

Table of Contents

2. TV & Radio	42	Settings	60
3. Ringtones & Sounds	42	1. Bluetooth Menu	60
4. Pictures & Videos	44	1.1 Add New Device	61
5. Memory Info	50	2. Sound Settings	62
Shop	50	2.1 Master Volume	62
		2.2 Call Sounds	63
Games & Apps	51	2.3 Alert Sounds	64
1. Games	51	2.4 Keypad Volume	64
2. Tools	51	2.5 Service Alerts	64
3. GPS Services	52	2.6 Power On/Off	65
Tools	52	3. Display Settings	65
1. Voice Commands	53	3.1 Banner	65
2. Calculator	55	3.2 Backlight	66
3. Calendar	55	3.3 Wallpaper	66
4. Alarm Clock	56	3.4 Display Themes	67
5. Stopwatch	57	3.5 Clip Board	68
6. World Clock	58	3.6 Dial Fonts	68
7. Notepad	58	3.7 Clock Format	68
8. Ez tip Calc	59	3.8 Time Format	69
9. USB Mass Storage*	59	4. Games & Apps	69

4.1 Backlight Settings	69	6.3 Auto Retry	80
4.2 Volume	70	6.4 TTY Mode	81
4.3. Notifications	70	6.5 One Touch Dial	83
4.4 Others	71	6.6 Auto Prepend	83
5. Phone Settings	71	6.7 Do Not Disturb	83
5.1 Airplane Mode	71	7. Touch Keypad	84
5.2 Set Shortcut Keys	71	8. Navigaton Wheel	85
5.3 Slide Auto Lock	72	8.1 Speed	85
5.4 Voice Commands	72	8.2 Sound	85
5.5 Language	73	8.3 Light	85
5.6 Location	73	9. Memory	86
5.7 Security	74	9.1 Save Options	86
5.8 System Select	77	9.2 Phone Memory	87
5.9 NAM Select	78	9.3 Card Memory	87
5.10 Auto NAM	78	10. Phone Info	88
5.11 Data/Fax	78	10.1 My Number	88
5.12 Serving System	79	10.2 SW/HW Version	88
6. Call Settings	79	10.3 Icon Glossary	88
6.1 Answer Options	79		

80

6.2 End Call Options

Table of Contents

Safety	89
TIA (Telecommunications Industry Association) Safety Information	89
Exposure to Radio Frequency Signal	89
Antenna Care	89
Phone Operation	90
Tips on Efficient Operation	90
Driving	90
Electronic Devices	90
Pacemakers	91
Persons with Pacemakers:	91
Hearing Aids	91
Other Medical Devices	91
Health Care Facilities	92
Vehicles	92
Posted Facilities	92
Aircraft	92
Blasting Areas	92

Potentially Explosive Atmosphere	92
For Vehicles Equipped with an Air Bag	93
Charger and Adapter Safety	93
Battery Information and Care	93
Safety Information	94
Explosion, Shock, and Fire	
Hazards	94
General Warnings and Cautions	96
Warning! Important safety information	97
Avoiding hearing damage	97
Using your phone safely	98
FDA Consumer Update	99
Consumer Information on SAR	109
Accessories	112
Warranty Information	113

Welcome

Thank you for choosing the advanced and compact LG 8550 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- microSD™ expansion slot.
- Large, easy-to-read, 11-line backlit LCD with status icons.
- Paging, messaging, voicemail and caller ID.
- 24-key keypad and navigation wheel.
- Menu-driven interface with prompts for easy operation.
- Any key answer, auto answer, auto retry, one-press and speed dialing locations.
- Bilingual (English and French) capabilities.
- Sleek and Compact Design with Internal antenna (Internal antenna described as antenna throughout this user guide).
- Bluetooth® wireless technology.
- TELUS mobile music.
- Advanced Voice Recognition.
- TELUS mobile Radio.
- TELUS mobile TV.
- Windows Live Messenger[®].

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

Technical Details

The LG 8550 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 Mhz and Personal Communication Services (PCS) at 1.9 Ghz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft/ softer handoff, hard handoff, and

dynamic RF power control technologies combine to reduce call interruptions.

The following table lists some major CDMA standards.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter- band operations IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO	TIA/EIA/IS-856 TIA/EIA/IS-878	CDMA2000 High Rate Packet Data Air Interface 1xEV-DO Inter-Operability Specification for CDMA2000 Access Network Interfaces
Related interface	TIA/EIA/IS-866	Recommended Minimum Performance Standards for CDMA2000 High Rate Packet Data Access Terminal
	TIA/EIA/IS-890	Test Application Specification (TAS) for High Rate Packet Data Air Interface

Technical Details

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base station Transmission System), and MS (Mobile Station).

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. Highspeed data transmission is also possible.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical

use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted Thirdparty belt-clips, holsters and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum separation distance of


8 inches (20 cm) must be maintained between the user/ bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC and IC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Phone Overview

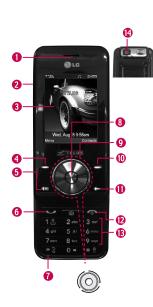

1. Earpiece

- Slide Slide up to answer an incoming call and slide down to end the call.
- LCD Screen Displays messages and indicator icons
- Left Soft Key Use to access corresponding command.
- Speakerphone Key Use to change to speakerphone mode.
- 6. SEND Key Use to make or answer calls.
- Vibrate Mode Key Use to set the mode (from the standby mode press and hold for about 3 seconds).
- OK Key Used to access main menus and accept commands.
- 9. Navigation Wheel Use to scroll through menus in the main menu screen. Press down on the wheel at either of the 4 navigational directions for quick access to Messaging, Wireless Web, Call History and TELUS mobile music (dependent on your settings).
- Right Soft Key Use to access corresponding command.
- 11. CLR Key Deletes single spaces or characters with a quick press, but press and hold to delete entire words. Will also back you out of menus, one level at a time.
- PWR/END Key Use to turn the power on/off and to end a call. Also returns to the standby mode.
- Alphanumeric Keypad Use to enter numbers and characters and select menu items.
- Camera Lens Used to take a photo. Keep it clean for optimal photo quality.

Rear view



Notes

- It's important to fully charge the battery before using the phone for the first time.
- Battery life and signal strength are significant factors (among others) that affect your phone's ability to send/receive calls.



Left side view



Right side view



Note

Antenna equipped inside your phone.

Tip

If you hold the phone enclosing the lower edge, you may interfere with the antenna's ability to receive a clear signal which affects call quality for voice or data transfer.

Menus Overview

. 1	Contacts

- **New Contact**
- Contact List
- 3. Groups
- **Speed Dials**
- My Name Card



- Missed Calls
- **Received Calls**
- **Dialed Calls**
- **Blocked Calls**
- 5. All Calls
- **View Call Timers**



- Voicemail
- Create Message
- 3. Inbox
- 4. Sent

- 5 Drafts
- Web Alerts
- 7. E-mail
- 8. IM & Chat
 - **Get New**
 - Online IM
- Messenger
- 9. Short Codes



4. Wireless Weh

- 5. Music & Media
- 1. TELUS mobile music
 - 1. Music Player 2. My Music List
- 2. TV & Radio
 - Get New
 - **TELUS** mobile radio
- TELUS mobile TV 3. Ringtones & Sounds
 - 1. Get New Ringtones

- My Ringtones My Sounds
- 4. Pictures & Videos
 - 1. Get New Pictures
 - 2. Get New Videos
 - **My Pictures**
 - My Videos
 - Take Picture
 - Record Video
- Memory Info



- 7. Games & Apps
- Games
- Tools
- **GPS Services**



8. Tools

Voice Commands

Menu Access

To use phone menus, press the OK Key () or Left Soft Key | using Navigation Wheel to highlight and select.

Press the number key that corresponds to the submenu.

- Calculator Calendar
- Alarm Clock
- Stopwatch
- World Clock
- Notepad
- Ez tip Calc
- **USB Mass Storage***



9. Settings

- 1. Bluetooth Menu
 - 1 Add New Device
- 2. Sound Settings
 - 1. Master Volume
 - 2. Call Sounds
 - 3. Alert Sounds
 - **Keypad Volume**
 - 5. Service Alerts
 - 6. Power On/Off
- 3. Display Settings
 - 1. Banner
 - **Backlight**
 - 3. Wallpaper
 - 4. Display Themes

- Clip Board
- **Dial Fonts**
- **Clock Format**
- 8. Time Format
- Games & Apps
 - 1. Backlight Settings
 - Volume
 - **Notifications**
 - 4. Others
- **Phone Settings**
 - Airplane Mode
 - Set Shortcut Keys
 - 3. Slide Auto Lock
 - 4. Voice Commands 5. Language
 - Location
 - Security System Select
 - NAM Select
 - 10. Auto NAM
 - 11. Data/Fax
 - 12. Serving System
- 6. Call Settings
 - 1. Answer Options

- 2. End Call Options
- 3. Auto Retry
- 4. TTY Mode
- One Touch Dial
- 6. Auto Prepend 7. Do Not Disturb
- 7. Touch Keypad
 - 1. Sensor Level
 - 2. Vibration
 - 3. Sound
- 8. Navigation Wheel
 - Speed
 - 2. Sound 3. Light
- 9. Memory
 - 1. Save Options
 - 2. Phone Memory
 - 3. Card Memory
- 10. Phone Info
 - 1. My Number
 - 2. SW/HW Version
 - 3. Icon Glossarv

Getting Started with Your Phone

The Battery

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

Insert the bottom of the battery into the opening on the back of the phone, then push the battery down until the latch clicks.



Removing the Battery

Move the battery latch up, and lift the battery from the battery compartment.





Charging the Battery

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG 8550 may damage your phone or battery.

- Attach the charger to the phone. Make sure that the triangle symbol faces up when inserting the plug into the charger port.
- 2. Plug the charger into a wall outlet.



Triangle symbol should face up.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Turning the Phone On and Off

Turning the Phone On

- Install a charged battery or connect the phone to an external power source.
- 2. Press for a few seconds until the LCD screen lights up.

Getting Started with Your Phone

Note

Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off

Press and hold until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Screen Icons

Glossary.

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone. To see the icons, go to OK-> Settings-> Phone Info-> Icon

Touch Sensitive Keys

- Make sure your hands are clean and dry.
 Remove moisture from the surface of your hands. Don't use the touch keys in a humid environment.
- Touch key sensors are sensitive to your light touch. You don't need to press them forcefully to use them. Protect your phone from severe impact because touch key

- sensors may become damaged from harsh use.
- Use the tip of your finger to touch the center of a touch key. If you touch off-center it may activate the nearby function instead.
- 4. The touch sensor level can be adjusted to your preference.
- When both the home screen and touch key lights are off, touch keys are deactivated.
 Push down and release the Lock Key () to turn on the home screen and touch key lights.
- If the slide is closed and the Touch Protection function is on, during calls the Touch Protection feature is enabled Press okay to activate the touch keys.
- 7. Keep metal and other conductive material away from the surface of touch keys

because contact may cause electronic interference.

Navigation Wheel

Slowly spin the navigation wheel with your finger tip to highlight menu options. When the correct menu option is highlighted, press the OK Key (a) to select that option.

You can also use the navigation wheel as a 4-way directional key to navigate the menus.

Key Guard

The touch keypad and navigation wheel are automatically locked when:

- The slide is closed.
- The phone is inactive for 17 sec. (default) or 25 sec. (if display backlight is set at 15 sec.).

To unlock the touch keypad and navigation wheel:

Getting Started with Your Phone

 Slide Closed: Slide the Lock Key (located on the right side of the phone) downwards and release.

- or -

Press the OK Key (1) twice.

 Slide Open: press any key (except touch keys).

Making Calls

- 1. Make sure the phone is turned on. If not, press for about 3 seconds.
- Enter the phone number (include the area code if needed).
- 3. Press 🖳 .

If the phone is locked, touch the Right Soft Key and enter the lock code (the last four digits of your phone number by default).

Notes

- Only emergency calls can be made with the phone locked. To make a non-emergency call, you must first unlock your phone.
- If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts. To turn off this function: OK-> Settings -> Phone Settings -> Security -> ENTER PHONE LOCK CODE -> Restrictions -> ENTER SERVICE LOCK CODE -> Calls -> Incoming Calls -> Allow All -> OK
- 4. Press 💿 to end the call.

Correcting Dialing Mistakes

If you make a mistake while dialing a number, touch the once to erase the last digit entered or hold down for at least 2 seconds to delete all digits.

Redialing Calls

 Press twice to redial the last number you called, received or missed. The last 270 numbers are stored in the call history list and you can also select one of these to redial.

Receiving Calls

- When the phone rings or vibrates, there are four ways of answering a call, depending on the Answer Options in Call Settings menu:
- Slide Up: Slide up (default setting).
- OK Key: Press (default setting).
- Auto with Handsfree:
 The call automatically connects when connected to a handsfree device.

Note

If you touch the Left Soft Key Quiet while the phone is ringing, the ringing or vibration is muted for that call.

Note

If you touch the Right Soft Key $\[\frac{1}{2} \]$ Ignore while the phone is ringing, the call will be sent to voicemail (if subscribed).

2. Press **to end the call.**

Quick Access to Convenient Features

Vibrate Mode

Sets the phone to vibrate instead of ring. To set Vibrate Mode press and hold ** for 3 seconds. To return to Normal Mode, press and hold **.

Lock Mode

Sets your phone to require your 4-digit password in order to use the phone. To set Lock Mode, press & hold and enter the lock code.

Note

By default, the lock code/password is the last 4 digits of your phone number. You can change this code/password in Security menu.

Mute Function

The Mute Function does not transmit your voice to the caller. Still, you will be able to hear the caller. (Only available during a call)

Volume Quick Adjustment

Quickly adjust ringer and earpiece volumes by pressing the upper side key to increase and lower key to decrease. (Only available when the slide is open)

Note

The earpiece volume can only be adjusted during a call and Keypad volume can only be adjusted through the OK -> Settings -> Sound Settings -> Keypad Volume.

Call Waiting

During a call, one beep indicates another incoming call. Check with your service provider for information about this function. Press to receive the waiting call then press again to switch between calls.

Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears on the screen. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly and then dials it. Speed Dial number 1 is for Voicemail.

Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number. (When One Touch Dial is turned on)

OR

Enter the Speed Dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit. (When One Touch Dial is turned on)

OR

Enter the first and second digits and press .

Using Phone Menus

Contacts

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).

Access and Options

- 1. Press the OK Key ①.
- Use the Navigation Wheel
 to scroll to Contacts,
 and press the OK Key .
- 3. Select a sub-menu.
 - 1. New Contact
 - 2. Contact List
 - 3. Groups
 - 4. Speed Dials
 - 5. My Name Card

1. New Contact

Your phone can store up to 1000 Contacts entries. Contacts entries can store up to a total of five phone numbers and 2 email addresses, and each entry's name can contain 32 characters.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Contacts, and press the OK Key ...
- 3. Press 1 & New Contact.
- 4. Enter a name for the new entry and press the OK Key ①.
- 5. Select a label field (Mobile 1, Home, Work, Email 1, Group, Picture, Ringtone, Mobile 2, Fax, and Email 2) and press the OK Key ⊚.
- Scroll down to additional fields and enter or edit information as desired.

7. Press the OK Key

SAVE.

2. Contact List

Allows you to view your Contacts List.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel to scroll to Contacts, and press the OK Key .
- 3. Press 2 abc Contact List.
- Use the Navigation Wheel
 to scroll through your
 Contacts alphabetically.
 - Touch the Right Soft Key
 Options to select one of the following:

Call/ New Contact/ Erase/ Send Msg/ Erase All/ Send Name Card

Touch the Left Soft Key
 Edit to edit.

Press the OK Key
 OVIEW
 to view the Contact
 information.

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a part of group except No Group.

- Press the OK Key ⊚.
- Use the Navigation Wheel
 to scroll to Contacts,
 and press the OK Key ...
- 3. Press 3 def Groups.
- 4. Options from here:
- Touch the Left Soft Key New to add a new group to the list.

Contacts

Send Msg/ Rename/ Erase/ Add

4. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

- Use the Navigation Wheel
 to scroll to Contacts,
 and press the OK Key .
- 3. Press 4 ghi Speed Dials.
- Use the Navigation Wheelto scroll to the Speed

- Dial position (or enter the Speed Dial digit), then press the OK Key ①.
- 5. Highlight **Unassigned** and press the OK Key **()**.
- 6. Use the Navigation Wheel
 to scroll to the entry,
 then press the OK Key .

7. Select Yes

A confirmation message is displayed.

5. My Name Card

You can view your phone number, edit entry and send a name card via *Bluetooth*. To use this feature, a Bluetooth device compatible with your phone is required.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel

- to scroll to Contacts, and press the OK Key .
- 3. Press 5 My Name Card.
- Press OK Key
 to edit the information of your name card.

Or press the Right Soft Key
Options to send your
name card.

Call History

The Call History Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Access and Options

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Call History, and press the OK Key .
- 3. Select a sub-menu.
 - 1. Missed Calls
 - 2. Received Calls
 - 3. Dialed Calls
 - 4. Blocked Calls
 - 5. All Calls
 - 6. View Call Timers

Call History

1. Missed Calls

Allows you to view the list of missed calls; up to 90 entries.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Call History, and press the OK Key .
- 3. Press 1 & Missed Calls.
- 4. Use the Navigation Wheel to scroll to an entry, then
 - Press the OK Key
 o
 to
 view the entry.
 - Press to place a call to the number.

2. Received Calls

Allows you to view the list of incoming calls; up to 90 entries.

- 1. Press the OK Key 🔘.
- 2. Use the Navigation Wheel

- oto scroll to Call History, and press the OK Key o.
- 3. Press 2 abc Received Calls.
- 4. Use the Navigation Wheel oto scroll to an entry.

3. Dialed Calls

Allows you to view the list of outgoing calls; up to 90 entries.

- 1. Press the OK Key ①.
- Use the Navigation Wheel
 to scroll to Call History,
 and press the OK Key .
- 3. Press 3 def Dialed Calls.
- Use the Navigation Wheel to scroll to an entry.

4. Blocked Calls

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Call History, and press the OK Key .
- 3. Press 4 shi Blocked Calls.
- 4. Use the Navigation Wheel to scroll to an entry.

5. All Calls

Allows you to view the list of recent calls; up to 270 entries.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel
 to scroll to Call History,
 and press the OK Key .
- 3. Press 5 M All Calls.
- 4. Use the Navigation Wheel oto scroll to an entry.

6. View Call Timers

Allows you to view the duration of selected calls.

- 1. Press the OK Key

 O.
- 2. Use the Navigation Wheel

 to scroll to Call History,
 and press the OK Key .
- 3. Press 6 mno View Call Timers.
- 4. Use the Navigation Wheel oto scroll to a call list.

Last Call/ All Calls/ Received Calls/ Dialed Calls/ Roaming Calls/ Transmit Data/ Received Data/ Total Data/ Data Connection Time/ Last Reset/ Lifetime Calls/ Lifetime Data Counter

 Reset all the recorded timers by touching the Right Soft Key Reset All if you want to reset.

Messaging



Shortcut

(a) is a quick access to Messaging.

Access and Options

- 1. Press the OK Key 🔘.
- 2. Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Select a sub-menu.
 - 1. Voicemail
 - 2. Create Message
 - 3 Inhox
 - 4. Sent
 - 5. Drafts
 - 6. Web Alerts
 - 7. E-mail
 - 8. IM & Chat
 - 9. Short Codes

- Make a call to the callback number by pressing during an Inbox message check.
- Read and edit messages saved in the Sent after transmission and resend them.

The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

1. Voicemail

Allows you to view new voice messages recorded in the voicemail box. Your phone will alert you when you receive a new voice message.

Checking Your Voicemail Box

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Press 1 D Voicemail.
- 4. Options from here:
- Press to listen to the message(s).

2. Create Message

Allows you to create a message with Text, Picture/Video and Sound and send it. The limit number of receivers and subject length of your message is displayed on the phone, but it may vary depending the type of your message.

Sending a Message

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Press 2 abc Create Message.
- With the highlight on To field, touch the Right Soft Key \(
 \overline{\text{Options}}\).
 - Enter the destination. Select Contacts/ Call History/ Groups/ Set as Cc/ Set as Bcc and press the OK Key ②.
- Press the OK Key ⊚ and type your message (text or email), then press the OK Key ⊚.

Messaging

Using Text Input Modes

Left Soft Key () To choose Word/ Abc/ ABC/ 123/ Symbols.

6. Press the Navigation Wheel .

A confirmation message is displayed.

SHIFT Key	* 🖫	To change cases.
SPACE Key	# ê	To insert a space.
BACK Key	CLR	To backspace and hold it to delete words.
Punctuation Key	1 &	To insert punctuation in a word or to complete a sentence in Word Mode.

Mess	sage Icon Reference
æ	Indicates a message is saved as draft.
	New Text message unread
	New Multimedia message unread
3	Lock Icon
œ	Multimedia message read
	Message read
	Message sent failed
	Message was delivered
	Message sent
	Multiple Messages were delivered
₩.	Multiple Messages sent failed
	Multiple Messages sent
₫	Sending of Multiple Messages were pending
□	Sending of Message was

pending

3. Inbox

Your phone will alert you when you have new messages.

- Displaying a message notification on the screen.
- Sounding a beep, vibrating or sound, if set.
- Displaying the message icon
 .

Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available. A disclaimer is displayed and new messages are not accepted.

Viewing Your Inbox

Up to 250 received messages can be stored in the Inbox.

1. Press the OK Key 🔘.

- 2. Use the Navigation Wheel oto scroll to Messaging, and press the OK Key .
- 3. Press 3 def Inbox.
- Use the Navigation Wheel
 to scroll to an Inbox
 message.
 - Touch the Left Soft Key Frase.
 - Touch the Right Soft Key
 Options.

Reply/ Forward/ Lock (Unlock)/ Add To Contacts/ Erase Inbox/ Message Info

- 5. Use the Navigation Wheel to scroll to an Inbox message, then press the OK Key .
- While viewing the selected message, touch the Left Soft Key Frase or Right Soft Key Options.

Messaging

Tip

The Left Soft Key 🕝 option is dependent on the type of messages. (Text/Multimedia message: Erase, Multimedia message with sound: Mute/Unmute)

4. Sent

Up to 150 sent messages can be stored in the Sent. View lists and contents of sent messages.

- Press the OK Key
- Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Press 4 ghi Sent.
- Use the Navigation Wheel
 to scroll to an Sent
 message.
 - Touch the Left Soft Key Frase.
 - Touch the Right Soft Key
 Options.

Forward/ Resend/ Lock (Unlock) Add To Contacts/ Erase Sent/ Message Info

5. Drafts

Displays draft messages.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Press 5 KI Drafts.
- 4. Use the Navigation Wheel oto scroll to a message.
 - Touch the Left Soft Key Frase.

 - Touch the Right Soft Key
 Options.

Lock/ Add To Contacts/ Erase Drafts

6. Web Alerts

Allows you to store the received web messages in a separate folder.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Press 6 mno Web Alerts.

7. E-mail

Allows you to send and receive a text email by Get New, Online E-mail.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Press 7 pars E-mail.
- 4. Use the Navigation Wheel

 to scroll to select Get

 New, Online E-mail then press
 the OK Key .

8. IM & Chat

Allows you to send and receive instant message at any time.
Allows you to chat with Internet Messenger users. The messages are updated anytime.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel oto scroll to Messaging, and press the OK Key .
- 3. Press 8 tuv IM & Chat.
- Use the Navigation Wheel
 to scroll to select Get
 New, Online IM or Messenger
 then press the OK Key (3).

9. Short Codes

Shows you the Short Codes List.

- Press the OK Key
- Use the Navigation Wheel to scroll to Messaging, and press the OK Key .
- 3. Press 9 wss Short Codes.
 Short Code List

Wireless Web



Wireless Web

The Wireless Web feature allows you to view Internet content, especially designed for your mobile phone. Access and selections within this feature are dependent upon your service provider. For specific information on Wireless Web access through your phone, contact your service provider.

Access and Options

Allows you to initiate an Wireless Web session.

- Press the OK Key
 O.
- 2. Use the Navigation Wheel to scroll to Wireless Web, and press the OK Key ⊚.

After a few seconds, you see the Home Page.

Overview

The Wireless Web allows the user to use a variety of Internet services. Using the Wireless Web on the phone allows you to:

Send and receive Internet e-mail.

- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.
- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

Music & Media

Ending the Wireless Web Session

You can end a Wireless Web session by pressing .

Navigating through the Browser

While using the Wireless Web, you will find the following content:

- Numbered options (some options may not be numbered);
- Links embedded in content;
- Text or numeric input;
- Simple text.

You can act on the options or the links by using the Soft Keys.

Music & Media

Allows you to download ringtones, wallpapers or videos once the Get New is executed and connected to Browser. In the application homepage, the downloaded ringtones are located under Music & Media -> Ringtones & Sounds -> My Ringtones. For the wallpapers, Music & Media -> Pictures & Videos -> My Pictures. For the videos, Music & Media -> Pictures & Videos -> My Videos.

Access and Options

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .
- 3. Select a sub-menu.
 - 1. TELUS mobile music
 - 2. TV & Radio

Music & Media

- 3. Ringtones & Sounds
- 4. Pictures & Videos
- 5. Memory Info

1. TELUS mobile music

TELUS mobile music lets you browse, preview and download music directly to your phone so you can listen to your favourite tunes while on the go. Select the TELUS mobile music shortcut key from the home screen to access mobile music and to choose from hundreds of thousands of songs.

For more information on TELUS mobile music, please visit: www. telusmobility.com/mobileradio or www.telusmobility.com/mobiletv.

Note

You must first format the memory card for use with TELUS mobile music (see page 86).

Caution

Formatting the memory card will erase all content currently stored on the card.

Your phone includes a data cable and a memory card.

To access USB mass storage mode:

- Insert the microSD card into the phone.
- Format the microSD card in the phone by selecting: Menu > Settings > Memory > Card Memory > Options > Format. Enter your lock code. Default lock code is the last 4 digits of your phone number. Select Yes to complete format*
- 3. Connect the data cable to your phone and PC.
- 4. On your PC, click Cancel on the Found New Hardware wizard.

- From the home screen on your phone select: Menu > tools > USB mass storage**
- 6. The device drive window will open on your PC. Select "Open Folder to View Files"
- Drag and drop your non-DRM protected MP3s into the My_Music folder. 8) When all file transfers are complete, select "Exit" on the phone before you disconnect from your PC.
- * Formatting the memory card will erase all content currently stored on the card.
- ** Note: all network connectivity including voice calls, messaging, and network data transfer is unavailable while connected via USB Mass Storage Mode. All voice calls will be directed to voicemail (if subscribed).

Access and Options

- 1. Press the OK Key ①.
- Use the Navigation Wheel ⊚
 to scroll to Music & Media,
 and press the OK Key ⊙.
- 3. Press 1. TELUS mobile music.

1.1 Music Player



- Touch the Left Soft Key exit to exit the menu.
- Touch the Right Soft Key \(
 \bigcup \)
 options.

Music & Media

1.2 My Music List

Displays the list of music files you downloaded.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel (1) to scroll to Music & Media, and press the OK Key (2).
- 3. Press 1 TELUS mobile music.
- 4. Press 2 abc My Music List.

2. TV & Radio

TELUS Mobile Radio and TELUS Mobile TV allows access to a wide range of commercial free music and real-time tv on your phone. For more information on TELUS mobile radio or TELUS Mobile TV, please visit: www. telusmobility.com/mobileradio or www.telusmobility.com/mobiletv.

1. Press the OK Key

O.

- 2. Use the Navigation Wheel (a) to scroll to Music & Media, and press the OK Key (a).
- 3. Press 2 abc TV & Radio.
- Scroll down to select TELUS mobile radio or TELUS mobile TV.
- 5. Press the OK Key (to launch.

Note

You can use your optional Bluetooth headset for phone calls and to listen to your songs downloaded through TELUS mobile music and TELUS mobile radio. Please use your included stereo headsets to listen to TELUS mobile TV.

3. Ringtones & Sounds

3.1 Get New Ringtones

Allows you to connect to Get New Ringtones and download various ringtones.

- 1. Press the OK Key


 .
- Use the Navigation Wheel ⊚
 to scroll to Music & Media,
 and press the OK Key ⊙.
- 3. Press 3 def Ringtones & Sounds.
- 4. Press 1. Get New Ringtones.

3.2 My Ringtones

Allows you to select a desired ringtone, download a new ringtone.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .
- 3. Press 3 def Ringtones & Sounds.
- 4. Press 2 abc My Ringtones.
- 5. Use the Navigation Wheel

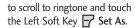

- 1 型 Ringtone
- Z contact ID: Scroll and select the Contact to be identified by the ringtone you selected.
- 3 def Alert Sounds: Press the corresponding number key to set the ringtone for one of the following:

All Messages/ TXT Message/ Multimedia Message/ Voicemail

3.3 My Sounds

Allows you to select a desired sound or record a new sound.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .

Music & Media

- 3. Press 3 def Ringtones & Sounds.
- 4. Press 3 def My Sounds.
- 5. Press Record New or scroll and select a sound using the Navigation Wheel .

Options from here:

- Touch the Left Soft Key Frase.
- Press the OK Key
 PLAY.
- Touch the Right Soft Key
 Options to select:

Send/ Upload Online Album/ Online Album/ Rename/ Move*/ Lock(Unlock)/ Erase All/ File Info/ Send via Bluetooth

 Available only when a microSD™ card is inserted.

4. Pictures & Videos

View, take and send your pictures and videos including downloaded video clips or wallpapers right from your wireless phone.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel (a) to scroll to Music & Media, and press the OK Key (a).
- 3. Press 4 shi Pictures & Videos.
- 4. Select a submenu.

4.1 Get New Pictures

Allows you to connect to an Wireless Web and download a variety of images for My Pictures.

- 1. Press the OK Key 🔘.
- 2. Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .

- 3. Press 4 ghi Pictures & Videos.
- 4. Press 1 Get New Pictures.

4.2 Get New Videos

Allows you to connect to an Web and download a variety of video clips for My Videos.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .
- 3. Press 4 shi Pictures & Videos.
- 4. Press 2 abc Get New Videos.
- 5. Press the OK Key ①.

4.3 My Pictures

Allows you to view images taken or downloaded and then stored in the phone.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel ⊚ to scroll to Music & Media, and press the OK Key ⊙.
- 3. Press 4 ghi Pictures & Videos.
- 4. Press 3 def My Pictures.
- Select a picture with the Navigation Wheel and touch the Right Soft Key Options.

Select one of the following options:

Send Sends a picture message.
Set As Wallpaper/ Picture ID

Upload Online Album Posts up the selected picture.

Online Album

Take Picture

Manage My Pics

Music & Media

Rename Renames the selected picture.

Move*

Lock(Unlock)

File Info Name/ Date/ Time/ Resolution/ Size/ Type

Print via Bluetooth Allows you to print the selected Bluetooth picture via Bluetooth.

Send via Bluetooth Allows you to send a selected Bluetooth picture via Bluetooth. Supported only when a BIP (Bluetooth Imaging Profile)-

equipped device is available.

* Available only when a microSD™
card is inserted.

Note

The option 'Send via Bluetooth' is not displayed when you select pictures protected by DRM (Digital Rights Management).

4.4 My Videos

Allows you to view videos stored in the phone.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel ⊚ to scroll to Music & Media, and press the OK Key ⊙.
- 3. Press 4 9hl Pictures & Videos
- 4. Press 4 shi My Videos.
- Select a video with the Navigation Wheel and touch the Right Soft Key Options.

Select one of the following options:

Send Sends a video message.

Record Video

Upload Online Album Posts up the selected picture.

Online Album

Manage My Videos Allows you to mark videos to be erased. locked. or unlocked.

Set As Wallpaper

Rename Renames the selected video.

Move Moves video to card and remove from all settings.

Lock(Unlock)

File Info

Send via Bluetooth Allows you to send a selected Bluetooth picture via Bluetooth. Supported only when a BIP (Bluetooth Imaging Profile)equipped device is available.

6. Press the OK Key (to play.

Note

File storage varies according to the size of each file as well as memory allocation of other applications.

- 🕽 : Adjust the volume.
- Unmute.
- (O): Pause/ Play.
- Up Navigation Wheel (): Shows the full screen.
- Down Navigation Wheel (): Stop
- Right Navigation Wheel (*): FF
- Left Navigation Wheel : Rewind
- 7. Touch the Right Soft Key Options to select one of the following options:

Set As Wallpaper/ File Info

4.5 Take Picture

Lets you take digital pictures.

1. Press the OK Key (a).



Music & Media

- Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .
- 3. Press 4 ghl Pictures & Videos.
- 4. Press 5 M Take Picture.

Shortcut

The Camera Key () on the keypad is a shortcut key to Take Picture in standby mode when the slide is open. Press and hold the key to launch Record Video mode. In Camera/Video preview screens, press the side camera key to take the picture/video.

5. Set the brightness by pressing the Navigation Wheel ②, zoom by pressing the Navigation Key ⊙, and touch the Right Soft Key ▼ Options to change other settings.

 Select the option(s) to customize.

RESOLUTION 1280X960/640X480/320X240

SELF TIMER Off/ 3 Seconds/ 5 Seconds/ 10 Seconds

WHITE BALANCE Auto/ Sunny/ Cloudy/ Fluorescent/ Glow

COLOR EFFECTS Normal/ Negative/ Solari/ Sepia/ Black&White

NIGHT MODE On/ Off SAVE OPTION Internal/ External

PHOTOMETRY Average/ Spot

PREVIEW Actual view/ Full screen

CAPTURE Camera/ Video

6. Take a picture by pressing OK Key **TAKE**.

 Touch the Left Soft Key Save. The picture is stored in My Pictures.

4.6 Record Video

Lets you record a video message with sound.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .
- 3. Press 4 ghi Pictures & Videos.
- 4. Press 6 mno Record Video.
- 5. Set the brightness by pressing the Navigation Wheel ①, zoom by pressing the Navigation Key ②, and touch the Right Soft Key ① Options to change other settings.

 Select the option(s) to customize.

RECORDING TIME For Send/ For Save

SAVE OPTION Internal/ External

COLOR EFFECTS Normal/

Negative/ Solari/ Sepia/ Black&White

WHITE BALANCE Auto/ Sunny/ Cloudy/ Fluorescent/ Glow

CAPTURE Camera/ Video

- Press the OK Key
 REC to begin recording, and again to stop.
- Touch the Left Soft Key Save. The recorded video is stored in My Videos.

Shop

5. Memory Info

Provides the memory information.

- 1. Press the OK Key 🔘.
- 2. Use the Navigation Wheel to scroll to Music & Media, and press the OK Key .
- 3. Press **5** ⋈ **Memory Info**.



Allows you to search and purchase from a variety of content provided by your service provider.

Access and Options

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Shop**, and press the OK Key ①.

After a few seconds, you see the Home Page.

Games & Apps

Allows you to download ringtones or wallpapers once the Get New is executed and connected to Browser. In the application homepage, the downloaded MIDlet (type of JAVA application) files are located under Games menu. Use Left Soft Key 🕝 to run the selected MIDlet and Right Soft Key 🖫 to select options.

- Run Open the MIDlet to run.
- Properties Displays the information of MIDlet.

Access and Options

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel (to scroll to Games & Apps, and press the OK Key (...).
- 3. Select a sub-menu.

- 1. Games
- 2. Tools
- 3. GPS Services

1. Games

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel ⊚ to scroll to Games & Apps, and press the OK Key ⊙.
- 3. Press 1 a Games.

2. Tools

- 1. Press the OK Key (3).
- 2. Use the Navigation Wheel ⊚ to scroll to Games & Apps, and press the OK Key ⊙.
- 3. Press 2 abc Tools.

Tools

4. Highlight Get New and press the OK Key (The browser will launch and take you to the Tools menu).

3 GPS Services

You can get services using the global positioning system. If available. GPS services are downloadable. Additional fees may apply.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel (1) to scroll to Games & Apps, and press the OK Key ①.
- 3. Press 3 def GPS Services.
- 4. Press the OK Key O Get New

After a few seconds, you will see the Home Page.



Allows you to make use of various tools and applications.

Access and Options

- Press the OK Key (a).
- 2. Use the Navigation Wheel (a) to scroll to Tools, and press the OK Key ①.
- 3. Select a sub-menu.
 - 1. Voice Commands
 - Calculator
 - 3. Calendar
 - 4. Alarm Clock
 - 5. Stopwatch
 - 6. World Clock
 - 7. Notepad
 - 8. Ez tip Calc
 - USB Mass Storage*
- * Available only when a microSD™ card is inserted.

1. Voice Commands

This feature provides you with the following options equipped with AVR (Advanced Voice Recognition) technology. Each option has its detailed information on the phone and you can check it out by touching Left Soft Key Info.

Access and Options

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Tools**, and press the OK Key .
- 3. Press 1 Voice Commands.

Settings to Optimize the Voice Commands Feature by touching the Right Soft Key Settings.

Choice List Automatic/ Always Off

Sensitivity Control the sensitivity as Reject More/

Automatic/ Reject Less.

Train Voice Digit Dial/ Responses/ Dial/Responses If the phone often asks you to repeat voice command, train the phone to recognize your voice patterns.

Prompts Mode/ Audio Playback/ Timeout For Mode, set Prompts/ Readout/ Tones Only. For Audio Playback, set Speakerphone/ Earpiece. For Timeout, set 5 seconds or 10 seconds.

Call Alert Ring Only/ Caller ID + Ring/ Name Repeat

1.1 Call <Name or Number>

Say "Call" and then call someone simply by saying the phone number or name. Please speak clearly and exactly as in your Contacts list. When you have more than one contact numbers,

Tools

you can state the name and number type of the contact (for example, 'Call John Work').

1.2 Send Msg to <Name or Number>

Say 'Send Message' and the command will prompt you for the type of message. After choosing the message type, system will ask you for the contact name, number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Message to Bob', it would automatically start a text message without asking for the message type. When using 'Send Message' command, speak clearly and say the number, group name, or name exactly as it is entered in your contact list.

1.3 Go to <Menu>

The 'Go to' command allows you to access a menu within the

phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided.

1.4 Check < Item>

The "Check" command allows you to check out a wide range of items from the battery level, service mode, signal strength, GPS location, network status, volume, number of missed calls, voicemail, messages, to time and date.

1.5 Lookup <Name>

You can look up names in your Contacts (for example, 'Lookup John'):

Read out/ Create New/ Erase/ Modify

1.6 Help

Provides a general guideline to using Voice Commands.

2. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the sixth decimal place.

- 1. Press the OK Key 🔘.
- 2. Use the Navigation Wheel to scroll to **Tools**, and press the OK Key .
- 3. Press 2 abc Calculator.
- 4. Enter data.
- Use the Navigation Wheel to enter plus, minus, divide and multiply calculations.
- Press to enter decimal and
 to enter plus or minus.
- Touch a to delete digits or symbols.
- Touch the Left Soft Key
 Clear to clear the calculation.

 Touch the Right Soft Key Operator to add parenthesis or power.

3. Calendar

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Tools**, and press the OK Key .
- 3. Press 3 def Calendar.
- Use the Navigation Wheel to highlight the scheduled day.

Left 💿 : Previous Day

Right 🕝 : Next Day

Up (: Previous Week

Tools

- Down (: Next Week
- 5. Touch the Left Soft Key Add.
- Enter your schedule information including:
 - Subject
 - Start Time Touch the Left Soft Key to set specific starting date and time.
 - End Time Touch the Left Soft Key to set specific ending date and time.
 - Repeat Touch the Left Soft Key Set to set a period of your schedule.
 Once/ Daily/ Weekly/ Monthly/ Yearly
 - Until The field is automatically filled after you set a repetition setting above.

- Alerts (when to ring the alarm reminder)
 None/ On Time/
 5 Minutes/ 10 Minutes/
 15 Minutes/ 1 Hour/
 2 Hours/ 1 Day/ 2 Days
- Tones (which ring alarm to sound)
 Tone/ Vibrate
- Press the OK Key SAVE.

When you exit without saving, you are asked to answer to a question 'Save event?'.

Note

Scheduler will not alert you during a call or during SMS transmission. It will sound the reminder after you exit a call.

4. Alarm Clock

Allows you to set one of three alarms. The current time is displayed at the bottom of the

screen when you select an alarm to set. At the alarm time, Alarm 1 (or 2, 3) will be displayed on the LCD screen and the alarm will sound.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Tools, and press the OK Key .
- 3. Press 4 shi Alarm Clock.
- 4. Select the alarm you want to edit.

Alarm 1/ Alarm 2/ Alarm 3

- 5. Use the Navigation Wheel to highlight the alarm time then press the OK Key .
- 6. Set the time for alarm and press the OK Key ⊙.
- 7. Touch the Left Soft Key **Set** and select the option REPEAT.

8. Use the Navigation Wheel to select one of the following and press the OK Key .

Once/ Daily/ Mon - Fri/ Weekends

- 9. Use the Navigation Wheel
 and touch the Left Soft Key
 Set to highlight a tone or an
 alert and press the OK Key
 ...
- 11. Press the OK Key O SAVE.

5. Stopwatch

Allows you to use your phone as typical stopwatch. Start measuring time and finish it pressing the OK Key ②. Touch the Left Soft Key ☐ Lap. Touch the Right Soft Key ☐ Reset.

1. Press the OK Key ①.

Tools

- Use the Navigation Wheel to scroll to Tools, and press the OK Key .
- 3. Press 5 M Stopwatch.

6. World Clock

Allows you to determine the current time in another time zone or country.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Tools**, and press the OK Key .
- 3. Press 6 mo World Clock.
- 4. Press the OK Key ⊚ to select the continent and then a specific country in the time zone where you want to view. In a specific country, several main cities are marked and you can check each by using Navigation Keys.

- Touch the Right Soft Key Cities to move the time bar across the world map and display the date/time in that location.
- Touch the Left Soft Key Set DST to display Daylight Savings Time in the selected location.

7. Notepad

Allows you to add, read, edit, and erase notes to yourself.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel to scroll to Tools, and press the OK Key ①.
- 3. Press 7 pqrs Notepad.
- 4. Touch the Left Soft Key Add to write a new note then press the OK Key (5) to save.

In entering a note, use text input mode with Left Soft Key .

Also, note that word choices/ suggestions are listed and adding an word to database is asked while entering characters.

8. Ez tip Calc

Allows you to quickly and easily calculate the amounts for a bill with the amount of the bill, the amount of the tip, and the number of people as variables.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel (a) to scroll to Tools, and press the OK Key (a).
- 3. Press 8 tuv Ez tip Calc.
- 4. Touch the Left Soft Key **Reset** if necessary.
- 5. Akailab leher Rijglahte Groaf trakero SPM Cold se its extend this menu.

9. USB Mass Storage*

This menu is accessible when your phone is connected to your PC with a data cable. It allows you to transfer contents from your phone to your PC or vice versa.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Tools, and press the OK Key .
- 3. Press 9 wsz USB Mass Storage

Settings



Settings

The Settings Menu has options to customize your phone.

Access and Options

- 1. Press the OK Key (2).
- 2. Use the Navigation Wheel (1) to scroll to **Settings**, and press the OK Key 0.
- 3. Select a sub-menu.
 - 1. Bluetooth Menu
 - 2. Sound Settings
 - 3. Display Settings
 - 4. Games & Apps
 - 5. Phone Settings
 - 6. Call Settings
 - 7. Touch Keypad
 - 8. Navigation Wheel
 - 9. Memory
 - 10. Phone Info

1. Bluetooth Menu

The LG 8550 is compatible with devices that support the Bluetooth® headset and hands-free profile(s). You may create and store 20 pairings within the LG 8550 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B013022

Notes

- Read user guide of each Bluetooth accessory that you are trying to pair with your phone because the instructions may be different.
- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

 Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

Access and Options

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 1 Bluetooth Menu.
- 4. Select a sub-menu.

1.1 Add New Device

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

1. Press the OK Key ①.

- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 1 3 Bluetooth Menu.
- 4. Press 1 & Add New Device.

For pairing new Bluetooth® device

- Press the OK Key
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 1 Bluetooth Menu.
- 4. Press 1 & Add New Device.
- Follow the Bluetooth accessory instructions to set the device to pairing mode.
- 6. Scroll to <Add New Device> and press the OK Key .

Settings

- If Bluetooth device is set to off, you will be prompted to turn power on. Select Yes.
- The device will appear in the Trusted Devices menu once it has been located. Highlight the device and press the OK Key .
- The handset will prompt you for the passkey. Consult the Bluetooth accessory instructions for the appropriate passkey (typically "0000"). Enter the passkey and press the OK Key .
- 10. Once pairing is successful, select 1 Yes to connect with the device.
- Once connected, you will see the device listed in the Trusted Devices menu and the Bluetooth icon will show

at the top of the screen, next to the paired device name.

2. Sound Settings

Provides options to customize the phone's sounds.

2.1 Master Volume

Allows you to set volume settings.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 2 abo Sound Settings.
- 4. Press 1 & Master Volume.
- Adjust the volume with the Navigation Wheel then press the OK Key to save the setting.

2.2 Call Sounds

Allows you to set how the phone alerts you for types of incoming calls.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key ①.
- 3. Press 2 abc Sound Settings.
- 4. Press 2 abc Call Sounds.
 - 2.2.1 Call Ringtone
 - 1. Press the OK Key ①.
 - 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
 - 3. Press 2 abc Sound Settings.
 - 4. Press 2 abc Call Sounds.
 - 5. Press 1 & Call Ringtone.

- 6. Use the Navigation Wheel
 to select a ringtone
 then press the OK Key
 to save the sound.
- 2.2.2 Call Vibrate
- 1. Press the OK Key ①.
- Use the Navigation Wheel
 to scroll to Settings,
 and press the OK Key ...
- 3. Press 2 abc Sound Settings.
- 4. Press 2 abc Call Sounds.
- 5. Press 2 abc Call Vibrate.

On/Off

Settings

2.3 Alert Sounds

Allows you to select the alert type for a new message.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 2 abc Sound Settings.
- 4. Press 3 def Alert Sounds.
- Select Text Message/ Multimedia/ Voicemail.
- Each Alert Sounds menu has the following options.

Tone/ Vibrate/ Reminder

2.4 Keypad Volume

Allows you to set the keypad volume.

1. Press the OK Key

.

- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 2 abc Sound Settings.
- 4. Press 4 9h Keypad Volume.
- Adjust the volume with the Navigation Wheel then press the OK Key to save the setting.

2.5 Service Alerts

Allows you to set any of the four Alert options to either **On** or **Off**.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel (1) to scroll to **Settings**, and press the OK Key (2).
- 3. Press **2** abc **Sound Settings**.
- 4. Press 5 M Service Alerts.

5. Use the Navigation Wheel to select a setting, then press the OK Key .

Service Change/ Minute Beep/ Call Connect/ Charge Complete

2.6 Power On/Off

Allows you to set the phone to sound a tone when the phone is powered on/off.

- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 2 abc Sound Settings.
- 4. Press 6 mo Power On/Off.
- 5. Select Power On/ Power Off.

3. Display Settings

Provides you with options to customize the phone's display screen.

3.1 Banner

Allows you to enter a string of greeting up to 23 characters displayed on the LCD screen.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 3 def Display Settings.
- 4. Press 1 Banner.
- Enter your greeting words and press the OK Key to save it.

Settings

3.2 Backlight

Allows you to set the duration for illuminating the backlight. Display and Keypad are set separately.

- 3.2.1 Display
- 1. Press the OK Key ①.
- 3. Press 3 def Display Settings.
- 4. Press 2 sbc Backlight.
- 5. Press 1 B Display.
- 6. Choose a setting, then press the OK Key ①.
 - 7 Seconds/ 15 Seconds/ 30 Seconds/ Always On/ Always Off

3.2.2 Keypad

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 3 dof Display Settings.
- 4. Press 2 abc Backlight.
- 5. Press 2 abc Keypad.
- 6. Choose a setting, then press the OK Key .
 - 7 Seconds/ 15 Seconds/ 30 Seconds/ Always On/ Always Off

3.3 Wallpaper

Allows you to download new Wallpaper. Use this menu when you want to get another wallpaper other than the default wallpapers in Display Settings -> Wallpaper menu.

- 1. Press the OK Key ⊚.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 3 def Display Settings.
- 4. Press 3 def Wallpaper.
- Select My Pictures/ My Videos/ Fun Animations.
- 6. Use the navigation Wheel to select an image and press the OK Key ⊚ to view the image. (Once an image is displayed, you can use your navigation Wheel to scroll through and view the other default images.)
- 7. Press the OK Key (to assign the desired image.

3.4 Display Themes

Allows you to choose the color of the background screen.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 3 def Display Settings.
- 4. Press 4 ghi Display Themes.
- Use the Navigation Wheel to select a setting, then press the OK Key
 .

Rhythm & Blues/ Rock & Roll

6. Touch the Left Soft Key View to preview the selected display theme.

Settings

3.5 Clip Board

Allows you to set clip board to be displayed in standby mode. The selected theme is displayed when spinning the navigation wheel.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key ①.
- 3. Press 3 def Display Settings.
- 4. Press 5 M Clip Board.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key .

Off/ Classic/ Diary/ Modern

Touch the Left Soft Key View to preview.

3.6 Dial Fonts

Allows you to set the dial font

size. This setting is helpful for those who need the text to display a little bit larger.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key ①.
- 3. Press 3 def Display Settings.
- 4. Press 6 mo Dial Fonts.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key ①.

Normal/Large

6. Touch the Left Soft Key **View**.

3.7 Clock Format

Allows you to choose the kind of clock to be displayed on the LCD screen.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key ①.
- 3. Press 3 def Display Settings.
- 4. Press 7 pars Clock Format.
- 6. Touch the Left Soft Key View to preview the selected clock format.

3.8 Time Format

Allows you to choose the format of time displayed on the clock of your phone.

1. Press the OK Key 🔘.

- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 3 def Display Settings.
- 4. Press 8 tuv Time Format.
- 5. Select 12 Hours or 24 Hours.
- 6. Press the OK Key ①.

4. Games & Apps

4.1 Backlight Settings

Allows you to set the duration for illuminating the backlight.

- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 4 9hi Games & Apps.
- 4. Press 1 Backlight Settings.

Settings

 Use the Navigation Wheel to select a setting, then press the OK Key to save the change.

7 Seconds/ 15 Seconds/ 30 Seconds/ Always On/ Always Off

4.2 Volume

Allows you to set volume settings.

- 1. Press the OK Key

 O.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key ①.
- 3. Press 4 ghi Games & Apps.
- 4. Press 2 abc Volume.

4.3. Notifications

Allows you to set notification settings.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 4 ghi Games & Apps.
- 4. Press 3 def Notifications.
- 5. Select a sub-menu and press the OK Key ①.

Voicemail/ Messages

 Use the Navigation Wheel to set the alert setting, then press the OK Key to save the change.

On/Off

4.4 Others

Displays or deletes the list of files created by downloaded JAVA contents.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 4 ghi Games & Apps.
- 4. Press 4 ghi Others.

5. Phone Settings

The Phone Settings Menu allows you to designate specific settings to customize how you use your phone.

5.1 Airplane Mode

Allows you to use the menu functions except making calls, Bluetooth® feature, and web accessing, when radio

transmission is restricted.
Activating Airplane Mode will
disable all wireless
communications. When in
Airplane Mode, services
supporting Location On
functionality will be suspended.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key ①.
- 3. Press **5** Phone Settings.
- 4. Press 1 and Airplane Mode.

On/ Off

5.2 Set Shortcut Keys

Allows you to set a shortcut to phone menus using the down, left and right Navigation Keys.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key ①.
- 3. Press 5 Phone Settings.
- 4. Press 2 set Shortcut Keys.
- 5. Use the Navigation Wheel (to select a setting, then press the OK Key (...).

Left Key/ Right Key/ Down Key

6. Select the shortcut, then touch the Left Soft Key **Set**.

5.3 Slide Auto Lock

Allows you to set the phone to automatically lock when the slide is closed, thereby requiring you to unlock your phone before using.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 5 M Phone Settings.
- 4. Press 3 def Slide Auto Lock.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key .

On/Off

5.4 Voice Commands

Allows you to set Voice Commands using the following options equipped with AVR(Advanced Voice Recognition).

- 1. Press the OK Key 🔘.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .

- 3. Press 5 Phone Settings.
- 4. Press 4 9hi Voice Commands.

Prompts Mode/ Audio
Playback/ Timeout
For Mode, set Prompts/
Readout/ Tones Only. For Audio
Playback, set Speakerphone or
Earpiece. For Timeout, set 5
seconds or 10 seconds.

Call Alert Ring Only/ Caller ID + Ring/ Name Repeat

5.5 Language

Allows you to set the bilingual feature according to your preference. Choose either English or French.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .

- 3. Press 5 N Phone Settings.
- 4. Press 5 KI Language.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key .

English/ Français

5.6 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 5 Phone Settings.
- 4. Press 6 mno Location.

5. Use the Navigation Wheel to select a setting, then press the OK Key .

Location On/ E911 Only

Notes

- GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors, etc.
- When a location lock mode is activated in the Security Menu, the lock code is required when you enter location menu. The lock code is the same 4 digits you use as your device lock code; initially the last 4 digits of your phone number.

5.7 Security

The Security menu allows you to secure the phone electronically.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel

- oto scroll to **Settings**, and press the OK Key o.
- 3. Press 5 Phone Settings.
- 4. Press 7 pars Security.
- 5. Enter the four-digit lock code. The lock code is the last 4 digits of your mobile phone number if it is set. The lock code is 1234 if your mobile phone number is not set.

5.7.1 Edit Codes

Allows you to enter a new four-digit lock code.

- 1. Press the OK Key ①.
- Use the Navigation Wheel
 to scroll to Settings,
 and press the OK Key ...
- 3. Press 5 № Phone Settings.
- 4. Press 7 Pars Security.

- Enter the four-digit lock code.
- 6. Press 1 Edit Codes.
- For confirmation, it will ask you to enter the new lock code again.

5.7.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls, Messages, and Dial Up Modem.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 5 M Phone Settings.
- 4. Press 7 pars Security.
- 5. Enter the four-digit lock code.
- 6. Press 2 abc Restrictions.

- 7. Enter the four-digit lock code.
- 8. Select a Restrictions menu then press the OK Key ①.
- Use the Navigation Wheel
 to set restriction then press the OK Key ⊙.

Location Setting Lock Setting/ Unlock Setting

Calls Incoming Call/ Outgoing Call

Messages Incoming Call/ Outgoing Call

Dial-up Modem Allow All/ Block All

5.7.3 Phone Lock

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock

code using Edit Codes submenu within the Security menu.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key ...
- 3. Press 5 N Phone Settings.
- 4. Press 7 pars Security.
- 5. Enter the four-digit lock code.
- 6. Press 3 def Phone Lock.
- 7. Select an option then press the OK Key ⊚.

Unlocked The phone is never locked (Lock mode can be used).

On Power Up The phone is locked when it is turned on.

- 5.7.4 Camera Lock
- 1. Press the OK Key ①.

- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key and
- 3. Press 5 ⋈ Phone Settings.
- 4. Press 7 pars Security.
- 5. Enter the four-digit lock code.
- 6. Press 4 9hi Camera Lock.
- 7. Select an option then press the OK Key ②.

On/Off

- 5.7.5 Lock Phone Now
- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 5 № Phone Settings.
- 4. Press 7 pars Security.

- 5. Enter the four-digit lock code.
- 6. Press 5 Lock Phone Now.

5.7.6 Reset Default

Allows you to reset your phone to the factory default settings.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 5 Phone Settings.
- 4. Press 7 pars Security.
- 5. Enter the four-digit lock code.
- 6. Press 6 mo Reset Default.
- Press the OK Key after reading the warning message.

8. Use the Navigation Wheel
 to select a Revert,
 then press the OK Key
 A confirmation message is
 displayed briefly before the
 phone resets itself.

5.8 System Select

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 5 Phone Settings.
- 4. Press 8 tuv System Select.

5. Use the Navigation Wheel to select a setting, then press the OK Key .

Home Only/ Automatic

5.9 NAM Select

Allows you to select the phone's NAM (Number Assignment Module).

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to **Settings**, and press the OK Key .
- 3. Press 5 Phone Settings.
- 4. Press 9 WAY NAM Select.
- 5. Use the Navigation Wheel (5) to select a setting, then press the OK Key (6).

NAM1/NAM2

5.10 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 5 H Phone Settings.
- 4. Press 0 Auto NAM.
- 5. Use the Navigation Wheel (5) to select a setting, then press the OK Key (6).

On/Off

5.11 Data/Fax

Allows you to use your phone to transmit data and faxes.

1. Press the OK Key (a).

- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 5 M Phone Settings.
- 4. Press * Data/Fax.
- 5. Use the Navigation Wheel (5) to select a setting, then press the OK Key (6).

Off/ Fax In Once/ Fax In Always/ Data In Once/ Data In Always

5.12 Serving System

Identifies the channel number of a system that is served and an SID Number. This information is only for technical support.

- 1. Press the OK Key

 .
- 2. Use the Navigation Wheel
 to scroll to Settings, and
 press the OK Key .

- 3. Press 5 Phone Settings.
- 4. Press # B Serving System.

6. Call Settings

The Call Settings Menu allows you to designate how the phone handles both incoming and outgoing calls.

6.1 Answer Options

Allows you to determine how the phone will answer an incoming call.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel
 to scroll to Settings, and
 press the OK Key .
- 3. Press 6 mno Call Settings.
- 4. Press 1 a Answer Options.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key ⊚.

Slide Up/ OK Key/ Auto with Handsfree

Note

Auto with Handsfree is available only when any external device is connected to your phone.

6.2 End Call Options

Allows you to determine how the phone will disconnect a call.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 6 Call Settings.
- 4. Press 2 abc End Call Options.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key .

Slide Down/ OK Key

6.3 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

- 1. Press the OK Key 🔘.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 6 mo Call Settings.
- 4. Press 3 def Auto Retry.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key .

Off/ Every 10 Seconds/ Every 30 Seconds/ Every 60 Seconds

6.4 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel oto scroll to Settings, and press the OK Key .
- 3. Press 6 mo Call Settings.
- 4. Press 4 ghi TTY Mode.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key .

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

TTY Full:

 Users who cannot talk and hear send and receive a text message through TTY equipment.

TTY + Talk:

 Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

TTY + Hear:

 Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

TTY Off:

 Users who can able to both talk and hear send and receive voice and messages without TTY equipment.

Connecting TTY Equipment and a Terminal

- Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
- 2. Enter the phone menu and set up the desired TTY mode.
- After setting a TTY mode, check the LCD screen of the phone for the TTY icon.

- 4. Connect the TTY equipment to the power source and turn it on.
- 5. Make a phone connection to the desired number.
- When connection is made, use the TTY equipment to type in and send a text message or send voice.
- The voice or text message from the receiver end displays on the TTY equipment display.

TTY Mode (Tele Type writer)

Menu	User	Feature	Transmission/ Receiving Mode	When making communications with a normal terminal
TTY Full	For hearing-/ verbally- impaired		text message transmission, text message receiving	Operator required
TTY + Talk	For hearing- impaired	able to talk	voice transmission, text message receiving	Operator required
TTY + Hear	For verbally- impaired	audible	text message transmission, voice receiving	Operator required
TTY Off	Users able to both talk and hear		voice transmission, voice receiving	

6.5 One Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 6 mo Call Settings.
- 4. Press 5 M One Touch Dial.
- Use the Navigation Wheel to select a setting, then press the OK Key
 .

On/Off

6.6 Auto Prepend

This option will automatically prepend 1 when dialing 10 digit numbers. However 1 will not

prepend when dialing numbers that has less than 10 digits.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 6 mno Call Settings.
- 4. Press 6 mno Auto Prepend.
- 5. Use the Navigation Wheel to select a setting, then press the OK Key .

On/Off

6.7 Do Not Disturb

Allows you to ignore incoming calls during the data transfer.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .

- 3. Press 6 mo Call Settings.
- 4. Press **7** Por **Do Not Disturb**.
- 5. Read the disclaimer and press the OK Key ①.
- 6. Use the Navigation Wheel (5) to select a setting, then press the OK Key (6).

On/Off

Note

The Data Connection Kit allows you to connect your PC or PDA to your LG wireless phone, freeing you from having to locate a telephone outlet. You can send or receive an e-mail, a fax, or access the Internet anytime, anywhere (within coverage. See service provider for details).

7. Touch Keypad

Allows you to control the sensitivity level of the keypad keys on your phone.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 7 pars Touch Keypad.
- Select Sensor Level, Vibration or Sound.
- For Sensor Level, use the Navigation Wheel to scroll to a setting, then press the OK Key .
 Super/ High/ Medium/ Low
- For Vibration or Sound, use the Navigation Wheel the OK Key ⊚ to scroll to a setting, then press the OK Key ⊚.
 On/ Off

Note

A higher sensor level provides a larger surface area for your fingers to tap. In contrast, a lower touch sensitivity level has a smaller surface area.

8. Navigaton Wheel

8.1 Speed

Allows you to determine speed at which the Navigation Wheel reacts.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel
 to scroll to Settings, and
 press the OK Key .
- 3. Press 8 tuv Navigaton Wheel.
- 4. Press 1 Speed.
- 5. Use the Navigation Wheel
 to scroll to a setting,
 then press the OK Key .

High / Medium / Low

8.2 Sound

Allows you to set the phone to sound a tone when the navigating wheel is in use.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel

 to scroll to **Settings**, and press the OK Key .
- 3. Press 8 tuv Navigaton Wheel.
- 4. Press 2 abc Sound.
- 5. Use the Navigation Wheel

 to scroll to a setting,
 then press the OK Key

On/Off

8.3 Light

Allows you to customize the light of wheel according to Trace Motion, Power On/Off and Incoming Call.

1. Press the OK Key ①.

- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 8 w Navigaton Wheel.
- 4. Press 3 def Light.
- 5. Use the Navigation Wheel to scroll to a setting, then press the OK Key .

Trace Motion/ Power On/Off/ Incoming Call

9. Memory

Allows you to check your LG 8550 internal phone memory as well as the microSD external memory.

The LG 8550 can access the following file types stored on the removable microSD card. Where the memory card is formatted:

Menu > Settings > Memory > Card

Memory > Options > Format

Folders will are created upon initial launch of the application. For instance, to create the my_music folder, launch TELUS mobile music

Memory Usage :Total Used / Available

My Pictures: png, jpg, bmp, gif

My Videos: 3gp, 3g2

My Music: mp3, sdc, qcp

My Sounds: mid, aac, mp3, amr, qcp (used for MMS, cannot be set as ringtones)

9.1 Save Options

Allows you to select which memory (phone or memory card) to use to save your files.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel

- ⊚ to scroll to **Settings**, and press the OK Key ⊚.
- 3. Press 9 wayz Memory.
- 4. Press **Save Options**.
- Select Pictures/ Videos/
 Sounds then press the OK
 Key (a).
- Select Phone Memory/ Card Memory then press the OK Key .

9.2 Phone Memory

Shows the memory information saved in your phone.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 9 wxyz Memory.
- 4. Press 2 abc Phone Memory.

5. Select Memory Usage/ My Pictures/ My Videos/ My Music/ My Sounds then press the OK Key ②.

9.3 Card Memory

Shows the memory information saved in the card.

- 1. Press the OK Key ①.
- 2. Use the Navigation Wheel

 to scroll to **Settings**, and press the OK Key .
- 3. Press 9 wyz Memory.
- 4. Press 3 def Card Memory.
- Select Memory Usage/ My Pictures/ My Videos/ My Music/ My Sounds then press the OK Key .

10. Phone Info

The Phone Info Menu provides you with specific information pertaining to your phone model.

10.1 My Number

Allows you to view your phone number.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press **▶** Phone Info.
- 4. Press 1 My Number.

10.2 SW/HW Version

Allows you to view the versions of SW, PRL, Browser, AVR, MMS, *Bluetooth*, HW, MEID.

1. Press the OK Key

.

- 2. Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press 0 Phone Info.
- 4. Press 2 abc SW/HW Version.

10.3 Icon Glossary

Allows you to view all the icons and their meanings.

- 1. Press the OK Key ①.
- Use the Navigation Wheel to scroll to Settings, and press the OK Key .
- 3. Press **→ Phone Info**.
- 4. Press 3 def Icon Glossary.

TIA (Telecommunications Industry Association) Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) *
- NCRP Report 86 (1986)
- ICNIRP (1996)
- Health Canada, Safety Code 6, 1999.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas.

modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not press the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in

the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -driving safely is your first responsibility;
- Use hands-free operation, if available:
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry
Manufacturers Association
recommends that a minimum
separation of six inches be
maintained between a handheld
wireless phone and a pacemaker
to avoid potential interference
with the pacemaker. These
recommendations are consistent
with the independent research
by and recommendations of
Wireless Technology Research.

Persons with Pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;

 Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC and Transport Canada regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is

improperly installed and the air bag inflates, serious injury could result.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery by fire or with hazardous or flammable materials.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or shortcircuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to

- maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's guide in an accessible place at all the times after reading it.

Explosion, Shock, and Fire Hazards

 Unplug the power cord and charger during lightning storms to avoid electric shock or fire.

- Make sure that no sharpedged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
- Do not use harsh chemicals(such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the

- power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it

- may short-circuit the phone and/or cause electric shock or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone.
 Always cover the receptacle when not in use.
- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may shortcircuit the + and - terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never place your phone in a microwave oven as it will cause the battery to explode.

General Warnings and Cautions

- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Store the battery in a place out of reach of children.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Do not hold or let the antenna come in contact with

- your body during a call.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight

- burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not press the antenna unnecessarily.

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone

and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your

phone, see the features guide for your phone.

Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

FDA Consumer Update



The U.S. Food and Drug Administration's

Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the Main Menu Screen. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiationemitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if

wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones.
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and cooperate in

providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health

participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure.

The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety

questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to handheld wireless phones with built-in antennas, often called "cell", "mobile", or "PCS" phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance

from the source. The so called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could

accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or

acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to

provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop

a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIAfunded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Flectrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and

Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (http://www.fcc.gov/oet/ rfsafety) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is

developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the

same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key

factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no

evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for

the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Flectrical and Flectronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the

same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (http://www.fda.gov/cdrh/phones/index.html)

Federal Communications Commission (FCC) RF Safety Program (http://www.fcc.gov/oet/rfsafety)

International Commission on Non-Ionizing Radiation Protection

(http://www.icnirp.de)

World Health Organization (WHO) International EMF Project (http://www.who.int/emf)

National Radiological Protection Board (UK) (http://www.nrpb.org.uk/)

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish

permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg*. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest

certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.13 W/kg and

when worn on the body, as described in this user guide, is 0.528 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC/IC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission. guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID BEIVX8550. Additional information on Specific

Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at http://www.ctia.org.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately. Accessories available at www.telusmobility.com.

Charger



Batteries



Stereo Headset



Cigarette Lighter Charger



Warranty Information

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it

is in Canada.

- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
- (6) LG may, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

Warranty Information

2. WHAT THIS WARRANTY DOES NOT COVER:

- Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.

- (4) If the carrier's or manufacturer's Customer Service Centre was not notified by the end user of the alleged defect or malfunction of the product, during the warranty period.
- (5) Products which have had their serial numbers removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (8) Products serviced by nonauthorized persons or companies.

Notes:

- (1) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
- (2) Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT.

INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada: LG Electronics Canada, Inc. Tel. 1-888-542-2623