

L C D MONITOR 
T M E 1 7

 **TATUNG**
USER MANUAL

TABLE OF CONTENTS

Important Safety Instructions	1
Product Introduction	3
General information.....	3
Features.....	3
Listing.....	5
Installation & Connection	6
Front Panel Control Keys	7
Basic Operation Instruction	8
Power On/Off.....	8
Signal Source Selection.....	8
Menu Operation Instruction.....	8
PICTURE.....	9
SOUND.....	10
OSD.....	11
Simple Troubleshooting	12

Important Safety Instructions

Thank you to choose the monitor made by our company, a valuable product with excellent quality and multiple functions. This machine will bring you more audiovisual enjoyment. Its design can insure user's safety. All machine are strictly tested before leaving factory. But incorrect use can lead to electric shock or fire. In order to insure safety and extend its life, please read below regulations carefully before using it and comply with the following safety instructions.

- 1) Read the manual and marking label before using the machine, and keep the user manual for later use.
- 2) There is high voltage inside the machine, follow all the warnings and instructions strictly on the manual.
- 3) Don't use the attachments which are not recommended by the machine manufacturer as they may cause hazards.
- 4) The power cord must be placed correctly so as to avoid be trample or crush.
- 5) Please do not make the power socket overloaded or the power cord extended. Otherwise it will cause fire or electrical shock.
- 6) If you are going to pull out the power cord from this product, please dry your hands, pull the cord by grasping the plug. Never pull the cord itself.
- 7) If you will not use the machine for a long time, please pull out the power cord. Do not keep the sleeping mode for too long time.
- 8) Please put this machine in the place of well ventilation instead of extremely hot, cool or moist, and direct sunshine.
- 9) The slots on the case is designed to release heat so as to assure that all inside components will not reach an extra high temperature and can work normally for a long time. Please do not cover the holes while place it. Don't place the machine near or over heat source or place in built-in installation.
- 10) The power cord must be taken off before you clean the machine. Don't use the liquid cleanser or aerosol cleanser. It is recommended to use a wet soft cloth to clean the machine. Don't use the alcohol, impregnant or ammoniac liquid to wipe the screen.
- 11) Please don't place it on an unstable position so as to avoid falling off.
- 12) Don't place the monitor near water source, like a bathtub, pool, washing machine, or moist cellar and similar environment.
- 13) The LCD panel is fragile and expensive. The surface of the panel is easy to be scratched. Please don't use the hard thing to knock, press, score the panel. Otherwise it will be harmful for the panel. The exchange cost is very high.

- 14) There is high voltage inside the machine but no parts which can be repaired by users themselves. In order to assure the people's safety, please don't open the case to repair it by yourself. If it is needed to repair, please contact qualified engineer to repair.
- 15) All cables can be connected or pull out only after power supply is turned off.
- 16) During a thunder rain weather, do not touch the power cord and antenna cable.
- 17) When the following troubles occur, please pull out the plug and call the professional engineers to repair.
 - A. The cable or plug is damaged.
 - B. The product was fallen down or the case is damaged.
 - C. Obvious abnormal situation occurs. In spite of correct operation according to the user manual but it still can't work normally.
 - D. Some abnormal substances or liquid fall into it.
 - E. Unusual sound or smell sends out.
- 18) When the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 19) The machine should not suffer from waterdrop or watersplash, do not place the vessel with water (or other liquids) on it, for like this it is possibly to cause fire or electric shock.
- 20) The attaching plug should be inserted into the power point completely, otherwise it may cause spark to bring fire.
- 21) Please do not put candle, ash-tray, incense, inflammables or explosive nearby this machine.
- 22) Please do not stretch into any sharp object, metal or liquid, or touch the signal attachment or the inner of radiation hole, in order to avoid short circuit and product damage, or possibly causing electric shock. Especially pay attention when there are children on the spot.
- 23) Please don't use the machine immediately when moving the machine from low temperature place to high temperature one, or install and use at the place of facing air conditioning, otherwise it may cause the condensation in the machine, to cause fault.
- 24) Must be careful when moving this machine, avoiding being struck, especially pay attention to protect the screen part. In addition, if using handcart, must note the injury as the product is overturned from the handcart because of hard braking, overexerting and uneven ground.

Product Introduction

General information

- Having many ideal connectors. The product can be used as a computer monitor with VGA or HDMI connectors.
- Much faster response time will completely eliminate shadow of picture. seeing film and playing game may be more fluent.
- Enough colours.
- Wider viewing angle, higher brightness, higher contrast, lower consumption.
- Intelligent image mode and sound mode can offer you intelligent audiovisual effect.
- Built-in the latest digital comb filter, which makes image more clear. The internal 3D De-Interlace technique can totally eliminate the screen dithering caused by interlace signals.
- Own perfect timing functions, you can set time to turn off. It will be turned off in state of no signals, too.
- Auto-setup function help you set the image to best performance in several seconds in PC mode.
- Auto color balance adjustment technology takes your machine to the best color setting for all different kinds of display adapters in PC mode.
- Automatic denoise technique can greatly eliminate background noise caused by menu interference and the noise caused by weak signals so as to make the picture on the screen clear.

Features

- interface specification:

Interface	Specification
VGA	DB-15, 75 Ω 0.5~0.7Vp-p H/V:TTL Level (Support mode refer to VGA Input Mode)
HDMI	Video signal: 1080p, 1080i, 720p, 576p, 576i, 480p, 480i Audio: LPCM 48KHz, 44.1KHz, 32KHz, 24Bit, 20Bit, 16Bit

Video/BNC Input	75 Ω 1Vp-p
Audio Input	75 Ω Imbalance

● The Technical Specifications for Final Product

Panel size	17"	19"
Max. Resolution	1280 \times 1024	1280 \times 1024
Best resolution	1280 \times 1024@60Hz	1280 \times 1024@60Hz
Pixel pitch	0.264mm \times 0.264mm	0.294mm \times 0.294mm
Active area	337.920mm \times 270.336mm	376.320mm \times 301.056mm
Power adapter	100-240V 60/50Hz	100-240V 60/50Hz
Unpacking Dimension(L \times W \times H)	395 \times 70 \times 390(mm ³)	434 \times 70 \times 420(mm ³)
Packing Dimension(L \times W \times H)	455 \times 128 \times 420(mm ³)	495 \times 128 \times 450(mm ³)
Net weight	4.0kg	4.5kg
Gross weight	5.5kg	6.0kg

● VGA input mode

S/N	Mode	Resolution	Refresh(Hz)	Available Input Signal
1	VGA	720 × 400	70	VGA
2		640 × 480	60	VGA
3	SVGA	800 × 600	60	VGA
4	XGA	1024 × 768	60	VGA
5		1280 × 960	60	VGA
6	SXGA	1280 × 1024	60	VGA

Note: Recommended mode: 1280 × 1024 @60Hz

● Working Environment:

Atmosphere pressure: 86kPa ~ 104kPa Temperature: 5℃ ~ 40℃ Humidity: 10% ~ 85%

● Storage Environment:

Atmosphere pressure: 86kPa ~ 104kPa Temperature: -20℃ ~ 55℃ Humidity: 5% ~ 95%

● Power supply: Comply with EPA standard, compatible with VESA DPMS standard.

Mode	PowerLED Indicator	Power consumption	
		17"	19"
On	Green or blue	≤40W	≤45W
Off	Off	≤1W	≤1W

Note: This specification is subject to change without notices. If there are differences between manual and real operation, please do according to real operation.

Listing

Please make sure that all of the following items are complete:

- Monitor (Include base) ● User manual ● Power cord

If any of above listed items is missing, please contact your dealer or our service department.

 
 
Installation & Connection

Power Connection

Plug one end of the power cord into the input port of the machine's power supply and then insert the other end into the socket of the electrical source (AC 100V-240V, 60/50Hz).



Notes:

1. When connecting the power cord, be sure to turn off the machine and other equipment's power.
2. If a long time at leisure, please disconnect it from power supply.
3. This monitor must be connected to a three pin socket outlet for safety.

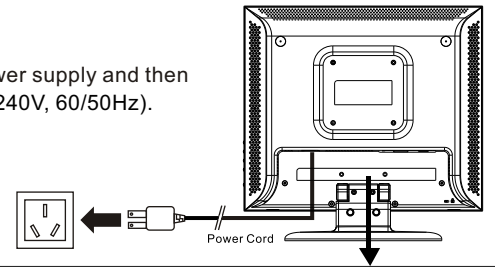

Base installation

  1. After taking the monitor out of the carton, carefully turn the monitor on front side.
2. Align the base with the knighthead of the monitor and push the base in the direction of arrows until the fasteners both on the knighthead and the base are well connected.
3. Insert the plastic pin into the base in the direction of arrow, then use screwdriver to lock the bolt firmly.

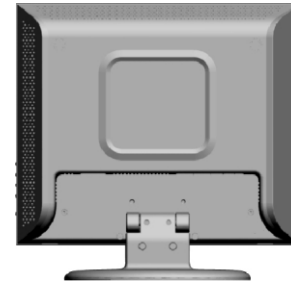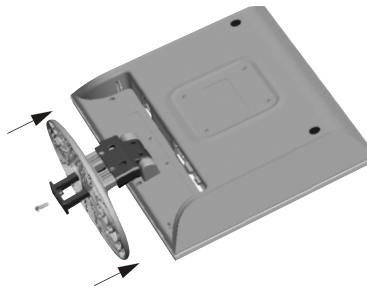

Note: Remove the base by the contrary order above.

 
Basic Operation Instruction

Power On/Off

Press "⏻" key to turn the monitor on or off.

Signal Source Selection

Press "AUTO" key, menu of signal source will be displayed on the screen. Then press "+/-" key to choose the signal source such as BNC, AV, PC, HDMI. Press "↵" key and the monitor will switch the current signal source to the signal source you choose.

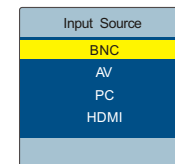

Menu Operation Instruction

Press "⏻" key, the monitor will display the main menu.

1. Press "+/-" key to select the adjustment sort menu, which includes 3 sorts: PICTURE, SOUND, OSD.
2. Press "AUTO" key to enter the adjustment sort menu and select what is needed to adjust item.
3. Press "+/-" key to adjust the value or setting.
4. Press "↵" key to exit the main menu when the monitor displays the Main Menu; Press "↵" key to return to previous menu when the monitor displays the submenu; Press "AUTO" key to display the signal source menu or exit signal source menu.
5. During the operation, the selections which can not be adjusted at current mode will be hidden automatically and the color of the selections will be changed into gray.
6. Menu Operation Instruction in this manual is explained according to BNC mode. The operations in other modes are similar to the one in BNC mode. Users can take it as reference.



Wall Mounting with VESA Standard

1. Loosen the two bolts with a screwdriver. Then the base and the knighthead can be taken off. In order to prevent the two bolts from loose, it is better to assemble the bolts into the axis of rotation on the rear cover of the monitor.
2. Clean up the signal cable, power cord, audio cable.
3. Fix the wall-mounting parts (optional parts according with VESA standard) on the rear cover to mount the monitor on the wall.

 
Note: ● Installation method is different because of Hanging arm hardware's structure.

- Must install the wall pendant on firm wall surface, please do not install this machine on ceiling or vehicles.




Front Panel Control Keys

1. **AUTO**: Press this key to display signal source menu. In OSD menu, press this key to enter the adjustment sortmenu, and select the items you want to adjust.
2. **-**: Decreases the volume. In OSD menu, press this key to select sort menu, adjust analog value or state in sort menu.
3. **+**: Increases the volume. In OSD menu, press this key to select sort menu, adjust analog value or state in sort menu.
4. **⏻**: Activates and exits the On Screen Display. When you are satisfied with the setting, press "⏻" key to return to the previous menu or exit. Also, on the Source Menu, press "⏻" key to enter the selected video input.
5. **⏻**: Turns on/off the monitor.

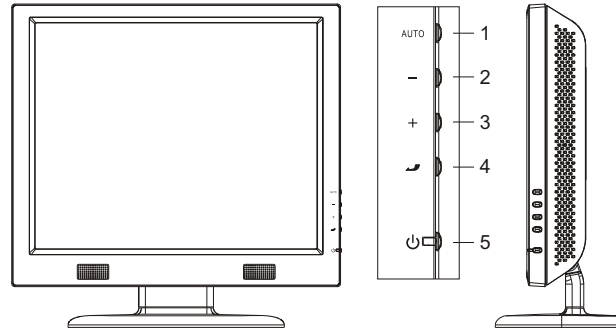

Note: There are some apparent differences between modes, please according to practicality.

PICTURE

Select  to display PICTURE submenu. Press "AUTO" key to enter into the submenu and select the item which you need to adjust. Press "+/-" key to adjust analog value or state (see below table).


★Special Attention

The value adjusted by user, such as Contrast, Brightness, Saturation, Hue, and Sharpness will be saved automatically by the machine as personal mode.




Option	Function	Description
Picture Mode	Select picture mode	"Standard", "Soft", "User", "Bright" four modes.
Contrast	Adjust the contrast of whole picture	Increasing analog value increases Contrast; Decreasing analog value decreases Contrast(0-100).
Brightness	Adjust brightness and blackness of whole picture	Increasing analog value increases brightness; Decreasing analog value decreases brightness(0-100).
Saturation	Adjust the saturation of whole picture	Increasing analog value increases color; Decreasing analog value decreases color (0-100).
Hue	Adjust the hue of whole picture	Increasing analog value increases green; Decreasing analog value increases purple(0-100).
Sharpness	Adjust the sharpness of whole picture	Increasing analog value increases definition; Decreasing analog value decreases definition (0-100).
Aspect Ratio	Select picture scale	"Full", "4:3", "Subtitle", "Film" four modes
Color Temp	Select color temperature mode of the picture	There are three Color Temperature modes: "Standard", "Warm", "Cool".
Noise Reduction	Select model of 3D NR	"Middle", "High", "Off", "Low".

SOUND

Select  to display SOUND submenu. Press "AUTO" key to enter into the submenu and select the item which you need to adjust. Press "+/-" key to adjust analog value or state (see below table).


★Special Attention

 
1. Normally, 50 value of adjustment is recommended;
2. The treble or bass analog value which is adjusted by the users will be saved as the personal mode by the machine

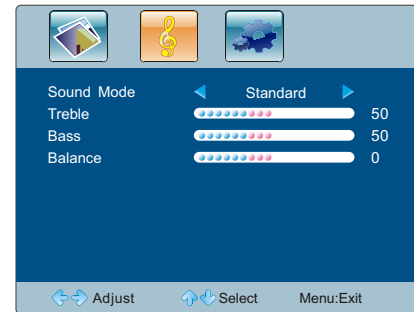

Option	Function	Description
Sound Mode	Adjust audio effect mode	"Standard", "Music", "Movie", "User" four modes.
Treble	Adjust treble value	Increasing analog value increases treble; Decreasing analog value decreases treble (0-100).
Bass	Adjust bass value	Increasing analog value increases bass; Decreasing analog value decreases bass (0-100).
Balance	Adjust balance of left or right sound	Increasing analog value decreasing left volume; Decreasing analog value decreases right volume(L50-R50).

OSD

 Select  to display OSD submenu. Press "AUTO" key to enter into the submenu and select the item which you need to adjust. Press "+/-" key to adjust analog value or state (see below table).

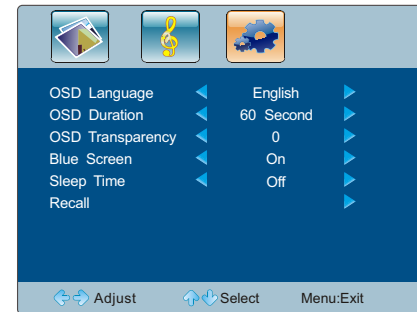

Option	Function	Description
OSD Language	Select language for OSD display	There are many languages to select
OSD Duration	Adjust duration of OSD menu	Increasing analog value, extend duration time of OSD menu; (15, 30, 45, 60). Unit: second
OSD Transparency	Adjust halftone of OSD menu	Increasing analog value increases halftone; Decreasing analog value decreases halftone(0-100).
Blue Screen	Open or close blue screen	"On/Off", two states.
Sleep Time	Set sleep time of the machine	"Off, 15M, 30M, 45M, 60M,90M, 120M, 240M", unit: minute.
Recall	Resume to setting of factory	Reset all values to setting of factory.

Note: With the mode of AV, PC, HDMI, all functions and adjustments are similar with BNC. User can check it at convenience.

Simple Troubleshooting

Symptom	Factor	Solution
No image. No sound.	Power plug is loose, power cord don't connect well.	1.Check power cord whether or not connect well. 2.Check if the "⏻" button is on.
No color.	Color saturation is too low.	Enter "PICTURE" to add up color saturation.
Computer no display, and prompt no signal input, red indicator LED twinkling.	Signal cable is loose or fall off.	Check signal cable whether or not loose, fall off, reconnect well again.
Computer display faintly.	1.Adjustment is incorrect. 2.Display mode is incorrect.	1.Use auto-adjustment function. 2.Use commend mode
Computer display image excursion, not full screen, over screen.	1.Adjustment is incorrect. 2.Display mode is incorrect.	1.Use auto-adjustment function. 2.Enter "GEOMETRIC" to adjust horizontal or vertical position. 3.Use recommended mode.
Noise Signals at turning off.	Electrical release at turning off.	It is normal.
Can not operate this machine .	Exterior influence, for example lightning, static electricity and so on, which are possibly to disturb the normal operation of this machine	Press "⏻" button to turn of f electrical source, then press "⏻" button to turn on the monitor again after 1-2 minutes.

CAUTION : Don't let your machine display the same picture for a long time, please set up a screen protection procedure. If a high contrast picture remains for along time, this picture will bring a 'leave shadow' in screen. Usually the 'leave shadow' will disappear gradually when you turn off the machine power. However, this trouble can't be repaired , Which isn't in range of warranty.