


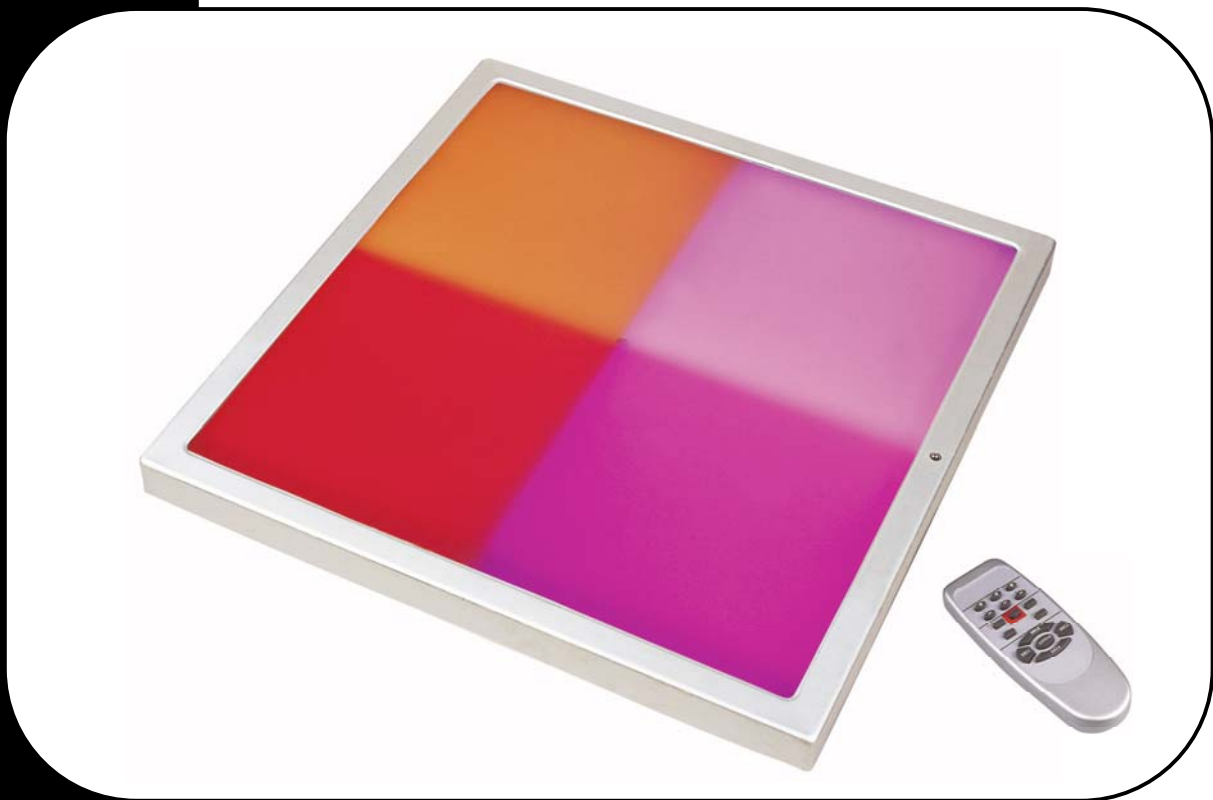

LED Deco-Tile Pro

ORDERCODE 41112



SHOWELECTRONICS FOR PROFESSIONALS

Congratulations!

You have bought a great, innovative product from Showtec.
The Showtec LED Deco-Tile Pro brings excitement to any venue.

You can rely on Showtec, for more excellent lighting products.
We design and manufacture professional light equipment for the entertainment industry.
New products are being launched regularly. We work hard to keep you, our customer, satisfied.
For more information: iwant@showtec.info

You can get some of the best quality, best priced products on the market from Showtec.
So next time, turn to Showtec for more great lighting equipment.
Always get the best -- with Showtec !

Thank you!



Showtec LED Deco-Tile Pro™ Product Guide

Warning..... 2
 Safety-instructions..... 2
 Operating Determinations..... 3
 Rigging..... 4

Description..... 5
 Features and Overview 5
 Backside..... 5

Set Up and Operation..... 6
 Stand-alone..... 6
 Controlled by DMX Controller..... 6
 DMX Setting of the Deco-Tile..... 7
 Candle Power Distribution..... 8
 Deco-tile structure and installation..... 8

Maintenance..... 9

Troubleshooting..... 9
 No Light..... 9

Product Specifications..... 10

WARNING




**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

SAFETY INSTRUCTIONS

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual

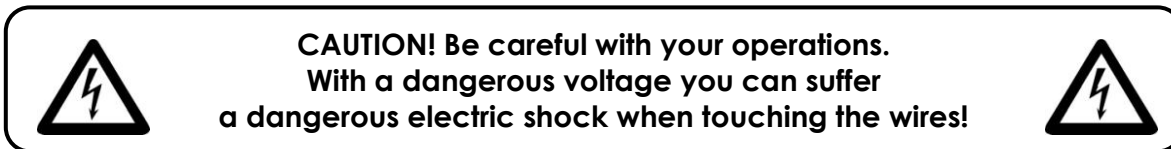

Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the device and do not modify the device.
- Do not connect this device to a dimmerpack.
- Do not shake the device. Avoid brute force when installing or operating the device..
- Never look directly into the light source.
- Never leave any cables lying around.
- Do not switch the device on and off in short intervals.
- Never use the device during thunderstorms, unplug the device immediately.
- Only use device indoor, avoid contact with water or other liquids.
- Avoid flames and do not put close to flammable liquids or gases.
- Only operate the device after having familiarized with its functions.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Only install the LED Deco-Tile Pro with the hanging-bracket.
- Make sure that the available voltage is not higher than stated on the rear panel.

- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- Make sure that no side forces can impact on the truss system.
- The cable insert or the female part in the device must never be strained. There must always be sufficient cable to the device. Otherwise, the cable may be damaged which may lead to deadly electrical shocks.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Lighteffect must be installed out of the reach of children. Never leave the unit running unattended.
- The user is responsible for correct positioning and operating of the LED Deco-Tile Pro. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



OPERATING DETERMINATIONS

This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.

The minimum distance between light-output and the illuminated surface must be more than 0,5 meters.

The maximum ambient temperature $t_a = 45^\circ\text{C}$ must never be exceeded.

The relative humidity must not exceed 50 % with an ambient temperature of 45°C .

If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.

Any other operation may lead to dangers like short-circuit, burns, electric shock, lamp explosion, crash etc.


You endanger your own safety and the safety of others!

Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NUL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!

Improper installation can cause serious damage to people and property !

Description of the device

Features

The LED Deco-Tile Pro is a fabulous LED Lighteffect from Showtec.

- Never change lamps again!
- Each element is divided into 4 sections.
- Dimensions 50 x 50cm
- Topcover of the LED Deco-Tile Pro is made of strong plastic.
- Plug-&-Play

Overview

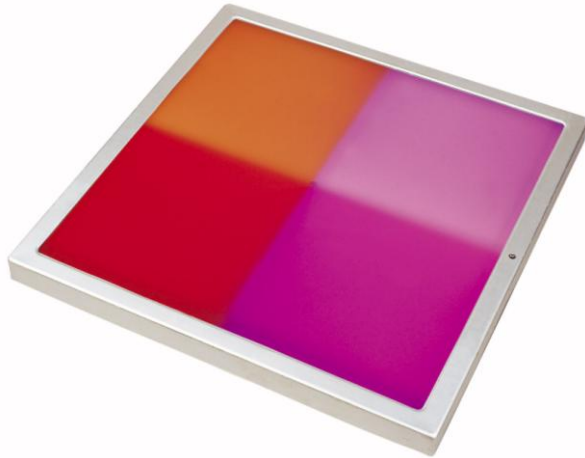


Fig. 1

NOTE: It is not possible to connect a LED Deco Tile Pro 240V (41112) to a LED Deco Tile Basic 24V (41111).

Backside



Fig. 2

- 1) Master/Slave Switch
- 2) DMX IN
- 3) DMX OUT
- 4) LED Display



Powercable Deco Tile Pro

Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

**Always disconnect from electric mains power supply before cleaning or servicing.
Damages caused by non-observance are not subject to warranty.**

CONNECTION

The LED Deco uses a 2 pins extendable connector as its power cord connector, while its DMX signal wire uses a 8 pins crystal network plug (RJ-45).

There are two ways to connect them:

- Controlled with remote control (Fig. 3)
- Controlled by DMX controller (Fig. 4)

Controlled with remote control

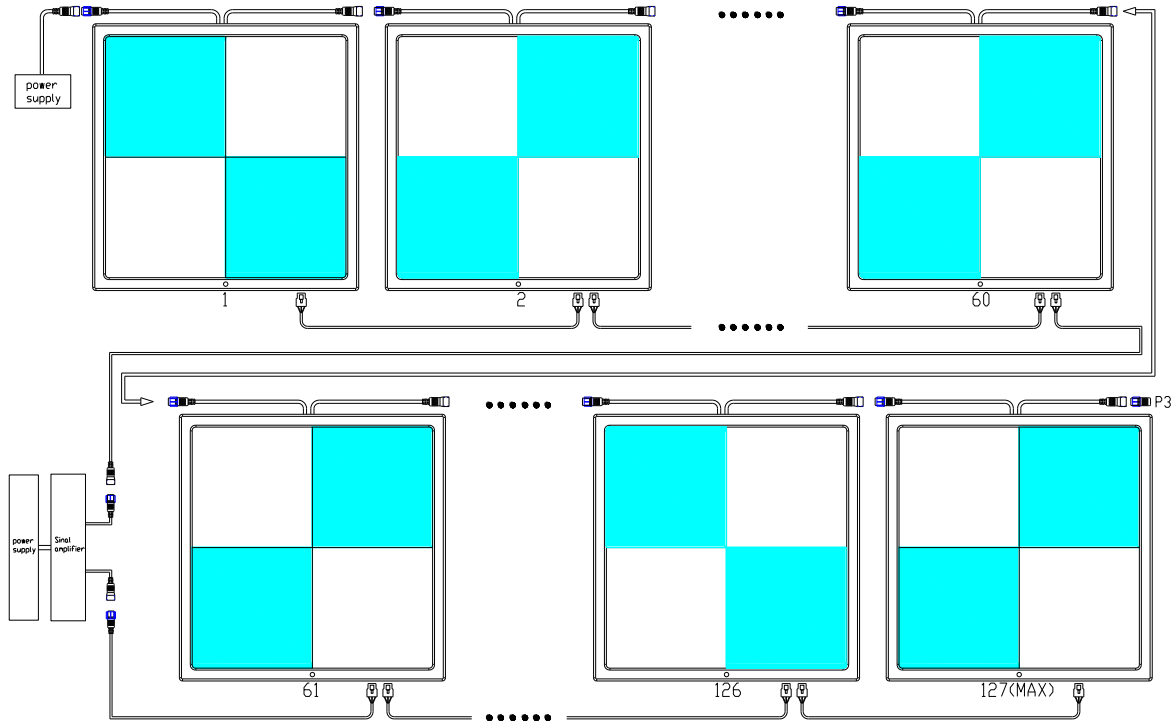


Fig. 3

Connect the first LED Deco-Tile to the second one using the signal link cable (the first Tile is the master and the others are the slaves). Connect the first Tile to the power source with the supplied cable. Connect the rest of the Deco-Tiles to each other by linking the powercords and signal wires. After every 60 Deco-Tiles you have to use an extra powersupply. The power outlet of the last fixture must be covered with endcap for waterproof purpose. Each circuit can maximally connect 127 Deco-Tiles.

(Turn off all the power when connecting, and all the unconnected power-connectors should be covered with endcaps).

Controlled by DMX Controller

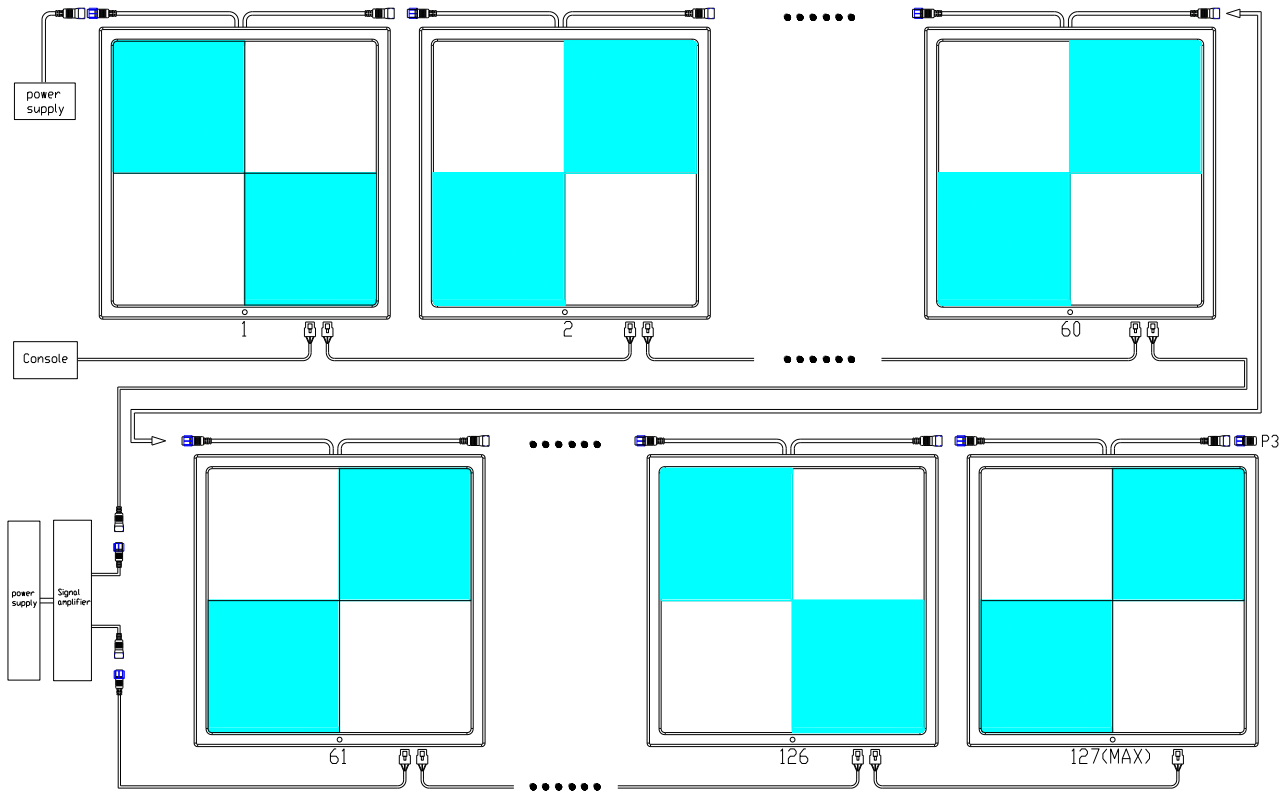


Fig. 4

Connect the first LED Deco-Tile with the supplied cable to the controller. Connect the first Deco-Tile to the second one using the signal link cable (the first Tile is the master and the others are the slaves). Connect the first Tile to the power source with the supplied cable. Connect the rest of the Deco-Tiles to each other by linking the powercords and signal wires. After every 60 Deco-Tiles you have to use an extra powersupply. The power outlet of the last fixture must be covered with endcap for waterproof purpose. Each circuit can maximally connect 127 Deco-Tiles.
(Turn off all the power when connecting, and all the unconnected power-connectors should be covered with endcaps).

DMX Setting of the Deco-Tile

- 1) When you only use the remote to control the panel, please turn the switch to MASTER (Fig. 5).
- 2) If you want to control the Deco-Tile by DMX, write the DMX address to the panel first. When you set the address to the panel you need to turn the switch to MASTER, and then push the ADDRESS SET Button (Fig.6-2) on the remote to set the address. You can use the "+" or "-" buttons (Fig.6-3) to increase or reduce the DMX address for the panel. After you have set the address, please press the ADDRESS SET Button again to confirm. During this operation please don't connect the panel to the DMX console. The address is the start channel for the panel.
- 3) After you have set the DMX address, please turn the switch to SLAVE and connect to the DMX console. Then it will be controlled by DMX console.
- 4) Please note that the first channel of the DMX console is used to select the DMX mode for the Deco-Tile. You can push the first channel to set 3, 6 or 12 channels for the Deco-Tile. 0~60 is 3 channels, 61~120 is 6 channels, 121~180 is 6 channels, 181~240 is 6 channels, 241~255 is 12 channels. The 6 channels-mode has three different combinations of the segments. You can push channel 1 to see the combination. As you can see there are four segments on the Deco-Tile. You can control the whole tile by 3 channels, or control every 2 segments by 6 channels, or control each segment separately by 12 channels.
- 5) If you set the address as 1, the first channel is used to select DMX mode 3 or 6 or 12 channels. Then the DMX channels will start from 2. If you set the address as 2, the first channel of the controller is still used to select DMX mode 3 or 6 or 12, but the start channel for the panel will be 3. If you set the address as 4, the start channel will be 5. It's different from other DMX products.



Fig. 5

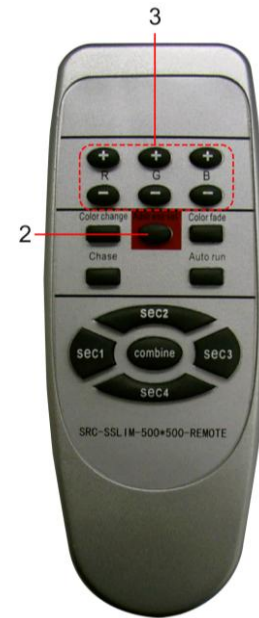


Fig.6



→ Connect to DMX Controller



→ Connect to DMX IN of the Deco-Tile

Fig. 7

Linking The First Deco-tile to the Second Deco-Tile




→ Connect to DMX OUT of the first Deco-Tile



→ Connect to DMX IN of the second Deco-Tile

Fig. 8

CANDLE POWER DISTRIBUTION

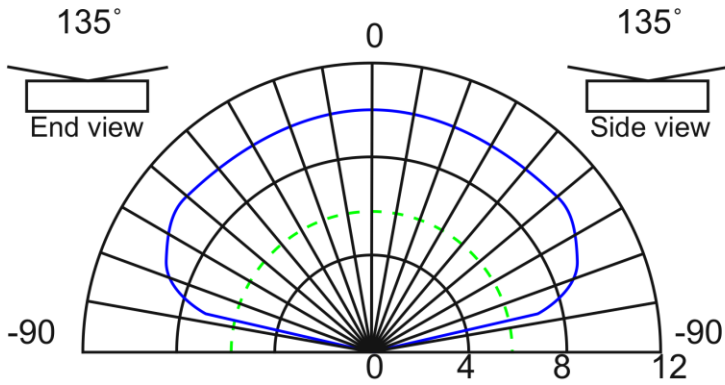

End view and side view (Candelas)
 Measured on: White
 Beam center: 10cd
 Thin dashed lined: indicates 50% of peak
 Multipliers: 0.27 Red, 0.56 Green, 0.17 Blue

LIGHT OUTPUT

COLOR	TOTAL OUTPUT (LUMENS)	POWER (WATT)	EFFICIENCY (lm/W)
WHITE	42.6	6.6	6.5
RED	12.8	1.6	8
GREEN	26.8	2.5	10.7
BLUE	7.9	2.5	3.2

Note: The "POWER" in the label is effective power.

Remote Control Functions

Static Colors: Red, Green, Yellow, Blue, Purple, Cyan, White and so on.

Options:
 Color Change
 Color Fade
 Color Chase
 Auto Run

Buttons:

Sec1: Section 1
 Sec2: Section 2
 Sec3: Section 3
 Sec4: Section 4
 Combine: Combine different sections

R+, R-, G+, G-, B+, B- : Adjust the Color
 Adjust DMX Address
 Adjust Speed

7x Color Change: Display every single color (Gray 0-126)
 Color Flash (Speed Change 1-100)

7x Fade Change: Single color Fade (Speed Change 1-10)
 Color Fade (Speed Change 1-10)

Color Chase: Single color Fade (Speed Change 1-100)
 Static Display (Gray 0-126)

Auto Run: Auto-combine Chases and Fades (Speed Change 0-10)

Address Set: 0-512




Note: Set the switch to MASTER before using the remote controller.
 Remove the batteries, when you don't use the remote for a long time.
 Change the batteries if the remote control doesn't function fluently.
 Do not press the ADDRESS SET button, if the address of the Deco-Tile has been set

Deco-tile structure and installation

LED Deco-Tile is made of milky white PVC, a slim aluminum board (oxidized surface), black ABS base. Fixed with screw. You can install the Deco-Tile in 2 ways:

1. Open up the support plates on the back, to create an adjustable stand. The inclination angle can be altered by adjusting the position of the stand.

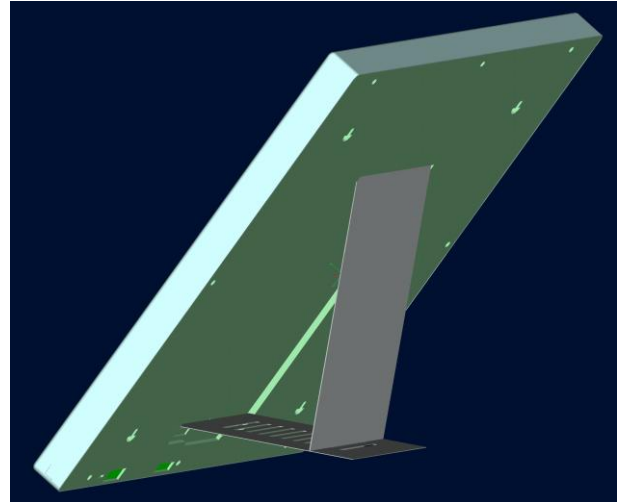

2. Mount the mounting-clamps (black + L-shaped) to the desired surface. After that you can click the LED Deco Tile with its U-shaped holes to the mounting brackets.



Maintenance

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

1. All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
2. There may not be any deformations on housings, fixations and installation spots.
3. Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
4. The electric power supply cables must not show any damages or material fatigue.

The Showtec LED Deco-Tile Pro requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Do not use alcohol or solvents. Keep connections clean. Disconnect electric power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Troubleshooting

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

1. If the device does not operate properly, unplug the device.
2. Check the power from the wall, all cables etc.
3. If all of the above appears to be O.K., plug the unit in again.
4. If you are unable to determine the cause of the problem, do not open the LED Deco-Tile Pro, as this may damage the unit and the warranty will become void.
5. Return the device to your Showtec dealer.

No Light



This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps. If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect two potential problem areas: the power supply or the LEDs.

1. Power supply. Check that the unit is plugged into an appropriate power supply.
2. The LEDs. Return the LED Deco-Tile Pro to your Showtec dealer.

Product Specification

Model: Showtec LED Deco-Tile Pro
Voltage: AC 230V-50Hz (CE)
DMX input and DMX output
Dimensions: 500x500x37mm (LxWxH)
Weight: 4,8 kg

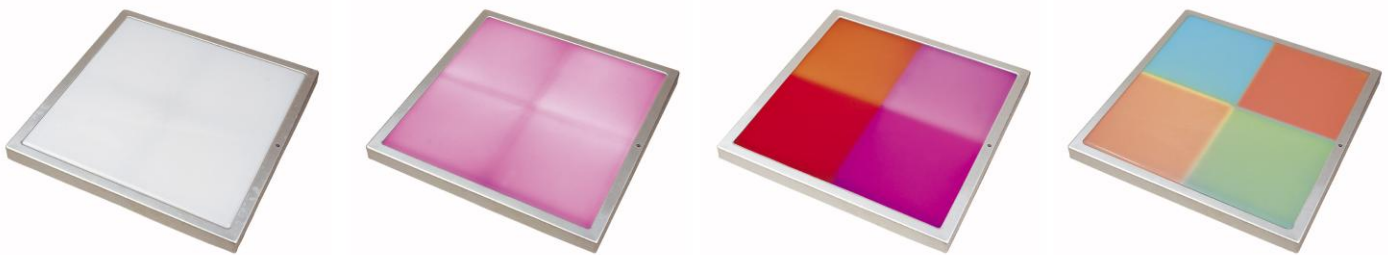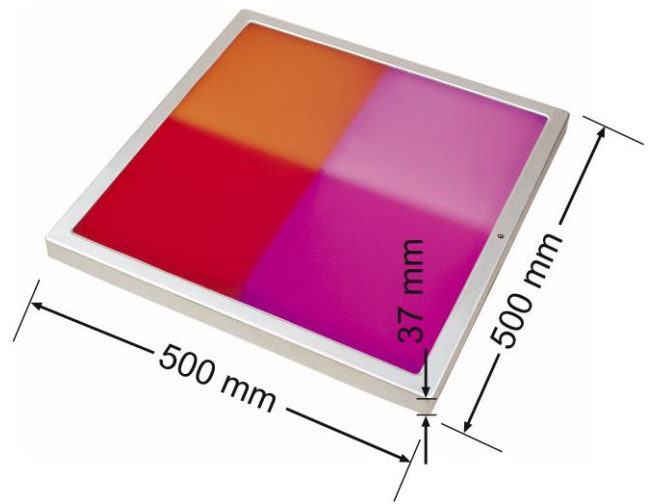

Remote Control

Signal emitting: Infrared
Power source: 2 batteries AAA
Operating Humidity: 0-95%
Operating Temperature; -20 °C / +45 °C
Dimensions: 140x52x22mm (LxWxH)



Design and product specifications are subject to change without prior notice.



Website: www.Highlite.nl
Email: service@highlite.nl





© 2007 Showtec.