



Triax S-HD 207

Digital Satellite Receiver

Operating Manual

305210



TRIAx - your ultimate connection

Content

Content 1

Content 1

General instructions 3

Safety Instructions 4

Cleaning and care 4

Control elements, front and rear panel 5

Connecting the receiver 6

Remote control 7

Initial installation 8

Operating the receiver 10

EPG – Electronic Programme Guide 12

Settings 12

 Settings – Receiver setup 13

 Settings – Picture 14

 Settings – Sound 15

 Settings – Subtitle 15

 Settings – OSD Configuration (Option) 16

 Settings – Parental lock 17

 Parental lock – device lock 17

 Parental Lock – changing the PIN 17

Installation 18

 Installation – antenna configuration 18

 Installation - channel search 19

 Installation – Factory reset 20

 Installation – Smartcard Reader (Option) 21

 Installation – Software download 22

Channel list 24

 Channel list – Edit main list 24

 Channel list – Edit favourites list 24

 Channel list – Delete Antenna 25

Timer 25

 Timer – record timer 25

 Timer – Sleep-Timer 26

Information 27

Videtext 27

Connection of external mass storage device (option)	28
List of recordings	29
Operating the external mass storage device (Option)	30
Recording	30
Timeshift function	31
Playback.....	31
Choosing the audio channel for recordings.....	31
Fast forward and rewind.....	31
Operating the hard disk – setting and managing markers	32
Using serial interface	33
Make a contribution to environmental protection	33
Trouble-shooting	34
Technical data.....	35

General instructions

Warranty

The period of warranty starts when buying the device. Please verify the exact date by sales check, delivery note, invoice, etc. Keep the documents carefully. Our warranty service refers to our warranty terms valid at the time of buying the apparatus.

In case you require technical service please take or send the device to your specialised dealer.



The unit is labelled with the CE-sign and therefore conforms with the general requirements of the European guidelines. A Declaration of Conformity is in the later part of this manual.

Dumping hint for packaging

Any packaging material is recyclable and should principally be supplied to the recycling process.

Packaging and wrapping materials as plastic foils, etc. should never be available for children.

Safety Instructions

Before installing your digital receiver, all security and operating instructions should be read carefully. The User's Manual should be retained for future reference.

All operating and using instructions should be followed.

Never allow children to operate this electrical device without supervisor.

ENVIRONMENTAL CONDITIONS

Protect the receiver against humidity, heat and cold. Allow 10cm space around the receiver for sufficient ventilation. Do not cover the receiver's ventilation openings with items like newspapers, tablecloths, curtains, etc. .

Do not place any objects filled with liquids, such as vases, on the digital receiver.

Take care that no foreign bodies or liquids are getting into the device.

Do not expose the digital receiver to dripping or splashing liquids.

CONNECTING TO MAINS SUPPLY (SAFETY FEATURE!)

Only connect the original mains adapter to a well reachable mains supply socket 230V~ 50Hz only. Do not tilt, do not use disproportionate power and do not damage the receiver's power socket and its electrical connections when connecting the power cord. If the mains adapter should fail to fit, contact your supplier.

FAILURE

If the mains adapter or the power socket or its electrical connection is damaged, immediately unplug the mains adapter from the mains supply socket. Do not try to open or repair the mains adapter or the receiver on your own! Service must be carried out only by experts at a proper service centre.

If replacement parts are required, only original components are allowed to use. The use of unauthorised components may result in risk of fire and electric shock.

Cleaning and care

Before cleaning, unplug the device from the mains adapter.

For cleaning the casing, please use a soft, damp cloth. Do not use any washing-up liquids that affect the casing. Do not spray a cleaner towards the receiver

PLACEMENT

In touch with certain furniture surfaces it may happen that the receiver's feet may rub off. You should place the device on a proper underground that is stable and not easily inflammatory. Otherwise the receiver may fall and cause serious injury to people and serious damages to the device.

 
Do not use this product near water (e.g. bath tube, wash bowl, ...).

Control elements, front and rear panel

- 1 4-digit display shows channel number
1a or LED

Display	
-	Receiver in standby mode.
Channel number	Receiver is ON
rEC.	Timer activated


- 9 Smartcard reader



1 1a 9



 2 3 4 5 6



7 8

- 2 Connector for mains adapter 12VDC
3 TV-Scart port for connecting the TV
4 HDMI-Output (digital Audio- and Videosignal) for connecting the TV
5 USB-socket for external mass storage device
6 IF Input Digital – F-Connector for antenna cable from LNB

Left side

- 7 Optical S/PDIF interface for DOLBY DIGITAL-Signal.
8 RJ-11-Socket: Connection for an External IR Receiver and Interface for softwareupdate

Connecting the receiver

Connecting a satellite antenna

Connect the coaxial cable of your satellite system with the socket IF-INPUT DIGITAL (6).

Caution: If, after connecting the receiver to the mains, the screen shows the message “Short circuit or overload at antenna input”, there is a short circuit in the LNB cable or in the LNB. In this case the receiver must be disconnected from the mains immediately, until the short circuit has been remedied.

Connecting a television

Use a scart cable to connect the TV socket (3) on the receiver to the corresponding scart socket on the television set.

HDMI output (4)

If your receiver is connected to the TV by a HDMI-cable, audio- and videosignal are digital.

Connecting a digital multi-channel amplifier

The receiver is optionally available with an AUDIO OUT socket (7) for a DOLBY DIGITAL signal. Use a suitable cable to connect this socket to your multi-channel amplifier.

Connecting an External IR Receiver (optional)

If you want to set up the receiver where it can't be seen, you can connect a external IR receiver to the RJ-11 socket (8). This must be positioned in such a way that it can receive the signals from the remote control. When installing the receiver, always be sure to follow the safety and installation instructions.

Connecting an external mass storage device

For recording of TV programmes, an external mass storage device can be connected to the optional USB-socket (5).

Connecting the mains adaptor

Connect the DC plug of the mains adaptor supplied with the unit to the socket DC-INPUT +12V (2) on the receiver.

How to insert batteries into the remote control

Open the cover at the rear side of the remote control.

Insert two AAA type batteries (1.5V).

Attention: Take care of appropriate +/- polarity!

Note:


If the operational range of the remote control is getting smaller, it indicates that the batteries are almost consumed. Always replace both batteries.


Caution:

Do not heat, disassemble or recharge the batteries.


Consumed batteries are not allowed to be disposed in domestic refuse. They must be supplied to a facility, collecting and disposing exhausted batteries according to the EU environmental protection rules.


Remote control

 MUTE. Sound ON/OFF


 Numeric input of channel numbers.
In Menu: Input of numeric parameters (frequency etc.)

 Displays Electronic Programming Guide (EPG)


 Displays Programm Info

 Volume control
In Menu: Change parameters or scroll lists

 Channel UP/DOWN
In Menu: selects menu lines

 Leave current menu or OSD (On Screen Display)

 Activates main menu

 Channel UP/DOWN (also in EPG-Function)


 Turns on Videotext




 ON/OFF button


 Shows list of stations


 Switches between RADIO- and TV-mode

 In menu: opens, confirms or modifies currently selected item


 Activates last selected channel.

 Choice of audio-channels

 Opens specified menus










 Volume control

 Opens the information menu

 In menu: Delete function

 No function

If external mass storage devices are connected:

 Fast rewind	 Playback button	 Pause button
 Fast forward	 Record button. Transfers EPG-date into record timer	 Setting and managing of markers
 Opens list of recordings	 Stop button	 Renaming records

Initial installation

After reading the safety instructions (see chapter "safety instructions") and finishing the actions explained in chapter "connecting the receiver" please use the supplied power cord for connecting the apparatus to the power supply. When running the receiver for the first time the "welcome menu" of the installation guide is displayed at the TV screen. It helps you installing the most important settings.

Language of the menu

In the first step of the installation guide please select your language by using ▲ or ▼. Confirm your choice by **OK**.

Welcome
Menu language [2/14]
Deutsch English Italiano Suomi Français Čeština Türkçe

Country

In the second step please select your country. Therefore press ▲▼ and then **OK**. If you want to get back to the language selection, you have to use the EXIT button.

NOTE: The choice of the country affects the the channel list sorting.

Welcome
Country [1/9]
Germany Austria Switzerland Italy Greece Portugal Hungary

Satellite

In the third step please select the satellite whose channels are to be sorted first in the channel list (use ▲ or ▼). End the installation with **OK**. A correction of the previous settings can be carried out by pressing **EXIT**

Welcome
Satellite (SAT)
Astra 19.2 Hot Bird Astra 28.2 Turksat 1C Sirius 4

Satellite reception

In the last step please select the type of your connected satellite antenna system (use ▲ or ▼).

Standard or SCR (Sat Channel Router)

Welcome
Satellite Reception
Standard SCR (Sat Channel Router)

Standard

Choose this option, if you want to connect the receiver to a conventional satellite antenna system.

Move the cursor with ▲ or ▼ to *Standard*. By pressing the **OK** button all alignments are done automatically.

SCR (Sat Channel Router)

Choose this option, if you want to connect the receiver to a special SCR satellite antenna system.

Move the cursor with ▲ or ▼ to *SCR* and press the **OK** button.

The following menu is displayed:

SCR (Sat Channel...)	
SCR-ID	1
Frequency	1.400 GHz
Store	

Note:

Each connected receiver must have an ID-number (SCR-ID) and a receiving frequency. You can find this informations in the manual of your antenna system or on the wall socket.

In the line *SCR-ID* choose the ID for your receiver (1..8) using the buttons ◀▶.

Then move the cursor with ▲ or ▼ to *Frequency* and press the **OK** button.

Use the numeric input buttons 1...0 for entering the 4 digit frequency. Confirm your inputs by **OK**.

Then move the cursor with ▲ or ▼ to *Store* and press the **OK** button.

Please note:

New programmes found by the channel search will be added to the beginning of the list of stations. You can set out the order of stations as you wish, and delete programmes you do not want.

Operating the receiver

Switching receiver ON/OFF

- 1.) This receiver is optionally equipped with a low power standby circuit. If this function is activated, the standby power consumption of the receiver is less than 1W.

The function is switched ON or OFF in the menu SETTINGS/RECEIVER SETUP.

- Low-Power Standby ON – Switching on the receiver takes about 10 seconds (Display: "boot").
- Low-Power Standby OFF – Receiver switches ON immediately.

- 2.) The receiver is also equipped with the function „**Auto-Standby**“.
This function can be activated or deactivated in the menu SETTINGS/RECEIVER SETUP.

If "Auto-Standby" is activated, the receiver switches to Standby-Mode after 3 hours running. Precondition: No timer is activated and no operations with the remote control during this time.

You can switch on the receiver by pressing **OK**, **▲▼** or by using one of the numeric buttons **1...0**. The last activated channel will be displayed (e.g. 0015).

The digital receiver is switched into standby mode by pressing .

ATTENTION: Only by pulling the mains adapter the receiver is disconnected from the power supply completely.

TV & Radio mode


You can choose between the operation mode TV (viewing TV channels) and RADIO (listening to radio channels) by pressing **RADIO**.

Volume control & Muting

The volume level can be adjusted by pressing **◀▶** or **VOL ▲▼**. The corresponding scale is displayed on the screen.

Hint:

- It is not possible to change the volume level while the menu is active.
- The volume control only affects the audio output at the TV, VCR and AUDIO ANALOG OUT ports of the receiver.

By pressing the  button you can totally switch off the audio output (muting). For switching on again, simply use the same button.

Selecting a channel

1. Using the directional up/down keys

To change the channels stepwise press the buttons ▲ ▼. In order to switch the channels quicker hold these buttons pressed longer.

2. Using the numeric keys (direct input)

One or more digit channel numbers can be input by using the numeric buttons 0...9 and pressing **OK**. Not available channel numbers are ignored.

3. Using the channel list

By pressing the **LIST** button the last activated channel list or favourite list is displayed. Browse the channel list by pressing ◀ ▶ or ▲ ▼ and activate the desired channel by pressing **OK**.

When pressing key **LIST** twice the following menu appears:

Select list
Favourites list
Radio list
TV list
Alphabetic list

- Favourites List:** Your personal list of favourite channels
Radio List: List of stored Radio channels
TV List: List of stored TV channels
Alphabetic List: List of stored TV or RADIO channels in alphabetical order.

Choose the favoured list by pressing ▲ ▼ and activate it by pressing **OK**.

In alphabetic list mode the channels are sorted alphabetically. It helps you searching a certain channel. Therefore press **LIST** for displaying the alphabetic channel list and its char locator. Then enter the char locator menu by pressing ☺. Use ▲ ▼ and ◀ ▶ for selecting the first letter of the searched channel and confirm by **OK**. If available the channel list shows the wished channel now.

For re-entering the channel list press ☺, for activating the channel use **OK**.

4. Swap from current channel to the previous one:

Your receiver remembers the previous activated channel:

- By pressing ☺ you can switch from the current to the previous channel
- By pressing ☺ again switch back to the current channel

Every time you perform a channel change, the title and start/stop time of the current and the following programme are displayed in the channel change OSD (on screen display). Thereby the scale of progression below the programme number signals the temporal progress of the current programme.

If faded out you can display this information again by pressing **OK**.



EPG – Electronic Programme Guide





Almost all TV and radio broadcasters provide further information on their programme. Your receiver stores and decodes these data and displays them in the so called Electronic Programme Guide (EPG).


This programme preview is activated by using the **EPG** button. The appearing list contains all programmes of the current channel.

In the headline of the menu channel name, date and time are shown.

Das Erste HD	Monday 19 .12.2011	20:07
--------------	--------------------	-------

By using the buttons  **CH**  the channel can be changed without leaving the EPG-menu.

With   or   you can select the broadcast you want to be informed about. You can get more detailed information by pressing **OK**.

Also you can use the EPG list to program a record timer very easily: Just press the **Record** button  and activate the record timer in the corresponding menu.

Please use **EXIT** to leave this on screen dialog.



 
 
Settings


The basic functionality of the receiver is defined in the *Settings* menu.

The derivation of your local time against the GMT (Greenwich Mean time) time needs to be corrected, otherwise the displayed times may be wrong.

Hint:

At each on screen display the possible user inputs are explained in the help bar at the lower screen brink.

By pressing  and  you can change the corresponding settings. When leaving a menu (**EXIT** button) you will be asked to store the performed modifications (Yes) or to keep the previous settings (No). Please choose one of these possibilities by pressing  and  and confirm your choice by **OK**.

Turn on the receiver by pressing .

For entering the main menu, please press the **MENU** button.

The main menu is displayed:

Main menu
Settings
Installation
Channel list
Timer
Information
Mass Storage Device

Note: "Mass Storage Device" is only displayed, when an external mass storage device is connected at the USB-Socket of the receiver.

Press the **OK** button.
The following menu is displayed:

Settings
Receiver setup
Picture
Sound
Subtitle
OSD configuration
Parental lockj

The first line *Receiver Setup* is marked.

Choose this menu item by pressing **▲▼** and confirm by **OK**.

Settings – Receiver setup

The following menu is displayed:

Receiver setup	
Time difference	+2.00 Std.
Menu language	English
Initial volume	90%
HDMI Audio Bitstream	Off
Auto Standby	On
Low-Power-Standby	On

1) Time difference

When operating the receiver for the first time you should set the derivation between your local time and the received GMT time (Greenwich Mean Time) by pressing **◀** or **▶**.
For Central Europe the following settings are recommended:

Winter time: +1.00 hour
Summer time: +2.00 hours

Note: This setting has to be updated at each summertime shift.

2) Menu language

Choose your language by pressing **◀** or **▶**.

3) Initial volume

The initial volume after a power reset of the receiver is adjusted here by pressing **◀** or **▶**.

4) HDMI Audio Bitstream

HDMI Audio Bitstream can be switched ON or OFF by pressing **◀** or **▶**.

5) Auto Standby

Auto-Standby function can be switched ON or OFF by pressing **◀** or **▶**.

6) Low-Power Standby

Low-Power Standby function can be switched ON or OFF by pressing **◀** or **▶**.

Settings – Picture

For entering the Picture menu, select menu item *Picture* in the *Settings* menu and press **OK**. The following menu appears:

1) Analog Video

The analog video output at the SCART socket can be adjusted by pressing ◀ or ▶. You can select among following options: *FBAS*, *RGB*, or *YUV*.

2) Digital Video

The digital video output at the HDMI socket can be adjusted by pressing ◀ or ▶. You can select among following options: *YcbCr* or *RGB*.

3) Display format

Use ◀ or ▶ for selecting the screen format of your TV set (4:3, 16:9).

4) Display adjustment

Use ◀ or ▶ for adjusting the video signal: pan & scan, letterbox or pillar box.

5) Videosystem

Use ◀ or ▶ for adjusting the video system: *AUTO*, *PAL*, *NTSC*.

6) Picture scaling

Here you can choose the picture resolution.

720 x 576
1280 x 720
1920 x 1080

Picture	
Analog Video	RGB
Digital Video	YCbCr
Display format	16:9
Display adjustment	Letterbox
Videosystem	Auto
Picture scaling:	
>Input 720x576	Output 1280x720
>Input 1280x720	Output 1280x720
>Input 1920x1080	Output 1280x720

a.) Television connected to Scart-Socket:

If your TV is only connected to the scart-socket of the receiver, you get the best picture quality, if you choose in the menu item „Picture scaling“ 720x576 for all output signals.

b.) Television connected to HDMI-Socket

If your TV is only connected to the HDMI-socket of the receiver, you get the best picture quality, if you choose in the menu item „Picture scaling“ Input signal = Output signal.

If you prefer fast channel switching, all output signals must be the same.

Press **EXIT** to leave this menu. For storing your modifications select **Yes** (◀ or ▶), for keeping the previous settings select **No**.

Confirm your choice by pressing the **OK** button.

Settings – Sound

Sound	
Sound settings	Stereo
Sound channel TV	Stereo
Sound channel Dig.	Uncompressed (PCM)

1) Sound setting

Using ◀ or ▶ you can activate following audio modes: *Stereo, Mono left or Mono right.*

2) Sound channel TV

If the broadcasted programme offers different audio options you can select the desired audio output at the TV Scart by keys ◀/▶.

3) Sound channel digital

If the broadcasted programme offers a digital audio channel, you can use ◀/▶ for selecting the audio signal that is to be output at the digital audio port.

Press **EXIT** to leave the menu. If you want to save your modifications choose **Yes**, for restoring the previous parameters choose **No** (keys ◀/▶).

Confirm your choice by pressing the **OK** button.

Settings – Subtitle

Subtitle	
Subtitle	Off
Subtitle language	-

1) Subtitle

By using ◀/▶ you can activate/deactivate the display of DVB subtitles (if transmitted).

2) Language of the subtitle

To select the language of the subtitle you must use ◀ or ▶. If there is no subtitle available this is indicated by "-".

By default the subtitle is in accordance with the menu language.

Use **EXIT** to leave the menu. If you want to save the modifications choose **Yes**, for restoring the previous parameters choose **No** (keys ◀/▶).

Confirm your choice by pressing the **OK** button.

Settings – OSD Configuration (Option)

For entering the OSD configuration menu, please select menu item *OSD configuration* in the *Settings* menu and press **OK**. The following menu appears:

OSD Configuration	
Display time	5 s

1) Display time:

By using ◀ or ▶ you can modify the display duration of the channel change graphics (1-10 seconds).

Press **EXIT** to leave this menu. If you want to store your modifications select **Yes** by pressing ◀ or ▶. For the restoring the previous settings you have to choose **No**. Confirm your choice by using **OK**.

Settings – Parental lock

Your receiver is equipped with a parental lock. This secures the receiver against unauthorised use. When the parental lock is activated, the receiver can only be switched on after entering a 4-digit PIN code.

In the Main menu, use the ▲▼ buttons to move the cursor to the line *Parental lock* and press the **OK** button.

Parental Lock
Device Lock Change PIN

Parental lock – device lock

To activate or deactivate the device lock, move the cursor to the line *Device lock* and press **OK**. The following menu will appear:

Device Lock	
Lock Device	No

Use the ◀▶ buttons to switch the device lock on or of. When the lock is activated, the PIN code must be entered when switching on the receiver.

Press **EXIT** to leave the menu. Use the ◀▶ buttons to choose whether you want to store the changes made (Yes) or keep the previous settings (No). Confirm your choice with the **OK** button.

Parental Lock – changing the PIN

To change the PIN code, move the cursor to the line *Change Pin* and press **OK**. The following menu will appear:

Change PIN	
New PIN	* * * *
Confirm PIN	* * * *

The PIN code is set at the factory to 0000.

Use the ▲▼ buttons to move the cursor to the line *New PIN* and press the **OK** button. Use the 0-9 buttons to enter a 4 digit PIN code, then press **OK**. Use the ▼ button to move the cursor to the line *Confirm PIN* and press the **OK** button. Now confirm your entry by entering your chosen PIN code one more time, then press **OK**.

Press **Exit** to leave the menu. Use the ◀▶ buttons to choose whether you want to store the changes made (Yes) or keep the previous settings (No). Confirm your choice with the **OK** button.

WARNING

You must not forget the PIN code. Should this happen, please contact your specialist dealer!

Installation

In the main menu, select the line *Installation* using ▲▼ and confirm with **OK**. The Installation menu will appear:

Use the buttons ▲▼ to make your selection and confirm with **OK**.

Installation
Antenna configuration
Channel search
Factory reset
Software download

Installation – antenna configuration

Choose the required line by pressing ▲▼ and enter your preferred settings with **OK**.

1) Antenna:

Contains all available satellites. By using ◀ or ▶ you can select the satellite your LNB is directed to. After pressing **OK** you can rename the selected satellite name.

2) Antenna power

Here you can switch on/off the supply voltage for the LNB (◀ or ▶).

Antenna configur...	
Antenna	1 Astra 19.2
Antenna power	On
LOW Band	9.750
HIGH Band	10.600
DiSEqC-Switch	A
Toneburst-Switch	A

3) LOW Band

The oscillator frequency for LOW band can be fine adjusted by pressing ◀ or ▶. For directly entering the frequency press **OK** and use the numeric buttons **1-0** then.

4) HIGH Band

The oscillator frequency for HIGH band can be fine adjusted by pressing ◀ or ▶. For directly entering the frequency press **OK** and use the numeric buttons **1-0** then.

5) DiSEqC switch

If your receiver is connected to a satellite antenna system that receives *several* satellites (multi feed antenna system) via a DiSEqC controlled switch unit: Specify the input of the DiSEqC switch, where the selected LNB (line 1) is connected to (◀/▶).

6) Toneburst switch

If your receiver is connected to a satellite antenna system that receives *two* satellites (multi feed antenna system): Specify the input of the A/B-Switch where the selected LNB (line 1) is connected to (◀ or ▶).

Installation - channel search

This digital receiver is pre-programmed with most digital TV- and RADIO channels of following satellites:

- Astra 19.2° East,
- Hot Bird 13° East,
- Türksat 1C 42° East,
- Sirius 2/3 5° East,
- Amos 1 4° West,
- Hellas Sat 2 39° East

If you want to see a list of all programmed channels just open the channel list for TV or RADIO mode by pressing **LIST**.

As the broadcasters quite often add new channels to their downlinks or change the parameters of already distributed channels, we recommend performing a channel search every now and then.

For getting into the corresponding on screen dialog, please enter the Main Menu (key **MENU**); from there step into the *Installation* menu, select line *Channel search* and press **OK** for entering the *Channel Search* menu:

Channel search	
Satellite	Astra 19.2
Search mode	manually
Encrypted	No
Frequency	12.188GHz
Polarisation	Horizontal
Symbolrate	27.500MS

Start scan

Channel search

1. Press **▲▼** for moving the cursor to line *satellite*. There select the satellite you want to scan (**◀** or **▶**).
2. Move the cursor to line *search mode* (**▲▼**). There use **◀/▶** for selecting the desired search mode.

Transponder: In this mode a certain transponder (channel) is scanned only. Therefore you have to specify this transponder by entering its frequency, polarisation and symbol rate.

Satellite: In this mode all stored transponders of the selected satellite are scanned for new channels.

3. In line *Encrypted* you can specify whether you want to search for encrypted channels, too.
 - No = encrypted channels are ignored
 - Yes = encrypted channels are searched, too

The following settings are used only in search mode *Transponder*.

4. *Frequency*:
For entering the frequency of the desired transponder please select line *Frequency*. Then press **OK** and use the numeric input buttons **1...0** for entering the 5 digit frequency. Confirm your inputs by **OK**.
5. *Polarisation*:
In menu item *Polarisation* you can set the polarisation (vertical or horizontal) of the desired transponder by using **◀** or **▶**.
6. *Symbol rate*:
For entering the symbol rate of the desired transponder please select line *Symbol rate*. Then press **OK** and use the numeric input buttons **1...0** for entering the 5 digit symbol rate. Confirm your inputs by **OK**.

For starting the Channel search please navigate to line *Start scan* (keys **▲▼**) and press the **OK** button on your remote control.

Now a new menu is displayed with two lists displaying the founded TV and RADIO channels. Thereby the „Status:“ graphic keeps you informed on the progression of the channel search:
- Status *scan* => search algorithm is active
- Status *end* => search algorithm is finished

You can leave this menu by pressing **EXIT**. If not finished, the channel search algorithm is aborted. If new channels are found, you are asked to store them (**Yes**). Select your choice by **◀/▶** and confirm with **OK**. If selected YES the new channels are stored at the end of the channel list now.

Installation – Factory reset

This menu item allows you to reset the receiver to its default factory status. Afterwards the receiver starts up with the Welcome Screen (initial installation) again.


Installation – Smartcard Reader

The Digital-Receiver is optionally equipped with a smartcard reader.

With an equal smartcard it is possible to unscramble encoded channels.

The smartcard can be inserted also while the receiver is switched on.

Insert the smartcard (golden chip on lower side towards the receiver) carefully into the slot at the front panel of the receiver.

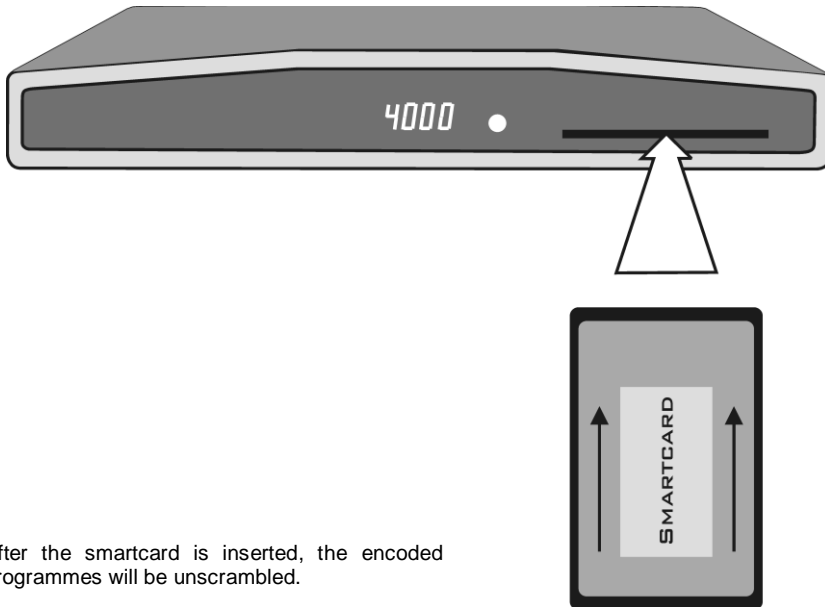

After the smartcard is inserted, the encoded programmes will be unscrambled.

To open the menu of the smartcard, first select "Installation" in the main menu and press **OK** to confirm.

A submenu generated by the smartcard appears on the screen.

Select the submenu of the smartcard with **▲** or **▼** and press **OK** to confirm.

For more information on using the smartcard, see the menus shown or it's instruction manual.

Installation
Antenna configuration
Channel search
Factory reset
Software download

Conax

Installation – Software download

With this function the operating software of the receiver, it's menu texts and channel list can be updated via Astra 19.2" (East). Nevertheless, your satellite antenna system must receive this satellite. Your currently active channel list is not changed by a software update.

Attention:

- In case of a software update the current operating software will be erased and a new software version will be installed.
- When updating the channel list the factory default channel list will be replaced by a new one.
- When updating the OSD texts, all menu texts are erased and actualised.

The update process is subdivided into following steps:

1. Open Update Menu:

Enter the *Installation* menu, select line *Software download* and confirm with **OK**.

The *Download* menu for controlling the update process is opened and the search for the download channel starts automatically.

Download		
Software	New Software available	✓
Channel list	-	x
OSD-texts	-	x
Information	Nothing	
Start Download	New Software available	

Please wait until this search is completed. It may take a few minutes. When the download stream is found the receiver verifies whether there are available new versions of the operating software, OSD texts and channel list. The result is shown in the *Download* menu behind the corresponding menu items (marked by ☺).

If there are no new data available this is signalled by a „-“.

You can leave the download menu by **EXIT**.

2. Selection of available data:

Depending on their availability in the update stream you can select the download of following data by pressing ▼▲:

- a.) *Software:* Operating software
- b.) *Channel list:* Channel list
- c.) *OSD texts:* All menu texts displayed on the screen
- d.) *Information:* Information concerning the available download data e. g. version number, innovations, etc..

If you want to update one of the options a.) to c.) press **OK** at the corresponding menu item. If required by the receiver, it may happen that there are selected additional menu items automatically.

In line *Information* you can specify, if you want to receive further information on the selected data (keys ◀ ▶):

<i>All</i> :	Information on all available data
<i>None</i> :	Information on none of the available data
<i>Software</i> :	Information on the new software version.
<i>OSD texts</i> :	Information on the new menu texts.
<i>Channel list</i> :	Information on the new channel list.

Hint:

If you like to read these information before doing the update, please leave menu items a.) to c.) inactive (⊗) and specify the desired information at d.). Then start downloading these data. When received, you can view the information at menu items a.) to c.) by pressing the **yellow** button. For leaving the corresponding on screen graphic use **EXIT** please.

3. starting the update:

The update-/download process is started as follows:

- select the desired data pressing **OK** at a.), b.) or c.) (mark changes from ⊗ to ✓)
- select *None* at menu line *Information* (keys ◀ or ▶).
- Start the update procedure by pressing **OK** in line *start download*.

You are informed about the download process immediately when the first data are received. As the reception of the data happens blockwise, several minutes may pass between the single data blocks. When the first and second data block are received (100%), the data are stored. The storage process is signalled by flashing the numbers in the LED display. Please wait until all data blocks are received.

When the update is completed, the receiver automatically restarts and turns into Stand By mode.

Attention:

As long as the storage process has not begun, the download can be cancelled by pressing **EXIT** at any time. When the first data have been stored cancelling is no longer possible. An interruption of the update process (e. g. by pulling the power cable) may damage the operating software receiver and the receiver does not work any more!

Hint:

If the download includes a new channel list, the receiver needs to be reset to factory default status for activating this list (after download is completed and receiver was restarted).

Channel list

You can resort and/or erase TV and radio channels found in the course of an automatic channel search. This function is available for all TV and radio channels.

For entering the corresponding on screen dialog, please press the **Menu** key to enter the *Main Menu*, then select menu item *Channel List* and confirm with **OK**.

Following sub-menu appears:

Channel list
Edit main list Edit favourites list Delete antenna

Channel list – Edit main list

This sub-menu enables you to erase or move certain channels in the channel list. For entering this menu simply enter **OK** at line *Edit main list*.

a) Erase channels

Select the channel to be erased with **▲▼** and mark it with **OK**. You can select more channels by pressing **▲▼** and **OK**. To erase them press the **red button**.

b) Sort channels

Select the channel to be sorted by using **▲▼** and mark it with **OK**. You can select further channels by pressing **▲▼** and **OK** (max. 20 channels can be selected at the same time).

Use **▲▼** to select the position where to insert the marked channels and confirm with the **yellow button**.



Channel list – Edit favourites list

This sub-menu allows you to add your favourite channels to the favourites list. Therefore please press **OK** in line *Edit favourites list*.

Now two lists are displayed:

- the Main list: all stored channels are listed (max. 4000).
- the favourites list: contains your favourite channels (max. 4000).

Now you can select your favourite channels from the Main list and copy them into the favourites list:

Select the channels you like to add to the favourites list by using **▲▼** and mark them with **OK**. Then press button  to enter the favourites list. There use **▲▼** to select the position where to insert the channel and press **OK**. With  you return to the main list again.

Use **EXIT** to leave the channel list menu. By pressing **◀▶** you can store your modifications (**Yes**) or keep the previous settings (**No**). Confirm your choice by **OK**.

In radio mode you can create your own favourites list for radio programmes, too.

Channel list – Delete Antenna

This dialog allows you to delete all channels of the selected satellite from the channel list. Therefore please enter menu *channel list* and select menu item *Delete Antenna* (**OK**).

Delete Antenna

Select the satellites to be erased with **▲▼** and mark them with **OK**. For erasing their channels from the channel list please press the **red button** on your remote control.

For leaving this menu please press **EXIT**. If the “Save?” popup appears, please select if you want to store your modifications (**Yes**) or keep the previous settings (**No**). Confirm your choice by pressing **OK**.

Timer

You can use the record timer functionality to programme a recording for a connected Hard Disk or video recorder. Totally 30 record timers can be activated. Or you can use the sleep timer to specify a time at which the receiver is to switch into standby mode.

Therefore please enter the *Main menu* by pressing **Menu**; then select menu item *Timer* and confirm with **OK**.

Timer
Record timer Sleep timer

Timer – record timer

Use **▲▼** to select line *Record timer* in menu *Timer* and press **OK**. The following menu appears:

Record timer	20:07
Timer-index (1...30)	1 (inactive)
Start at	00:00 Uhr
Stop time	00:00 Uhr
Date of recording	01.07.09
Station	1 Das Erste
Repetitions	nothing

Activate

Programming a record timer:

1. Select line *Timer index (1...30)* with **▲▼**
2. There select timer place with **◀▶**
3. Select lines *Start at*, *Stop time* or *date of recording* with using **▲▼** and confirm with **OK**
4. Enter the required time or date by pressing **0-9**
5. Confirm your input with using **OK**
6. Select line *Station* with **▲▼** and confirm with **OK**
7. Select a channel with **▲▼** or **◀▶** and confirm with **OK**.

8. Select line *Repetitions* with ▲▼ and use ◀▶ to specify the number of repetitions of this record.
9. Select line *Activate timer* and activate the programmed record timer by pressing **OK** there (text *Activate timer* changes to *Deactivate timer*).

The receiver will switch on at the programmed time and signals a timer record by displaying "rEC." in the 4 digit LED Display. If you want to abort a record, please enter the record timer menu and deactivate the timer by pressing the *Deactivate* button.

If you push one of the buttons ▲▼ or ◀▶, following menu appears:

Record active. Stop?	
Yes	No

Choose „Yes“ to stop the record or „No“ to continue the record.

Hint: Please make sure that the local time of the receiver is set correctly and the video recorder is programmed, too.

Timer – Sleep-Timer

Use ▲▼ to select line *Sleep timer* in menu *Timer* and press **OK**.
The following menu appears:

Sleep-Timer	20:07
Switch-off time	21:00 o'clock

Activate

Enter Switch-off time:

1. Activate Line „Switch-off time“ with **OK**.
2. Enter the required time by pressing **0-9**
3. Select the line *Activate* with ▲▼.
4. Activate the programmed timer with ◀▶.
5. Leave the menus with **EXIT**.

Information

Enter the main menu, there use ▲▼ to select line *Information* and press **OK**.

In the upper section of the menu the channel parameters of the activated channel are displayed.

In the lower section of the menu the signal qualities are displayed.

- *Level*: The further the bar turns right the better the reception.
- *C/N*: The further the bar turns right and the higher the dB value, the better the signal quality.

Hint:

The power of the signal depends on the antenna set up and also on the currently activated channel. Please remember this if you want adjust your antenna by controlling the signal power.

After pressing the ◀▶ or the **yellow** button two further charts with channel, software and hardware information are displayed. With ▲▼ you can change the channel.

Use **EXIT** to leave this menu.

Videotext

Press the **TEXT** button to display the videotext of the current channel. The first site to be seen is site number "100".

In order to view a specific page, use the buttons **0-9** to enter the three-digit page number. Your input is displayed in the left corner on the screen. When the site number is input completely the receiver starts to search the corresponding site. Because the video text sites are sent site by site it may take some seconds until the required site is found. Enter "100" at any time to return to the home page of the videotext.

You may use ▲▼ to quickly page through the complete videotext section of a particular TV channel.

If you press the **TEXT** button again you can switch into the mixed mode (background transparent). Use the **TEXT** button to return to the normal mode.

For leaving the video text please press **EXIT**.

List of recordings

In normal operation, press the **Archive** button to open up the list of recordings.

Deleting recordings

You can delete recordings you no longer need from the mass storage device.

Use ▲▼ to select the recording you wish to delete.

Then press the red button. A security question, asking whether you really want to delete the recording, will appear. Use the ◀▶ buttons to select whether you really want to delete the recording (*Yes*) or not (*No*). Confirm your choice with the **OK** button.

Record list		
21.06.2010, 18:30, Sports		
1	Sports	01:30:54
2	Newsflash	00:28:10
3	Rainman	02:10:20
4	Soccer	00:45:00

Sorting recordings

In normal operation press the **Archive** button to open up the list of recordings. Press the **LIST** button. The menu "Select list" will appear.

Use the ▲▼ buttons to select the sorting criteria and then press **OK**. The list of recordings will be sorted as follows:

- "Alphabet" The recordings will be put in alphabetical order
- "Date of recording" Sorted according to the date of the recording (newest recording first)
- "Entry" Sorted according to where the recording is filed on the mass storage device
- "Recording length" Sorted according to the size of the recording

Renaming records

While a recording is being made, it's name will be formed automatically from the broadcast information. You can however rename the recordings manually.

In normal operating, press the **Archive** button. The list of recordings appears.

Use ▲▼ to select the programme you would like to rename.

Then press the blue button. This menu will appear:

Record list	
21.06.2010, 18:30, Sports	
Sports	
0	1 2 3 4 5 6 7 8 9 A B C D E
F	G H I J K L M N O P Q R S
T	U V W X Y Z [] ! ? < > = _
-	; . # " õ % & / () = ^ ,

In the lower window you will see in the first line the name of the selected programme. Below it, available characters are shown. Use the green button to switch between capital and lower-case letters.

In the name, use the red and blue buttons to select the characters you wish to change. The current position that can be changed is highlighted in colour.

Now use the ▲▼ and ◀▶ buttons to select the character you would like to insert. Then press OK, to insert the character in the name.

To accept the new name press EXIT. The newly modified name will now be shown in the list of recordings.

Operating the external mass storage device

If an external mass storage device is connected to the USB-Socket on the rear side of the receiver, you can store recordings on it.

The recording capacity depends on the size of the mass storage device and the data volume of the broadcast material.

Recording

Various modes of recording area available for you to record programmes onto the mass storage device.

1. Immediate recording

Switch on the channel you want to record.

Press the red **record** button to record the current programme. While the recording is running, the programme continues to be shown on the screen.

To stop an immediate recording, press the **stop** button.

2. Timer recording

You can record programmes onto a connected mass storage device in your absence using the Timer recording function. Programme a Time recording as described in the chapter "Timer".

Select the menu item *Record on the mass storage device*.

Select a channel during a record

During a record, all channels in the channel list which are in white colour can be seen.

Channels which are black cannot be seen during a record.

The channel which is recorded is marked with a red point in the channel list.

Timeshift function

The Timeshift function enables you to record and playback at the same time. This gives you various options:

1. Time-delayed television. You can watch the beginning of the recording and jump over recorded passages (e.g. commercial breaks).
Press the **red record** or **PAUSE** button to start a timeshift recording.
To watch the partially recorded programme, press the **Playback** button. The programme is then played from the moment of recording, while the current programme continues to be recorded in the background.
If you want to stop the playback and return to normal TV operation, press the **Stop** button. To stop a timeshift recording press the **Stop** button.
2. Recordings saved on the mass storage device can be played during timeshift recording. During the timeshift recording, press the **Archive** button to open the list of recordings. Use **▲▼** to select the recording you wish to see. Press **OK** to start the playback. The playback information will be shown on the screen.
If you want to stop the playback and return to normal TV operation, press the **Stop** button. To stop a timeshift recording press the **Stop** button.

Playback

In normal operation, press the **Archive** button to open the list of recordings. Use **▲▼** to select the recording you wish to see. Press **OK** to start the playback.

Playback is stopped using the **Stop** button.

Choosing the audio channel for recordings

When playing back recordings, you can choose between the different audio channels.

During playback, press the button **Option**. Now a menu with the available audio channels will be shown.

Use the **▲▼** buttons to select the audio channel you want to use and press the **OK** button. Pressing the **EXIT** button to hide the menu again.

Fast forward and rewind

During playback, press the **Fast Forward** button or the **Fast Rewind** button. The symbol “▶▶” or “◀◀” will appear, and the recording will be played faster in the desired direction. Press the **Fast Forward** or **Fast Rewind** button again to increase the speed. The symbols ▶▶▶ or ◀◀◀ will appear. Press the **Fast Forward** or **Fast Rewind** button once more, and the speed will be increased to the maximum. The symbols ▶▶▶▶ or ◀◀◀◀ will appear. Once you have found the spot you were searching for, press the **Playback** button to return to normal playback operation.

During fast forward or rewind, you can use the ◀▶ buttons to change position within the file. This enables you easily to jump over longer sections of film.

Overview of symbols displayed:


Indication	Meaning
▶	Playback
▶▶	Fast forward
▶▶▶	Very fast forward
▶▶▶▶	Maximum speed forward
•	Record
•▶	Timeshift operation
◀	Fast rewind
◀◀	Very fast rewind
◀◀◀	Maximum speed rewind

Operating the hard disk – setting and managing markers




During the timeshift function or playback, you can mark places on the recording. A marker is shown as a coloured triangle in the status indicator. Press the button **F1** at the playback position to set a marker.

You can use the button **F2** to show a list of all the markers. A recording always has the markers *Start* and *End*.

Using ▲ ▼ you can now select a single marker. Press the **OK** button to continue playback at the selected marker.


When the list of markers is open, you can use the button  to assign a particular function to a marker, so that when playback reaches this marker the function is automatically performed.

You can assign the following functions to markers:

- Press the button  once – the marker is interpreted as a loop. When the playback reaches a loop marker, it jumps to the previous marker. A loop marker is labelled **L** in the list of markers. A yellow vertical line is shown in the status indicator.
- Press the button  twice – the marker becomes a jump marker. When the playback reaches a jump marker, it jumps to the next marker. A jump marker is labelled **J** in the list of markers. A white vertical line is shown in the status indicator. Use jump markers, e.g. to jump over commercial breaks.
- Press the button  three times – this marker has no special function, but can be used during playback as place for a loop or jump.

Press the **red** button to delete the selected marker from the list. The *Start* and *End* markers cannot be deleted.

Press the **F2** button or **EXIT** to close the list.

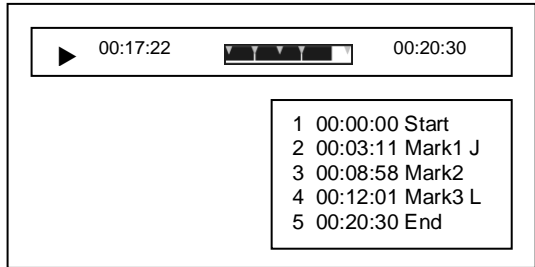

Using serial interface

The serial data interface "DATA" offers you the possibility to connect the receiver to a PC. Therefore you need a PC and serial cable (On the PC-side a female SUB-D connector with 9 or 25 pins and on Receiver-side a RJ11 plug with 6 pins).

Via this connection you can perform software updates and channel lists up- and downloads. The required information and software tools are available at the manufacturer's homepage.

Make a contribution to environmental protection

 
Do not throw batteries into domestic waste. As a consumer you are obliged to return used batteries. You can bring them to a public collection station in your commune or elsewhere where batteries of the same type are sold.

The following signs can be found on batteries including harmful substances:

Pb = battery includes lead

Cd = battery includes cadmium

Hg = battery includes mercury



Hints for disposal

If your device is once disused you should not just throw it into domestic waste. Surely there is a collecting point for old devices where it can be collected and recycled.



Trouble-shooting

Every electric device can have a malfunction. It does not automatically mean that it is defective. In most cases it happens because of a feed cable, plug-and-socket connections or access mistakes. Please control the following items before taking the receiver to your specialised dealer:

Problem	Possible causes	Help, Tips
Receiver can not be turned ON	Power cable not connected to mains	Check if power cord is plugged in correctly. Try another electric device at the same power socket.
	Batteries of the remote control are not inserted / inserted faulty	Check batteries
No or bad picture	TV set is running on wrong channel	Check set up of the TV set
	Scart cable is damaged or plugged in incorrectly	Replace or plug in the Scart cable correctly
No audio	Volume is set too low	Increase volume
	Cable damaged or plugged in incorrectly	Check cable and ports
Remote control does not work	Distance to big	Come closer to receiver, point remote control directly towards receiver
	Batteries are exhausted or inserted incorrectly	Insert batteries correctly
	IR receiver is covered or not reachable by the IR signal	Remove barriers between remote control and receiver
	Timer is activated	Deactivate timer
Time is displayed wrongfully	Difference between local time and GMT is set incorrectly.	Enter menu <i>Receiver setup</i> and set time difference correctly
Timer is activated at the wrong time	Difference between local time and GMT is set incorrectly.	Enter menu <i>Receiver setup</i> and set time difference correctly
Channel Change On Screen graphic shows: „short circuit or overload at the antenna input“	Coaxial cable damaged	Check coaxial cable and F-plug
	LNB damaged or defective	Check or exchange LNB
Interference at programmes with a frequency at about 12480 MHz	Interference may be caused by cellular phones (DECT) near the receiver	Keep more distance between cellular phone and receiver/antenna cable.
No picture, Channel change on screen graphic shows "No valid signal!"	Cable is defect or plugged in incorrectly	Check cable and ports
	Channel has changed transponder	Perform channel search
	Satellite antenna is not installed correctly	Re-Adjust satellite antenna
	Incorrect Settings in menu „Settings“	Correct settings or restore the factory default status

Technical data

General	<ul style="list-style-type: none"> • 6000 channels • On screen video text and VBI video text
Fast-OSD	<ul style="list-style-type: none"> • quick channel change (zapping) • no delay at on screen graphic display • big type for better readability • concise help for all menus
EPG	<ul style="list-style-type: none"> • Electronic Programme (EPG)
Channel list editor	<ul style="list-style-type: none"> • copy, replace, delete • blockwise operations
Channel search	<ul style="list-style-type: none"> • automatic channel search • identification of encrypted channels • manual channel search • Display for signal strength and quality • Separate audio output settings for SCART and Digital • SWAP function • DATA interface for updates and channel list transfer; updates available via satellite
Hardware	
CPU	<ul style="list-style-type: none"> • 32 bit RISC CPU
HDMI	<ul style="list-style-type: none"> • with Upscaler
Video	<ul style="list-style-type: none"> • 1 x SCART with FBAS, Y/C, YUV or RGB support • 16:9 signal
Audio	<ul style="list-style-type: none"> • Audio-DAC • Optical audio out • Volume control
Handling	<ul style="list-style-type: none"> • Remote control, rare panel control
Power requirement	<ul style="list-style-type: none"> • +12 Volt • Standby mode: Low-Power Standby ON <1W
Batteries for remote control	<ul style="list-style-type: none"> • 2x1.5V (size AAA)
Surrounding temperature	<ul style="list-style-type: none"> • +5°C to +40°C
Dimensions	<ul style="list-style-type: none"> • B x H x T: 230 x 35 x 140 mm
Weight	<ul style="list-style-type: none"> • Ca. 580g

Subject to change without prior notice. Errors in interpretation excepted.



This product complies with the requirements imposed by the 2006/95/EC (repealing the 73/23/EEC Directive, amended by the 93/68/EEC Directive) and 2004/108/EC (repealing 89/336/EEC Directive) Directives.

A handwritten signature in blue ink, appearing to be "Svend Kristiansen".

Svend Kristiansen
Quality Manager

Triax A/S
Bjørnkærvej 3
8783 Hornsyld
Danmark

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

