



OKO INTERNATIONAL COMPANY
1072 E Newport Center Dr. Deerfield Beach, FL 33442
For more information please visit
www.android-usa.com

ANDROID®



Instruction manual
www.android-usa.com



Please read before use!

INTRODUCTION

Thank you for choosing ANDROID® SMARTWATCH AD721. This user's manual the best use of this Bluetooth companion.
The Company reserves the right to make changes to the technical specifications described in this manual, without advance notice.
Note:
The pictures used in this manual are functional schematic diagrams and may differ from your smart watch displays.
Please read these notes carefully before using the ANDROID® SMARTWATCH to ensure the safe and correct use.

Safety and Performance


Do not use the ANDROID® SMARTWATCH while it is charging. Do not use ANDROID® SMARTWATCH outdoors during a lightning storm to avoid being struck by lightning or other injuries.
Do not place the battery on or near fires, stoves, or other high-temperature locations. Do not store the battery in direct sunlight, or use or store the battery inside cars in hot weather. Doing so may cause the battery to generate heat, rupture, or ignite. Using the battery in this manner may also result in a loss of performance and a shortened battery life. The use of the SMARTWATCH in this situation may lead to failure and cause a fire.
Keep charging adapter or other flammable materials away from the body in order to avoid fire, explosion, or other hazard.
Do not attempt to disassemble, repair or rebuild the SMARTWATCH.
Do not use a non-original battery.

This SMARTWATCH may affect medical equipment such as pacemakers, hearing aids or other electronic devices. To avoid potential interference, it is recommended that you always maintain a distance of at least 6 inches between your ANDROID® SMARTWATCH and any electronic medical equipment.
Do not use your ANDROID® SMARTWATCH while driving. Stop the car before making or answering phone calls or use a separate hands-free device.
Keep ANDROID® SMARTWATCH and charger out of reach of children. Do not allow unsupervised children to use ANDROID® SMARTWATCH or charger.
Operating conditions: temperature 5 °C - 40 °C, humidity 35% - 85%.
Do not wipe the ANDROID® SMARTWATCH with alcohol, thinner, solvents or benzene solution. Avoid buildup of dirt that may prevent your ANDROID® SMARTWATCH from making contact with the charger. Clean regularly.


WATCH INFORMATION

All ANDROID® watches are made with the finest premium-grade materials. We have listed below how to best care for your watches to ensure the materials and workmanship are well maintained.
How to care for your ANDROID® SMARTWATCH:
The ANDROID® SMARTWATCH is SPLASH resistant. That means it will withstand moisture on the surface, as with rain or splashes. Immediately wipe away any moisture with a soft cloth. DO NOT immerse your splash resistant watch in water. DO NOT wear your splash resistant watch in the shower. DO NOT wear your splash resistant watch in a steam room or sauna.
DO NOT swim while wearing your splash resistant watch.
Moisture may damage your leather strap.

IN THE BOX

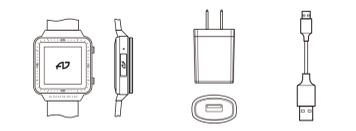

AD721 Galactopus Touch Screen (GTS) Instructions

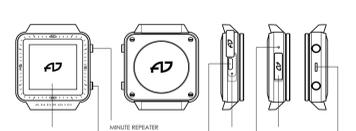

CHARGING INSTRUCTION



CHARGING



1) When the ANDROID® SMARTWATCH is at low power, the screen will appear RED.
2) When the ANDROID® SMARTWATCH is charging, the CHARGER PLUG IN (green) icon appears.
3) When charging is complete, the FULLY CHARGED symbol (green) appears. Unplug the USB wire from the USB part of the ANDROID® SMARTWATCH.

This watch has a touch screen. Use your finger to select items on the screen.
Do not use any instrument, pointer, or wand on the touch screen. Do not press hard on the screen.
Touch and slide the screen from left to right or right to left.
Press and hold the RETURN button for 3-5 seconds to turn power ON/OFF.
Press and release the MINUTE REPEATER button when the screen is ON.



INTERFACE



The screen sequence is: TIME ALARMS, CONTACT LIST, CALL & MESSAGE, Pedometer, CALCULATOR, CHRONOGRAPH, CALENDAR, MUSIC CONTROL, WORLD CLOCK, VOICE MEMO, BLUETOOTH SETTINGS. It is a continuous sequence. Press the RETURN BUTTON at any time to return to the previous screen.

DATE SETTING



Step 1: To set the date: go to SETTINGS.
Step 2: Touch DATE/TIME, then touch DATE.
Step 3: To select the MONTH, DATE, or YEAR, scroll up/down.
Step 4: Touch DONE to save.

TIME SETTING



Step 1: To set time: go to SETTINGS.
Step 2: Touch DATE/TIME, then touch TIME.
Step 3: Scroll up/down to select the hour and minute.
Step 4: Touch DONE to save.

Time Zone Setting




Step 1: To set the time zone: go to SETTINGS.
Step 2: Touch DATE/TIME, then touch TIME ZONE.
Step 3: Touch and slide the screen up/down to the city. Touch to select the city.

24 Hour/Daylight Saving Setting




Step 1: To set 24 hour clock/ Daylight saving: go to SETTINGS.
Step 2: Touch DATE/TIME.
Step 3: Touch 24 HOUR CLOCK/ Daylight Saving, to turn ON or OFF.

BRIGHTNESS SETTING

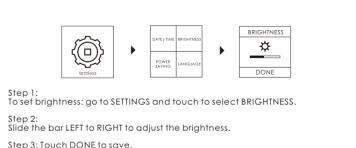


Step 1: To set brightness: go to SETTINGS and touch to select BRIGHTNESS.
Step 2: Slide the bar LEFT to adjust the brightness.
Step 3: Touch DONE to save.

POWER SAVING SETTING

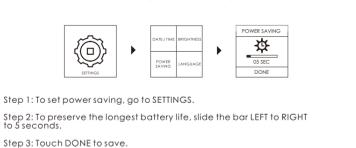


Step 1: To set power saving, go to SETTINGS.
Step 2: To preserve the longest battery life, slide the bar LEFT to RIGHT to 5 seconds.
Step 3: Touch DONE to save.

LANGUAGE SETTING

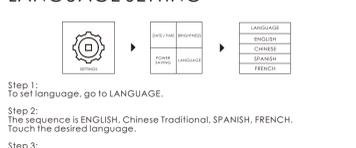


Step 1: To set language, go to LANGUAGE.
Step 2: The sequence is ENGLISH, Chinese Traditional, SPANISH, FRENCH. Touch the desired language.
Step 3: Press RETURN button.

View Time

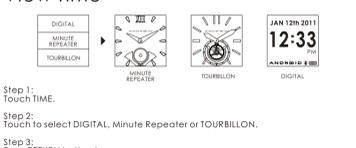


Step 1: Touch TIME.
Step 2: Touch to select DIGITAL, Minute Repeater or TOURBILLON.
Step 3: Press RETURN button to save.

ALARM

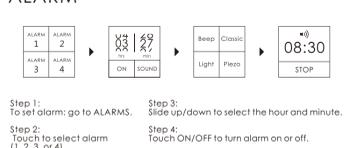

Step 1: To set alarm: go to ALARMS.
Step 2: Touch to select alarm (1, 2, 3, or 4).
Step 3: Slide up/down to select the hour and minute.
Step 4: Touch ON/OFF to turn alarm on or off.

PHONEBOOK

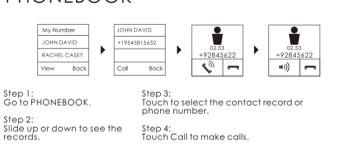

Step 1: Go to PHONEBOOK.
Step 2: Slide up or down to see the records.
Step 3: Touch to select the contact record or phone number.
Step 4: Touch CALL to make calls.
When incoming call answered, you can select Speak mode or Hand free mode.

CALL & MESSAGE




Step 1: To view CALL LOGS, go to Call & Message.
Step 2: Touch CALL LOGS.
Step 3: Slide up or down to view call logs.
Step 4: Touch number / record to view or call.

PEDOMETER



Step 1: Touch START to start.
Step 2: Touch STOP to Pause.
Step 3: Touch GO to continue.
Step 4: Touch RESET to reset to zero.

CALCULATOR

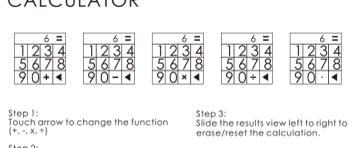


Step 1: Touch arrow to change the function (+, -, x, /).
Step 2: Touch = to calculate.
Step 3: Slide the results view left to right to erase/reset the calculation.

CHRONOGRAPH




Step 1: Touch START to start.
Step 2: Touch LAP to record split/lap times.
Step 3: Touch STOP to end timing.
Step 4: Touch the numbered lap time display at top of screen to view lap times.
Step 5: Touch RESET to reset to zero and erase lap times.

CALENDAR

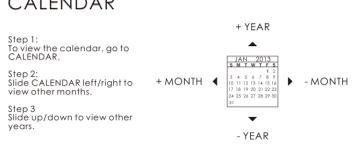


Step 1: To view the calendar, go to CALENDAR.
Step 2: Slide CALENDAR left/right to view other months.
Step 3: Slide up/down to view other years.

MUSIC CONTROL

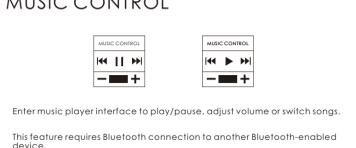

Enter music player interface to play/pause, adjust volume or switch songs.
This feature requires Bluetooth connection to another Bluetooth-enabled device.

WORLD CLOCK

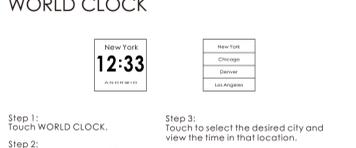

Step 1: Touch WORLD CLOCK.
Step 2: Slide to see the world cities.
Step 3: Touch to select the desired city and view the time in that location city.

VOICE MEMO



Step 1: Touch to select VOICE MEMO
Step 2: Touch red circle to RECORD
Step 3: Touch square icon to STOP.
Step 4: Touch lines at top left to view recorded memos.
Step 5: Touch to select a memo.
Step 6: Touch OPTIONS to Play, Append, or Delete memo.

BLUETOOTH ANDROID PHONE ONLY



Use your Android Phone to download the ANDROID® SMARTWATCH app from our website at www.android-usa.com.
Step 1: ANDROID® SMARTWATCH: Go to BLUETOOTH
Step 2: ANDROID® SMARTWATCH: Touch TO TURN on.
Step 3: Phone: Turn on BLUETOOTH. Unpair your phone from any other Bluetooth device.
Step 4: Phone: Search for device / available devices.
Step 5: Phone: Touch to select your ANDROID® SMARTWATCH on the list of available devices.

BLUETOOTH ANDROID PHONE ONLY



Step 6: Phone: You will get a Bluetooth pairing request. Touch OK to Confirm security code/passkey of your device (default 0000).
Step 7: ANDROID® SMARTWATCH: You will get a Bluetooth pairing request. Touch (Yes/OK) to accept.
Step 8: Phone: You will get a MAP request. Touch OK to select.
Step 9: Phone: You will get a Contacts request. Touch OK to select.
Step 10: Phone: Your ANDROID® SMARTWATCH will appear as a Paired Device. Touch to select and activate Call Audio or Media functions.

LIMITED WARRANTY

ANDROID® SMARTWATCH has a one year limited warranty from the date of original purchase. You can register your warranty online at: www.android-usa.com, or email to info@android-usa.com.
This warranty covers manufacturers' defects, including the movement mechanism. The warranty DOES NOT cover leather straps, crystal lenses, batteries, buttons, crowns, bracelets, cases or plating. The warranty DOES NOT cover normal wear and tear of the watch. The warranty is void if damage is due to negligence and not as a direct result of manufacturer's defects.
We reserve the right to void this warranty should we find that the watch has been tampered with, forced open, or repaired by anyone other than our watch repair specialists.

Specification

Screen: 1.54" LCD display screen (240x240 pixel resolution)
Operation voltage: 3.7V-4.2V
Battery Capacity: 430mAh (Preval in-kind)
Standby time: 90 hours
Talk time: 1 hour - 2 hours (depending on network)
Capability with Android & Iphone®
Featured in 6 case colors w/quick change strap conf.
*Call and message capable with Android phone & only call capable with iPhone

SERVICE INSTRUCTION

Enclose the watch in its original packaging and with your proof of purchase. Clearly print your name, return shipping address, apt # (No PO Box), phone number, email address and a brief description of what is wrong.
Enclose a check or money order for \$15.00 for S&H for us to return your watch to you.
Send your watch to:
OKO International Company
PO Box 4021
Deerfield Beach, FL 33442
Any ANDROID® product received excluding shipping/handling fee will not be returned until payment is received. We cannot assume responsibility for any loss or damage under these circumstances.
Please allow approximately 30 days for your watch to be returned.

ANDROID USA Contact Information

Email: info@android-usa.com
ANDROID® inquiry hotline: 954-426-2822 or 888-868-1828.
Website: www.android-usa.com
REPAIR OR REPLACEMENT ESTIMATIONS:
Watch Battery \$40
Leather Strap \$30-\$50
Exotic Leather Band \$90-\$150
Metal Bracelet \$100-\$120
Case and Crystal \$80-\$110

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
□ Reorient or relocate the receiving antenna.
□ Increase the separation between the equipment and receiver.
□ Connect the equipment into an outlet on a circuit different from which the receiver is connected.
□ Consult the dealer or an experienced radio/TV technician for help.