### user manual



You have made an excellent choice with your **iConnect™ media keyboard**.

This product comes with a limited one-year warranty. Before using, please read and follow these instructions. If you still need help, see the back page for other support options.

For more about our products, visit **www.life-works.com**.

Model IH-K230MB

#### system requirements

- Windows® XP or Windows Vista®
- USB port

#### contents


features get started your new keyboard dock your iPod or iPhone using your keyboard product operating tips troubleshooting

### features

- charge-n-sync iPod® or iPhone® with iTunes®
- illuminated touch-sensitive media keys
- 2 rotating USB 2.0 ports
- rubberized wrist rest

### get started

If you have not done so already, follow the steps in the **get started** guide to connect your new hardware.

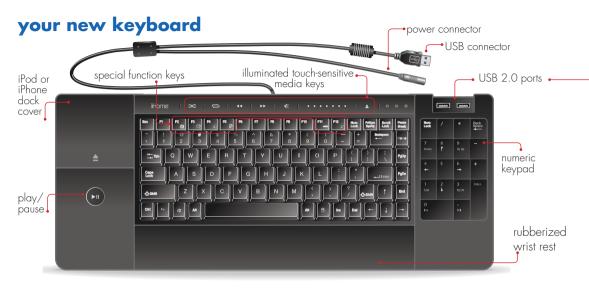



Please see your **get started** guide for instructions on how to connect your new hardware to your computer.

### dock your iPod or iPhone

# ► WARNING Keyboard must be connected to AC adapter at all times when in use.

Your keyboard is designed to sync and charge your iPod or iPhone when docked.

1. gently slide the dock cover forward



#### 2. insert your iPod or iPhone

For a snug fit, use one of the three inserts before docking your iPod or IPhone.



See the table on next page for which insert to use. (Look for the number on the back of the insert.)

device	use insert
iPod nano (1 <sup>st</sup> , 2 <sup>nd</sup> , 3 <sup>rd</sup> and 4 <sup>th</sup> generation)	1
iPod classic (80GB, 120GB) iPod 5G (30 GB) iPod touch, 1ª and 2 <sup>nd</sup> generation (8GB, 16GB, 32GB)	2
iPhone 3G iPod classic (160GB) iPod 5G (60GB, 80GB)	3

## using your keyboard

### adjust the volume from the keyboard

Slide finger across volume control to adjust volume left to lower, right to increase.



Press the  $\boxed{m}$  key + the special function key for the desired action (see next page).

### special function keys

function key	function
F2 F <sup>2</sup>	My Computer
F3 <b>F3</b>	My Favorites
F4 F4	home
F5 <b>F5</b> Ø	search
F]]	wake
F12 F12 z <sup>z</sup>	sleep

### media keys

media key	function
	shuffle
ţ	repeat
••	previous track
	next track
*	mute
	for use in iTunes only: if iPod or iPhone selected, ejects docked iPod or iPhone; otherwise opens CD-ROM drive

## product operating tips

- **WARNING:** Always connect the supplied AC adapter when using the keyboard.
- Use one of the included inserts to make your iPod or iPhone fit securely in the dock. (See "dock your iPod or iPhone" on page 6.)

## troubleshooting

situation	try this
does not charge or	<ul> <li>Ensure AC adapter is connected.</li> <li>Ensure USB cable is connected.</li> <li>Ensure device is seated correctly.</li> <li>Ensure iTunes is open.</li> </ul>
or USB 2.0	<ul> <li>Ensure USB cable is connected.</li> <li>Ensure AC adapter is connected.</li> <li>Connect keyboard to a USB port on the computer, not a USB hub.</li> </ul>

#### **FCC Statement**

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult a service representative for help.

Properly shielded and grounded cables and connectors must be used in order to comply with FCC emission limits. LifeWorks is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

Responsible party:

LifeWorks Technology Group LLC 1412 Broadway, New York, NY 10018



FC Tested To Comply With FCC Standards FOR HOME OR OFFICE USE

**Warning** Improper setup, use and care of this product can increase the risk of serious injury, death or device damage. Read and keep this guide and all other printed guides for future reference. For updated guides or replacements, go to www.life-works.com

Do Not Attempt Repairs Do not attempt to take apart, open, repair, service or modify the device(s). Doing so may risk electric shock or other hazard. Evidence of any attempt to open or modify the device, including any peeling, puncture or removal of labels, will void the Limited Lifetime Warranty.

A Choking Hazard This product contains small parts that may pose a choking hazard to children and pets.

#### Keyboard and Mouse Devices: Health Warning

Use of a keyboard or mouse may be linked to serious injuries or disorders. As in many activities, when using a computer you may experience occasional discontiont in various parts of your body. However, do not ignore symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation or stiffness. Promptly see a qualified doctor, even if symptoms occur when you are not working at your computer.

There is general consensus among researchers that there may be many factors linked to the occurrence of these symptoms, including overall health, stress, physical condition and how a person positions and uses his or her body during work and other activities (including the use of a keyboard or mouse). The amount of time a person spends performing an activity may also be a factor. If you have questions about how your own lifestyle, activities or physical condition may be related to these symptoms, see a qualified health professional.

#### **AC-Powered Devices**

Failure to take the following precautions can result in serious injury or death from electric shock or fire, or in damage to the device.

- Use only the power supply unit and AC power cord that came with your device or from an authorized repair center. Confirm that your electrical outlet provides the type of power indicated on the power supply unit in terms of voltage (V) and frequency (Hz). If you are not sure of the type of power supplied to your home, consult a qualified electrician.
- Avoid non-standard power sources, such as generators or inverters, even if the voltage and frequency appear acceptable. Only use AC power provided by a standard wall outlet.
- Do not overload your wall outlet, extension cord, power strip or other electrical receptacle. Confirm that they are rated to handle the total current drawn by the device and any other devices on the same circuit.
- Protect the power cords from being walked on. Protect cords from being pinched or sharply bent, particularly where they connect to the power outlet, the power supply unit and the device. Do not jerk, knot, sharply bend or otherwise abuse the power cords. Do not expose the power cords to heat sources.
- Keep children and pets away from the power cords. Do not allow them to bite or chew on the cords.
- When disconnecting the power cords, pull on the plug; do not pull on the cord.

If a power cord or power supply becomes damaged in any way, stop using it immediately. Unplug your device during lightning storms or when unused for long periods of time.

#### technical support

for technical support please visit **www.life-works.com** or call (877) LIFE-540 (877-543-3540)

#### one-year warranty

for warranty information, please visit www.life-works.com/warranty © 2009 LifeWorks Technology Group LLC.

iHome is a trademark of SDI Technologies Inc. used under license. Windows Vista® is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. iPod and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc., registered in the U.S. All other brands and logos are trademarks of their respective companies.

Printed in China

document version number 090512-2 for model number IH-K230MB