



8.0 Megapixel Digital Camera t831

User's Manual



Questions? Need some help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



Or visit
www.polaroid.com/support

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.



This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to www.polaroid.com and click on Company or call the customer service number for your country listed in the instruction manual.

READ THIS FIRST

Trademark Information

- Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.
- Pentium® is a registered trademark of Intel Corporation.
- Macintosh is a trademark of Apple Inc.
- SD™ is a trademark.
- Other names and products may be trademarks or registered trademarks of their respective owners.

Product Information

- Product design and specifications are subject to change without notice. This includes primary product specifications, software, software drivers, and user's manual. This User Manual is a general reference guide for the product.
- The product and accessories that come with your camera may be different from those described in this manual. This is due to the fact that different retailers often specify slightly different product inclusions and accessories to suit their market requirements, customer demographics, and geographical preferences. Products very often vary between retailers especially with accessories such as batteries, chargers, AC adapters, memory cards, cables, pouches, and language support. Occasionally a retailer will specify a unique product color, appearance, and internal memory capacity. Contact your dealer for precise product definition and included accessories.
- The illustrations in this manual are for the purposes of explanation and may differ from the actual design of your camera.
- The manufacturer assumes no liability for any errors or discrepancies in this user manual.

SAFETY INSTRUCTIONS

Please read all **Warnings** and **Cautions** before using this product.

Warnings

If foreign objects or water enter the camera, turn the power off and remove the battery.

Continued use may cause personal injury. Please consult our friendly customer service.



If the camera has been dropped or its case has been damaged, turn the power off and remove the battery.

Continued use may cause personal injury. Please consult our friendly customer service.



Do not disassemble, change or repair the camera.

Service should only be performed by a qualified technician. Please contact our friendly customer service should you have any questions.



Do not use the camera in areas near water.

Continued use may cause personal injury. Please consult our friendly customer service.



Do not place the camera on unstable surfaces.

This might cause the camera to fall and cause damage.



Keep the battery out of the reach of children.

Adult supervision is recommended when the product is being operated by young children.



Do not use the camera while you are walking, driving or riding a motorcycle.

This may result in you having an accident.



Cautions

Insert the battery properly paying careful attention to the polarity (+ or -) of the terminals.

Inserting the battery with its polarities inverted may cause damage to the product, injury, or damage to the surrounding areas due to the battery leaking.



Do not fire the flash close to anyone's eyes.

This may cause damage to the person's eyesight.



Do not subject the LCD monitor to impact.

This may damage the glass on the screen or cause the internal fluid to leak. If the internal fluid comes in contact with your eyes, flush with fresh water and seek medical attention.



A camera is a precision instrument. Do not drop, strike or use excessive force when handling the camera.

This may cause damage to the camera.



Do not use the camera in humid, steamy, smoky, or dusty places.

This may cause fire or electric shock.



Do not remove the battery immediately after long period of continuous use.

The battery may become warm during continued use; this is normal. Touching a warm battery may cause personal injury.



Do not wrap the camera or place it in cloth or blankets.

This may cause heat to build up and deform the case, resulting in personal injury. Use the camera in a well-ventilated area.



Do not leave the camera in places where the temperature may rise significantly, such as the inside a car.

This may adversely affect the performance of the product.



Before you move the camera, disconnect all cords and cables.

Failure to do this may damage cords and cables, resulting in personal injury or damage to the product.



Notes on Battery Usage

When you use the battery, carefully read and strictly observe the **Safety Instructions** and the notes described below:

- Use only the specified battery (3.7V).
- Avoid extremely cold environments as low temperatures can shorten the battery life and reduce camera performance.
- When you are using a new rechargeable battery or a rechargeable battery that has not been used for an extended period of time (a battery that passed the expiry date is an exception), it may affect the number of images that can be captured. To maximize its performance and lifetime, we recommend that you fully charge the battery and discharge it for at least one complete cycle before use.
- The camera may feel warm after a long period of continuous use. This is normal and not a malfunction.
- If the battery is not to be used for a long period of time, remove it from the camera. If stored for a long time in a fully charged condition, its performance may be impaired.
- Always keep the battery terminals clean.
- Only use the specified battery or its equivalent with this product.
- Properly dispose the battery when it will no longer charge.
- Do not short the terminals of the battery.

Questions?

Call our toll-free customer service number. Look for the insert with this icon:

Or visit www.polaroid.com.



CONTENTS

7 INTRODUCTION

- 7 Overview
- 7 Package Contents

8 GETTING TO KNOW YOUR CAMERA

- 8 Front View
- 9 Rear View
- 10 LCD Monitor Display

12 GETTING STARTED

- 12 Preparation
- 13 Charging the Battery
- 14 Initial Settings

16 CAPTURE MODE

- 16 Capturing Images
- 17 Taking Images When the Smile Feature Is On
- 18 Recording Shots using Face Detection Technology
- 19 Blink Detection Feature
- 20 Recording Voice Memos

21 VIDEO MODE

- 21 Recording Video Clips
- 21 Playing Back Video Clips

22 PLAYBACK MODE

- 22 Playing Back Still Images
- 23 Thumbnail Display
- 23 Removing Red-eye
- 24 Attaching Voice Memos
- 25 Protecting Images
- 26 Erasing Images

27 MENU OPTIONS

- 27 Capture Menu
- 30 Video Menu
- 31 Playback Menu
- 32 Setup Menu

33 TRANSFERRING FILES TO YOUR COMPUTER

- 33 Downloading Your Files

34 EDITING SOFTWARE INSTALLATION

35 SPECIFICATIONS

36 APPENDIX

- 36 Possible Number of Shots
- 37 Troubleshooting
- 38 Connecting to a PictBridge Compliant Printer

INTRODUCTION

Overview

Congratulations on your purchase of the new Polaroid digital camera. Capturing high-quality digital images is fast and easy with this state-of-the-art smart camera. Equipped with a 8.0-megapixel CCD, this camera is capable of capturing images with a resolution of up to 3264 x 2448 pixels.

Package Contents

Carefully unpack your camera and ensure that you have the following items:

Common Product Components:

- Digital Camera
- User's manual
- Software CD-ROM
- USB cable
- AV cable
- Camera strap
- Camera pouch
- Rechargeable lithium-ion battery
- Battery charger
- AC adapter for battery charger

Optional Accessories:


- SD/SDHC memory card (We recommend the use of a Polaroid SD card - purchased separately - up to 4GB)



-
- Accessories and components may vary by retailer.


GETTING TO KNOW YOUR CAMERA

Front View

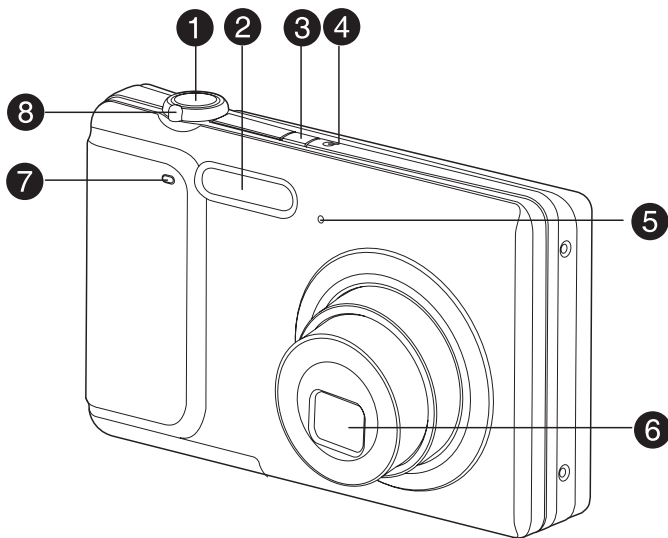

- 1. Shutter button
- 2. Flash
- 3.  Power button
- 4. Status LED
- 5. Microphone
- 6. Lens
- 7. Self-timer LED
- 8. Zoom lever

Rear View

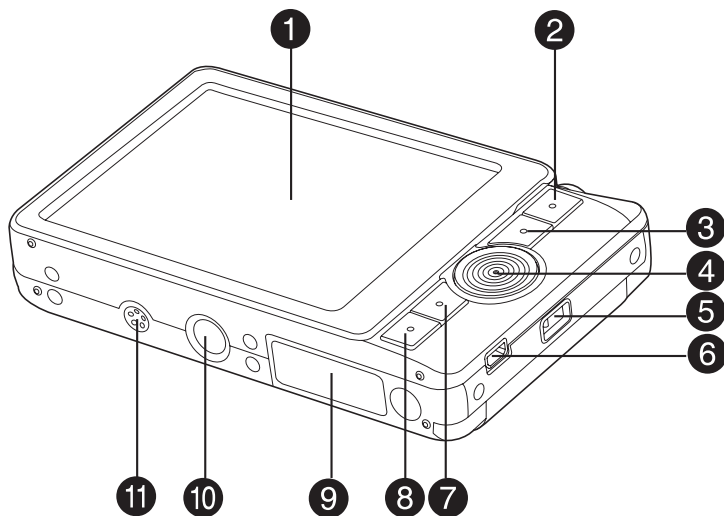


- | | |
|--|--|
| 1. LCD monitor | |
| 2. Mode button | |
| 3. Menu button | |
| 4. Direction button | |
| ▲ button | |
| ▼ button | |
| ▶ button | |
| ⚡ button | |
| ◀ button | |
| Self-timer button | |
| Delete button | |
| ◀ button | |
| Backlight / Exposure compensation button | |

- | | |
|--------------------------------|--|
| 5. Strap holder | |
| 6. USB or AV OUT terminal | |
| 7. Set button | |
| Display button | |
| 8. Play button | |
| 9. Battery / Memory card cover | |
| 10. Tripod socket | |
| 11. Speaker | |

LCD Monitor Display

Capture mode


1. Zoom status
2. Voice memo
3. Battery condition
 - [] Full battery power
 - [] Medium battery power
 - [] Low battery power
 - [] No battery power
4. Flash mode
 - [Blank] Auto Flash
 - [] Red-eye Reduction
 - [] Pre-flash
 - [] Always ON
 - [] Flash Off
5. Storage media
 - [] Internal memory (no card)
 - [] SD/SDHC memory card
6. [] Histogram
7. Main focus area (When the shutter button is pressed halfway)
8. Image quality
 - [] Fine
 - [] Standard
 - [] Economy
9. Image size resolution
 - [] 3264 x 2448
 - [] 2816 x 2112
 - [] 2272 x 1704
 - [] 1600 x 1200
 - [] 640 x 480
10. Available number of shots
11. ISO
 - [Blank] Auto
 - [] ISO 64
 - [] ISO 100
 - [] ISO 200
 - [] ISO 400
 - [] ISO 800
 - [] ISO 1600
12. Self-timer icon
 - [] 2 sec.
 - [] 10 sec.
 - [] 10+2 sec.
13. Date and time
14. [] Exposure compensation
 - [] Backlight correction
 (Adjust exposure value with the ◀ / ▶ buttons)
15. Capture mode icon

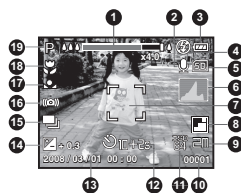

- [Blank] Single
- [] Continuous
- [] Auto Exposure Bracketing
- 16. Slow shutter warning
- 17. White balance
 - [Blank] Auto
 - [] Incandescent
 - [] Fluorescent 1
 - [] Fluorescent 2
 - [] Daylight
 - [] Cloudy
 - [] Manual
- 18. Focus setting
 - [Blank] Auto focus
 - [] Face detection
 - [] Macro
 - [] Infinity
- 19. Scene mode
 - [] Program AE
 - [] Smile Shot
 - [] Anti Shake
 - [] Panorama
 - [] Portrait Man
 - [] Portrait Lady
 - [] Landscape
 - [] Sports
 - [] Night Portrait
 - [] Night Scene
 - [] Candlelight
 - [] Fireworks
 - [] Text
 - [] Sunset
 - [] Sunrise
 - [] Splash Water
 - [] Flow Water
 - [] Snow
 - [] Beach
 - [] Pets
 - [] User Setting


Video mode []

1. Zoom status
2. Flash mode
3. Battery condition
4. Storage media
5. Main focus area
6. Video quality
7. Video resolution
8. Available recording time/Elapsed time
9. Self-timer icon
10. Date and time
11. Focus setting
12. Mode icon

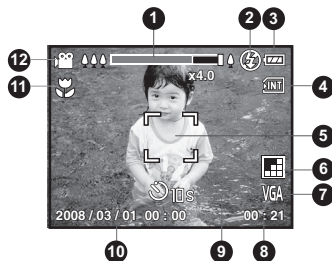



Playback mode [] - Still image playback

1. Voice memo
2. Battery condition
3. Storage media
4. Histogram
5. ISO
6. Image quality
7. Image size resolution
8. File number
9. Folder number
10. Date and time
11. Exposure value
12. Aperture value
13. Shutter speed value
14. Protect icon
15. Mode icon

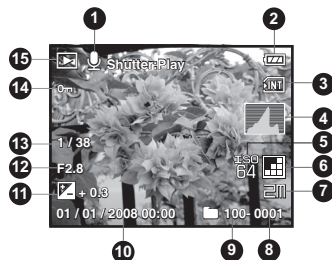

Playback mode [] - Video playback


 

1. Video status bar
2. Elapsed time
3. File number
4. Folder number
5. Sound off icon (When the  button is pressed during video playback)
6. Play mode
7. Mode icon
8. Total recorded time

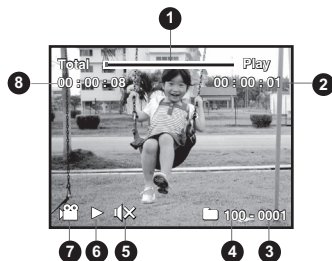


GETTING STARTED

Preparation

1. Attach the camera strap.
2. Open the battery/memory card cover.
3. Insert the supplied battery with correct orientation as shown.
4. Insert an SD/SDHC memory card (Optional).
 - The camera has 32MB internal memory (28MB available for image storage), but you can load an SD/SDHC memory card (We recommend the use of a Polaroid SD card - purchased separately - up to 4GB) to expand the camera's memory capacity.
 - Be sure to format the memory card with this camera before its initial usage.
5. Close the battery/memory card cover and make sure it is locked securely.

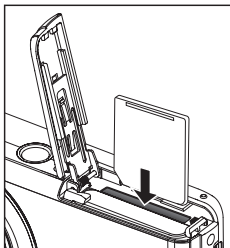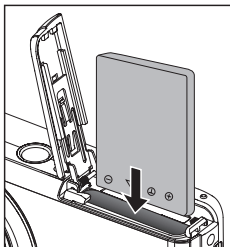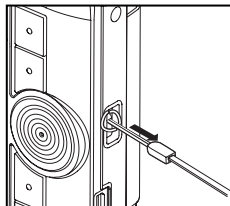

- To prevent valuable data from being accidentally erased from an SD/SDHC memory card, you can slide the write protect tab (on the side of the SD/SDHC memory card) to "LOCK".
- To save, edit, or erase data on an SD/SDHC memory card, you must unlock the card.
- To prevent damaging of an SD/SDHC memory card, be sure to turn off the power when inserting or removing the SD/SDHC memory card. If inserting or removing the SD/SDHC memory card with the power on, the camera will automatically turn off.

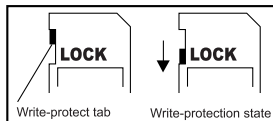


Charging the Battery

Charge the battery fully with the supplied battery charger before initial use.

1. Insert the battery into the battery charger.
2. Connect the power cord to the charger and insert the plug into a wall outlet.

- The status LED on the charger is red when charging has started and is green when charging is completed. The LED is green if no battery is inserted into the charger.
- Charging time varies according to the ambient temperature and the life of the battery.
- Remove the battery after charging is completed.

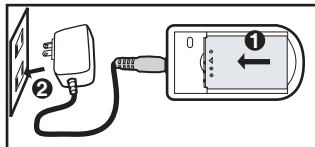

- The battery may feel warm after it has been charged or immediately after being used. This is normal and not a malfunction.
- When using the camera in cold areas, keep the camera and battery warm by holding them inside your outer clothes.

Initial Settings



Setting the Date and Time

The date/time needs to be set when:

- The camera is turned on for the first time.
- The camera is turned on after leaving the camera without the battery for an extended period of time.



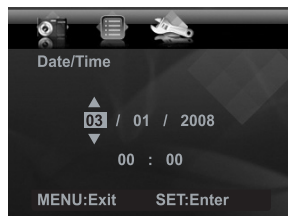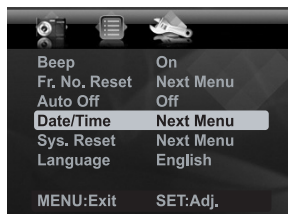


 
 





When the date and time information is not displayed on the LCD monitor, follow these steps to set the correct date and time.


1. Toggle the **MODE** button to [📷] or [📹].
2. Press the **MENU** button.
3. Select [Setup] with the **▶** button.
4. Select [Date/Time] with the **▲ / ▼** buttons, and press the **SET** button.
5. Select the date format with the **▲ / ▼** buttons, and press the **SET** button.
 - Select the item's field with the **◀ / ▶** buttons and adjust the value for the date and time with the **▲ / ▼** buttons.
 - The time is displayed in 24-hour format.
 - After confirming all settings are correct, press the **SET** button.
6. To exit from the [Setup] menu, press the **MENU** button.



  Choosing the Language




 
 

 
 

 
Specify what language in the menus and messages are to be displayed on the LCD monitor.

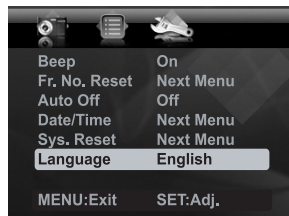
1. Toggle the  button to [] or []; or press the [] button.
2. Press the  button.
3. Select [Setup] menu with the  button.
4. Select [Language] with the  /  buttons and press the  button.
5. Select the displayed language with the  /  buttons and press the  button.
 - The setting will be stored.



Formatting the Memory Card or Internal Memory

This utility formats the internal memory (or memory card) and erases all stored images and data.

1. Press the [] button.
2. Press the  button.
3. Select [Setup] menu with  button.
4. Select [Format] with the  /  buttons, then press the  button.
5. Select [Execute] with the  /  buttons, and press the  button.
 - To cancel formatting, select [Cancel] and press the  button.

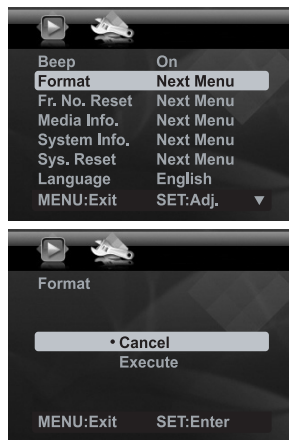

Questions?

Call our toll-free customer service number. Look for the insert with this icon:




 




Or visit www.polaroid.com.




CAPTURE MODE

 Capturing Images





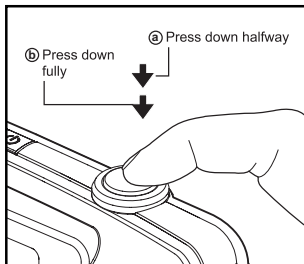





Your camera is equipped with a 3.0" full color TFT LCD monitor to help you compose images, playback recorded images/video clips or adjust menu settings.

1. Press the  button to turn the power on.
 - The status LED lights green when the camera is on.
 - If the power is turned on in [] or [] mode, the lens will extend forward and it is ready for shooting. In both modes, if the camera mode is changed to [], the lens barrel will retract into the camera body after 30 seconds.
2. Toggle the  button to [].
3. Compose your image in the LCD monitor.
 - Slide the zoom lever to  side to zoom in on the subject, and enlarges the subject on the LCD monitor.
 - Slide the zoom lever to  side to zoom out on the subject, and provides a wider angle image.
4. Press the shutter button.
 - Pressing the shutter button down halfway automatically focuses and adjusts the exposure, and pressing the shutter button down fully captures the images.
 - The focus area frame turns green when the camera is in focus and the exposure is calculated.
 - When the focus or exposure is not suitable, the frame of the focus area turns red. Release the shutter button and press it again to re-focus on the subject.



Taking Images When the Smile Feature Is On


 
With the camera's new "smile detection" function, this camera detects smiles so you do not miss those special moments in life.


1. Toggle the  button to [].
2. Press the  button.
3. Select [Scene mode] with the  /  buttons, and press the  button.
4. Select [Smile Shot] with the  /  buttons, and press the  button.
5. Press the  button to exit the menu mode, and the camera returns to preview display.



6. Compose the image, and press the shutter button down fully.




7. Once the camera detects a smile, it will automatically capture 3 images (by default, the flash mode setting is set to ).
 - If the flash mode setting is changed to  , the camera will only capture an image after it detects a smile.
 - When capturing group shots (if the number of people is more than 1), the camera will automatically capture the image(s) when it detects two smiles. The number of shots taken depends on the flash mode setting.
 - If the camera does not detect a smile within 5 seconds, the camera will automatically capture an image.
 - Press the shutter button once again to reactivate this function.

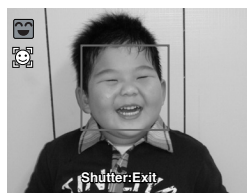

Recording Shots using Face Detection Technology

Face Detection Technology can identify and focus on the human faces in the image. This advanced function simultaneously detects up to 5 human faces regardless of their position in the scene.

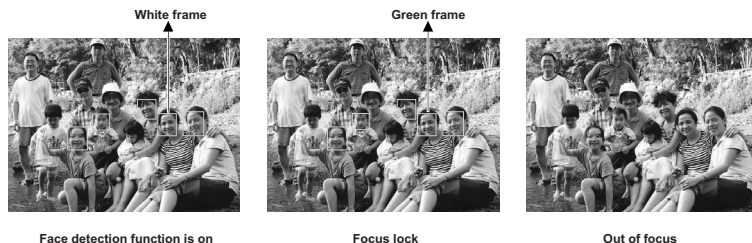

1. Toggle the **MODE** button to [].
2. Toggle the button until [] icon appears on the LCD monitor.
 - The white frame is identified as the “top priority” face (main focus frame), and gray ones around the other faces.
3. Press the shutter button halfway down to lock the focus.
 - The main focus frame simultaneously turns green.
 - If the “top priority” face is out of focus, all frames will be disappeared from the screen.
4. Press the shutter button down fully to capture your image.




- Subjects that are not suitable with this function:
 - a. A person is wearing glasses, sunglasses, or face is covered with hat or covered by hair.
 - b. A person that is turned sideways.

Blink Detection Feature

People must periodically blink to keep their eyes moist. Blinking is involuntary and fast. Most people taking pictures do not notice when the blink occurs in their subjects. However, with the new “blink detection” function, the camera can detect a blinking pattern while capturing an image.

1. Toggle the MODE button to [].
2. Press the MENU button.
3. Select [Blink Detect] with the / buttons, and press the SET button.
4. Select [On] with the / buttons, and press the SET button.
5. Press the MENU button to exit the menu mode, and the camera returns to preview display.
6. Press the shutter button to capture the image.

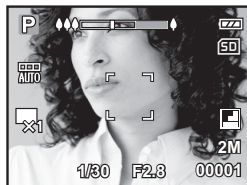

7. The camera starts analyzing the captured image. If camera detects that the subject has blinked, a warning message will pop out on the screen. Select [Yes] if you want to mark as a “blinked” image.





 

 
 

 





On the playback mode:

- A blink icon will be shown on the image.



Recording Voice Memos


A voice memo can be recorded once for 30 seconds in the still image mode immediately following a still image capture.


1. Toggle the  button to [].
2. Press the  button, and select the [Function] menu with the  button.
3. Select [Voice Memo] with the  /  buttons, and press the  button.
4. Select [On] with the  /  buttons, and press the  button.
5. Press the  button to exit from the menu.
 - An  icon is displayed on the screen.
6. Compose the image, press the shutter button down halfway, then press it down fully.
 - [VOICE RECORDING] is displayed on the screen immediately, and the voice memo recording starts.
7. Press the shutter button one more time during recording, or wait for 30 seconds.
 - [VOICE RECORD END] will be displayed and the recording will end.
 - An  icon is displayed with images that have been recorded with a voice memo.

VIDEO MODE

Recording Video Clips

This mode allows you to record video clips at a resolution of 320 x 240 / 640 x 480 pixels.


1. Toggle the **MODE** button to [].
2. Compose the image.
3. Press the shutter button.
 - The recording of the video clip will start.
 - Pressing the shutter button one more time will end the recording of the video clip.
 - The recording time depends on the storage size and the subject of the image to be recorded.
 - The zoom function cannot be used during video recording.

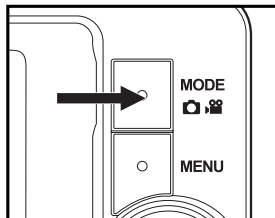

- When recording a video clip, the flash and "10+2 sec." self-timer function cannot be used.
- If the write speed of your SD/SDHC memory card is not fast enough for recording video clips in the currently selected quality, the video recording will stop. In this case, select a video quality lower than the current one.

Playing Back Video Clips

You can play back recorded video clips on the camera. You can also play back sound if recorded with the video.

1. Press the [] button.
 - The last image appears on the screen.
2. Select the desired video clip with the ◀ / ▶ buttons.
3. Press the **SET** button.
 - A press of the ▶ / ◀ buttons during playback allows fast forward play / fast reverse play.
 - To stop video playback, press the ▼ button. This stops playback and returns to the start of the video clip.
 - To pause video playback, press the **SET** button. This pauses video playback. To cancel pause, press the **SET** button again.




- Video clips cannot be displayed rotated or enlarged.
- Windows Media player or QuickTime Player is recommended to play back the video clip on your computer.
- QuickTime Player is a free media player available at www.apple.com; and compatible with Mac and Windows computers.
- For more information about the operation of the media player, refer to its respective help documentation.

PLAYBACK MODE

Playing Back Still Images

You can play back the still images on the LCD monitor.

1. Press the [▶] button.
 - The last image appears on the screen.
2. The images can be displayed in forward or reverse sequence with the ◀ / ▶ buttons.
 - To view the previous image, press the ◀ button.
 - To view the next image, press the ▶ button.
 - Pressing the ▲ button during image playback will result in a 90-degree clockwise rotation display.
 - Slide the zoom lever to ◯ side enlarges the image.
 - To return to normal magnification, slide the zoom lever to ■ side.

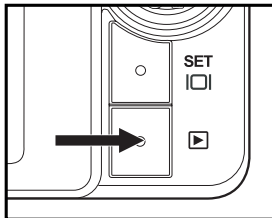


- An [📷] icon is displayed with the video data. Video clips cannot be rotated.
- An [🔊] icon is displayed with images which have an audio memo recorded.

Thumbnail Display

This function allows you to view 9 thumbnail images on the LCD monitor at the same time, which can let you quickly search for the image that you want.

1. Press the [▶] button.
 - The last image appears on the screen.
2. Slide the zoom lever to 100% side.
 - The images are displayed in the thumbnail display.
3. Press the ▲ / ▼ / ◀ / ▶ buttons to select the image to be displayed at regular size.
4. Press the ^{SET} [□] button.
 - The selected image is displayed at its regular size.

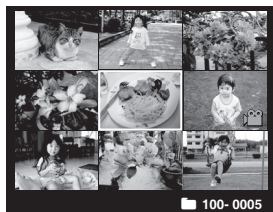


- An [🗨], [📷], [📷] icon may be displayed in a thumbnail.

Removing Red-eye

You can use this function to remove the red-eye phenomenon after an image is taken.

1. Press the [▶] button.
2. Select the image that you want to edit with the ◀ / ▶ buttons.
3. Press the ^{MENU} button.
4. Select [Fix Red Eyes] with the ▲ / ▼ buttons, and press the ^{SET} [□] button.
5. Select [Execute] with the ▲ / ▼ buttons, and press the ^{SET} [□] button.
6. View the changes on the corrected image.
7. To save your corrected image, select [Confirm] with the ▲ / ▼ buttons, and press the ^{SET} [□] button.
 - When this process ends, this replaces the original image with the corrected image.

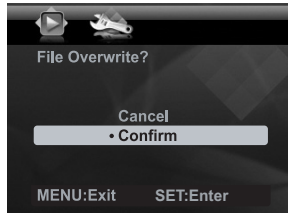

Attaching Voice Memos

A maximum of 30 seconds of audio can be recorded as a memo for captured still images. The voice memo can be recorded only once.

1. Press the [] button.
 - The last image appears on the screen.
2. Select the image to which you want to attach the voice memo with the ◀ / ▶ buttons.
3. Press the MENU button.
4. Select [Voice Memo] with the ▲ / ▼ buttons, and press the SET button.
5. Select [On] with the ▲ / ▼ buttons, and press the SET button.
6. Press the MENU button to exit from the menu.
7. Press the shutter button.
 - [VOICE RECORDING] is displayed on the screen and recording starts.
8. To stop recording a voice memo as it is being recorded, press the shutter button again.
 - [VOICE RECORD END] will be displayed and the recording will end. An [] icon is displayed with images that have been recorded with a voice memo.

Playing back voice memo



 
A press of the shutter button displays [VOICE PLAYBACK] and plays back the voice memo.



-
- Voice memo is only available for still images.

Protecting Images


 

Set the data to read-only to prevent images from being erased by mistake.

1. Press the [▶] button.
2. Select the image that you want to protect with the ◀ / ▶ buttons.
3. Press the MENU button.
4. Select [Protect] with the ▲ / ▼ buttons, and press the  button.
5. Select [Single] or [All] with the ▲ / ▼ buttons, and press the  button.
6. Select [Set] with the ▲ / ▼ buttons, and press the  button.
 - Protection is applied to the image and the camera returns to the playback mode.
 - The protect icon [Ⓜ] is displayed with protected images. When [All] has been selected, [Ⓜ] is displayed with all the images.



Canceling the Protection

To cancel protection for only one image, display the image on which you want to remove the image protection.




1. Select [Protect] with the ▲ / ▼ buttons from the playback menu, and press the  button.
2. Select [Single] or [All] with the ▲ / ▼ buttons, and press the  button.
3. Select [Cancel Protect] with the ▲ / ▼ buttons, and press the  button.
 - The removal of image protection is executed and the camera returns to the playback mode.




- Formatting an SD/SDHC memory card overrides protection, and erases all images regardless of their protected status.

Erasing Images

Erasing single image / Erasing all images

1. Press the [] button.
2. Select the image you want to erase with the ◀ / ▶ buttons.
3. Press the [] button.
4. Select [Single] or [All] with the ▲ / ▼ buttons, and press the  button.
 - [Single]: Erases the selected image or the last image.
 - [All]: Erases all of the images except for the protected images.
5. Select [Execute] with the ▲ / ▼ buttons, and press the  button.
 - To not erase, select [Cancel], and press the  button.


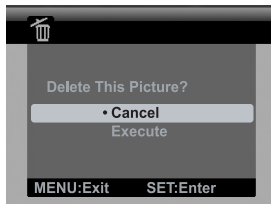


- Deleting an image will not affect sequential image numbering. For example, if you delete image number 240, the next captured image will be numbered 241 even though 240 no longer exists. In other words, an image-number is retired when an image is deleted and will not be reused or reassigned to another subsequently captured image.

MENU OPTIONS

Capture Menu

This menu is for the basic settings to be used when capturing still images.

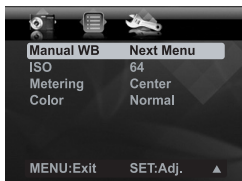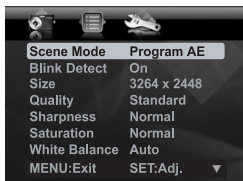

1. Toggle the **MODE** button to [].
2. Press the **MENU** button, and select the [Capture] / [Function] / [Setup] menu with the ◀ / ▶ buttons.
3. Select the desired option item with the ▲ / ▼ buttons, and press the **SET** button to enter its respective menu.
4. Select the desired setting with the ▲ / ▼ buttons, and press the **SET** button.
5. To exit from the menu, press the **MENU** button.

Scene Mode

Select from 21 different scene modes in accordance with the shooting conditions.

* Program AE / Smile Shot / Anti Shake / Panorama / Portrait Man / Portrait Lady / Landscape / Sports / Night Portrait / Night Scene / Candlelight / Fireworks / Text / Sunset / Sunrise / Splash Water / Flow Water / Snow / Beach / Pets / User Setting

Blink Detect

Refer to section in this manual titled "Blink Detection Feature" for further details.

Size

This sets the size of the image that will be captured.

- * [] 3264 x 2448
- * [] 2816 x 2112
- * [] 2272 x 1704
- * [] 1600 x 1200
- * [] 640 x 480

Quality

This sets the quality (compression) at which the image is captured.

- * [] Fine
- * [] Standard
- * [] Economy

Questions?

Call our toll-free customer service number. Look for the insert with this icon:

Or visit www.polaroid.com.



Sharpness

This sets the sharpness of the image that will be captured.

* Hard / Normal / Soft

Saturation


This sets the saturation of the image that will be captured.


* High / Normal / Low

White Balance


This sets the white balance for a variety of lighting conditions and permits images to be captured that approach the conditions that are seen by the human eye.


* [Blank] Auto


* [] Incandescent

* [] Fluorescent 1

* [] Fluorescent 2

* [] Daylight

* [] Cloudy

* [] Manual

Manual WB

This manually sets the white balance and stores it. Use of this is convenient when the white balance does not offer a good match.


Before selecting [Execute] and before taking your image, place a white paper in the scene and set the white balance manually.

* Cancel / Execute

ISO

This sets the sensitivity for capturing images. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixelated (grainier) the image will appear.

* [Blank] Auto


* [] ISO 64

* [] ISO 100

* [] ISO 200

* [] ISO 400

* [] ISO 800

* [] ISO 1600

Metering

This sets the metering method for calculating the exposure.

* Center: Averages the light metered from the entire frame, but gives greater weight to the subject matter at the center.

* Multi: The entire area of the screen is measured, and the exposure is calculated.

* Spot: A very small portion of the center of the screen is measured to calculate the correct exposure.



Color

This sets the color of the image that will be captured.

* Normal / Vivid / Sepia / Monochrome / Blue / Red / Green / Yellow / Purple

Capture Mode

This sets the recording method at the time of capturing images.

- * [Blank] Single: Captures one image at a time.
- * [] Continuous: Permits continuous capture of up to 3 images.
- * [] AEB: Permits 3 consecutive images in the order of standard exposure, underexposure and overexposure compensation.



-
- In [Continuous] and [AEB] capture mode, the [Voice Memo] is automatically fixed at [Off].

Voice Memo

Refer to section in this manual titled "Recording Voice Memos" for further details.

LCD Bright.

Select a brightness level for the LCD monitor.

The LCD becomes brighter with the ▲ button and darker with the ▼ button. The adjustment range is from -5 to 5.

Digital Zoom

This sets whether or not to use digital zoom at the time of photography.

* On / Off


Date Print

The date of recording can be printed directly on the still images. This function must be activated before the image is captured.

* On / Off

Video Menu

This menu is for the basic settings to be used when recording video clips.

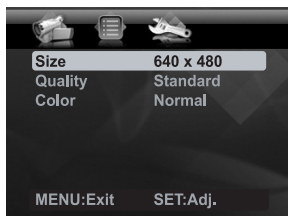

1. Toggle the **MODE** button to [].
2. Press the **MENU** button, and select the [Capture] / [Function] / [Setup] menu with the **◀ / ▶** buttons.
3. Select the desired option item with the **▲ / ▼** buttons, and press the **SET** button to enter its respective menu.
4. Select the desired setting with the **▲ / ▼** buttons, and press the **SET** button.
5. To exit from the menu, press the **MENU** button.

Size

This sets the size of the video clip that will be captured.

* [] 640 x 480

* [] 320 x 240

Quality

This sets the quality (compression) at which the video clip is captured.

* [] Fine

* [] Standard

Color

This sets the color of the video clip that will be captured.

* Normal / Vivid / Sepia / Monochrome / Blue / Red / Green / Yellow / Purple

Audio

This sets whether or not to record audio at the time of video recording.

* On / Off

LCD Bright.

Refer to section in this manual titled “LCD Bright.” in Capture Menu for further details.

Digital Zoom

Refer to section in this manual titled “Digital Zoom” in Capture Menu for further details.

Playback Menu

In the [] mode, choose which settings are to be used for playback.



1. Press the [] button.
2. Press the MENU button.
3. Select the desired option item with the ▲ / ▼ buttons, and press the SET button to enter its respective menu.
4. Select the desired setting with the ▲ / ▼ buttons, and press the SET button.
5. To exit from the menu, press the MENU button.

Fix Red Eyes

Refer to section in this manual titled “Removing Red-eye” for further details.

Dynam. Light.

This feature compensates for the unfavorable lighting conditions by brightening underexposed areas and balancing overexposed areas.

* Cancel / Confirm

Slide Show

This function enables you to playback your still images automatically in order one image at a time.

* 3 sec. / 5 sec. / 10 sec.

Protect

Refer to section in this manual titled “Protecting Images” for further details.

Voice Memo

Refer to section in this manual titled “Attaching Voice Memos” for further details.

LCD Bright.

Refer to section in this manual titled “LCD Bright.” in Capture Menu for further details.

Resize

Resizes a previously saved image. Resizing replaces the original image with the changed image. It is only possible to resize to a smaller size.

Quality

Changes the quality (compression) of a recorded image. Compresses images down to half of their size or less, overwrites old size images with newly compressed images. It is only possible to reduce the image quality/size, never to increase it.



Copy to Card




 
 
 
 

 


Allows you to copy your files from the camera’s internal memory to an SD/SDHC memory card. Of course, you can only do this if you have a memory card installed and some files in internal memory.

* Cancel / Execute

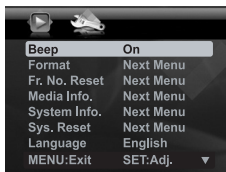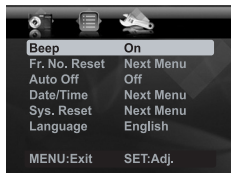Setup Menu

Set your camera's operating environment.



1. Toggle the  button to [] or []; or press the [] button.
2. Press the **MENU** button, and select the [Setup] menu with the .
3. Select the desired option item with the  /  buttons, and press the  button to enter its respective menu.
4. Select the desired setting with the  /  buttons, and press the  button.
5. To exit from the menu, press the **MENU** button.

Beep

This sets whether or not to mute the camera sound each time you press the camera's buttons.

* On / Off

Fr. No. Reset

This creates a new folder. The captured images are recorded to the newly created folder from number 0001.

* Cancel / Execute

Auto Off

If no operation is performed for a specific period of time, the power to the camera is automatically turned off. This feature is useful for reducing battery usage.

* 1 Min. / 2 Min. / 3 Min. / Off

Date/Time

Refer to section in this manual titled "Setting the Date and Time" for further details.

Sys. Reset

This returns all basic settings to the camera's default settings. The time setting will not be reset.

* Cancel / Execute

Language

Refer to section in this manual titled "Choosing the Language" for further details.

Format

Refer to section in this manual titled "Formatting the Memory Card or Internal Memory" for further details.

Media Info.

This displays the free capacity of the internal memory or the memory card.

System Info.

This displays the firmware version of the camera.

Video Output

This sets your camera to match the system of the equipment that you are going to connect to the camera.


* PAL / NTSC


TRANSFERRING FILES TO YOUR COMPUTER

System Requirement

Windows	Macintosh
<ul style="list-style-type: none">■ Pentium III 800 or equivalent■ Windows 2000/XP/Vista■ 256MB RAM (512 MB recommended)■ 150MB available hard disk space■ CD-ROM drive■ Available USB port	<ul style="list-style-type: none">■ PowerPC G3/G4/G5■ OS 9.0 or later■ 256MB RAM (512 MB recommended)■ 128MB available hard disk space■ CD-ROM drive■ Available USB port

Downloading Your Files

1. Connect one end of the USB cable to an available USB port on your computer.
2. Connect the other end of the USB cable to the USB terminal on the camera.
3. Turn on your camera.
4. Select [PC] using the ▲ / ▼ buttons and press the  button.
5. From the Windows desktop, double click on “My Computer”.
6. Look for a new “removable disk” icon.
 - This “removable disk” is actually the memory (or memory card) in your camera. Typically, the camera will be assigned drive letter “e” or higher.
7. Double click on the removable disk and locate the DCIM folder.
8. Double click on the DCIM folder to open it to find more folders.
 - Your recorded images and video clips will be inside these folders.
9. Copy & Paste or Drag-N-Drop image and video files to a folder on your computer.

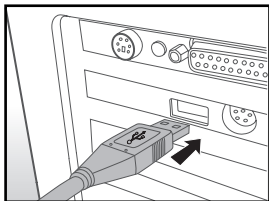

Mac users: Double-click the “untitled” or “unlabeled” disk drive icon on your desktop. iPhoto may automatically launch.

EDITING SOFTWARE INSTALLATION

There are 2 types of software that are included on the CD-ROM:

MediaImpression - manages your media for you, and gives you tons of fun and exciting ways to create and share projects featuring your photo, video, and music files. Create your own movies or photo slide shows, complete with soundtrack; edit, enhance, and add fun creative effects to your photos; and share your files easily through simple email attachments or popular photo printing and video sharing websites.

Print Creations - brings you a family of fun and easy print-project software that brings out the creativity in you. You can personalize the designs with your own digital pictures and text based on professionally designed templates and layouts. Projects can be printed at home or saved as image files for sharing with family and friends by email or the web.

To install software:

1. Insert the CD-ROM that came with the camera into your CD-ROM drive.
The welcome screen appears.
2. Click the respective software name.
Follow the on-screen instructions to complete the installation.



- For more information about the operation of the software, refer to its respective help documentation.
- For Windows 2000/XP/Vista users, please make sure to install and use the software in "Administrator" mode.
- The software is not supported by Mac.

Questions?

Call our toll-free customer service number. Look for the insert with this icon:

Or visit www.polaroid.com.



SPECIFICATIONS

Item	Description
Image sensor	1/2.5" CCD sensor (8.0 megapixels)
Image resolution	<Still image> 8 MB, 6 MB, 4MB, 2MB, 0.3MB <Video clip> 640 x 480 (30 fps), 320 x 240 (30 fps)
LCD monitor	3.0" full color TFT LCD (230K pixels)
Recording media	32MB internal memory (28MB available for image storage) Supports SD/SDHC memory card (up to 4GB) (optional)
File format	JPEG, DCF 1.1, EXIF 2.2, AVI
Lens	3x optical zoom lens Aperture range: f2.9(W) - f5.2(T) Focal length: 5.7mm - 17.1mm (equivalent to 34mm - 102mm on a 35mm camera)
Focus Range	Standard 0.4m (15.7") to infinity Macro Wide: 0.1m (3.9") to infinity Tele: 0.35m (13.8") to infinity
Shutter speed	1/2 - 1/2000 sec.
Digital zoom	4x (Capture mode) 4x (Playback mode)
Flash effective range	0.5m (19.7") - 2.4m (94.5") (Wide) 0.5m (19.7") - 2.1m (82.7") (Tele)
Terminals	AV OUT USB 2.0 compliant (2 in 1 terminal)
Power supply	Rechargeable Lithium-ion battery (3.7V)
Dimensions	Approx. 92.8 x 57.8 x 18.7mm (without protruding parts)
Weight	Approx. 114g (without battery and memory card)





















* Design and specifications are subject to change without notice.

APPENDIX







Possible Number of Shots

Possible number of shots (still image)

The table shows the approximate shots that you can capture at each setting based on the capacity of the internal memory and the SD/SDHC memory card.

Size	Quality	Internal Memory	SD/SDHC memory card capacity					
			128MB	256MB	512MB	1GB	2GB	4GB SDHC
 3264 x 2448	 Fine	6	28	89	117	235	472	945
	 Standard	14	62	125	253	507	1015	2033
	 Economy	16	72	146	293	588	1177	2357
 2816 x 2112	 Fine	14	62	126	253	508	1018	2038
	 Standard	18	82	166	334	669	1340	2684
	 Economy	20	90	181	364	730	1461	2925
 2272 x 1704	 Fine	25	108	219	440	881	1765	3533
	 Standard	27	121	243	489	980	1963	3929
	 Economy	31	138	278	559	1120	2242	4489
 1600 x 1200	 Fine	47	206	415	834	1671	3345	6695
	 Standard	57	246	494	993	1989	3982	7969
	 Economy	63	273	549	1102	2208	4420	8847
 640 x 480	 Fine	118	509	1024	2055	4115	8237	16485
	 Standard	138	595	1197	2401	4810	9627	19268
	 Economy	177	762	1531	3072	6153	12316	24649

Possible recording time / sec (video clip)

Size	Quality	Internal Memory	SD/SDHC memory card capacity					
			128MB	256MB	512MB	1GB	2GB	4GB SDHC
 640 x 480	 Fine	00:00:17	00:01:00	00:02:01	00:04:03	00:08:07	00:16:15	00:32:31
	 Standard	00:00:18	00:01:06	00:02:13	00:04:27	00:08:54	00:17:50	00:35:42
 320 x 240	 Fine	00:00:50	00:02:57	00:05:57	00:11:56	00:23:55	00:47:52	01:35:49
	 Standard	00:00:57	00:03:25	00:06:54	00:13:50	00:27:43	00:55:29	01:51:02

* We recommend a memory card of at least 10MB/Sec write speed to prevent auto stop or unexpected results. If you experience an error using a slower SD/SDHC memory card, you can set your camera's video recording to QVGA (320 x 240) and standard quality.

Troubleshooting

Refer to the symptoms and solutions listed below before sending the camera for repairs. If the problem persists, contact your local reseller or service center.


Symptom	Cause	Solutions / Corrective Actions
The power does not come on.	The battery is not inserted.	Insert the battery correctly.
	The battery is dead.	Recharge the battery.
The battery runs out quickly.	The battery is not fully charged. The battery is not used for an extended period of time after being charged.	Fully charge the battery and discharge it for at least one complete cycle before use to maximize its performance and lifetime.
The battery or camera feels warm.	Long period of continuous use of the camera or the flash.	
Even if I press the shutter button, the camera does not take a picture.	The shutter button is not pressed all the way down.	Press the shutter button all the way down.
	The memory card does not have any free capacity.	Insert a new memory card, or delete unwanted files.
	The memory card is write-protected.	Remove the write-protection.
Images do not appear on the LCD monitor.	LCD monitor is dark.	Adjust the brightness of the LCD monitor in the menu.
Although it is set to auto focus, it does not focus.	The lens is dirty.	Wipe clean with a soft, dry cloth or lens paper.
	The distance to the subject is smaller than the effective range.	Get your subject within the effective focus range.
The contents on the memory card cannot be played back.	You played back a memory card that was not formatted by this camera.	Insert a memory card that was formatted on this camera.
Files cannot be deleted.	The file is protected.	Cancel protection.
	The memory card is write-protected.	Remove the write-protection.
Even when the camera's buttons are pressed, it does not operate.	The battery is running low.	Recharge the battery.
The date and time are wrong.	The correct date and time is not set.	Set the correct date and time.
Cannot download images.	The free space on the hard disk in your computer may be insufficient.	Check whether the hard disk has space for running Windows, and if the drive for loading image files has a capacity at least that of the memory card inserted in the camera.
	No power supply.	Recharge the battery.

Connecting to a PictBridge Compliant Printer

If a printer that supports PictBridge is available, images can be printed by connecting the digital still camera directly to the PictBridge-compatible printer without using a computer.

Connecting the camera to the printer



1. Connect one end of the USB cable to your camera.
2. Connect the other end of the USB cable to the USB port on the printer.
3. Turn on your camera.
4. The [USB] screen is displayed. Select [PictBridge] with the \blacktriangle / \blacktriangledown buttons, and press the SET button.

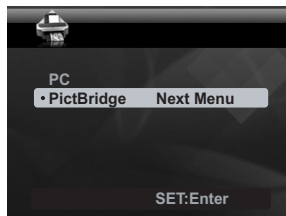


Printing images


When the camera is properly connected to a PictBridge compliant printer, the PictBridge menu is displayed on the monitor.


1. Select the item you want to configure with the \blacktriangle / \blacktriangledown buttons, and press the SET button.
 - [Images]: Select whether you want to print specific image or all images. You may also select printing number for specific image.
 - [Date Print]: According to the printer type, select whether you want to print the image with date imprint or not.
 - [Paper Size]: Select the desired paper size according to the printer type.
 - [Layout]: Select the desired printing layout according to the printer type.
 - [Print]: After all settings are configured, select this item to start printing.
2. If you select [Images] in the previous step, the figure shown on the right hand side will appear. Select [Single] or [All] with the \blacktriangle / \blacktriangledown buttons, and press the SET button.
 - [Single]: Select to print one specific image.
 - [All]: Select to print all images.
 - [Exit]: Exit from Images option.

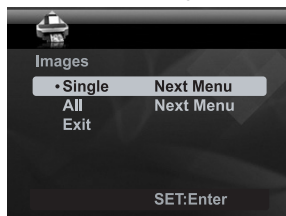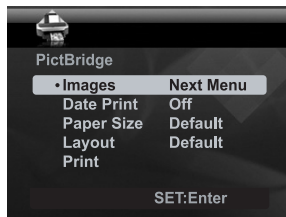

3. If you select [Single] in the previous step, the figure shown on the right hand side will appear.


- Select the image that you want to print with the ◀ / ▶ buttons.
- Select the [Print Num] (up to 99) with the ▲ / ▼ buttons.
- After selecting the desired image and printing number, press the  button to confirm.

4. Select [Exit] with the ▲ / ▼ buttons, and press the  button.

5. Select [Print] with the ▲ / ▼ buttons, and press the  button to start printing.

6. The printing starts and the figure shown on the right hand side appears.

- [COMPLETE] will be displayed temporarily, reminding you that the printing procedure is finished.
- If an error is detected during the connection (i.e. the printer hardware problem) between camera and printer, [PRINT ERROR] will be displayed.
- If an error is detected during the communication (i.e. wrong setting on the camera) between camera and printer, [ERROR] will be displayed.

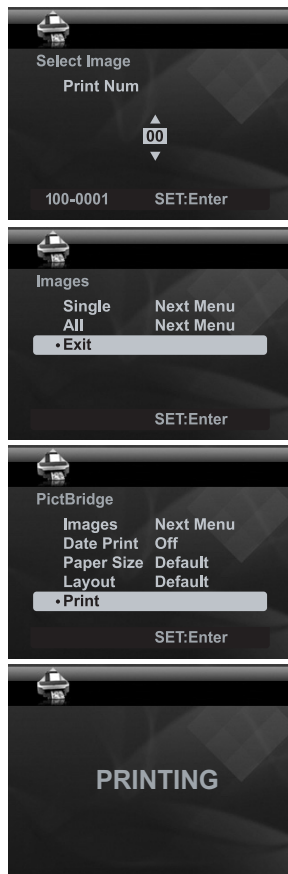

- The image printing may fail if the power to the camera is cut off.
- For service, support and warranty information visit www.polaroid.com.
- "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, Waltham, MA, USA.