

POLISHED BRASS OR BRUSHED STAINLESS LOUVER KITS

INSTALLATION INSTRUCTIONS FOR POLISHED BRASS OR BRUSHED STAINLESS LOUVER KITS FOR USE WITH LENNOX HEARTH PRODUCTS GAS FIREPLACES

GENERAL INFORMATION

These polished brass or brushed stainless louver kits may be used with Lennox Hearth Products gas fireplaces, to replace the factory installed black louvers. The kits contain seven louvers plus one louver with two pre-drilled holes (eight total) and these instructions.

INSTALLATION INSTRUCTIONS

Step 1. Turn off the fireplace and allow it to cool before proceeding.

Step 2. Slightly lift and pull the existing top louver assembly away from the fireplace.

Step 3. Slightly lift up the bottom hinged panel to disengage the small hooks on either side of the panel. Pull forward and lower the panel down to open. Remove the assembly from the fireplace by removing the hinge screw on each end of the assembly.

Step 4. Working with one assembly at a time, remove the existing black louvers separating the brackets from the assemblies (*see Figure 1*). To ease the removal of the brackets, use a side bladed screwdriver and mallet to "tap" down the bend in each bracket finger (restore the bend by hand before reassembly). Replace the black louvers with the brass or brushed stainless louvers (without the pre-drilled holes) using the existing brackets.

Step 5. Repeat Step 4 for the bottom louver assembly. Make sure to replace the pre-drilled black louver with the pre-drilled brass or brushed stainless louver.

Step 6. Remove logo from existing bottom louver with pre-drilled holes and then snap the logo into the brass or brushed stainless louver with pre-drilled holes.

Step 7. Reinstall the louver assemblies, reusing the existing screws to reinstall the bottom assembly.

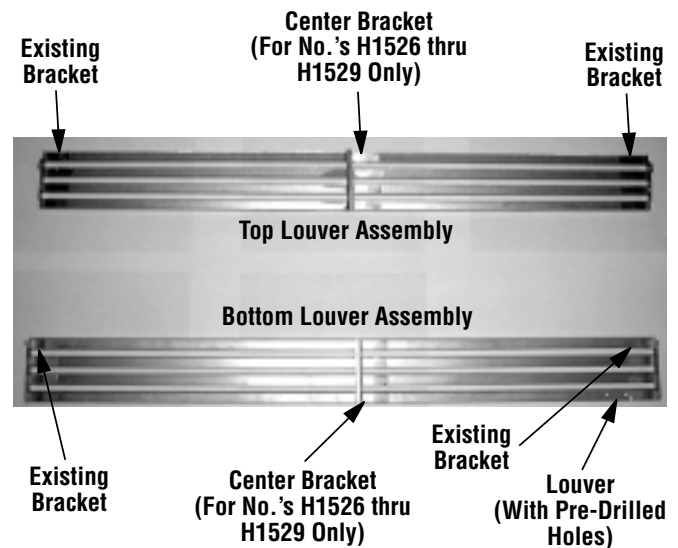


Figure 1

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

The manufacturer reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.