

Using the STC-1000+ firmware

Project home at [Github](#)

Features

- Both Fahrenheit and Celsius versions
- Up to 6 profiles with up to 10 setpoints.
- Each setpoint can be held for 1-999 hours (i.e. up to ~41 days).
- Somewhat intuitive menus for configuring
- Separate delay settings for cooling and heating
- Configurable hysteresis (allowable temp swing)
- Approximative ramping
- Button acceleration, for frustrationless programming by buttons

Navigation and menus

By default current temperature is displayed in C or F on the display, depending on which firmware is used. Pressing the 'S' button enters the menu. Pressing button 'up' and 'down' scrolls through the menu items. Button 'S' selects and 'power' button steps back or cancels current selection.

The menu is divided in two steps. When first pressing 'S', the following choices are presented:

Menu item	Description
Pr0	Set parameters for profile 0
Pr1	Set parameters for profile 1
Pr2	Set parameters for profile 2
Pr3	Set parameters for profile 3
Pr4	Set parameters for profile 4
Pr5	Set parameters for profile 5
Set	Settings menu

Table 2: Menu items

Selecting one of the profiles enters the submenu for that profile.

Pr0-5 submenus have the following items:

Sub menu item	Description	Values
SP0	Set setpoint 0	-40.0 to 140°C or -40.0 to 250°F
dh0	Set duration 0	0 to 999 hours
...	Set setpoint/duration x	...
dh8	Set duration 8	0 to 999 hours
SP9	Set setpoint 9	-40.0 to 140°C or -40.0 to 250°F

Table 3: Profile sub-menu items

You can change all the setpoints and durations associated with that profile from here. When running the programmed profile, SP0 will be the initial setpoint, it will be held for dh0 hours (unless ramping is used). After that SP1 will be used as setpoint for dh1 hours. The profile will stop running when a duration (dh) of 0 hours OR last step is reached (consider 'dh9' implicitly 0). When the profile has ended, STC-1000+ will automatically switch to thermostat mode with the last reached setpoint. (So I guess you could also consider a 'dh' value of 0 as infinite hours).

The settings menu has the following items:

Sub menu item	Description	Values
hy	Set hysteresis	0.0 to 2.5°C or 0.0 to 5.0°F
tc	Set temperature correction	-2.5 to 2.5°C or -5.0 to 5.0°F
SP	Set setpoint	-40 to 140°C or -40 to 250°F
St	Set current profile step	0 to 8
dh	Set current profile duration	0 to 999 hours
cd	Set cooling delay	0 to 60 minutes
hd	Set heating delay	0 to 4 minutes
rP	Ramping	0 = off, 1 = on
rn	Set run mode	'Pr0' to 'Pr5' and 'th'

Table 4: Settings sub-menu items

Hysteresis, is the allowable temperature range around the setpoint where the thermostat will not change state. For example, if temperature is greater than setpoint + hysteresis AND the time passed since last cooling cycle is greater than cooling delay, then cooling relay will be engaged. Once the temperature reaches setpoint again, cooling relay will be disengaged.

Temperature correction, will be added to the read temperature, this allows the user to calibrate temperature reading. It is best to calibrate around your working point. That means for fermentation, it is better to calibrate at room temperature against a reference thermometer than using ice water.

Setpoint, well... The desired temperature to keep. The way STC-1000+ firmware works, setpoint is *a/ways* the value the thermostat strives towards, even when running a profile. What the profile does is simply setting the setpoint at given times.

Current profile step and **current profile duration**, allows 'jumping' in the profile. Step and duration are updated automatically when running the profile, but can also be set manually at any time. Note that profile step and profile duration are the variables directly used to keep track of progress in a profile. Little or no validation is made of what values are entered. It is up to the user to know what he/she is doing by changing these values. Changing these values will not take effect until next point in profile is calculated, which could be as much as one hour. Every hour, current duration, 'dh' (and if next step is reached, also current step, 'St') is updated with new value(s). That means in case of a power outage, STC-1000+ will pick up (to within the hour) from where it left off. Current profile step and current profile duration are only available in the menu when a profile is currently running.

Cooling and **heating delay** is the minimum 'off time' for each relay, to spare the compressor and relays from short cycling. If the the temperature is too high or too low, but the delay has not yet been met, the corresponding LED (heating/cooling) will blink, indicating that the controller is waiting to for the delay to pass before it will start heating or cooling. When the controller is powered on, the initial delay (for both heating and cooling) will **always** be approximately 1 minute, regardless of the settings. That is because even if your system could tolerate no heating or cooling delays during normal control (i.e. 'cd' and/or 'hd' set to zero), it would be undesirable for the relay to rapidly turn on and off in the event of a power outage causing mains power to fluctuate. Cooling and heating delays are loaded when cooling/heating relays switched off. So, for instance if you set cooling delay to 60 minutes and setpoint is reached, turning cooling relay off, it will be approximately one hour until cooling relay will be allowed to switch on again, even if you change your mind and change the setting in EEPROM (i.e. it will not affect the current cycle).

Run mode, selecting 'Pr0' to 'Pr5' will start the corresponding profile running from step 0, duration 0. Selecting 'th' will switch to thermostat mode, the last setpoint from the previously running profile will be retained as the current setpoint when switching from a profile to thermostat mode.

Thermostat mode

When mode is set to thermostat, setpoint, 'SP', will not change and the controller will aim to keep the temperature to within the range of $SP \pm hy$. Much like how the normal STC-1000 firmware works.

The thermostat control runs approximately once every second.

Running profiles

By entering the 'rn' submenu under settings and selecting a profile, the current duration, 'dh', and current step, 'St', is reset to zero and the initial setpoint for that profile, 'SP0', is loaded into 'SP'. Even when running a profile, 'SP' will always be the value the controller aims to keep. The profile simply updates 'SP' during its course. When a profile is running the 'Set' LED on the display will be lit as an indication.

From the instant the profile is started a timer will be running, and every time that timer indicates that one hour has passed, current duration, 'dh', will be incremented. If and only if, it has reached the current step duration, 'dhx', current duration will be reset to zero and the current step, 'St', will be incremented and the next setpoint in the profile will be loaded into 'SP'. Note that all this only happens on one hour marks after the profile is started.

So, what will happen if the profile data is updated while the profile is running? Well, if that point has not been reached the data will be used. For example profile is running step 3 (with the first step being step 0). Then 'SP3' has already been loaded into 'SP', so changing 'SP0' - 'SP3' will not have any effect on the current run. However, the duration 'dh3' is still being evaluated every hour against the current duration, so changing it will have effect.

Changing the current duration, 'dh', and current step, 'St', will also have effect, but the change will not be immediate, only on the next one hour mark will these new values be used in the calculation. You will need to know what you are doing when changing these values manually, but correctly used, it could come in handy.

Changing the setpoint, 'SP', when running a profile, will have immediate effect (as it is used by thermostat control), but it will be overwritten by profile when it reaches a new step.

Once the profile reaches the final setpoint, 'SP9', or a duration of zero hours, it will switch over to thermostat mode and maintain the last known setpoint indefinitely.

Finally, to stop a running profile, simply switch to thermostat mode.


Ramping

When Ramping is enabled, the controller will ramp the temperature setting linearly between setpoints over the duration of the first setpoint. When Ramping is not enabled, the controller will hold at the current setpoint for the complete duration of that setpoint.

For example, suppose we wanted our fermentation to hold at 50° for 5 days, then ramp up to 60° over 2 days, hold at 60° for 1 day, then ramp down to 35°, we would program the STC-1000+ as follows:


SP0: 50	dh0: 120 ← Hold at 50 for 120hrs (5 days)
SP1: 50	dh1: 48 ← Ramp up to 60 over 48hrs (2 days)
SP2: 60	dh2: 24 ← Hold at 60 for 1 day
SP3: 60	dh3: 240 ← Ramp down to 35 over 10 days
SP4: 35	dh4: 0 ← Hold at 35 indefinitely

Which will result in the following temperature profile:

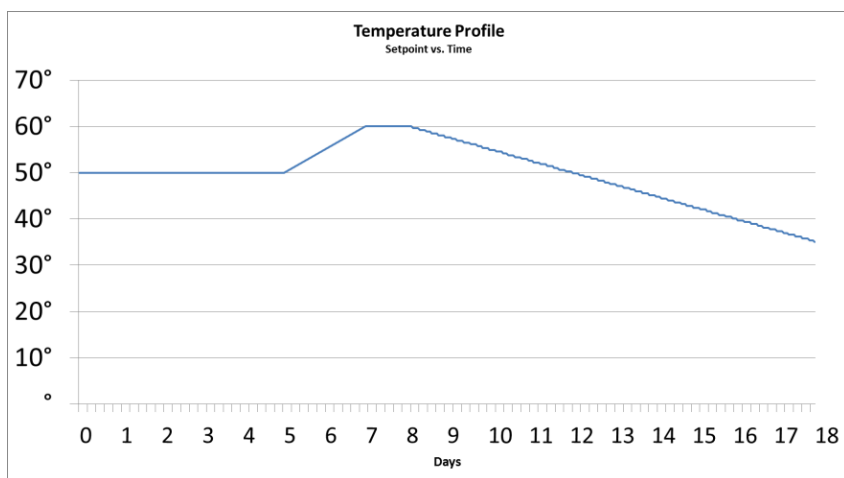

Note: In order to keep a constant temperature with ramping enabled, an extra setpoint with the same value is needed (STC-1000+ will attempt to ramp between all setpoints, but if the setpoints are the same, then the setpoint will remain constant during the step).

However, if ramping had not been enabled, this same set of setpoints would have resulted in the following temperature profile:

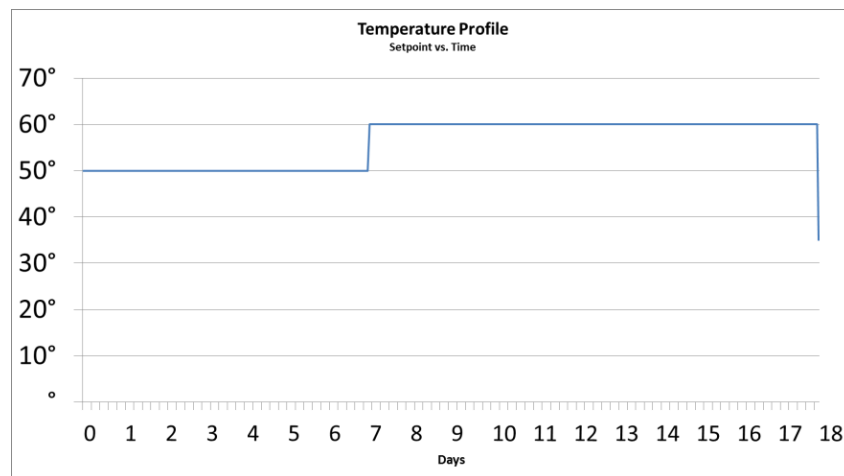

Additional features

Sensor alarm, if the measured temperature is out of range (indicating the sensor is not connected properly or broken), the internal buzzer will sound and display will show 'AL'.

Power off, pressing and holding power button for a few seconds when the controller is not in menu (showing current temperature), will disable the display and relays (soft power off). To really power off, you need to cut mains power to the device.

By pressing and holding 'up' button when temperature is showing, current setpoint will be displayed.

By pressing and holding 'down' button when temperature is showing, 'th' will be displayed if the controller is in thermostat mode. If a profile is running, it will cycle through 'Prx', current profile step and current profile duration, to indicate which profile is running and the progress made.

By pressing and holding 'up' and 'down' button simultaneously when temperature is showing, the firmware version number will be displayed.

Other resources

Project home at [Github](#)

Project thread on [Homebrewtalk](#)

Project featured on [Hackaday](#)