


DURACELL[®]
Instant Power Charger
DR7000LI User Manual



DURACELL[®]

4. Using the Instant Power Charger

- 4.1. Make sure the Instant Power Charger is charged prior to use (see **Section 3, Charging the Instant Power Charger**, for instructions on how to charge).
- 4.2. Connect a USB cable compatible with your device to the "OUT" port of the Instant Power Charger. Device-specific USB cables are not included but are readily available at most electronics stores. The USB to mini-USB cable included in the package is compatible with newer Motorola cellular phones, Blackberrys and many digital cameras. Please note that most newer Motorola cellular phones will not charge using standard USB cables. For these phones please make sure to use the included USB to mini-USB cable.
- 4.3. Connect the other end of the USB cable to your device.
- 4.4. Turn the Instant Power Charger switch to the "ON" position.
- 4.5. The LED status light will turn green, indicating that the battery is powering and charging your device. The LED status light will turn red when the battery has been depleted and needs to be recharged.
- 4.6. When the Instant Power Charger is not in use, make sure to turn the switch to the "OFF" position.

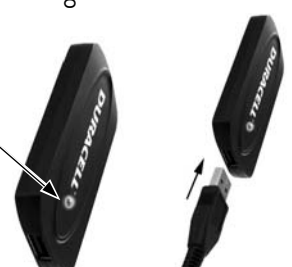

5. Specifications

6. Safety Precautions

This battery is designed and built to the highest safety standards and will protect the user from hazards when used as directed. The battery contains high power circuits; therefore it is important for users to read these precautions carefully.

- Do not disassemble.
- Always store in a cool dry place.
- Do not short-circuit.
- Use only with USB-powered devices.
- Only charge the battery from a USB2.0 compatible port.
- Avoid placing in direct sunlight, next to heat-sensitive materials or in places where extreme heat may result.
- Do not submerge or expose to water or liquids.

7. Warranty

If not completely satisfied with this battery contact BatteryFuel at support@batteryfuel.com.

The manufacturer guarantees this battery against defects in materials and workmanship under normal use and service for three years from the initial date of purchase. Should any device be damaged due to a battery defect; the manufacturer will repair or replace at our option if it is sent back to the manufacturer with the battery, postage prepaid.



3.3 - 3.4:
A red light here on the Universal Battery indicates that the Universal Battery is being charged. When the battery is fully charged, this light becomes green.