

Revision 2, 12 Sep 2005

Thrust

Manual

 **APCO Aviation**
Setting Future Standards

Factory: 7, Chalamish Street - Industrial Park - Caesarea 38900 ISRAEL www.apcoaviation.com
Tel: +972 4 6273727 Fax +972 4 6273728



CONTENTS:

1	DISCLAIMER OF LIABILITY	6
2	CONSTRUCTION.....	6
3	MATERIALS	6
4	HIT VALVES (High speed In-Take)	7
5	TRIMMING	7
6	HARNESS	7
7	SPEED SYSTEM.....	8
7.1	ASSEMBLY & ADJUSTMENT.....	8
7.2	OPTION 1.....	8
7.3	OPTION 2.....	9
8	EMERGENCY PARACHUTE ATTACHMENT	9
9	RISERS	9
10	TRIMMERS.....	12
11	INSPECTION	13
11.1	GENERAL	13
11.2	BRAKE SETTING	13
11.3	FIRST CHECK AND PREFLIGHT INSPECTION	14
11.4	REGULAR INSPECTION CHECKS	14
11.5	LINE MAINTENANCE	14
12	LAUNCHING	15
12.1	LAYOUT	15
12.2	ALPINE LAUNCH OR FORWARD LAUNCH	15
12.3	STRONG WIND AND REVERSE LAUNCH	15
12.4	WITH PARAMOTOR	16
12.5	WITH TRIKE.....	16
13	FLIGHT TECHNIQUES.....	16
13.1	STRAIGHT FLIGHT WITH ENGINE.....	16
13.2	FLYING SPEED	16
13.3	THERMAL FLYING	17
13.4	ASYMMETRIC COLLAPSE.....	17
13.5	CRAVAT.....	17
13.6	FRONT STALL OR SYMMETRIC COLLAPSE.....	17
13.7	B-STALL.....	17
13.8	BIG EARS	18
13.9	DEEP STALL OR PARACHUTAL STALL	18
13.9.1	Signs of parachutal stall	18
13.9.2	Exit from parachutal stall	18
13.10	FULL STALL	19
13.11	NEGATIVE TURN (Stall on one side)	19
13.12	SPIRAL DIVES	19
13.13	STRONG TURBULENCE	20
13.14	STEERING NOT FUNCTIONING	20
14	LANDING	20
14.1	TREE LANDING	20
14.2	WATER LANDING.....	21
14.3	LANDING IN TURBULENCE.....	21
14.4	WITH PARAMOTOR	21
14.5	WITH TRIKE.....	21
15	FAILURE OF BRAKE LINES	21
16	PACKING	21





17	MAINTENANCE & CLEANING	22
18	STORAGE	22
19	DAMAGE	22
20	GENERAL ADVICE.....	22
21	THRUST SMALL SKETCHES	23
22	THRUST MEDIUM SKETCHES.....	24
23	THRUST LARGE SKETCHES	26
24	THRUST EXTRA LARGE SKETCHES	28
25	THRUST MEDIUM CERTIFICATION.....	30
26	THRUST LARGE CERTIFICATION.....	31
27	THRUST EXTRA LARGE CERTIFICATION	32



!!! WARNING

This is not a training manual. It is extremely dangerous to yourself and others to attempt to fly this or any paraglide without first completing a flying course given by a qualified instructor.





Apco Aviation's gliders are carefully manufactured and inspected by the factory. Please use the glider only as described in this manual. Do not make any changes to the glider. AS WITH ANY SPORT - WITHOUT TAKING THE APPROPRIATE PRECAUTIONS, PARAGLIDING CAN BE DANGEROUS.

GLIDER TECHNICAL DATA

SIZE		Small	Medium	Large	X-Large
Cells		42	44	46	48
Area	[m ²]	27.3	29.3	31.3	33.3
Area (Projected)	[m ²]	23.4	25.2	26.9	28.6
Span incl. Stabiliser	[m]	11.58	12.2	12.9	13.5
Span (Projected)	[m]	9.32	9.85	10.4	10.9
A/R		4.91	5.08	5.31	5.47
A/R (Projected)		3.71	3.85	4.02	4.15
Take off weight (All up pilot + paramotor)	[kg]	70-115	85-135	100-155	110-180
Pilot weight all up for free flight	[kg]	65-85	80-100	95-120	110-140
Weight of canopy	[kg]	6.5	6.9	7.3	7.6
Root cord	[m]	3.03	3.05	3.05	3.05
Tip cord	[m]	0.58	0.58	0.58	0.58
Length of lines on B	[m]	6.6	7.0	7.4	7.7
Total length of lines	[m]	407	421	441	481
LINES					
	Material	Diameter		Strength	
Top	Dyneema	1.1 mm		95 Kg	
Middle	Kevlar	1.2 mm / 1.8 mm		110 kg / 220 Kg	
Bottom	Kevlar	1.8 mm / 1.9 mm		220 kg / 320 Kg	
FABRIC					
Sail Cloth	46gr/m ² "Zero Porosity" Ripstop Nylon (Double coated Siliconized)				
Rib Reinforcement	180gr/m ² Mylar (Trilam)				
Warranty	3 Years / 250 hours				

GLIDER PERFORMANCE DATA

V-min.	21 km/h
V-trim	37 km/h
V-max. P/M* version	50 km/h
V-max. P/G** version	45 Km/h
Min Sink (at optimum wing loading)	1.1 m/s

GLIDER CERTIFICATION DATA

	AFNOR
THRUST SMALL	STANDARD
THRUST MEDIUM	STANDARD

* P/M = paramotor
 ** P/G = paraglider





THRUST LARGE	STANDARD
THRUST EXTRA LARGE	STANDARD





1 DISCLAIMER OF LIABILITY

Taking into consideration the inherent risk in paragliding, it must be expressly understood that the manufacturer and seller do not assume any responsibility for accidents, losses and direct or indirect damage following the use or misuse of this product.

APCO Aviation Ltd. is engaged in the manufacture and sale of hang gliding, paragliding, motorized para/hang gliding and emergency parachute equipment.

This equipment should be used under proper conditions and after proper instruction from a qualified instructor. APCO Aviation Ltd. has no control over the use of this equipment and a person using this equipment assumes all risks of damage or injury.

APCO Aviation Ltd. disclaims any liability or responsibility for injuries or damages resulting from the use of this equipment.

The glider is designed to perform in the frame of the required class as certified by AFNOR / CEN.



2 CONSTRUCTION

The glider is constructed with a top and bottom surface, connected by ribs. One top and bottom panel, together with the connecting ribs is called a cell. Each cell has an opening on the front lower part. The cells fill with air forcing the panels to take the shape dictated by the airfoil (rib) section. On either side the wing ends in a stabilizer or wing tip, which provides straight-line (Yaw) stability and produces some outward force to keep the span-wise tension. The front part of the ribs is made from Trilam to keep the leading edge shaped at high speeds and in turbulent air. It also improves the launch characteristics of the glider. The line hook-up points are made of Dyneema or Nylon tape.


3 MATERIALS

The glider is made from tear resistant Ripstop Nylon cloth, which is P.U. coated to zero porosity and then siliconized to give the fabric high resistance to the elements. Different cloth is used for the top, bottom and ribs due to their different functions. The lines are made of superaramid covered with a polyester sheath for protection against UV, wear and abrasion. The bottom section of the brake lines is made of polyester because of its better mechanical properties. The carabiners that attach the lines to the risers are made of stainless steel.





4 HIT VALVES (High speed In-Take)

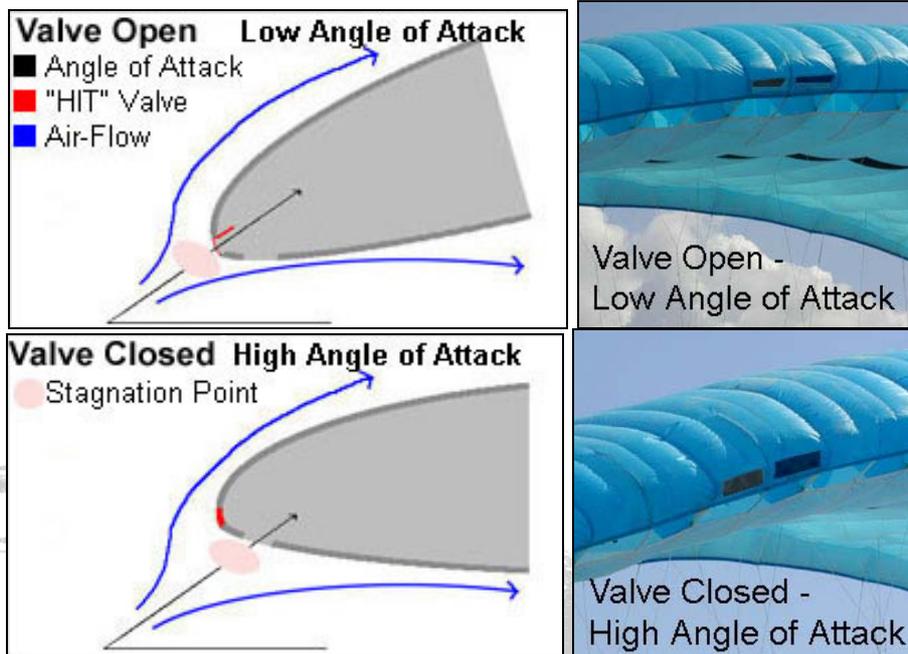

The Thrust is equipped with an Active HIT Valve system (patent pending) to improve the overall performance and safety of the wing especially during accelerated flight.

The valve system allows maximum inflow of air when the glider is rotated to a lower angle of attack while accelerated. HIT valves open and close in flight to increase the internal pressure of the glider.

For the valves to work properly it is important to keep them wrinkle free especially in sub zero temperatures. Make sure the valves are lying flat and are in the closed position when you fold the glider. Before the launch the pilot should check all the valves and ensure that they are flat and closing the entire area of the mesh covered opening. Creased and crumpled valves will not adversely affect the safety of the wing.

5 TRIMMING

All Apco gliders are trimmed for optimum performance combined with unsurpassed safety. It is very important not to re-trim or tamper with any of the lines or risers as this may alter the performance and safety. Trimming of the brake line should be done in accordance with this manual and carefully checked before flying.

6 HARNESS

All of Apco's gliders are developed with the use of ABS (Automatic Bracing System) type harnesses without cross bracing. We recommend the use of an ABS harness with all our gliders. All certified harnesses can be used with our gliders. For best safety and performance we recommend an Apco harness equipped with a Mayday emergency parachute.





CAUTION:

CROSS BRACING THAT HAS BEEN ADJUSTED TOO TIGHTLY CAN INFLUENCE THE HANDLING OF A GLIDER, AND MAY NOT ACTUALLY LEAD TO HIGHER SAFETY. APCO GLIDERS ARE DEVELOPED AND TESTED WITHOUT THE USE OF CROSS BRACING. USING AN ABS HARNESS WITH CHEST STRAP SET AT THE SPECIFIED WIDTH (CHECK THE AFNOR STICKER ON YOUR GLIDER) WILL RESULT IN THE HIGHEST PASSIVE SAFETY ON YOUR GLIDER

7 SPEED SYSTEM

7.1 ASSEMBLY & ADJUSTMENT

There are two options: if your glider has been supplied in the traditional "APCO" style accelerator with the long speed bar lines on the risers - see Option 1. If your glider is supplied with the new Chain Link system - see Option 2.

7.2 OPTION 1

First attach the harness to the glider, then thread the accelerator line from the top pulley on the riser, through the pulleys (and the elasticized ring if present) on your harness and then attach it to the supplied speed bar. To adjust the length and activation point of the speed system, sit in the harness and ask someone to hold the riser up in a flying position. By pulling out the end of the line protruding above the upper pulley on the riser and by moving the knot you can adjust the speed system. The Bar should be about 10 cm (or closer if you have a second step) away from the front of the harness seat. This allows you to use the full range of the speed bar if you extend your legs fully. Do not adjust the speed system too short as this will cause the speed system to be activated permanently while flying and could be dangerous. It is possible to fit a second step to the system if the pilot has trouble using the full range of the speed system (second step is supplied separately).

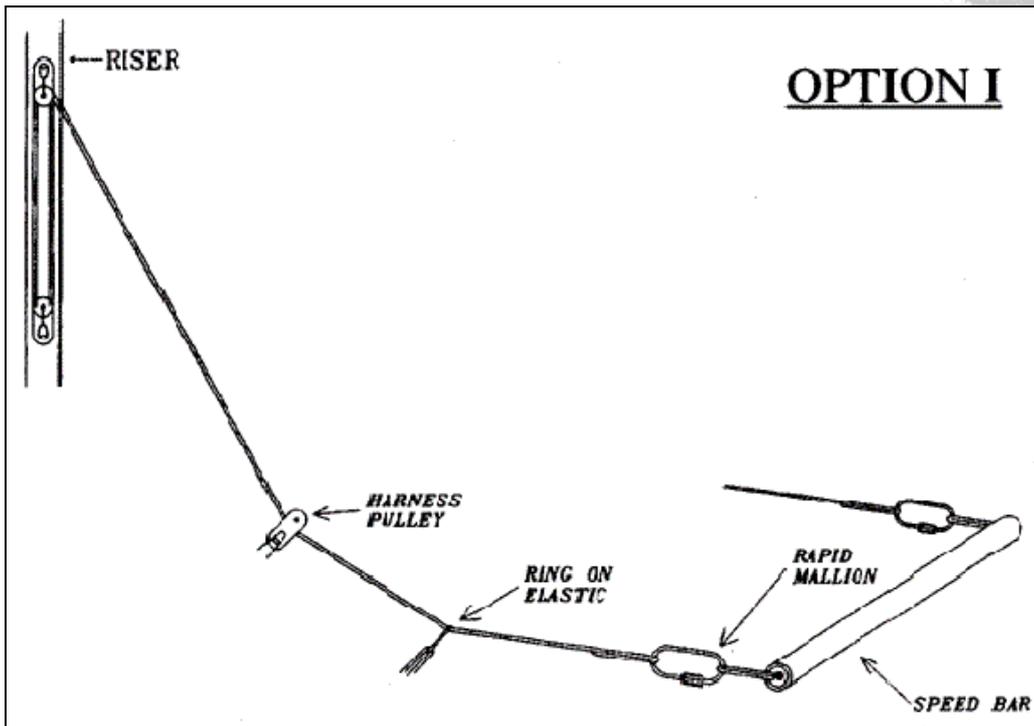


Figure 7-1 OPTION 1





7.3 OPTION 2

First attach the harness to the glider. Remove the Chain Link from the end of the accelerator line attached to the speed bar, then thread it through the elasticized ring on the harness, then through harness pulley and then re-attach it to the Chain link with a larks-head knot. Hook the Chain link onto the Chain Link on the riser of the corresponding side. Sit in the harness and have someone hold the riser up in a flying position for you. Adjust the speed bar line by pulling the end through the speed bar tube and moving the knot. The Bar should be about 10 cm (or closer if you have a second step) away from the front of the harness seat. This allows you to easily reach the bar with your foot, and will allow you to use the full range of the speed bar if you extend your legs fully. Do not adjust the speed system too short, as this will cause it to be activated permanently while flying, and could be dangerous. It is possible to fit a second step to the system, if one has trouble using the full range of the system (supplied separately).

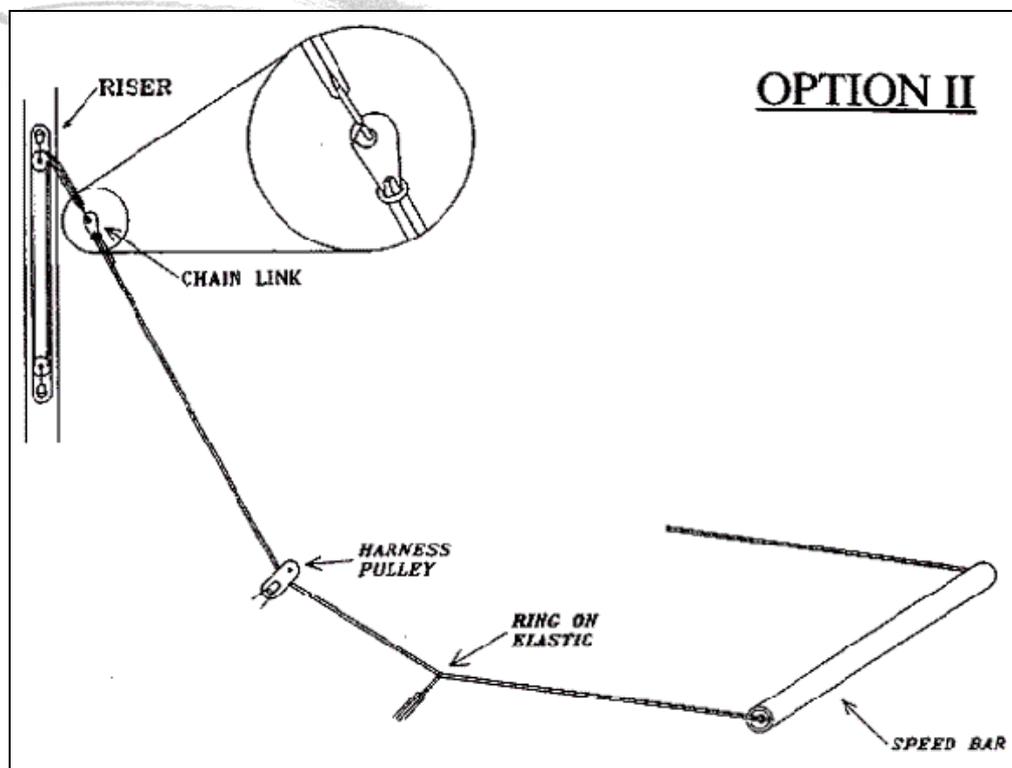


Figure 7-2 OPTION 2

8 EMERGENCY PARACHUTE ATTACHMENT

It is recommended to use a certified rescue parachute when flying. Attaching the rescue parachute should be done in accordance with the recommendation of the harness and reserve parachute manufacturer manual.

9 RISERS

The THRUST can be supplied with two different types of risers according to the main use of the gliders. If glider is used for free flying only it should be assembled with paragliding risers (see Figure 9-1 RISER P/G VERSION.). The THRUST is certified to AFNOR Standard Class certification requirements in P/G version (with risers without trim see Figure 9-1). Load test performed to the maximum load as per P/M version.





If glider is mainly for paramotor use, the glider should be assembled with paramotor risers (see Figure 9-2 RISER P/M VERSION.).


Paragliding riser equipped with foot accelerator only.

Paramotor riser equipped with accelerator and trimmers. It also has two hook-in points to accommodate for different type of paramotors (low or high attachment point). Lower hook-in point should be used with paramotor harness with low harness hook-in point or regular paragliding harnesses. Higher hook-in point should be used when flying with paramotor harness with high shoulder hook-in connections

The brake line is guided through upper pulley for paragliding free flying and adjusted as per Section 11.2 (see Figure 11-1).

For paramotor flying you can use the same brake setting if your paramotor harness has low hook-in points same as paragliding harness or guide the brake line also through lower pulley in case using paramotor with high attachment points.

The THRUST is supplied with a split A- riser. The 1st A-riser attaches to the central two a-lines (A1 & A3). The second A-riser is attached to the outermost A-line (A5). This is to facilitate big ears or Tip tucks. At no time should the pilot change the risers or use risers not intended for this specific glider as this will affect the performance and safety of the glider.

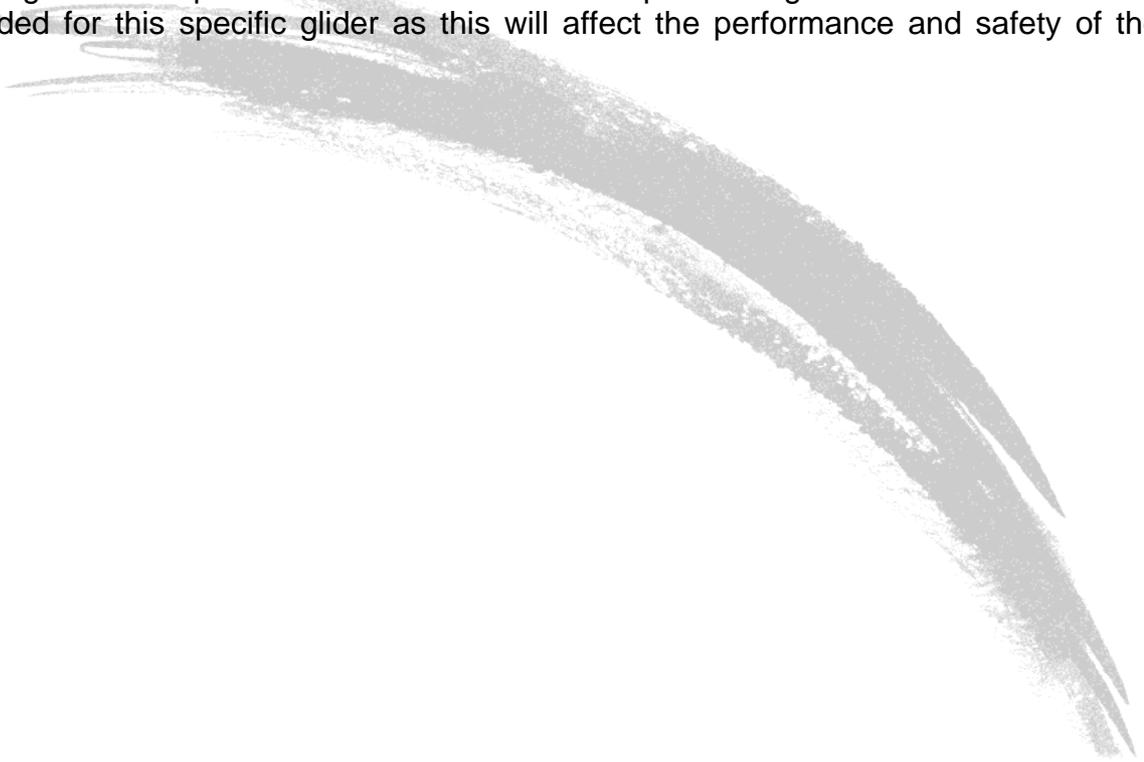

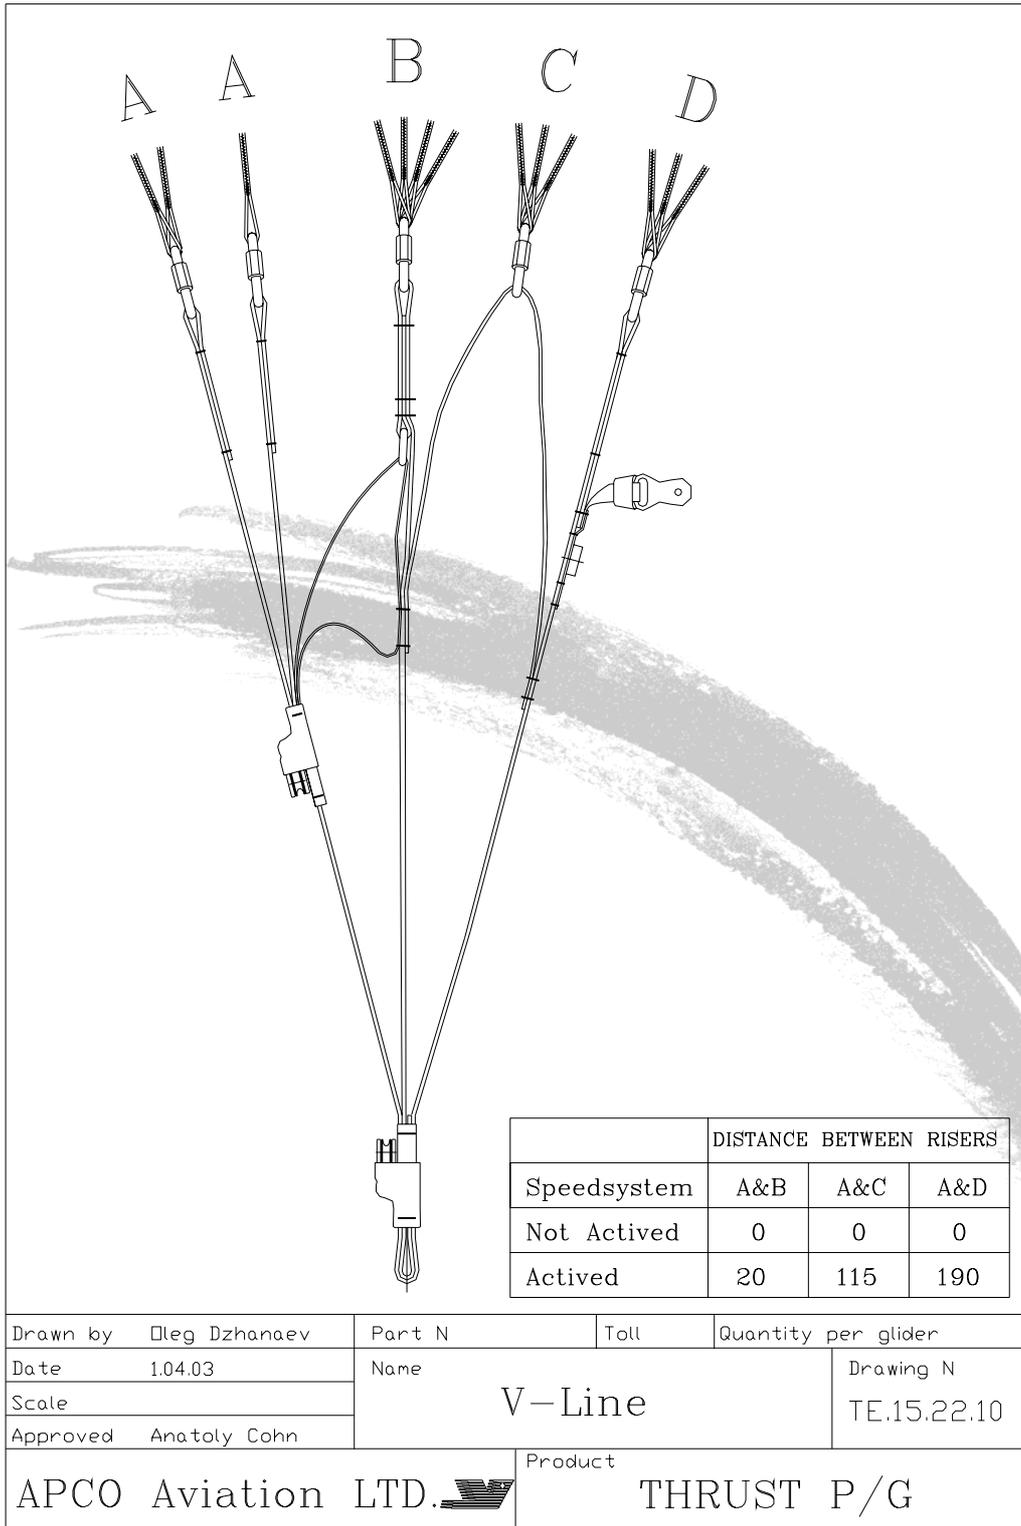


Figure 9-1 RISER P/G VERSION.



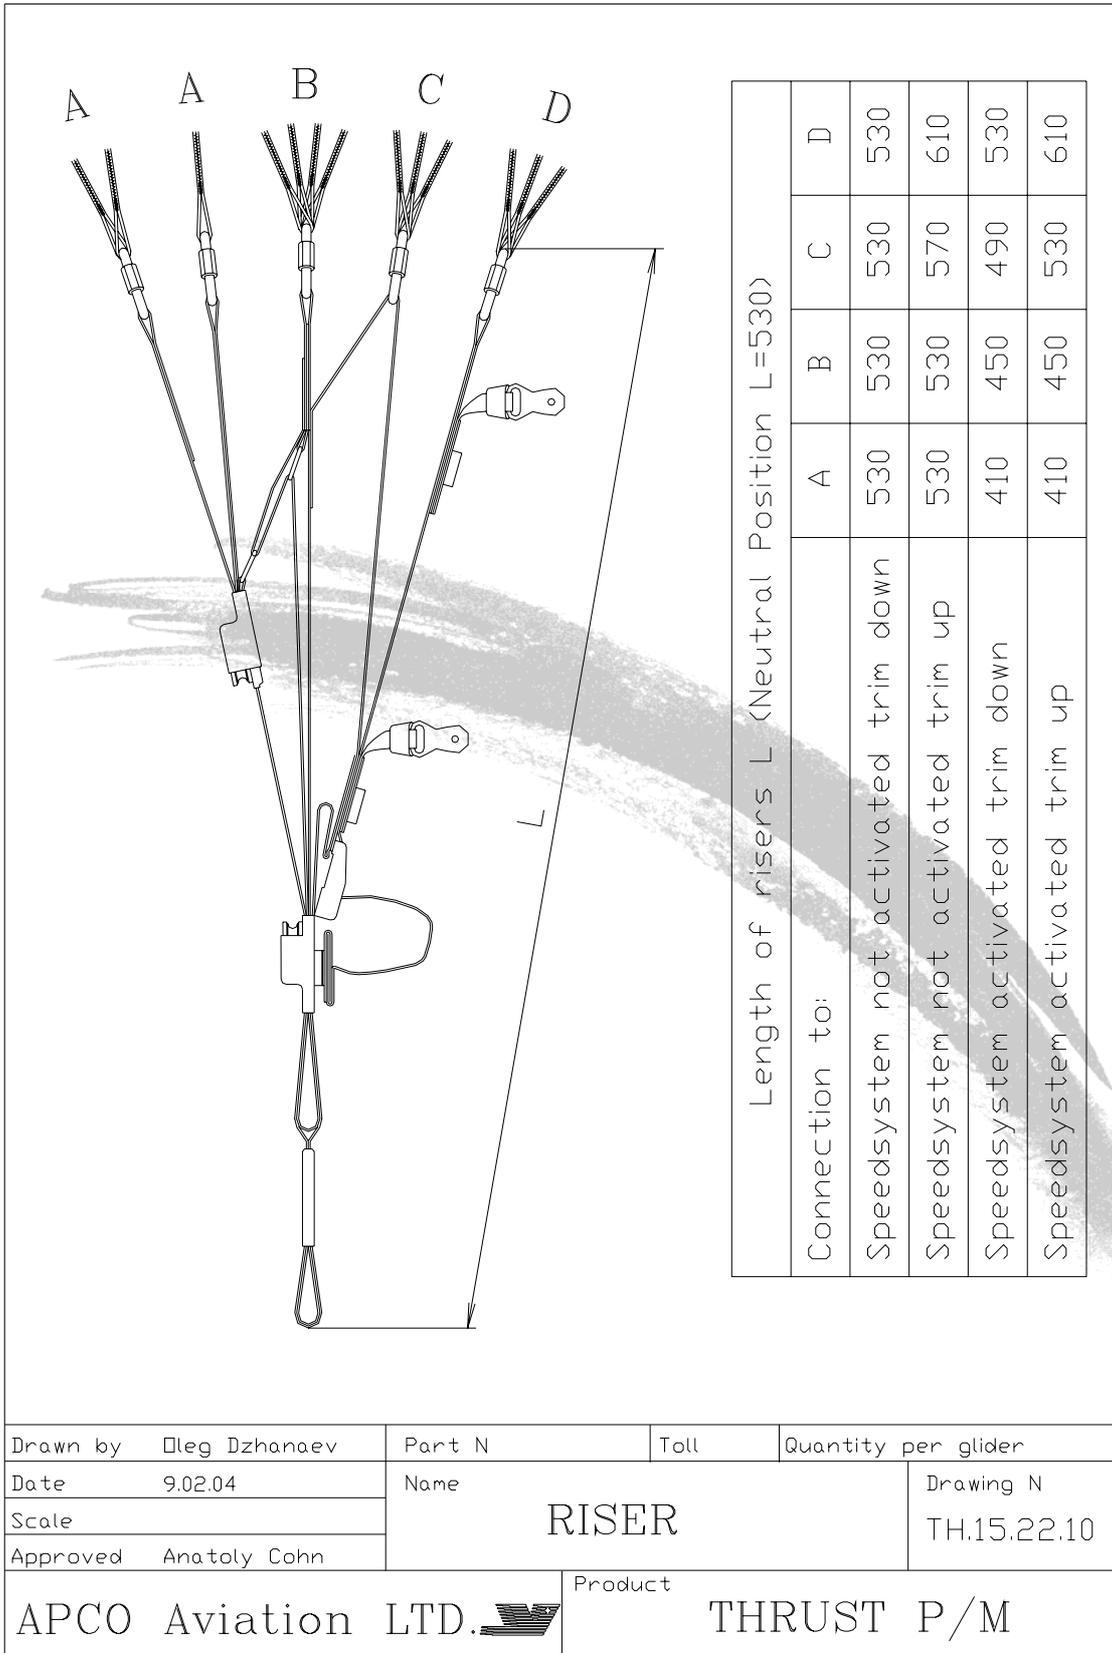


Figure 9-2 RISER P/M VERSION.

10 TRIMMERS

The Thrust risers are equipped with an exchangeable trim tabs for accelerated flight. The neutral setting is when the trims are fully closed and A,B,C,D riser lengths are equal.





We recommend performing landing and take-off with trims closed. Trim tabs should be used when higher speed is required and you wish to accelerate the glider.

If your trim tabs are worn out simply pick the safety stitch and take out the trimmer webbing and replace it with a new original trimmer webbing. After re-installing the trimmer webbing make sure to sew a safety stitch placed at same distance as the original in order to have the full trimmer range.



11 INSPECTION

11.1 GENERAL

Pilots, please insure that your glider has been test flown and checked by your dealer before taking it into your possession.

11.2 BRAKE SETTING

Before the first flight the pilot/dealer has to take his/her glider and inflate it to check brake length and if needed shorten or lengthen the brake setting to his/her preference. It is important that the brakes are not set too short. If the glider is above your head the brakes should not be pulling the trailing edge down as that means that the brakes are too short. A good setting is to have about 10 cm of slack in the brake from the brake guide on the riser to the activation point of the brakes (see Figure 11-1). Because there is several different hook-up positions for paramotor. The THRUST comes with longer brake lines than a normal paraglider. The risers also have two pulleys so the pilot can decide the best brake setup for his/her paramotor.



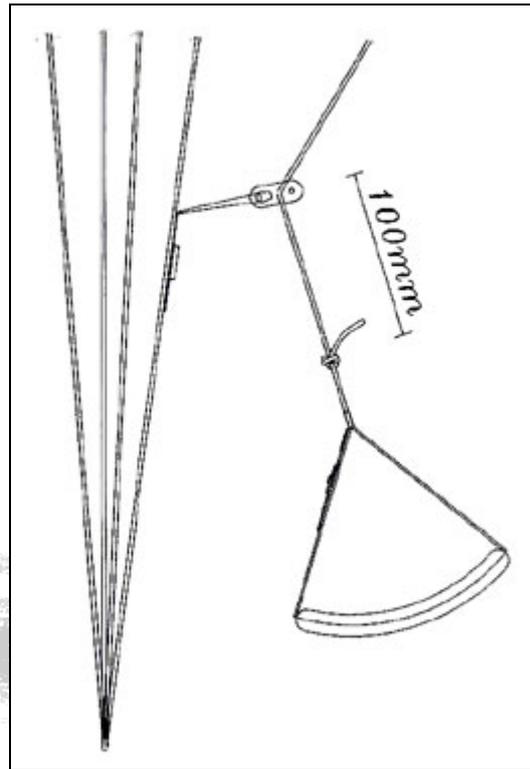


Figure 11-1 Brake Line Adjustment

11.3 FIRST CHECK AND PREFLIGHT INSPECTION

With every new glider, the following points should be checked:

- Connection points between the glider and the harness.
- Check that there are no lines twisted, tangled or knotted.
- Check that the risers and speed-system are hooked up to the harness correctly.

11.4 REGULAR INSPECTION CHECKS

- Damage to lines, webbing and thread on the stitching of the harness and risers.
- That the stainless steel connection links on the risers are not damaged and are fully closed.
- The pulleys of the speed system are free to move and the lines are not twisted.
- The condition of the brake lines, stainless steel ring and the security of the knot attaching the brake handle to the brake line.
- The sewing, condition of the lines and connection of the lines.
- Damage to hook up points on the glider.
- Internal damage to the ribs and diagonal ribs.
- Damage to the top and bottom panels and seams between panels.
- Check the batten sleeves and sleeve ends for wear or punctures.

11.5 LINE MAINTENANCE

Four groups of suspension lines and one brake line are attached to each riser. The three groups are called A, B, C, D and brake lines. The stabilizer lines are connected along with the B-lines. Superaramid lines are known to be sensitive to the influence of the elements. They must be carefully inspected periodically. In his/her own interest, the pilot must observe the following points to ensure maximum performance and safety from the glider:





- Avoid sharp bending and squeezing of lines.
- Take care that people do not step on the lines.
- Do not pull on the lines if they are caught on rocks or vegetation.
- Avoid getting the lines wet. If they do get wet, dry them as soon as possible at room temperature and never store them wet.

IT IS MANDATORY TO CHANGE THE BOTTOM LINES ON EVERY PARAGLIDER ONCE A YEAR OR EVERY 100 HOURS, WHICH EVER COMES FIRST. THE REST OF THE LINES MUST BE CHECKED YEARLY AND REPLACED IF NECESSARY.

NEVER REPLACE THE LINES WITH DIFFERENT DIAMETER OR TYPE OF LINES AS ALL GLIDERS WERE LOAD TESTED FOR SAFETY IN THEIR ORIGINAL CONFIGURATION. CHANGING LINE DIAMETER/STRENGTHS CAN HAVE FATAL CONSEQUENCES.

Every six months one lower A, B, C and D line must be tested for minimum 50 % of the rated strength. If the line fails under the load test or does not return to its specified length all the corresponding lines must be replaced.

Professional use of gliders: Towing, tandem, schooling and competition flying requires more frequent line inspection and replacement of A, B, C, D and brake lines.

12 LAUNCHING

As this is not a training manual we will not try to teach you launching techniques. We will only briefly go through the different launch techniques to help you get the most out of your glider.

12.1 LAYOUT

Pre-flight check should be done before every flight. Spread the glider on the ground. Spread the lines, dividing them into ten groups A, B, C, D and brake lines left and right. Make sure the lines are free and not twisted or knotted. Make sure all the lines are on top of the glider and that there are none caught on vegetation or rocks under the glider. Lay out the glider in a horseshoe shape. This method insures that all the lines are equally tensioned on launch, and results in an even inflation. The Mylar rib section rib will keep the leading edge open for easy inflation. The most common reason for a bad launch is a bad layout!

12.2 ALPINE LAUNCH OR FORWARD LAUNCH

The THRUST has very good launch behaviour in no wind conditions. For the best results we recommend the following: lay the glider out and position yourself in line with the center of the wing with, the lines almost taught. With a positive and constant force inflate the wing holding only the A-risers, and smoothly increase your running speed.

The wing will quickly inflate and settle above the pilots head without the tendency to stick behind, the pilot might have to pull some brake to stop the wing from overshooting the pilot on an aggressive run. After you leave the A-risers, apply about 10-15% brakes and the THRUST will gently lift you off the ground.

12.3 STRONG WIND AND REVERSE LAUNCH

The THRUST has a lot of lifting power and care should be taken in strong wind. It is advisable to have an assistant hold the pilot when attempting a strong wind launch. It also helps if you leave the A-riser just before the glider gets above your head. Then pull a bit of





brake to stop the wing from overshooting, but not too much as the glider might pull you off your feet too early. The assistant should let the pilot walk in under the wing on inflation rather than resist the inflation; this reduces the tendency of the glider to lift the pilot prematurely.

12.4 WITH PARAMOTOR

For launching with a paramotor, the pilot has to be in the center of the canopy before accelerating the engine. The pilot should wait to be pushed by the engine without leaning forward (risk of stumbling) In no wind conditions, you can accelerate earlier to improve the launch.

12.5 WITH TRIKE

For launching with a trike you need a long flat runway. The canopy can be filled up with little accelerator while still standing in one place. Accelerate more and pull the glider up slowly. After visual check accelerate until you take off.

13 FLIGHT TECHNIQUES

13.1 STRAIGHT FLIGHT WITH ENGINE

Rough accelerating in horizontal flight can cause the glider to swing. This can happen to trikes with big distance between the engine and the glider attachment points. Slow down your speed and stabilize the glider by pulling the brakes slightly. With smooth acceleration and light braking you avoid this effect.

13.2 FLYING SPEED

Indicated trim speed is dependant on the amount of brake the pilot is using, wing loading, altitude above sea level and the accuracy and make of speed probe. The speeds recorded were at optimum wing loading at sea level using a Skywatch Pro; thus there could be a slight variation in speed range numbers that a pilot records.

NOTE:

The speeds indicated in the technical data sheet are the correct speeds measured at sea level using a calibrated instrument flying at optimum wing loading. Speed readings in the flight reports could differ as this was measured during testing using various instruments and is an indication of the difference between trim, stall and top speed. The speed range will be the same but the actual numbers may differ.

- With 0% brake the THRUST will fly at 37 km/h with a sink rate of 1.2 m/s.
- At 25% brake the glider will fly at 33km/h with minimum sink rate 1.1 m/s.
- The best glide angle is achieved with 0% brakes.
- With 80% brake the glider will fly at about 24 km/h and will be close to the stall point 21km/h.

CAUTION:

APART FROM WHEN FLARING AT LANDING THERE SHOULD BE NO REASON TO FLY WITH 70% TO 100% BRAKE. THE SINK RATE OF THE GLIDER WILL BE EXCESSIVE AND THERE WILL BE A POSSIBILITY OF ENTERING A DEEPSTALL OR FULLSTALL SITUATION. THERE IS ALSO THE RISK OF GOING NEGATIVE OR ENTERING A SPIN WHEN ATTEMPTING TO TURN THE GLIDER NEAR THE STALL SPEED.





WARNING:

The use of the speed system in turbulent conditions or close to the ground is dangerous. While flying with the accelerator, the glider has a reduced angle of attack and is therefore more susceptible to turbulence and may collapse or partially deflate. Gliders react faster when accelerated and may turn more. The accelerator should immediately be released in this case.

13.3 THERMAL FLYING

Although the THRUST was developed for Paramotoring it has excellent thermaling capacity. The glider has high internal pressure and needs very little pilot input even in very turbulent conditions. In light lift it is advisable to make flat turns to keep the glider from banking too much and avoid increasing the sink rate. In strong lift conditions it is most effective to have small turns in the core with relatively high bank. For the best climb rate in ridge lift we recommend using about 15 to 20% brake.

13.4 ASYMMETRIC COLLAPSE

If one side of the glider partially folds or collapses it is important to keep your flying direction by applying some brake on the opposite side. The wing should re-inflate on its own without any input from the pilot. To help re-inflating it is possible to pull some brake on the collapsed side and release immediately. In the event of a big deflation, i.e. 70%, it is important to give brake in the opposite direction but care must be taken not to pull too much as you could stall the flying side. The glider is very solid and has a very strong tendency to re-inflate after any collapses. It is important to remember that the glider will behave a bit more aggressively if the collapse happens with the trimmer released (open). Do not fly with the trimmer completely released in very turbulent conditions.

13.5 CRAVAT

In case a cravat should occur from an asymmetric collapse or other manoeuvres, it is important to keep your flying direction by applying some brake on the opposite side and then it can usually be opened by pulling down on the stabilo line of the affected side while countering the turn with the opposite brake and weight shift. It also helps sometimes to pull Big Ears to release the tension on the affected lines, or a combination of the above techniques, i.e. pulling on the stabilo after pulling Big Ears.

13.6 FRONT STALL OR SYMMETRIC COLLAPSE

In the event of a front stall the glider will normally re-inflate on its own immediately without any change of direction. To speed up re-inflation briefly apply 30-40% brake (to pump open the leading edge). Do not hold the brakes down permanently to avoid an unwanted stall. With the trimmer completely released the pilot must pull about 30% brake to speed up the inflation process.

13.7 B-STALL

The THRUST has a very clean stable B stall. To enter the B stall the pilot has to pull the first 20-cm slowly until the glider loses forward speed and starts to descend vertically. Then the pilot can pull more on the B until he/she attains a stable 7 to 9 m/s descent rate. The Glider has no tendency to front rosette or become pitch unstable. To exit the B stall the pilot releases the B slowly until the glider has regained its shape and then the last 15 cm fast to prevent the glider from entering deep-stall. The THRUST can be controlled directionally in the B stall by pulling more on one B riser than on the other to create a turn





in any direction. The B-stall is a safe controlled way of losing altitude fast without any forward speed.

13.8 BIG EARS

Altitude can be lost in a controlled way by collapsing both tips. To do this, take the outer-most A-line (attached on its own riser) on either side and pull them down until the tips collapse. Pulling one side at a time may be more comfortable and easier, especially for smaller pilots. This should close about 30% of the wing in total. It is possible to steer with weight shift.

To increase the sink rate the pilot can push the speed system after he/she has collapsed the tips. This can give up to about 7 m/s sink-rate with about 45-km/h forward speed. To exit, release the speed system and then release the tip A-lines.

It may sometimes be necessary to apply a little brake to open the tips. If using the brakes to open the tips, it is best to open one tip at a time, this avoids reducing your air-speed.

CAUTION:

DO NOT ATTEMPT ANY EXTREME MANEUUVRES WITH THE TIPS COLLAPSED AS THIS DOUBLES THE LOAD ON THE CENTER LINES AND ATTACHMENT POINTS AND COULD LEAD TO FAILURE.

13.9 DEEP STALL OR PARACHUTAL STALL

Under normal flying conditions the THRUST will have no tendency to enter deep stall. All gliders can however under certain conditions enter and stay in deep stall configuration (as a result of ageing of materials, improper maintenance or pilot induced).

13.9.1 Signs of parachutal stall

- The pilot has a very little or no forward speed and no wind in his face.
- The glider will be fully open but the cells will be bulging in and not out on the bottom surface.
- The glider might have a very slow turning sensation.
- You will have an increased vertical descent.

13.9.2 Exit from parachutal stall

It is important to recognize this situation. Most accidents involving parachutal stall happen because the pilot did not realize that he was in deep stall.

The best way to exit a parachutal stall is to pull all the A risers down to get the wing flying again. The pilot can pull the riser down until the wing starts to fly again. The moment the wing starts to fly the pilot should release the A riser, or the wing might suffer a frontal collapse.

Alternatively the pilot can push the speed bar to lower the angle of attack or open the trimmers and get the wing flying again (or open the trimmers) .

By pulling one or both brakes while in deep stall the pilot can accidentally enter a full stall or spin.





13.10 FULL STALL

Full stall can occur when full brake applied on both sides. The glider slows down steadily until it stalls completely. The canopy suddenly surges backwards a long way. In spite of this uncomfortable reaction of the canopy, both brake lines must be consequently held down with all your strength (if possible look your arms under the seat) until the canopy is stabilized (directly overhead.)

The APCO THRUST generally flies backwards during a full-stall but doesn't always form a Rosette.

To recover from a full-stall, both brakes must be let up symmetrically at a fast to moderate speed (within 1-2 seconds) when the glider is stabilized over your head. The APCO THRUST surges forward a moderate amount after recovering from a full-stall. Gentle symmetrical braking as soon as the wing begins to move forward is recommended. An asymmetric recovery (one control released faster than the other) from a full-stall can cause a big dynamic collapse.

The full-stall is a hazardous manoeuvre and should be only done under the right safety preparations.

13.11 NEGATIVE TURN (Stall on one side)

In strong turbulence, wrong entry into a turn or wrong reaction to big asymmetric collapse, THRUST can possibly enter into a negative turn. The THRUST shows the pilot this early before happening, because the inner side of the Canopy gets "soft" and the trailing edge starts to tighten backwards. As well the Pilot feels the loss of tension on one side of the Harness. If you enter such a Situation unexpectedly immediately release the brake which is pulled to much, the THRUST will recover in this case immediately. If you will not release the brake, the glider will go into a Negative Turn. Release the brake only if the canopy is in front of the Pilot position. Never do this when the glider is falling back. Correctly done the THRUST flies after a quarter Turn and will move forward again. The Negative turn is like the full-stall a hazardous manoeuvre and should be only done under the right Safety preparations.

13.12 SPIRAL DIVES

The Thrust has very good behaviour in spiral and has no tendency to stick in the spiral. By progressively applying brake on one side the glider can be put into a spiral dive. Safe high sink rates can be achieved like this. The spiral has to be exited slowly by releasing the brake over one complete turn or the glider may pitch forward and possibly suffer a collapse.

Care must be taken that the pilot has enough height to exit the spiral safely.

Sink rates in excess of 19m/s can be obtained.

CAUTION:

SOME GLIDERS CAN BE NEUTRAL IN SPIRAL AND MAY NOT EXIT WITHOUT PILOT INPUT. TO EXIT A NEUTRAL SPIRAL THE PILOT HAS TO LEAN HIS/HER WEIGHT TO THE OUTSIDE OF THE TURN OR APPLY BRAKE ON THE OUTSIDE WING. AS SOON AS THE GLIDER STARTS TO SLOW DOWN IN THE SPIRAL THE OUTSIDE BRAKE MUST BE RELEASED.





PILOTS CAN SUFFER BLACK OUTS IN SPIRALS AND THE PILOT HAS TO EXIT THE SPIRAL AS SOON AS he/she FEELS ANY ABNORMAL SYMPTOMS (Black dots in field of vision or light-headedness).

13.13 STRONG TURBULENCE

NEVER FLY IN STRONG TURBULENCE!

If you unexpectedly encounter strong turbulence, fly with about 20% brake applied to increase the internal pressure and the angle of attack of the canopy and land as soon as possible. If the air is turbulent on landing approach, land with Big Ears.

Learn to fly actively and to anticipate collapses and prevent them by applying brake when needed before you have unwanted collapses.

13.14 STEERING NOT FUNCTIONING

If the pilot cannot reach the brake or steering lines for any reason or if they are not functioning properly, (for example: If they break on a damaged point) he or she can control the glider by pulling down on the rear risers.

Care must be taken when steering like this, as much less input is needed to turn the wing and the response of the wing is also much slower than when using the brakes.

IF YOU PULL TOO MUCH ON ONE OR BOTH RISERS THE GLIDER WILL SPIN OR STALL.

On the landing flare the pilot should be especially careful not to stall the glider too high.

14 LANDING

Before landing the pilot should determine the wind direction, usually by checking a windsock, flags, smoke or your drift over the ground while doing one or more 360o turns.

- Always land into the wind.
- At a height of about 50 meters your landing setup should begin. The most commonly used one is to head into the wind and depending on the wind strength the pilot should reach his/her landing point by making s-turns.
- At a height of about 15 meters the final part of your descent should be made at trim speed into the wind.
- At a height between half a meter and one meter you can gently flair the glider by pulling gradually down on the brakes to the stall point. When top-landing it is sometimes not necessary to flare or a much smaller flare may be required, especially in strong ridge conditions.

14.1 TREE LANDING

If it is not possible to land in an open area, steer into the wind towards an unobstructed tree and do a normal landing approach as if the tree is your landing spot. Flare as for a normal landing. On impact hold your legs together and protect your face with your arms.

After any tree landing it is very important to check all the lines, line measurements, and the canopy for damage.





14.2 WATER LANDING

As you approach landing, release all the buckles (and cross-bracing if present) of the harness except for one leg. Just before landing, release the remaining buckle. It is advisable to enter the water downwind. Let the canopy rotate completely forward until it hits the water with the leading edge openings; the air inside will then be trapped, forming a big air mattress and giving the pilot more time to escape. Less water will enter the canopy this way, making the recovery much easier. Get away from the glider and lines as soon as possible, to avoid entanglement. Remember that a ballast bag can be emptied and then inflated with air for a flotation aid.

The canopy should be carefully inspected after a water landing, since it is very easy to cause internal damage to the ribs if the canopy is lifted while containing water. Always lift the canopy by the trailing edge, not by the lines or top or bottom surface fabric.

14.3 LANDING IN TURBULENCE

One of the safest ways to land a glider in turbulent conditions is to use Big Ears. This reduces the chances of getting a collapse while on final approach. Use weight shift to control your approach. It is possible to keep the ears in until you are ready to flare the glider. Simply release the A-risers and flare the glider, starting a little higher than usual. Practice this in normal conditions before you need it in an emergency.

14.4 WITH PARAMOTOR

Non experienced Pilots should switch off the engine 30m over ground before landing. This avoids uncontrolled acceleration and rough landing. Keep your glider straight until reaching the ground, brake smoothly and take a few steps with your glider. Because of the increased weight, don't brake too early, too abruptly, or too late so as to avoid a crash.

14.5 WITH TRIKE

Land a Trike with running engine and motor idling like a aeroplane. Switch off the engine after the trike has landed and slow down the speed. Bring down your canopy by pulling the brake and or with B-Stall or Front stall.
ATTENTION: Side wind may turn the trike over. Don't stall the glider in any case before reaching the ground.

15 FAILURE OF BRAKE LINES

If the pilot cannot reach the brake or steering lines for any reason or if they are not functioning properly, (for example: If they break on a damaged point) he or she can control the glider by pulling down on the D-risers.
Care must be taken when steering like this, as much less input is needed to turn the wing and the response of the wing is also much slower than when using the brakes.

IF YOU PULL TOO MUCH ON ONE OR BOTH RISERS THE GLIDER WILL SPIN OR STALL.

On the landing flare the pilot should be especially careful not to stall the glider too high.

16 PACKING

Spread the canopy completely out on the ground. Separate the lines to the left and the right side of the glider. If the risers are removed from the harness, join the two risers





together by passing one carabiner loop through the other. This keeps them neatly together and helps to stop line tangles.

Fold the canopy alternately from the right and left sides, working towards the center, press out the air, working from the rear towards the front. Place the risers at the trailing edge of the folded canopy and use them to finally roll up the canopy.

17 MAINTENANCE & CLEANING

Cleaning should be carried out with water and if necessary, gentle soap. If the glider comes in contact with salt water, clean thoroughly with fresh water. Do not use solvents of any kind, as this may remove the protective coatings and destroy the fabric.

18 STORAGE

When the glider is not in use, the glider should be stored in a cool, dry place. A wet glider should first be dried (out of direct sunlight). Protect the glider against sunlight (UV radiation). When on the hill keep the glider covered or in the bag. Never store or transport the glider near paint, petrol or any other chemicals.

19 DAMAGE

Using spinnaker repair tape (for non-siliconized cloth) can repair tears in the sail (up to 5cm). A professional repairer should repair greater damage.

20 GENERAL ADVICE

A qualified person or agent of the company should check the glider every year. The glider is carefully manufactured and checked by the factory. Never make changes to the canopy or the lines. Changes can introduce dangerous flying characteristics and will not improve flying performance.

Do not put the glider in direct sunlight when not necessary. In order to protect the glider during transportation or waiting time we recommend one of our lightweight storage bags. If you have any doubts about flying conditions-do not begin.


If you have any questions, please contact your dealer or us.

Lastly, be equipped with a certified emergency parachute and helmet on every flight.






21 THRUST SMALL SKETCHES

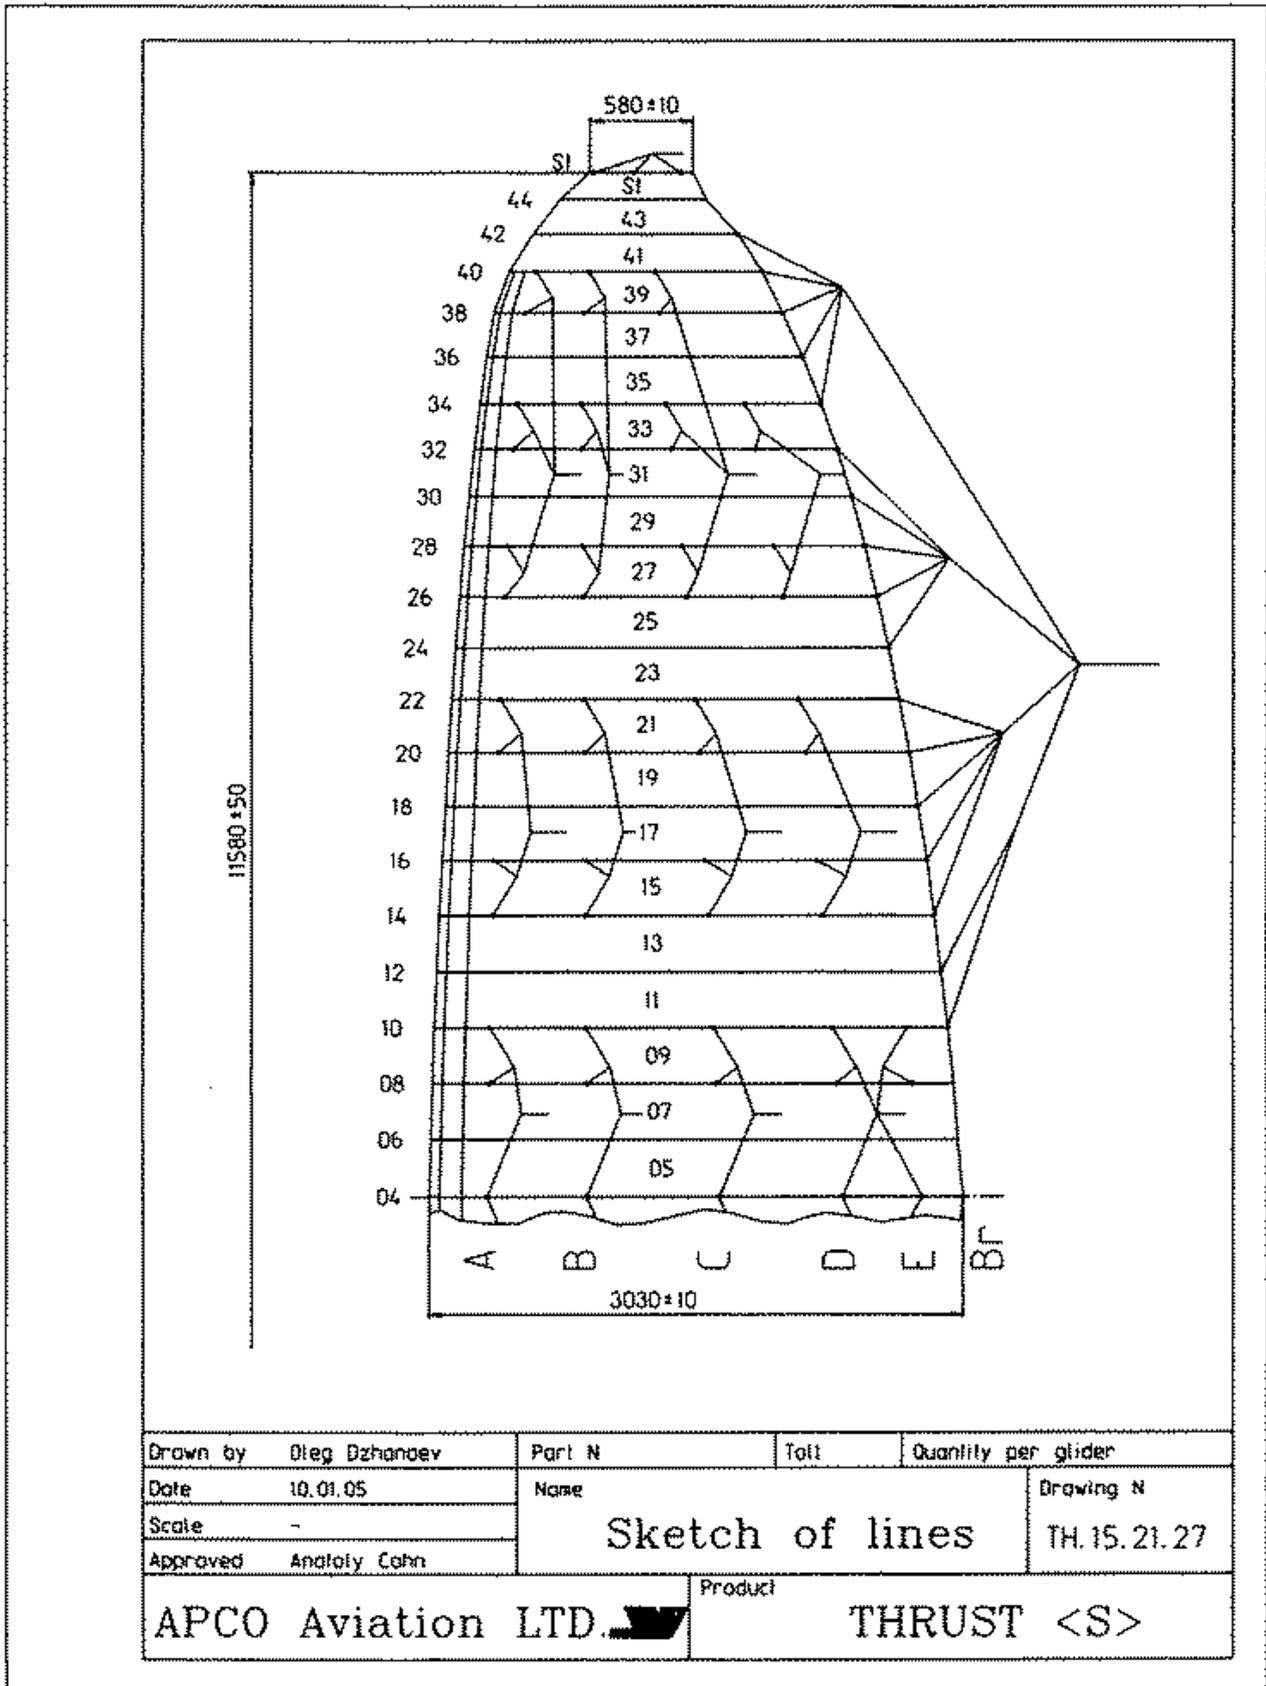




22 THRUST MEDIUM SKETCHES

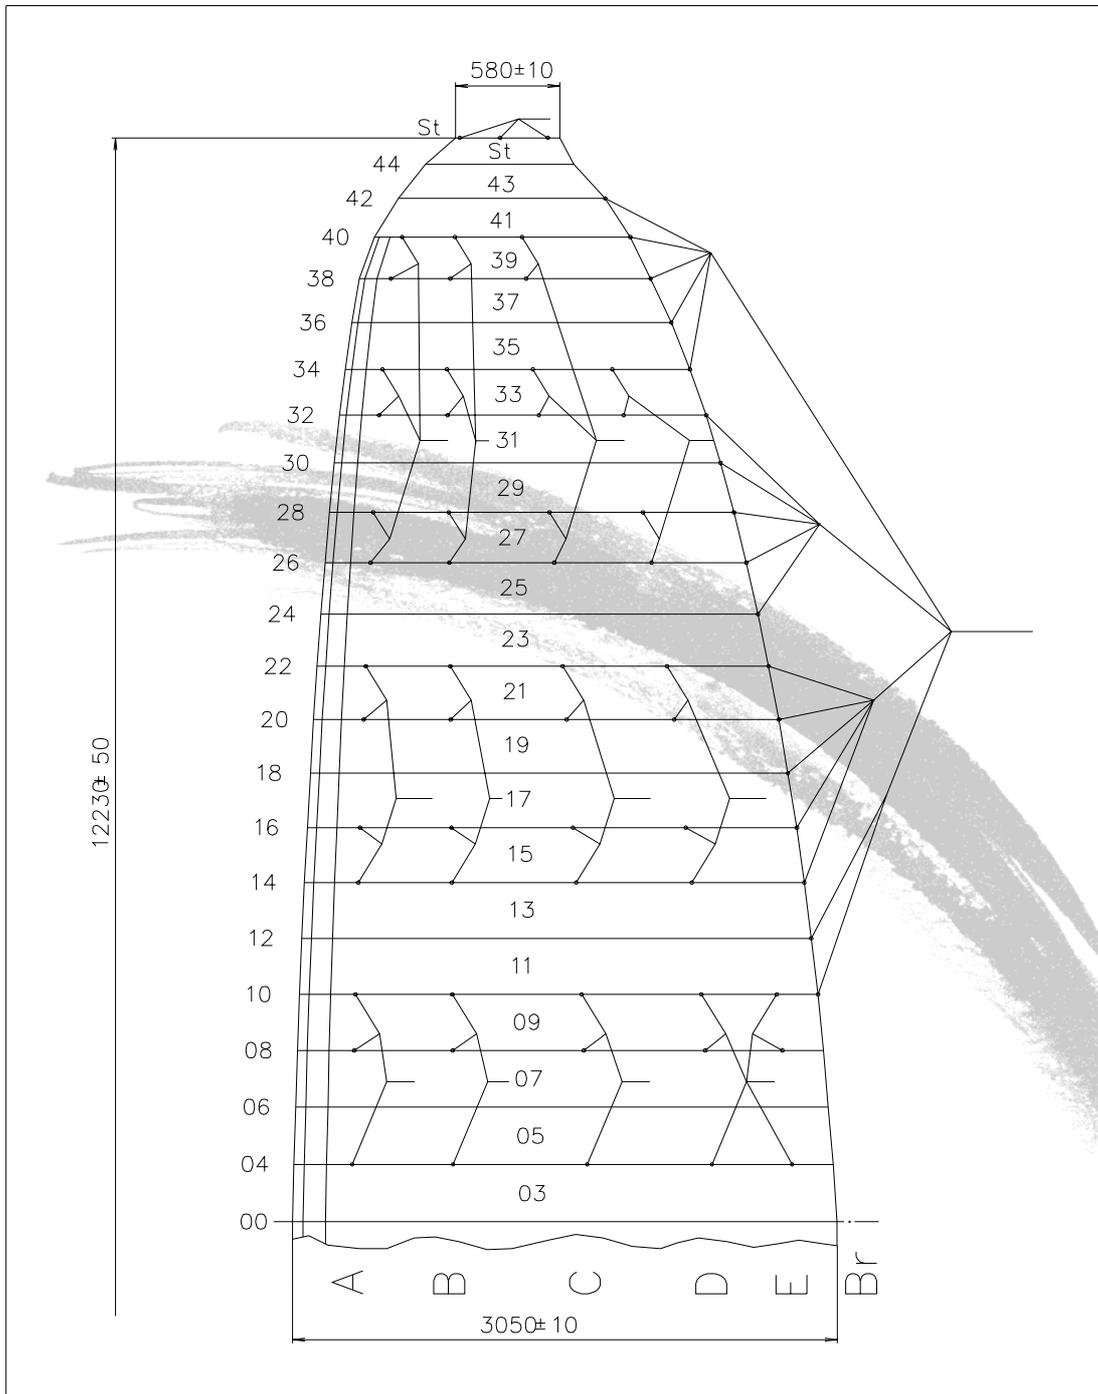

Drawn by	Oleg Dzhanayev	Part N	Toll	Quantity per glider
Date	12.01.04	Name		Drawing N
Scale	-	Sketch of lines		TH.15.21.29
Approved	Anatoly Cohn			
APCO Aviation LTD.		Product		
		THRUST <M>		



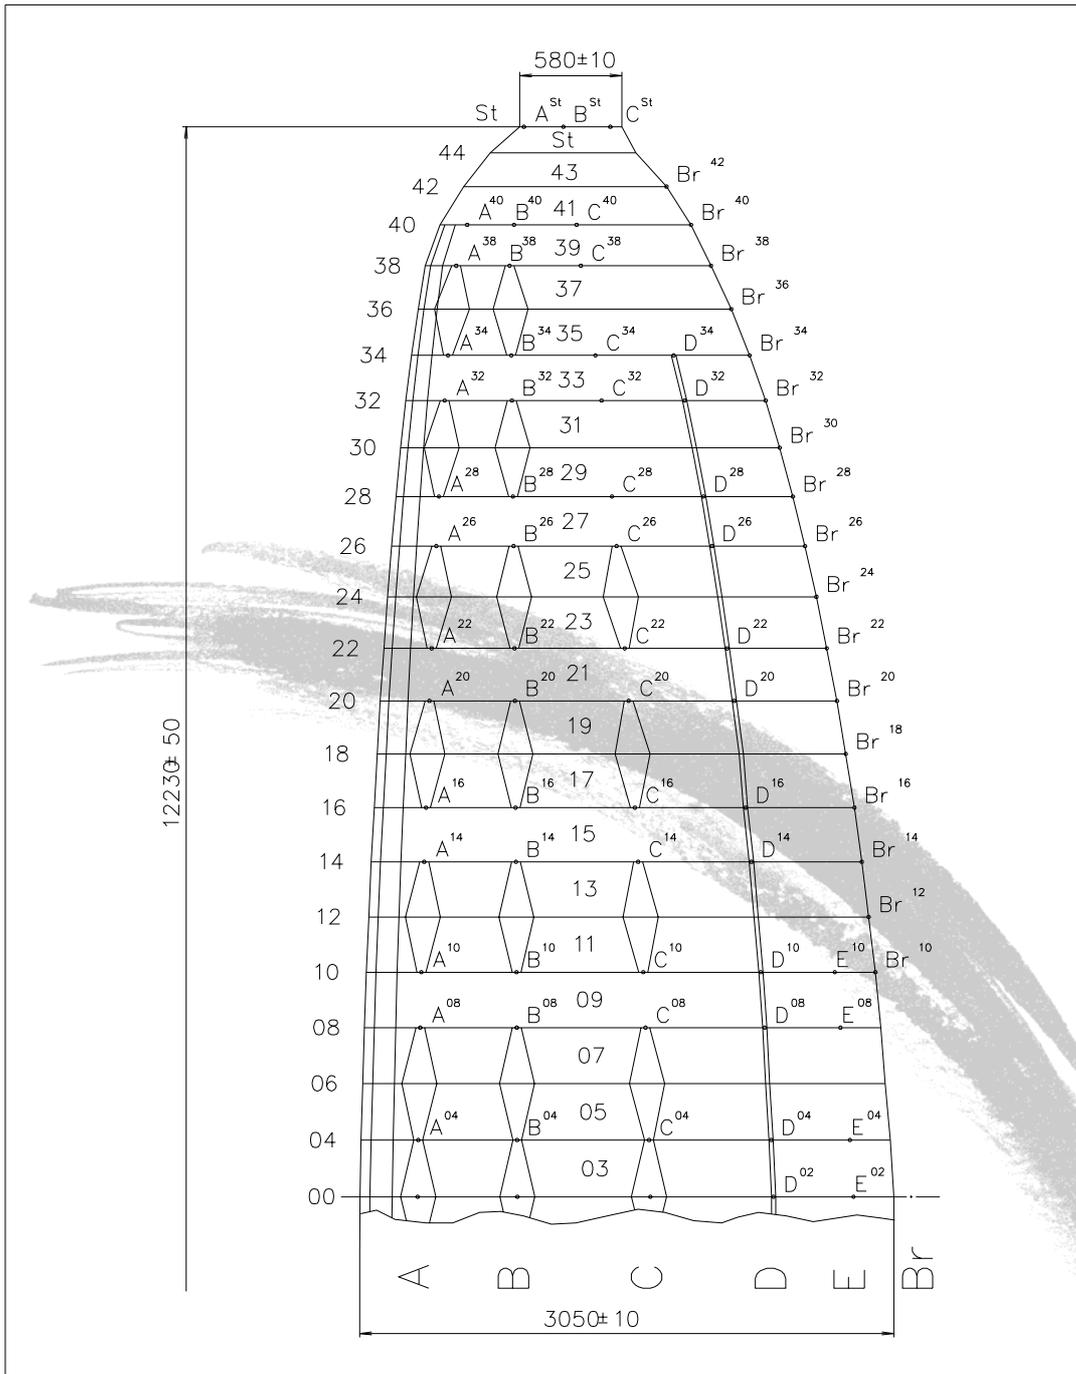


Drawn by	Oleg Dzhanaev	Part N	Toll	Quantity per glider
Date	12.01.04	Name CANOPY		Drawing N
Scale	-			TH.15.10.29
Approved	Anatoly Cohn			
APCO Aviation LTD.		Product THRUST <M>		






23 THRUST LARGE SKETCHES

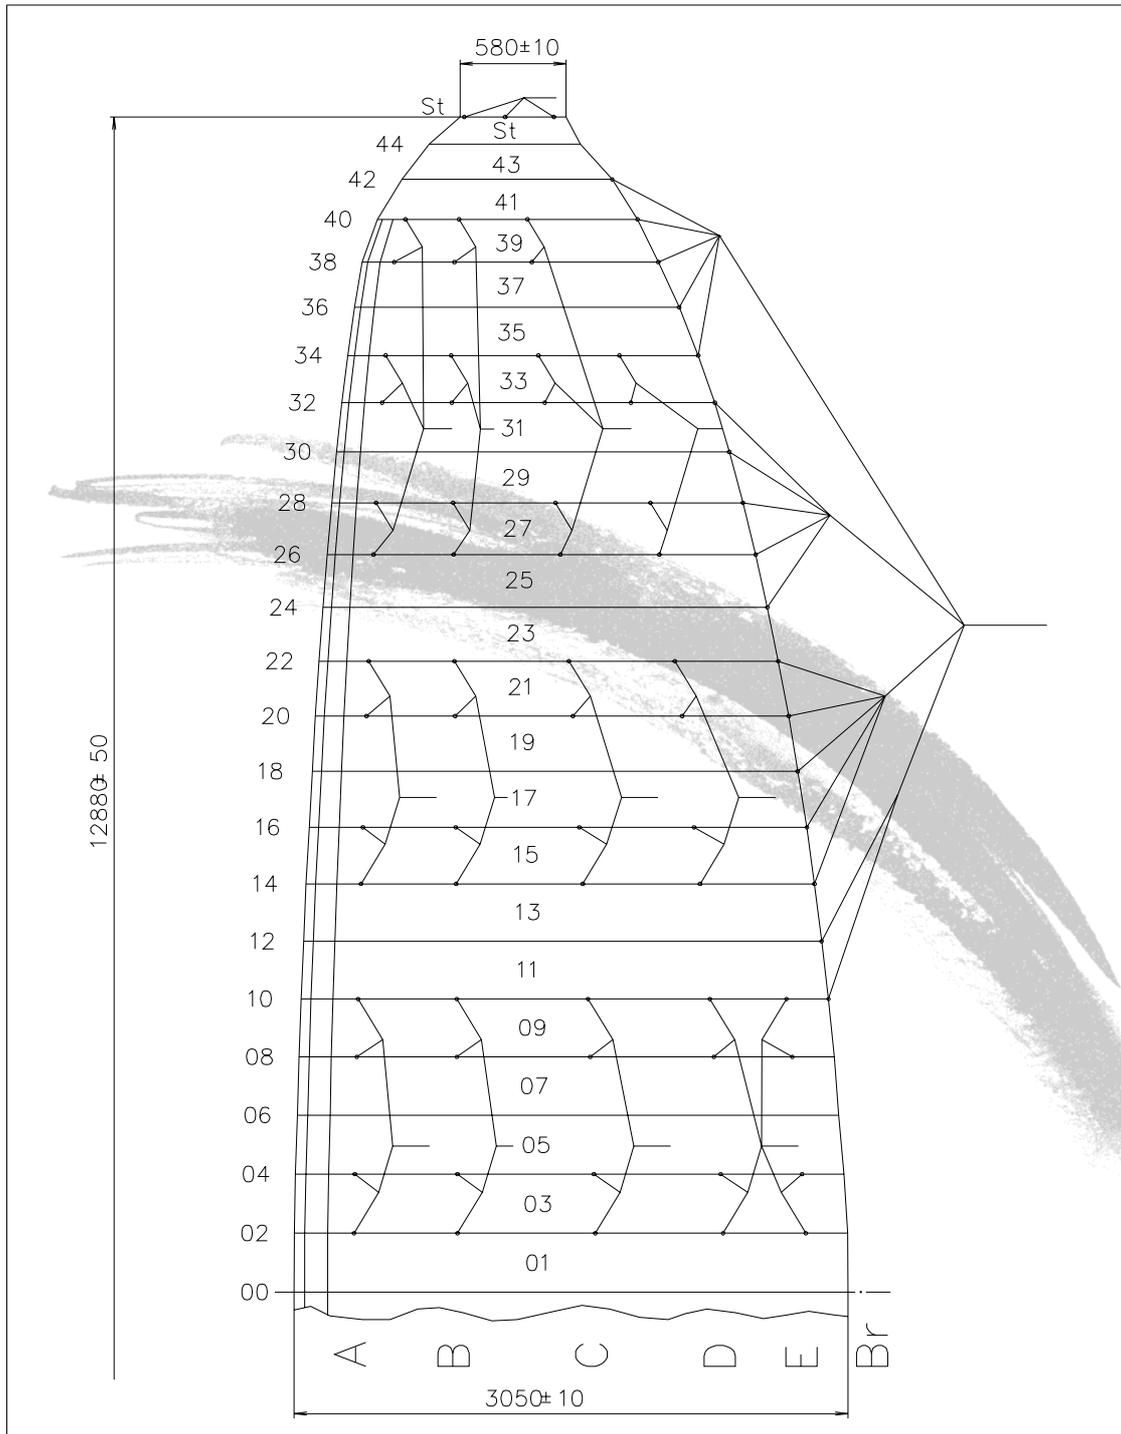

Drawn by	Oleg Dzhanayev	Part N	Toll	Quantity per glider
Date	12.01.04	Name		Drawing N
Scale	-	Sketch of lines		TH.15.21.31
Approved	Anatoly Cohn			Product
APCO Aviation LTD.				



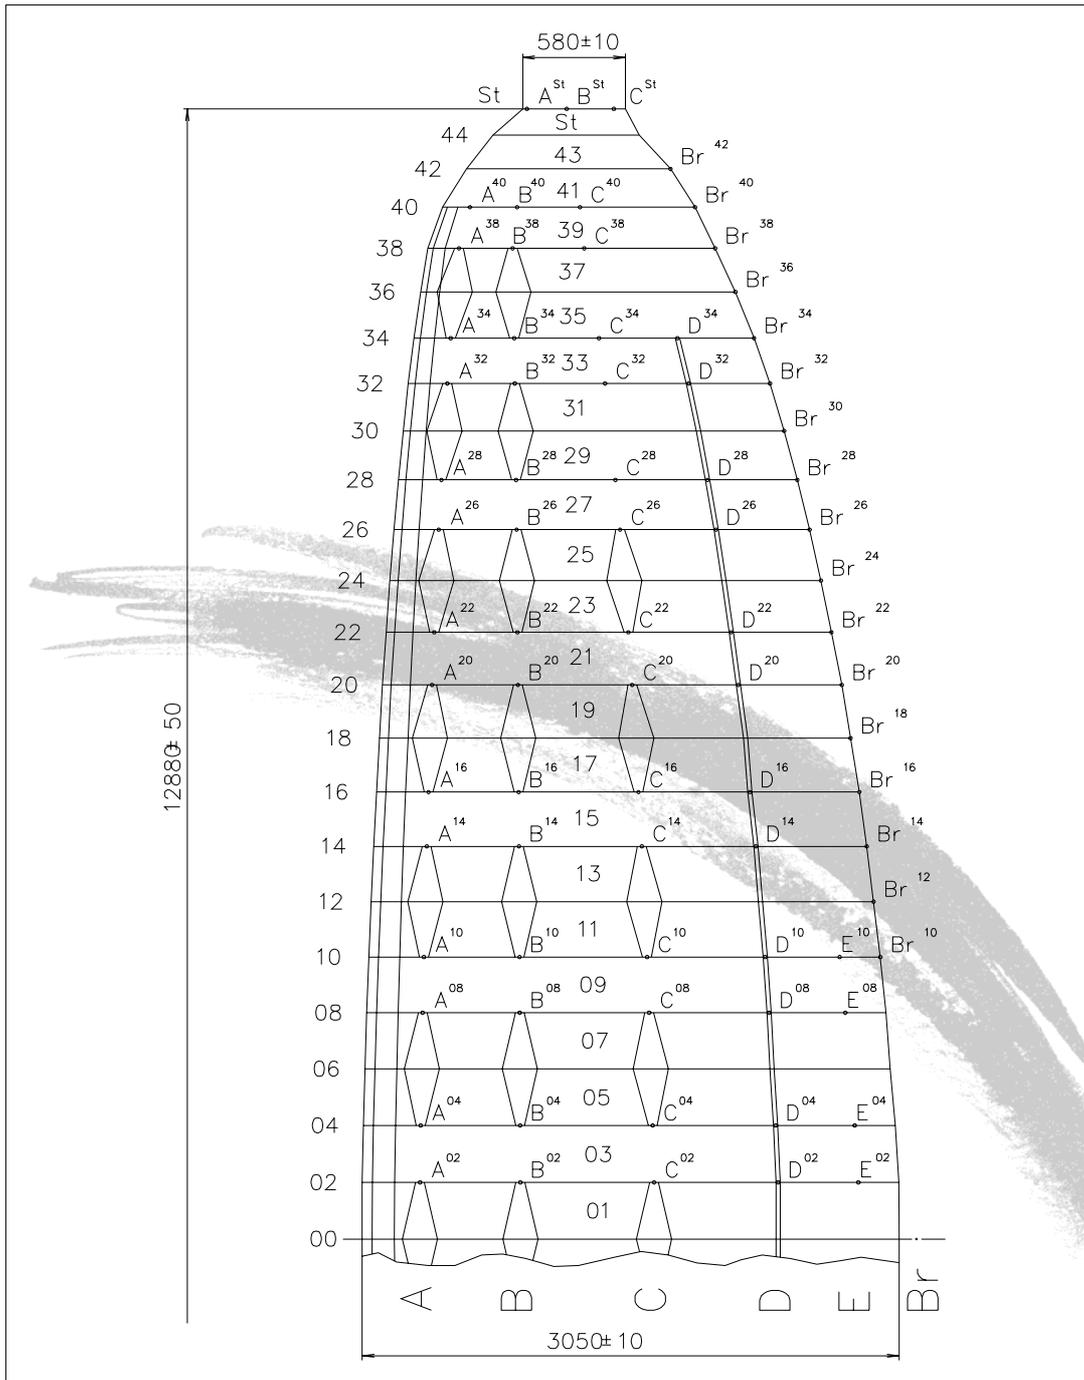


Drawn by	Oleg Dzhanayev	Part N	Toll	Quantity per glider
Date	12.01.04	Name	CANOPY	
Scale	-			Drawing N
Approved	Anatoly Cohn			TH.15.10.31
APCO Aviation LTD.		Product	THRUST <L>	






24 THRUST EXTRA LARGE SKETCHES

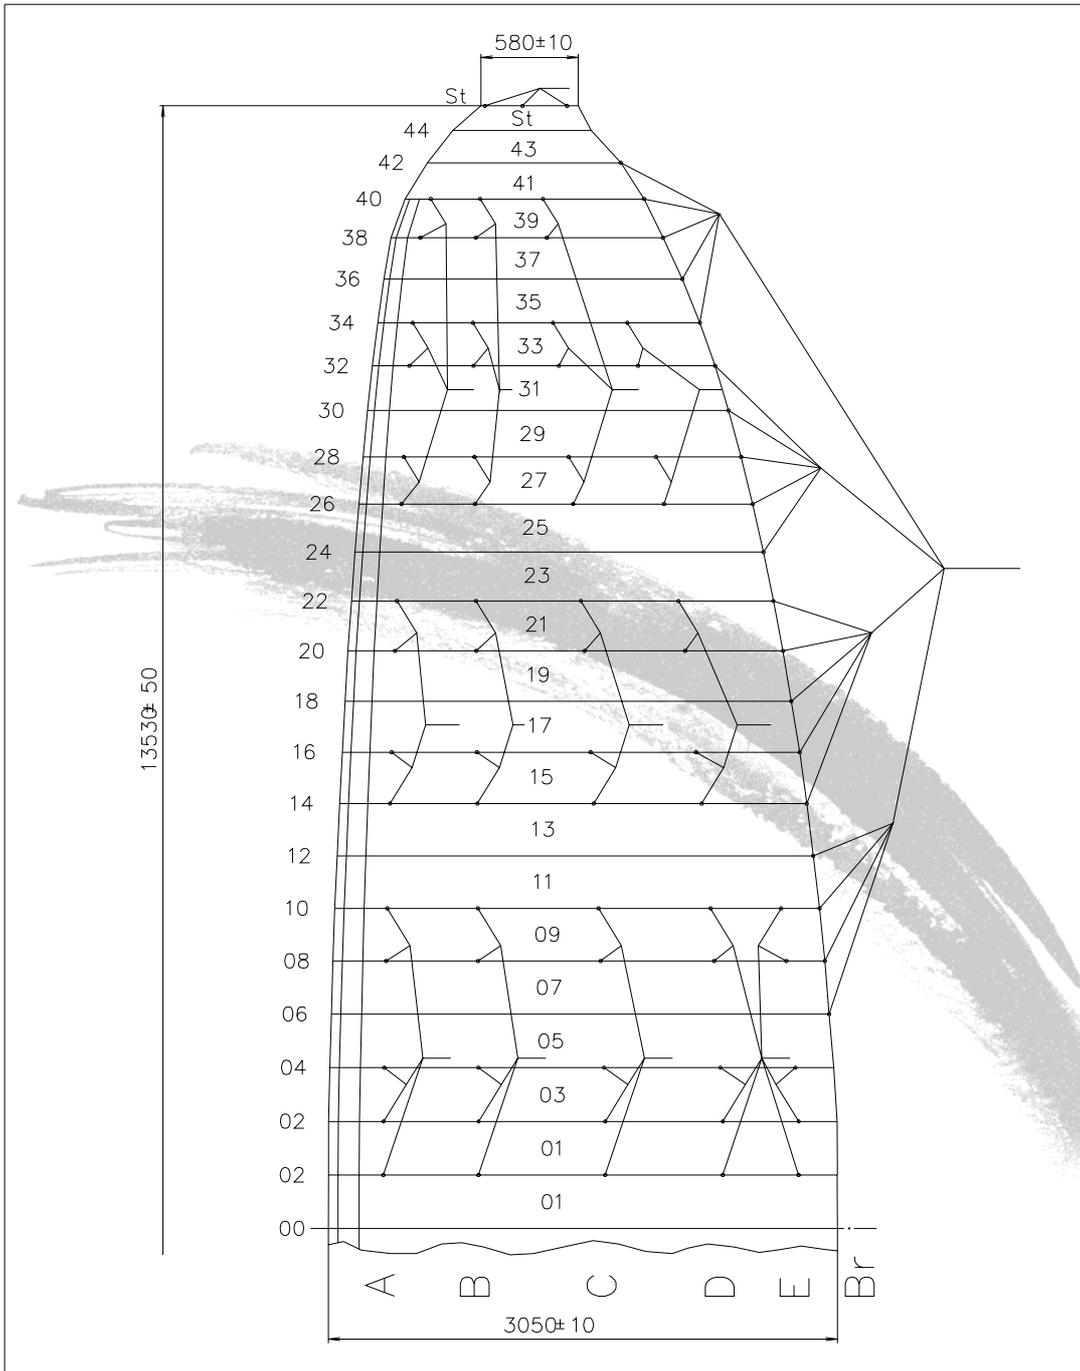

Drawn by	Oleg Dzhanaev	Part N	Toll	Quantity per glider
Date	12.01.04	Name	Sketch of lines	
Scale	-			Drawing N
Approved	Anatoly Cohn			TH.15.21.33
APCO Aviation LTD. 		Product		
		THRUST <XL>		



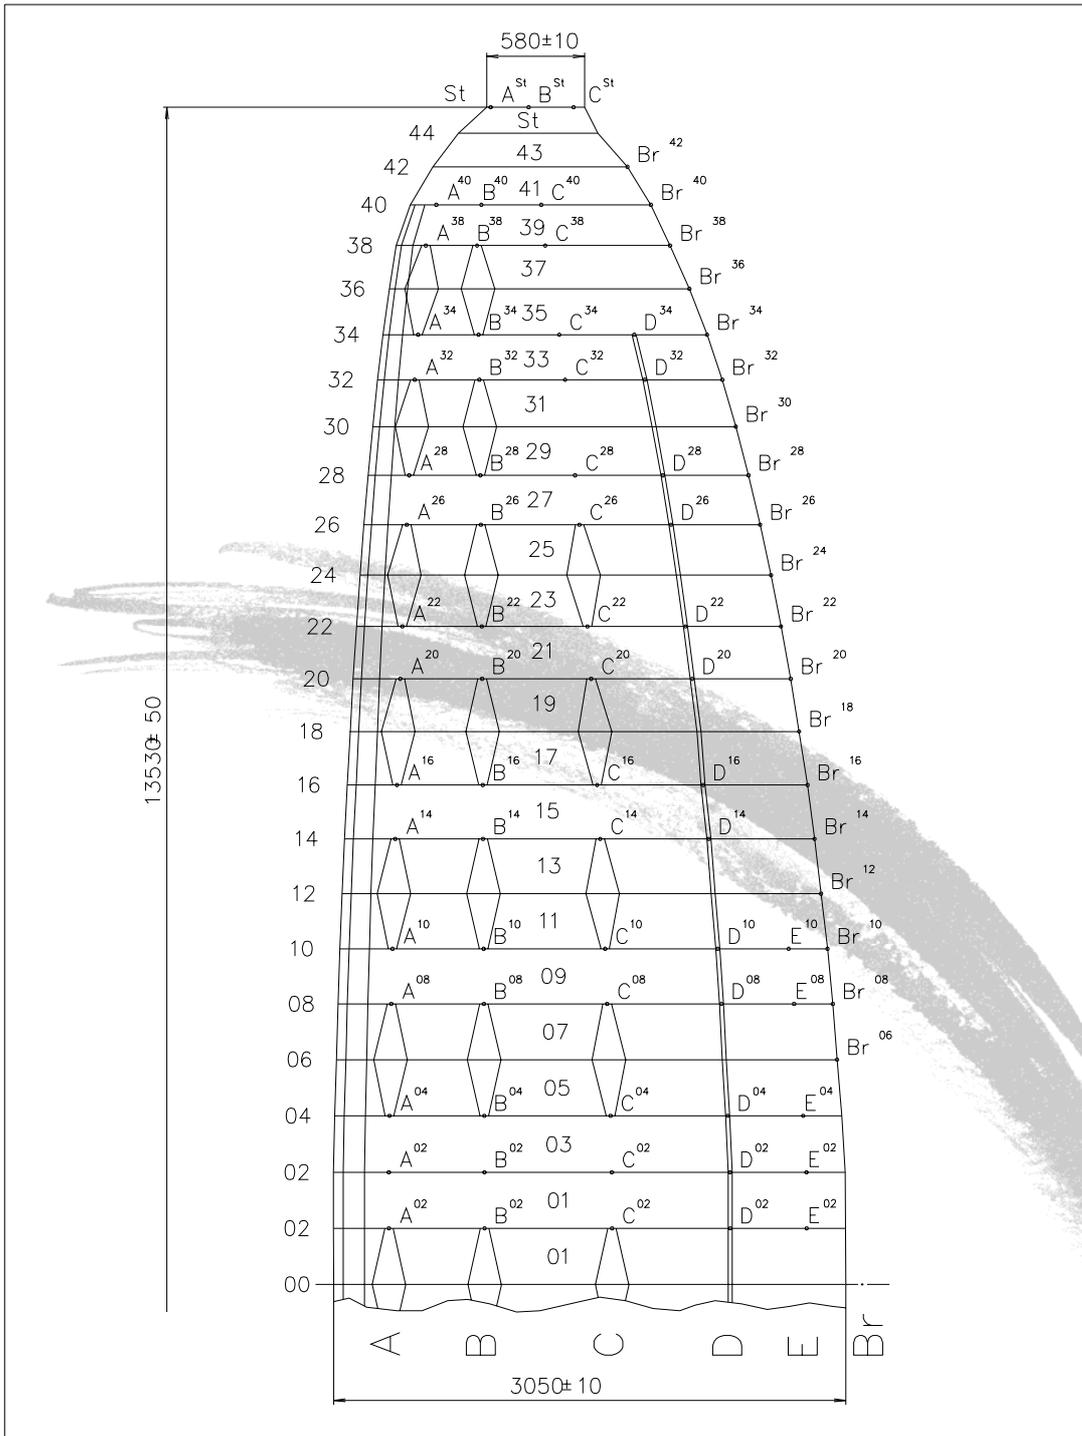

Drawn by	Oleg Dzhanayev	Part N	Toll	Quantity per glider
Date	12.01.04	Name CANOPY		Drawing N
Scale	-			TH.15.10.33
Approved	Anatoly Cohn			Product
APCO Aviation LTD.				





25 THRUST MEDIUM CERTIFICATION

SHV FSVL



Category:	STandard
Catégorie:	STandard

Reference number Standards AFNOR S52-308/309

N° de conformité aux normes AFNOR S52-308/309

G 636/04

Certified date:

Date de délivrance:

07 /05 / 2004

MANUFACTURED / MARQUE:
AVIATION

APCO

MODEL / MODÈLE:

THRUST M

Configuration during the tests / Configuration en tests

Minimum flying weight:

Poids mini total en vol:

80 kg

Type of harness

Harnais

ABS

Maximum flying weight:

Poids maxi total en vol

100 kg

Manufactured:

Marque:

APCO AVIATION

Weight of the model:

Poids du modèle:

6.9 kg

Model:

Modèle:

FINESSE

Number of risers:

Nombres d'élévateurs:

4

Seat/maillons distance:

Distance maillons/assise:

40 cm

Chest strap adjust:

Entr'axe maillons:

42 cm

Accessories / Accessoires

Range of seed barre:

Accélérateur:

in cm

20 cm

Range of trimmers:in cm

Afficheurs:

No/Non

Breakes speed range:

Plage de vitesse aux freins:

in Km/h

12 km/h

Range with accessories:in Km/h

Plage de vitesse avec accéssoires:

17 Km/h

Check every:

Révision tous les:

**After 100 flights or 1 year
Après 100 vols ou 1 année**

Warning: before use refer to the user's manual

Avertissement: avant utilisation, prendre connaissance des instructions du manuel de vol!





26 THRUST LARGE CERTIFICATION

SHV FSVL



Category:	Standard
Catégorie:	Standard

Reference number Standards AFNOR S52-308/309

N° de conformité aux normes AFNOR S52-308/309

G 637/04

Certified date:

Date de délivrance:

07 /05 / 2004

MANUFACTURED / MARQUE:

APCO

AVIATION

MODEL / MODÈLE:

THRUST L

Configuration during the tests / Configuration en tests

Minimum flying weight:
Poids mini total en vol:

95 kg

Type of harness
Harnais

ABS

Maximum flying weight:
Poids maxi total en vol

120 kg

Manufactured:
Marque:

APCO AVIATION

Weight of the model:
Poids du modèle:

7.3 kg

Model:
Modèle:

FINESSE

Number of risers:
Nombres d'élévateurs:

4

Seat/maillons distance:
Distance maillons/assise:

40 cm

Chest strap adjust:
Entr'axe maillons:

44 cm

Accessories / Accessoires

Range of seed barre: in cm
Accélérateur:

20 cm

Range of trimmers:in cm
Afficheurs:

No/Non

Breakes speed range: in Km/h
Plage de vitesse aux freins:

12 km/h

Range with accessories:in Km/h
Plage de vitesse avec accéssoires:

17 Km/h

Check every:
Révision tous les:

**After 100 flights or 1 year
Après 100 vols ou 1 année**

Warning: before use refer to the user's manual

Avertissement: avant utilisation, prendre connaissance des instructions du manuel de vol !





27 THRUST EXTRA LARGE CERTIFICATION

SHV FSVL



Category:	STandard
Catégorie:	STandard

Reference number Standards AFNOR S52-308/309

N° de conformité aux normes AFNOR S52-308/309

G 638/04

Certified date:

Date de délivrance:

07 /05 / 2004

MANUFACTURED / MARQUE:

APCO

AVIATION

MODEL / MODÈLE:

THRUST XL

Configuration during the tests / Configuration en tests

Minimum flying weight:

Poids mini total en vol:

110 kg

Type of harness

Harnais

ABS

Maximum flying weight:

Poids maxi total en vol

140 kg

Manufactured:

Marque:

APCO AVIATION

Weight of the model:

Poids du modèle:

7.6 kg

Model:

Modèle:

FINESSE

Number of risers:

Nombres d'élévateurs:

4

Seat/maillons distance:

Distance maillons/assise:

40 cm

Chest strap adjust:

Entr'axe maillons:

46 cm

Accessories / Accessoires

Range of seed barre:

Accélérateur:

in cm

20 cm

Range of trimmers:in cm

Afficheurs:

No/Non

Breakes speed range:

Plage de vitesse aux freins:

in Km/h

12 km/h

Range with accessories:in Km/h

Plage de vitesse avec accessoires:

17 Km/h

Check every:

Révision tous les:

**After 100 flights or 1 year
Après 100 vols ou 1 année**

Warning: before use refer to the user's manual

Avertissement: avant utilisation, prendre connaissance des instructions du manuel de vol !





APCO wishes you many hours of enjoyable flying.

Take Air!

