

Ricoh GX7000 Sublimation Manual





Index

Contents

Ricoh GX7000 Installation	P.1
Driver Setup	P.6
CorelDRAW Setup (CorelDRAW 10 - X4 & X5)	P.10
Working with templates	P.18
CoreIDRAW tools	P.20
CorelDRAW tasks	P.22
Troubleshooting / Tips	P.23



Installation Guide - Ricoh Driver and Inks

1. Unpack and setup the p r i nter as described in the printer setup instructions. Have the printer plugged into a **power outlet** but not turned on. **IMPORTANT: DO NOT INSTALL THE STANDARD EPSON CARTRIDGES.**

Ink Cartridge Setup

CAUTION: DO NOT INSTALL THE STANDARD EPSON INKS BEFORE INSTALLING SUBLIMATION INK. Do not power ON the printer before installing the cartridges.

Remove the Sublimation cartridges from the packaging.

Open front cover to reveal ink cartridge compartment

Insert the **Sublimation** cartridges in the indicated order. Press each cartridge body until it engages securely.

Please Note: Do not shake or agitate the ink carts before or after installation.

Cartridge Order: Black, Cyan, Magenta & Yellow

Once all cartridges are in place, close the cartridge cover.

Note: DO NOT TURN ON THE POWER FOR THE PRINTER UNTIL THE DRIVER INSTALLATION REQUIRES YOU TO.









- 2. Insert the Ricoh CD into the CD/DVD Rom driver .
- 3. Select a langu a ge for the interface & clic OK.

🖏 Driver, Manual & Utility
Driver, Manual & Utility
Select a language.
English
OK Cancel
UN Cancer

4. Click Quick Install with USB, and then click next.

niver, Manual & Utility	
Driver, Manual & Utility	
Quick Install for USB	Please make a selection.
Quick Install for Network	
Printer Driver	Select Language
User Guide	Browse This CD-ROM
DeskTopBinder - SmartDeviceMonitor for Client	Erowse User Guide
	Exit

5. Click 'I accept the agreement' and click next





6. Click 'Next' to confirm the driver installatio n



7. The installation process will now begin



8. You will be prompted to turn the printer **On** to allow detection of the Ricoh GX7000.





9. Once the printer has been detected you will be shown the following dialogue box, asking if you would like to set the printer as the default printer. You can select either Yes or No depending on which printer you prefer to be you default printer.



10. Click next in the dialogue box below.



11. You will now be shown the following information stating that the printer has been installed successfully, Click Next.

If the information shown states that the installation failed, restart the PC and re-install the driver.

Install Printer Driver			×
	<printer cor<="" driver="" installation="" th=""><th>mplete></th><th></th></printer>	mplete>	
AL.	The printer driver installation Click [Next] to install User Gr		
	Report:		
	Printer driver installation log File creation date : RDISETUP version : Computer name :	2009/06/01 10:24:33 1, 20, 2, 0 ROBSISSON	
	Login user name : Operating system : End status :	rsisson Microsoft Windows Vista S The printer driver installatio	
	۰ III	•	
		Next > Cancel	



12 The system will now install the user manual, and then show the following window to confirm the install is complete. Click Finish

Add Printer and Utility Wizard	
Installation completion. Software installation is completed. To refer to the installed result, click. [Report].	
Software installation is completed.	*
<u>R</u> eport	<u>Einish</u>



To setup the Ricoh GX7000 Driver ready for Sublimation printing using Corel Draw follow the steps below:

1. Click Start > Control Panel > Printers ('Printers and Faxes' if using windows XP or previous operating systems).

Right click on the GelSprinter GX7000 option and select Printing Preferences as shown below.



2. If you see the window below, click OK, and then click OK on the second window that appears. (If you do not see this option skip to step 3).





3. In the Printing Preferences Window shown below, select 'Inkjet Plain Paper' for the 'Paper Type', and then select 'User Settings' as shown.

Now click 'Change'



4. In the new window shown below, change the 'Colour Profile' option to 'Off' and then tick the 'Use Error Diffusion' option.

Now click 'OK' to return to the previous window.

lser Settings: Inkjet Plain F	Paper
▼ Image processing priority	😙 Color Settings
High quality 👻	Color profile:
Adjust photos and images	Off 🗸
Smooth low resolution images	Gray reproduction (Text/Line Art):
	K (Black) for text only 🗸
	Print all texts in black
à pu	Use ICM
Dithering	ICM method:
Automatic 👻	By host system 👻
Vuse error diffusion	ICM intent:
Photos and images 🔹	Pictures (Perceptual)
	Restore Defaults



5. Click 'Save'

GelSprinter GX 7000 Printing Prefere	ences	
Setup Page Settings Edit Mainten	nance Printer Configuratio	n
Custom Settings:	Paper type:	Inkjet Plain Paper 👻
Manage Save	Paper source tray:	Auto Tray Select 👻
Manage	Print Quality	_
		Quality priority
		 Speed priority High speed
A4 (210 x 297 mm)		User settings Change
		Uni-directional printing only
	Color/Black and White	e
		Color
	- >	Black and White
	Job type:	Normal Print 👻
	Display Preview	and Print screen
	🧐 🗌 Unauthorized co	Dpy Control Settings
Load paper face down.		
📴 User Guide	About	Restore Defaults
	ОК С	Cancel Apply Help

6. Type 'Subli Print' under the Custom Setting Name option as shown below, and click OK.

Save New Custom Setting
The current settings will be added to [Custom Settings].
Custom Setting name: Subli Print
OK Cancel Help



7. Click 'OK' in the Printing Preferences window to confirm all changed settings as shown below.





To setup Corel Draw follow the steps below

1. Before opening Corel Draw you need to install the Xpres Sublimation Colour Profile, this can be downloaded from <u>www.xpres.co.uk/downloads</u> or can be found on the Subli Print CD supplied.

Save the Colour Profile on to your Desktop (drag and drop if taking from the supplied CD). Now Right Click the Colour Profile (Ricoh 7000 v1.15) and select 'Install' - *There will be no confirmation that the file has been installed.*



2. Now open Corel Draw and open a new page. Click on Window > Colour Palettes. Click on 'Default RGB Palette'. Repeat the above and click 'Default CMYK Palette' to deselect this option. The Colour Palette menu should appear as shown below.





3. Now click Tools > Colour Management, you will see the Colour Management Dialogue Box appear as shown below.



Firstly, make sure that the arrows are highlighted as above. To select or deselect an arrow, click directly on the arrow itself. Also select RGB under the 'Color mode used for effects:' option.

Make sure that the drop down option below the centre circle shows 'Internal RGB - Fraser (1998)', and the drop down option below the printer to the left hand side states 'Ricoh - 7000 v1.15'.



4. Click on the Import/Export icon to open the window below





Select 'Always Convert Using' and 'Always Embed Using'. In both drop down lists select 'Internal RGB - Fraser (1998)' as shown.

5. Now click on the 'Advanced Printer Settings' to open the window below.





Advanced Printer Settings Icon

Make sure that 'Do Not Override' under Colour Profile is selected next to all printers.

6. Now click on the [+] option to save your settings. Save the settings as 'Subli Print' and click OK to confirm. Then click OK in the Colour Management window.

Color Mana	agement
Settings:	Subli Print 🔹 🛨
	Save Color Management Style
	Save style as: Subli Print
	OK Cancel Help



7. When you have your image ready to print, go to File > Print and select the relevant printer (GelSprint GX7000). Now select the Prepress tab, make sure that the 'Mirror' option is ticked as shown below. (Sublimation requires the images to be printed in Mirror).

General Layout Separations Prepress Misc	1 2 Issues	
Paper/film settings	Registration marks Print registration marks Style:	
File information Print file information _ob name/slug line:	•	
X:\showroom\Rob Tech Info\Manual mz Print page numbers Position within page	Calibration bars Color calibration bar Densitometer scales	
Crop/fold marks Crop/fold marks Exterior only	Densitjes: 0 A 5 III 25 V	
Marks to objects		

8. Now select the Misc Tab, make sure the 'Apply ICC Profile' option is ticked as shown below.

	epress Misc 🔥 3	Issues	
Apply ICC profile:			
(Ricoh - 7000 v1.15)			
Print job information sheet			Info Settings
Proofing options			
Print vecto <u>r</u> s		Eull color	
Print bitmaps		All colors as	black
		-	
Print text	rint all text in blac <u>k</u>	All colors as	grayscale
Print text		All colors as	grayscale
Fit printer's marks and layout	to page	All colors as Bitmap downsampling	grayscale
	to pag <u>e</u>		grayscale
Fit printer's marks and layout	to page	Bitmap downsampling	
Fit printer's marks and layout		Bitmap downsampling	300 <u>^</u>

Now click 'Apply' to confirm the changes. The system is now ready for printing.



CorelDRAW X5 Setup

To setup Corel Draw X5 follow the steps below:

1. Before opening Corel Draw you need to install the Xpres Sublimation Colour Profile, this can be downloaded from <u>www.xpres.co.uk/downloads</u> or can be found on the Subli Print CD supplied.

Save the Colour Profile on to your Desktop (drag and drop if taking from the supplied CD). Now Right Click the Colour Profile (Ricoh 7000 v1.15) and select 'Install' - *There will be no confirmation that the file has been installed.*



2. Now open Corel Draw and open a new page. Click on Window > Colour Palettes. Click on 'Default RGB Palette'. Repeat the above and click 'Default CMYK Palette' to deselect this option. The Colour Palette menu should appear as shown below.



CorelDRAW X5 Setup

3. Now click on Tools > Colour Management > Default Settings. You will now see the colour management dialogue box appear as shown below:

	Presets: Sul	bli Print				
-	Color profile RGB: CMYK:	r settings :s: (Default) A (Default) I:	9	Color mana(Open: RGB: CMYK: Grayscale:	Assign default color profile Assign default color profile Use embedded color profile	-
	Grayscale: (Default) Dot Gain 15% Primary color mode: RGB Rendering intent: Perceptua Color conversion settings		RGB Perceptual	Import and RGB: CMYK: Grayscale:	Warn on color profile mismatch Warn on missing color profile wars to document color profile Convert to document color profile Convert to document color profile Warn on color profile mismatch	-
-		t ion arning dialog	RGB values box when importing or pastin die the missing color profiles		Warn on missing color profile color profiles. The warning dialog bo OK Cancel Hel;	

Here we will configure Corel's default color space and ICC profiles.

The green arrows and numbers correspond to each phase of the setup process which are detailed below.

- 1. Select 'Adobe RGB (1998)' from 'RGB:' under 'Default color settings:'.
- 2. Select 'RGB' from 'Primary color mode:' under 'Default color settings:'.
- 3. Select 'Perceptual' from 'Rendering Intent' under 'Default color settings:'.
- 4. Select 'Microsoft ICM CMM' from 'Color engine:' under 'Color conversion settings'.
- 5. Check 'Preserve pure black' under 'Color conversion settings'.
- 6. Select 'RGB values' from 'Spot color definition'.
- 7. Select 'Assign default color profile' from 'Open', 'RGB:' under 'Color management policies'.
- 8. Select 'Convert to document color profile' from 'Import and paste:', 'RGB:' under 'Color management policies'.
- 9. Click the save icon and enter an appropriate name e.g 'Subli Print' as shown below.

Save color m	nanagement style	×
Save style as:	Subli Print	~
	OK Cancel Help	

CorelDRAW's Colour Settings are now set correctly. You can now work with an image as normal.



CoreIDRAW X5 Setup

When your image is ready to print open the print window: File > Print

Detal Color Composite Layout Prepress	Ekan a land		
and aniperer adjust repress	No Issues		
Destination 2			
Printer: EPSON	1 Preferences		
Page: Match crientation (Portrait)			
Status: Default printer; Ready			
Location: USB003			
Comment:	Print to file: 🕑		
Print range	Copies		
Current document O Documents	Number of <u>c</u> opies:		
Current page Ogelection			
O Pages: 1	1 2 2 3 Collate		
Even & Odd			
and or other	Print as <u>b</u> itmap: 300 🔅 dg		
Construction NW Defaults	Save As		
Print style: CorelDRAW Defaults			

- 1 Select the appropriate printer from the drop down list.
- 2 Select the 'Color' tab.

Print	
General Color Composte Layout Pre	epress 😥 No Issues
1	Print composite Print geparations
2	 Ouse document calar settings Ouse calor proof settings
Color conversions performed by:	CorelDRAW
Output colors as: 4	RGB
Correct colors using color profile:	Convert spot colors to RGB Cubination ICC Profile Preserve RGB numbers
Rendering intent: 6	Perceptual
The color settings and preview availated device printer that you selected on the	ble in this dialog box are set for the Windows Graphic ne General tab.
Print Preview	Print Cancel Apply Help

- 1 Select 'Print Composite'.
- 2 Select 'Use document color setting'.
- 3 Select 'CoreIDRAW' from 'Color conversions performed by:'.
- 4 Select 'RGB' from 'Output colors as:'.
- 5 Select the 'Ricoh 7000 1.15' profile from 'Correct colors using color profile:'.
- 6 Select 'Perceptual' from 'Rendering intent:'.



CoreIDRAW X5 Setup

7. Now select the 'Prepress' tab, make sure that the 'Mirror' option is ticked as shown below. (Sublimation via the Ricoh GX7000 requires the images to be printed in Mirror).

General Layout Separations Prepress Misc	2 Issues		
Paper/film settings	Registration marks		
Invert	Print registration marks Style:		
Mirror S			
	ϕ		
File information			
Print file information	Ŧ		
Job name/slug line:	Calibration bars		
X:\showroom\Rob Tech Info\Manual ma			
Print page numbers	<u>Color calibration bar</u>		
Position within page	Densitometer scales		
	Densities:		
Crop/fold marks	5		
Crop/fold <u>m</u> arks	25		
Exterior only			
Marks to objects			

You are now ready to print. Click **'Print'** and Corel will now print your image using the sublimation ICC profile combined with the configured Ricoh Print Driver. (If you also click the 'Apply' button this will store your settings ready for future use).



Working with templates

In this section you will learn how to open a sublimation template, import an image and use the power clip tool to fit the image to the template. For this exercise we will use the 9cm² square coaster.

If you have had an installation by an Xpres engineer, you will find the templates in a folder on your desktop called 'Xpres'. Otherwise you can either download these from the Technical Support section of our website www.xpres.co.uk/tech_support/downloads You can also find these on the Xpres Technical CD, and Subli-Print CD.

Click File > New From Template (diagram 1), click on the 'Browse' tab then point it towards where your Sublimation templates are stored. Select the 'Coaster square.cdt' then click OK.



You will now see six square coaster templates open as in diagram **2**. For this exercise we will work with one only. Click on one of the coaster templates and hit the delete button on the keyboard. Repeat this process until you are left with one. Click and drag the template to the centre of the page (diagram **3**).





Import your image by clicking on File > Import. Select your image from the browse window and click the import button. You will now see you image as in diagram **4**. Click on the corner selection handles to down size the image slightly larger than the template, as in diagram **5** below.





Click on Effects > Power clip > Place inside container. You will now see a large black arrow appear, click on the edge or inside to power clip the object to the template. You will now see the image appear inside (fitted) to the template as in diagram $\mathbf{6}$.



Working with templates

If your image does not fit the power clip correctly first time, right click on the image and choose 'Edit Contents' from the drop down menu (diagram 1). You can also click on Effects > Power Clip > Edit Contents. Drag the image (you will see the image and the template on the screen) until you have it in the right place. You can even re-size the object in the 'Edit' state. When you are happy with the image placement, right click and choose 'Finish Editing This Level', from the drop down menu. You can also access this by clicking on Effects > Power Clip > Finish Editing This Level.

Diagram 1



Tips on using templates

All Xpres Sublimation templates are slightly larger than the actual substrate. You can leave the border of the template visible as this helps to line up the substrate before taping it onto the transfer paper (use XP6006 Heat Tape to secure the substrate to the transfer paper).

The only template you cannot leave the border on is the mug template as this will show up when printed.

To duplicate your image once fitted to the template refer to page 18 on duplicating objects



CorelDRAW tools

CorelDRAW is an extremely powerful program of which you will probably only need to use half of the tools and features of the program. In this section we will introduce you to the tools in CoreIDRAW and what they do and also take you through the most common tasks you will need to complete in CorelDRAW.

Below is an image of the toolbox in CorelDRAW with explanations of the tools based on Corel 11.

	Pick Tool Shaping Tools Zoom Tools Drawing Tools Rectangle Tools Ellipse Tools Polygon Tools	s ols	have extra a fly out m button and tools. Each of the of where a most comr	tools hidd enu hold t the menu the flyout m Il the tools non tools	den in wha the left mor u will pop o enus are s	except the Pick tool and the Text tool t are called flyout menu's, to access use button down on the corresponding but allowing you access to the extra hown below giving you a breakdown d, on the next page we will go over the unctions.	
Basic Shapes Tool		Shaping Tools					
8.	Interactive To Eyedropper To		In order: Shape Too Free Trans		, Eraser Tool	, Smudge Brush, Roughen Brush,	
0	Outline Tool		Zoom Too	ols	Drawing 1	Tools	
2	Fill Tool		() Q		e 4 e 0	A △ % I ^	
D.			In order: Zoom Tool, Pan Tool		In order: Freehand tool, Bezier Tool, Artistic Media Tool, Pen Tool, Polyline Tool, 3 Point Curve, Interactive Connector, Dimension Tool		
Rect	angle Tools	Ellipse	Tools	Polygon	Tools	Basic Shapes Tools	
		•				四部 & 公口	
	er: ngle Tool, it Rectangle	In order Ellipse 3 Point		In order: Polygon 1 Graph Pa Spiral Too	per Tool,	In order: Basic Shapes Tool, Arrow Shapes Tool, Flowchart Shapes, Star Shapes, Callout Shapes	
Inter	active Tools		Eyedro	opper Tool	ls Outline	e Tool	
e 0	X # 6 • • §		P 30			▓ 亲 ─ ─ ─ ■ ■ 🚟	
		r: Pen Tool, Outline Colour Tool, No outline, widths of line, Colour Docker Window					
Inter	active Fill To	ols	Fill Too	₩ 裔 × 异			

In order: Interactive Fill, Mesh Fill

In order: Fill Tool, Fountain Fill, Pattern Fill, Texture Fill, Postscript Fill, No Fill, Colour Docker Window



CoreIDRAW tools

The Pick Tool

This is the main tool that you will use in CoreIDRAW, it is used for manipulating anything onscreen in the main window and also for selecting and using any of the other tools, holding the left mouse button and dragging a box will select anything within the area that you drag over, clicking an object onscreen with a single left mouse button click will select individual objects.

The Zoom Tool

When you select the Zoom tool your cursor will change to a magnifying glass with a plus sign in the lens, to zoom in on an are click the left mouse button, to zoom out click the right mouse button, to zoom in on a certain area click and drag around the area with the left mouse button and you will zoom to the selected area.

The Bezier Tool

Open the Curve flyout and click the Bézier tool. Click where you want to place the first node, and drag the control point in the direction you want the curve to bend. Release the mouse button. Position the cursor where you want to place the next node, and drag the control point to create the curve you want. Double-click to finish the curve.

The Shape Tool

This tool is used in conjuntion with the Bezier Tool to curve lines. This tool can also be used to alter the shapes of objects and to change the spacing on text.

The Rectangle, Ellipse, Polygon & Basic Shapes Tools

All of these tools work on a very simple basis in that you clickand hold the left most button down and drag out the shape that you would like to the sizes you require.

The Text Tool

Simply click on screen with this tool and then type as normal with the keyboard, you will see that you have all the standard options at the top of the screen such as font type and size as well as the standard formatting options.

The Outline Tool

This tool lets you change the properties of any object on screen to change the width of the outside edge by selecting the object first with the Pick tool and then choosing the Outline tool to make your changes.

The Fill Tool

The Fill tool works in exactly the same way as the Outline Tool but alters the properties of the inside of an object i.e the colour fill of it, by selecting the object first then choosing the Fill tool to make your changes.

The Interactive Tools

These tools are a collection of tools that will allow you to add artist effects to any object in the main CoreIDRAW window such as shadows, contours and transparencies etc.



CoreIDRAW tasks

Grouping & Ungrouping

CoreIDRAW allows objects to be grouped with other objects, this means that when one object is moved or resized, other objects grouped with it will also have the same action applied to them. To group objects, use the pick tool to select the objects and either go to your arrange menu, then select 'Group' or click on the short cut button in the menu bar labelled 'Group'. To Ungroup use the same actions but select 'Ungroup' from the menus.

Sizing images

There are many ways to resize an object in CoreIDRAW. You can click and drag the selection handles around the object by using the pick tool.



You change the dimensions of an object proportionally by preserving its aspect ratio. You can size an object's dimensions by specifying values or changing the object directly. Scaling changes an object's dimensions by a specified percentage. You can change an object's anchor point from its centre to any of its eight selection handles.

You can also click on the object you wish to re-size and type in the object size box. If you lock the non-proportional scaling/ sizing ratio the width and height of the object will scale/size in proportion. If you un-lock it, you can make the object any size you wish.

Duplicating objects

There are a couple of ways you can duplicate objects on CoreIDRAW. The easiest but not that accurate in terms of plotting your design out is to select the object with the pick k tool, then press CTRL+D. You can then place the image manually on the layout screen.

The accurate way to duplicate objects is to use the Transformation docker window. Click on Arrange > Transformations > Position. The Transformation docker window will pop up on the right hand side in CoreIDRAW. When you select an object the Position, relative position and the apply buttons will illuminate. The example on the right shows an object which is selected and ready to be duplicated. To increase or decrease the horizontal positioning enter the size or click the up/down arrows. This function specifies the duplication distance from the original object.

The relative position option is there to select where you want the duplicated object to appear. On the example I have selected the duplicate to appear on the left of the original object. Now click 'Apply To Duplicate' to duplicate the object(s).

From the transformation docker window you can also select Rotate, Scale and mirror, Size and skew.

* Transformation — >		
4028L		
Position:		
H: -192.222 💮 mm		
V: 0.0 💮 mm		
Relative Position		
Apply To Duplicate		
Apply		



Troubleshooting / Tips

Useful CorelDRAW tips

To ensure CoreIDRAW performs at it's best, click on Tools > Options, click on 'snap to objects' and un-tick the 'snap to objects on (ALT+Z)'. Now click on the + next to 'Text' and click on 'Quick correct'. Un-tick all five boxes. Depending on your system memory you can increase the memory usage available to CoreIDRAW (default 25%). If CoreIDRAW is sluggish and running out of memory try increasing this (10% increments recommended).

To see the actual size of your text in CoreIDRAW (rather than font points) activate the 'Transform' toolbar. Click on 'Window', scroll down to 'Toolbars' and tick 'Transform'. Drag the toolbar to the top and drop it to place it in the toolbar cluster.

Print quality on ceramics, plastic, metal etc appears weak?

- 1. Check the time, temperature and pressure as illustrated in the printing information guide.
- 2. Ensure you have installed the Xpres Subli-Print profile correctly.
- 3. Check whether the substrate is facing up on the heat press.

Subli-T hints and tips

• Is the transfer permanent on Subli-T's?

Yes as the process is direct to the polyester.

• When heat applying the press leaves a severe press mark? The pressure on the heat press is set too high. Reduce the pressure.

Why is the image on mugs blurred after printing?

Ensure you have dipped the mug in water immediately after printing, and/or increase the pressure on the mug press.

The sublimation transfer colour appears very washed out on the transfer?

All sublimation ink appears weak until heat applied, colours will change and become vibrant.

Ensure you have applied the Subli-Print ICC colour correction software. See pages 10 - 13.

Ensure you are printing onto the correct side of the transfer paper.

For XP4072a/73a Sublimation paper, print onto the bright white side.

Tips on cropping images

After importing your image into CoreIDRAW you may need to crop (down size) the image. There are 2 ways you can do this.

1. Highlight your image with the pick tool, then click on the shape tool (F10) in CorelDRAW, hold down the CTRL key then resize you image by moving the selection handles in the corner of the image. **Tip**: While in the shape tool you can also add new node and convert the lines to curves.

2. If you double click on the image in CorelDRAW it should launch Corel PHOTO-PAINT. Use the crop tool to achieve similar results as above. CorelDRAW X3 & X4 has a crop tool now built in.

Check out the FAQ section on the Xpres website www.xpres.co.uk/tech_support/faq for more hints 14 ips.

