

serious
SURYA
REACTION

User Manual

SMO10QC3G



NOTICE

- Keep the device and all accessories out of the reach of small children.
- Keep the device away from wet areas and objects, and do not use the device with wet hands.
- Do not use or store the device in dusty, hot, cold, electric, chemical, or magnetic areas.
- Do not drop, shake or knock the device. Rough handling can break the device.
- Do not leave the device into a car with all windows closed.
- Do not leave the device into a bed when charging.
- Please adjust the speaker at approximate volume to avoid harm to your ears.
- Do not disassembly the device without professional guidance. Do not change any part of the device.
- Please use the proper power adapters provided by manufacturer to charge the device.
- Please inquire from the qualified seller of proper SIM cards which are suitable for the device.
- Availability and network speed depend on the User's network, and 2G/3G network fees apply.

1. Main Functions Overview

- Phone call function via 2G/3G network.
- Text messaging function.
- Wireless connections via Wi-Fi or 2G/3G networks.
- Emergency call function without SIM card.
- GPS location & navigation function.
- Bluetooth function.
- FM radio function.
- Built-in Google Android System.
- All-directional G-Sensor.
- Different applications (.apk) supported.
- Various of music file supported.
- 1080P videos supported.
- Pictures browsing with zooming and slide-show.
- E-book reading with bookmark function.
- Photographing and Video recording
- Built-in Email client.
- Built-in voice recorder.
- Built-in electronic calculator.
- Built-in electronic calendar
- Built-in multiple languages.
- Built-in speaker and microphone.
- High-speed USB connection with PC.
- External Micro-SD card supported.
- External mouse and keyboard supported.

2. Basic Operation

2.1 Power On

Press POWER button for around 2 seconds and the device will start up and display the lock screen. Slide the lock to unlock Home Screen.



2.2 Power Off

Press POWER button for around 2 second and choose *Power off* in the popup.

2.3 Standby

When the device is working, press POWER button shortly to shut the display and it goes into standby mode. Press POWER button again to awake the device, and slide the lock to continue.

2.4 Airplane Mode


Press POWER button for around 2 second and choose *Airplane mode*, under which signals are shut down. Phone

call, text messaging, 2G/3G network functions are not available. Press POWER button again and choose *Airplane mode* to turn off this mode.


2.5 Recharging

When the device can not be turned on normally or shut down automatically, it may need to be recharged. Please use the correct charger as the manufacturer guides.


2.6 Home Screen

Tab  to go to Home Screen.

2.7 Back Button


Tab  to go to the previous page.

2.8 Recent Task


Tab  to view recent tasks. Tap the task frame to open it, or long press it to remove from list.



2.9 Menu

On different interfaces, you can tap  to view menu.

2.10 Applications

Tap  to launch apps list. Slide the page to view all applications and widgets.

3. Home Screen

There are several pages for Home Screen, slide left or right to view more.



3.1 Add apps & widgets to Home Screen

Launch apps list, press icons and draw them to Home Screen. At Home Screen, press an icon to drag leftward or rightward to move it to other pages, or delete it.

3.2 Wallpaper

 
Long press blank area of Home Screen, choose different ways of setting wallpapers in the popup.


3.3 Notification Bar

Slide downwards from top of Home Screen to view *Notification Bar*, which can show switches of Wi-Fi, Bluetooth, GPS, Airplane mode, brightness, sound, etc. Slide upwards to go Home Screen again.



3.4 Search

 Tap  to search information at local or internet. Voice Search is supported.

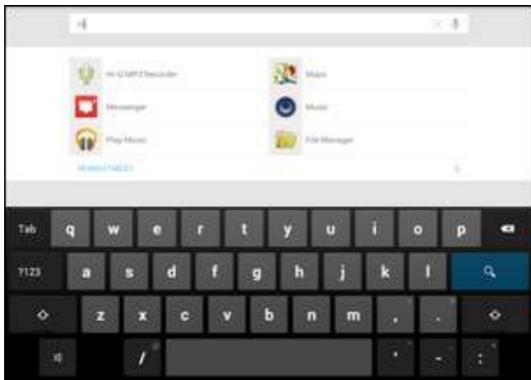

Tap the search result to access related application.

Notice

 
To access some search result, the device might connect with 2G/3G networks, and fees apply. Please inquire service fees from your local operators.

4. Mobile Phone Functions

All functions in this chapter require 2G/3G network service, which means you need to install proper SIM cards into this device. Service fees of 2G/3G network apply.

4.1 Phone call function

- Tab the icon  to dial.

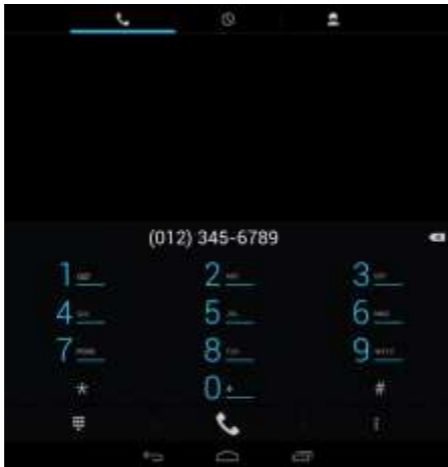

4.2 Text messaging function

- Tab the icon  to view and send text message.



4.3 Contact list




- Tab the icon  to view and contact list.

4.4 GPS Navigation

- This tablet PC has built-in GPS module, please install third party's professional navigation applications to experience better navigation function. 2G/3G network fees may apply.

5. Connecting to Networks

5.1 Connecting to Wi-Fi

- Tab the Settings Icon 
- Slide Wi-Fi icon   to the right (ON) to turn on Wi-Fi, the tablet will scan and offer a list of available Wi-Fi networks. Tab the name of Wi-Fi to connect to it.
- If the Wi-Fi network doesn't have a password, the tablet will connect to it automatically. If the Wi-Fi network has a password, input it and tap *connect*.



- Slide Wi-Fi icon   to the left to turn off Wi-Fi.

5.2 Network access via 3G

- Turn off WIFI, and access *More –Mobile networks*.
- Make sure *Data enabled* is ON.

- Tab *Network operators*, and search networks.
- You can select mobile networks automatically.


Tips: Availability and network speed depend on the User's network, and 2G/3G network fees apply.

6. USB Connection

The tablet can be connected to Window computers via a USB cable, and then you can transfer music, videos, pictures and other file in both directions. Operations are as follows,


- Use a USB cable to connect the tablet with PC.
- Tab *Turn on USB storage* to read storage of the tablet from PC. Now you can copy files back and forth.
- Tab *Turn off USB storage* to disconnect from PC, and remove the USB cable.



If above interface does not pop up, tap the icon  at bottom right of and choose *USB connected* in the popup.

7. Applications

7.1 Install New Apps

7.1.1 To download & install apps from *Playstore* , just follow the instructions by system.

7.1.2 To install apps by APK files in tablet's storage.

Run *File Manager*, just find the location of apps' packages, and tap its name to install.



Tips

- To install applications which are not from *Playstore*, make sure *Unknown source* is *ON*. (Setting – Security – DEVICE ADMINISTRATION)
- If the application already exists in the tablet, system will inquire if you want to update previous version. Select *Install* to continue if you want.

7.2 Applications uninstall

7.2.1 Tap *Setting – Apps – All*.

7.2.2 Tap the application you want to remove.

7.2.3 Tab *Uninstall*.

7.3 Applications management.

7.3.1 Tab *Setting – Apps – All*.

7.3.2 Tab application and choose *Force stop, Uninstall, Clear data* or *Move to SD*.


8. Video Play

You can use the tablet's pre-installed Video player to enjoy movies & videos, or install other video apps to enrich your video play.



8.1 Tab video player icon to enter the interface, or open the video files from *File Manager* directly.

8.2 Tab progress bar to go fast-forward or fast-rewind.

8.3 Tab  to access video player settings.

9. Music Play

You can use the tablet's pre-installed *Music Player* to enjoy music, or install other audio apps.




9.1 Tab the Music player icon  to enter the music player interface, or open from *File Manager* directly.

9.2 The device supports the following formats of audio files: MP3, WMA, MP2, OGG, AAC, FLAC, APE, 3GP, WAV, and more.


9.3 Tab the progress bar to go fast-forward, fast-rewind.

9.4 If there is no audio in the play list, system will automatically load the audio files from the storage of tablet.


10. Camera


Tap the icon  to access camera function.



10.1 Click  to switch between front and rear cameras.

10.2 Click  to take pictures.

 
10.3 Click  to make video recording.

10.4 Click  to enter settings.

10.5 Click *thumbnail window* or slide left-ward on screen to view finished photos and video recordings.



11. System Settings



Tap Setting icon  to enter system settings, including Wireless & networks, Bluetooth, Audio profiles, Display, Storage, Battery, Apps, Location, Security, Language & input, Backup & reset, Accounts, Date & time, Accessibility, Developer options and About tablet.

11. FAQ

Q: I don't read a foreign language, how can I change it back to English?

- Find setting icon  and access *Settings*.
- Choose icon  to enter *language & input* setting, the first option is language setting.

Q: How can I change input?

- Access *Setting – Language & input*, and set default input.

Q: Why do some applications disappear from the tablet?

Some applications may be installed in external Micro-SD card, if you fetch out your Micro-SD card from the tablet, you will not see these apps.

Q: There are many popups of system error, what can I do?

- Restart the tablet by POWER button, or by RESET.
- If you have restarted the tablet and there are still error popups, you can check active applications to see if there is any unknown application, remove it if any.
- There may be virus in the device, please install security apps and protect your tablet.
- Contact with the supplier for further help.

12. About Firmware

Firmware contained in the tablets provides the control program for the device, and it is offered by the original manufacturer. Flashing firmware (refer to *rebuilding firmware into the device*) is the final solution to serious system problems. For common breakdown you can just restart the device, or run *factory reset*. If system crashes appear continuously even you have run factory reset, you can flash firmware under professional guidance. The firmware preloaded in the device is a stable version for the tablet, please do not flash it with other versions of firmware unless absolute necessity. We DO NOT suggest any private firmware flashing without guidance of the original manufacturer, who is not responsible for any possible breakdown of the tablet caused by user's private firmware flashing.

