

# TEAC<sup>®</sup>

## LCDV2255HD

### LCD TV



## USER MANUAL

# IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

[www.teac.com.au](http://www.teac.com.au)

JAPAN

# TEAC WARRANTY REGISTRATION

Please read this warranty card.  
Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.

## Warranty Terms & Conditions

1. TEAC warrants to the original retail purchaser only, that this product is free from defects in material and workmanship under normal domestic use and authorises free service during the warranty period at any TEAC Authorised Service Centre only. TEAC warranty only applies to products purchased, used and serviced in Australia.
2. Subject to the terms herein, this warranty effectively covers the equipment as specified in the Warranty Periods Table below from the date of purchase.

TEAC PRODUCT	WARRANTY PERIOD
Plasma TV 106 cm and above	1 Year (In-Home Service Available)
LCD Televisions 59cm and above	1 Year (In-Home Service Available)
Televisions – 59cm and above	1 Year (In-Home Service Available)
All Televisions under 59 cm	1 Year (No In-Home Service)
Digital Set Top Boxes & Module	1 Year (No In-Home Service)
VCR	1 Year (No In-Home Service)
DVD & Module	1 Year (No In-Home Service)
DVD Recorder & PVR Module	1 Year (No In-Home Service)
Audio Systems	1 Year (No In-Home Service)

3. In home service will only be provided as part of this warranty if all the following conditions are met;
  - a) The product as indicated in the Warranty Period Table.
  - b) The product is within the warranty period.
  - c) The product is located within the normal service area of the local TEAC Authorised Service Centre.

In any other situation or circumstance, where an in home service call is made, a service fee will be charged by the Service Provider including a travel fee if outside normal service area.

If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

Where in-home service is not available, the purchaser is required to send the product to the nearest TEAC Authorised Service Centre for repair. In this event, a copy of this warranty card and a copy of your receipt of purchase must be enclosed to be a valid warranty. Such equipment or part must be sent freight prepaid to your nearest TEAC Authorised Service Centre. After the repair, the product will be available for collection by or return to the purchaser at purchaser's cost. The warranty does not cover freight or insurance. In all cases of transit damage or lost, a claim must be filed against the carrier by the purchaser, even if shipment is arranged by TEAC. TEAC in-home service may also be available at a fee upon request.

4. Accessories, Remote, including power adaptors, AV box, TV tuners, etc, are warranted to be defect free for 1 year.
5. Replacement of spare parts under normal usage; except cabinet, front panel, knob, removable accessories, battery, consumable, AC cord, connecting cord and other accessories, are warranted as specified in Warranty Periods Table, and will be repaired or replaced at the sole judgement of TEAC.
6. The warranties hereby conferred do not extend to, and exclude, any cost associated with the installation, de-installation or re-installation of a product (be it in-home or otherwise), including costs related to the mounting, demounting or remounting of any screen, (and any other ancillary activities), delivery, handling, freighting, transportation or insurance of the product or any part thereof or replacement of and do not extend to, and exclude, any damage or loss occurring by reason of, during, associated with, or related to such installation, de-installation, re-installation or transit.
7. Normal customer maintenance as described in the owner's manual is not covered by this warranty (such as cleaning VCR heads etc.)
8. Service will be provided only during normal business hours and under safety conditions and circumstances.

9. This warranty does not apply to equipment showing abuse, damage or that it may have been tampered with, altered or repaired outside any TEAC Authorised Service Centre. If so, the warranty will be void.  
**\*Your nearest Authorised TEAC Service Centre is listed in your Owners Manual**
10. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
11. In no event will TEAC be responsible or liable for indirect or consequential damages from interrupted operations or other causes.
12. Warranty is not transferable to any subsequent purchaser if the product is sold during the warranty period,

*\* Extended promotional warranty may apply to certain products (for more info please contact: [service@teac.com.au](mailto:service@teac.com.au))  
In home service administration fee is applied after 1<sup>st</sup> year of warranty.*



## WARRANTY PROCEDURES

Please keep this information for your own records.

Please refer to the owner's manual to ensure that you have followed the correct installation and operating procedures.

1. Read owner's manual carefully
2. If you require Warranty Service, please contact the TEAC Authorised Service Centre
3. Please have your purchase receipt as your proof of purchase and the following details completed for a valid Warranty.

Owner's Name

---

Owner's Address

---

Postcode

---

Model Name/No.

---

Serial No.

---

Dealer's Name

---

Dealer's Address

---

Postcode

---

4. Please ensure that your product is packed appropriately upon return to the service centre.

If you have any other queries regarding service or warranty please contact the TEAC Customer Care Centre below:



[service@teac.com.au](mailto:service@teac.com.au)

[www.teac.com.au](http://www.teac.com.au)

 
1800 656 700

# Table Of Contents

---

<b>Important Safety Instructions</b> .....	<b>1</b>
<b>View of Unit</b> .....	<b>3</b>
<b>Special Feature of DVD Module</b> .....	<b>6</b>
<b>Disc Information</b> .....	<b>7</b>
<b>Remote Control</b> .....	<b>8</b>
<b>System Connections</b> .....	<b>12</b>
Connecting to the Power Supply.....	12
Connecting to the Power Adapter.....	12
Connecting to an External AV Signal Source.....	13
Connecting to an External AV Signal Source(YPbPr).....	13
Connecting to an External AV Signal Source(HDMI).....	14
Connecting to an External AV Signal Source(AV Output).....	14
Connecting to Coaxial Digital Output.....	15
<a href="#">Connecting to a USB Device for Upgrading</a> .....	<a href="#">15</a>
Connecting to a PC.....	16
Connecting to a TV Antenna.....	17
Connecting to Earphones.....	17
<b>Input Source Selecting</b> .....	<b>18</b>
<b>TV Function</b> .....	<b>19</b>
Installation Guide.....	19
Channel Setting.....	20
Picture Setting.....	<a href="#">22</a>
Sound Setting.....	25
Time Setting.....	26
Option Setting.....	27
<b>EPG Function</b> .....	<b>28</b>
<b>NICAM Function</b> .....	<b>30</b>
<b>DVD Playback Operation</b> .....	<b>31</b>
<b>USB and SD/MS/MMC Card Function</b> .....	<b>36</b>
<b>DVD System Setup</b> .....	<b>37</b>
<b>Troubleshooting</b> .....	<b>43</b>
<b>Specifications</b> .....	<b>44</b>

# Important Safety Instructions



This symbol indicates that dangerous voltage instituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operation and maintenance instructions in the literature accompanying the appliance.



**Caution: Laser radiation when open. Do not stare into beam.**

**Caution:** use of any controls, adjustments, or procedures other than those specified herein may result in hazardous radiation exposure.

## **Caution**

1. The product contains a low-power device. In order to ensure the safety of the laser device, do not remove any cover and attempt to repair the unit. If any service is needed, please contact the distributor or its authorised service centre.
2. To reduce the risk of electric shock, do not remove the cover (back). No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is unused for a long period of time.
3. The manufacturer will not be held responsible for the damage caused by any substitutions and modification of the product without authorisation from the manufacturer's or authorised service agent.

## **WARNING**

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

## **NON ANALOG OUTPUT MANUFACTURER LICENSE AGREEMENT**

This product incorporates copy protection technology that is protected by U.S. and foreign patents, including patent numbers 5,315,448 and 6,836,549, and other intellectual property rights. The use of Macrovision's copy protection technology in the product must be authorized by Macrovision. Reserve engineering or disassembly is prohibited.

***The images in this manual are for reference only and may differ from your model.***

# Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Maintain well ventilated conditions around

the product. Do not put product on a bed, sofa or anything that blocks ventilation. Install according to the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Read, heed and follow all instructions to ensure correct and safe installation and interconnection of the apparatus;
10. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
11. The mains socket-outlet shall be installed near the apparatus and the mains plug shall remain readily operable.
12. Protect the power cord from being walked on or pinched particularly at plugs, power sockets, and the point where they exit from the apparatus.
13. Only use attachments/accessories specified by the manufacturer.
14. Use only with the stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
15. Unplug the apparatus during lightning storms or when unused for long periods of time.
16. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## **IMPORTANT FOR LASER PRODUCTS**


1. **CLASS 1 LASER PRODUCT**
2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the back cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel.

**Note: Do not touch the color TFT LCD screen directly by hand.**

# View of Unit

---

## Front and Left Side Panel

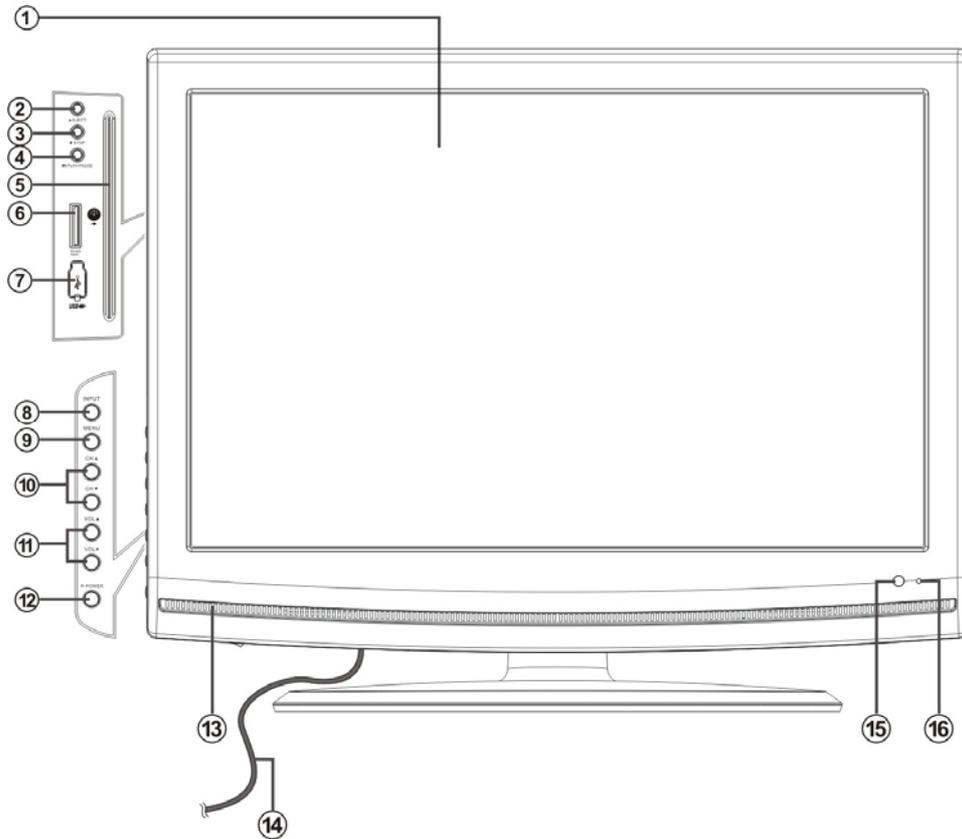

**1. Color TFT screen**

**2. ▲ EJECT button**

Press to eject the disc from the unit.

**3. ■ STOP button**

Press to stop disc playback in DVD mode.

**4. ►|| PLAY/PAUSE button**

Press to start disc playback and press it again to pause playback in DVD mode .

**5. Disc Tray Slot**

Insert disc into this slot.

**6. SD/MS/MMC Card Port**

Insert SD/MS/MMC card into this slot.

**7. USB Port**

Connect the USB device.

**8. INPUT button**

Press to select enter the source selecting menu, press the ▲▼ direction buttons to select desired mode and press the ENTER button to enter the selected mode.


In setup menu, use the ENTER button for the same function.

**9. MENU button**

Press to enter the system setup menu.

# View of Unit

## Front and Left Side Panel

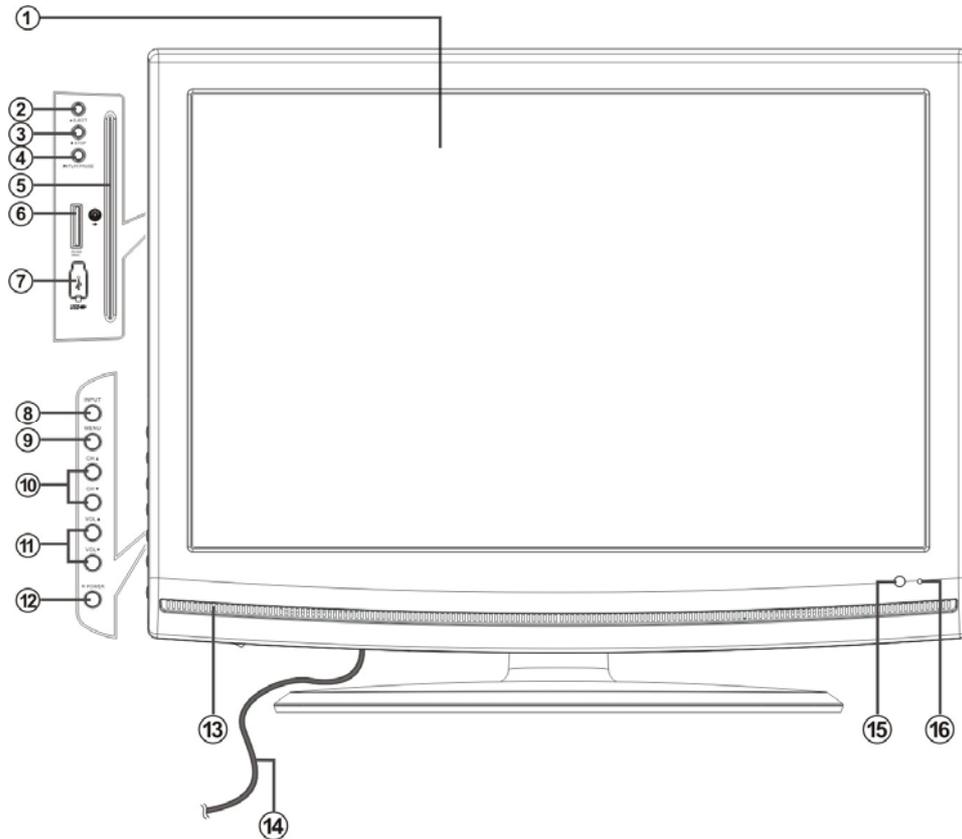

### 10. CH ▲/▼ buttons

In TV or DTV mode, press to select channels;

On system setup menu, the same function as ▲/▼ direction buttons.

### 11. VOL ▲/▼ buttons

Press to decrease or increase the volume;

On system setup menu, the same function as ◀/▶ direction buttons.

### 12. POWER button

Press to enter or exit standby mode.

### 13. Speaker

### 14. Power Supply Cord

Connect to power supply.

### 15. Remote Sensor

### 16. Power Indicator


Lights blue while system is active and red while system is in standby mode.

## NOTE:

The “▶|| PLAY/PAUSE”, “■ STOP”, “▲ EJECT” buttons are available when the DVD module is connected.

# View of Unit

## Rear Panel

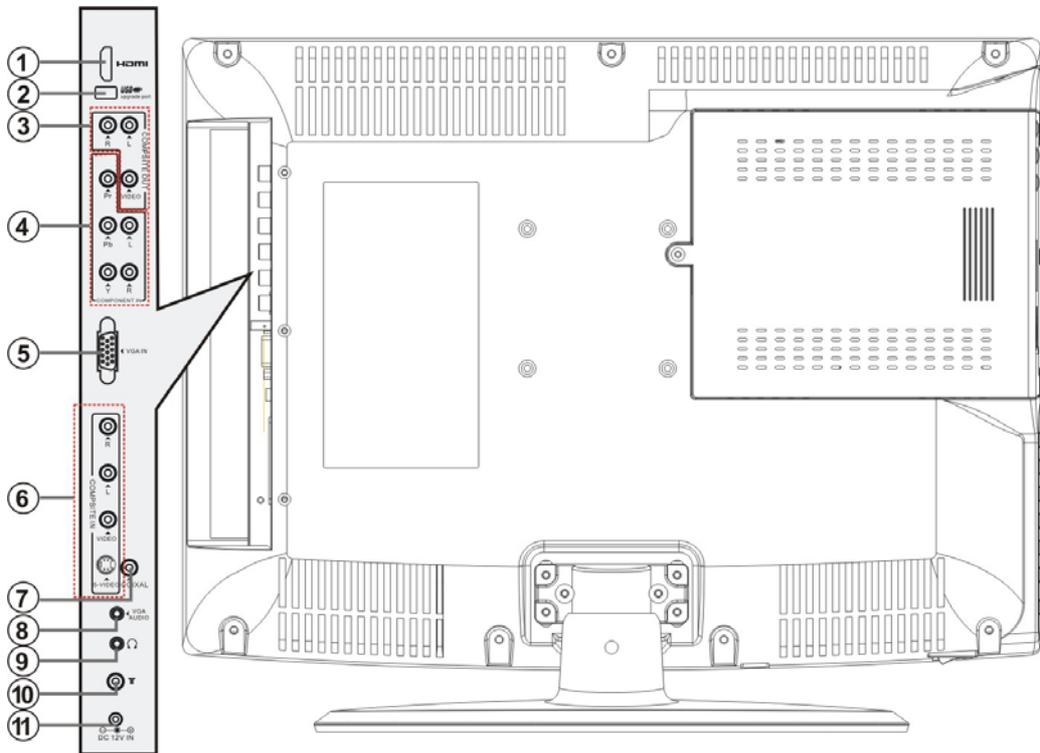

- 1. HDMI Input Jack**  
Connect the HDMI signal source.
- 2. USB Upgrade Port**  
Connect the USB device only for upgrading the TV software.
- 3. Composite AV Output Jacks**  
Connect to output the audio/video signals in Composite mode.
- 4. Y/Pb/Pr (Component) and L/R audio Input Jacks**  
Connect the Y/Pb/Pr (Component) signal source in Component mode.
- 5. VGA Input Jack**  
Connect the VGA signal source in VGA mode.
- 6. COMPOSITE/S-VIDEO Input Jacks**  
Connect Composite/S-Video signal source in Composite or S-Video mode. Composite and S-Video share L/R audio jacks.
- 7. COAXIAL Output Jack**  
Output the coaxial digital audio signal.
- 8. VGA AUDIO Input Jack**  
Connect the VGA audio signal source in VGA mode.
- 9. Earphone Jack**  
When connected to earphone, the internal speakers will automatically turn off.
- 10. TV antenna Input Jack**  
Connect the external TV antenna signal source.
- 11. DC 12V IN Jack**  
Connect the power adapter.

# Special Feature of DVD Module

Your TV comes equipped with a removable DVD module. Please follow the procedures below to remove or install the DVD module.


## **Note:**

Before removing or installing the DVD module, ensure that the television is unplugged and turned off.

## **DVD module removal:**

Refer to the illustration below and follow the procedures below to remove the DVD module from the unit:

1. Loosen the screw on the DVD module.
2. Carefully slide the DVD module along the rails and unplug the connecting cord from the LCD TV.
3. Slide the DVD module along the rails to fully remove the DVD module.

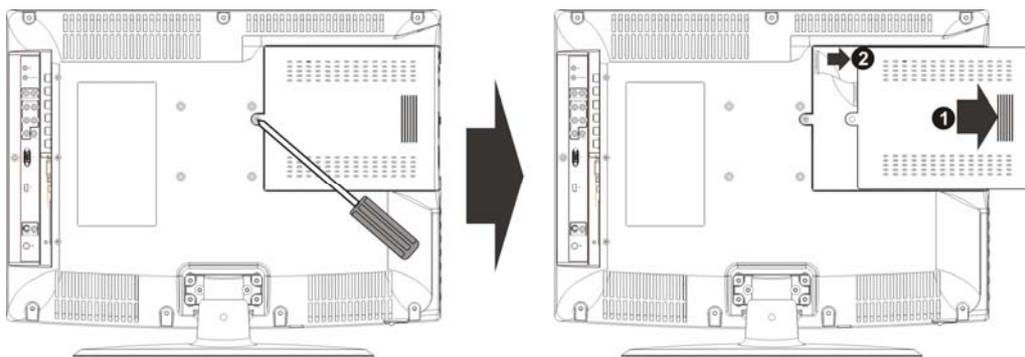

## **DVD module installation:**

1. Plug the connecting cord into the DVD module.
2. Carefully slide the module into the desired position and lock the function module with one screw.

# Disc Information

---

## Discs Supported

	DISC LOGO	CONTENTS	SIZE	MAXIMUM TIME
DVD		Audio+Video (active picture)	12cm	133min(SS-SL)
				242min(SS-DL)
				266min(DS-SL)
				484min(DS-DL)
CD		Audio	12cm	74min
JPEG		Still high resolution	12cm	
DIVX			12cm	

- The operating method of some DVD discs is specified by the software maker. Please refer to the instruction manual of the disc.
- The unit will play most recordable (CD-R) or erasable (CD-RW) CDs, but playback of CD-R or CD-RW discs created on a computer requires proper formatting and finalization of the disc for audio playback. Some computers and/or software programs may not be capable of creating compatible discs.

## About Disc Terms

### **Title**

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

### **Chapter**


The smaller section unit of pictures or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching. But some discs may not have a recording by chapter facility.

### **Track**

A segment of picture or music on a CD. Each track is numbered for searching.

# Remote Control

## Remote Control Drawing

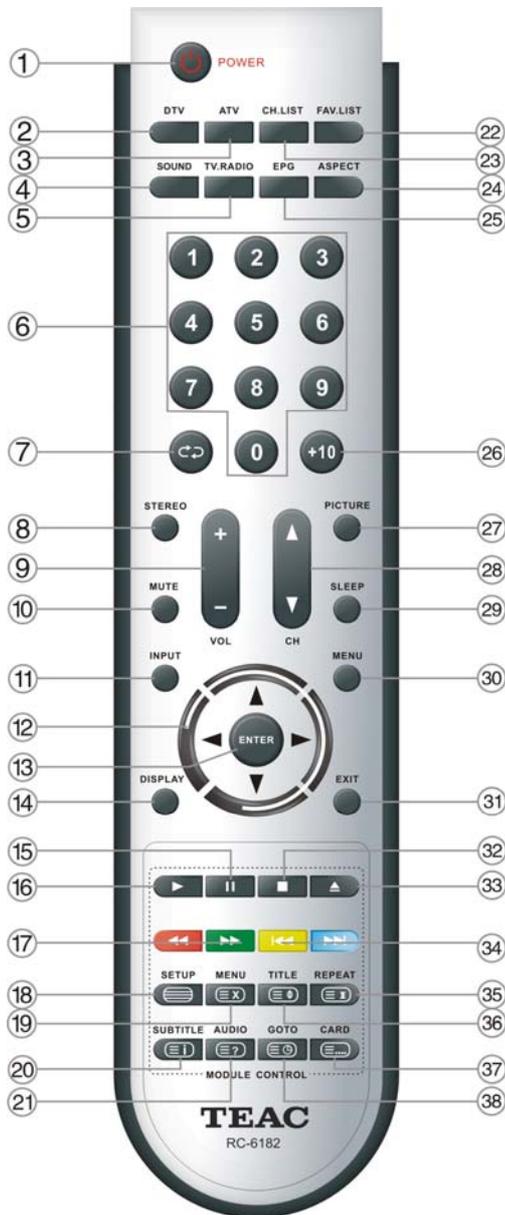

1. **POWER button**  
Press to enter or exit standby mode.
2. **DTV button**  
Press to enter DTV mode.
3. **ATV button**  
Press to select ATV mode.
4. **SOUND button**  
Press to select the screen picture mode: choose from Standard, User, Sports, Movie or Music.
5. **TV.RADIO button**  
Press to select DTV program playback or Radio program playback in DTV mode.
6. **0~9 Number buttons**  
Press to select numbers such as TV channel.
7. **↺↻ button**  
In TV or DTV mode, press to return to the channel previously viewed.
8. **STEREO button**  
Press to select sound track in TV mode.
9. **VOL+/- button**  
Press to increase or decrease the volume.
10. **MUTE button**  
Press to turn on or off the speaker output.
11. **INPUT button**  
Press to select enter the source selecting menu, press the ▲▼ direction buttons or press the INPUT button repeatedly to select desired mode and press the ENTER button to enter the selected mode.
12. **Direction buttons (▲▼◀▶)**  
In the setup menu, press the ▲▼ button to select a desired item and press the ◀▶ button to adjust or set.
13. **ENTER button**  
Press to confirm your operation in setup menu.
14. **DISPLAY button**  
Press to display the reference information of the current mode.
15. **|| PAUSE button**  
In DVD mode, press to pause playback and again to resume.

# Remote Control

---

## 16. ► PLAY button

Press to play a disc in DVD mode.

## 17. ◀/▶ button

Press to search backward or forward in DVD mode.

In TV mode, press the red button to delete a channel and use the green button to rename a channel (see P21 for details).

In teletext mode, they are the teletext colour buttons.

## 18. SETUP button

In DVD mode press to enter the DVD setup menu.

In TV mode, press to display or close the teletext.

## 19. MENU button (under DVD mode)

Press to enter disc menu in DVD mode.

In teletext mode, press to disable teletext display for page updates and press again to resume.

## 20. SUBTITLE button

In DVD mode, press to select alternate subtitle languages during playback of a multiple language DVD disc.

In teletext mode, press to display P.100.

## 21. AUDIO button

In DVD mode, press to select the audio language or audio track.

In teletext mode, press once to display the concealed information, such as solution of riddles or puzzles; press again to remove the riddles answers from the display.

## 22. FAV.LIST button

Press to display the favorite channel list.

In TV mode, press this button to set a favorite channel (see P22 for details) in the program edit menu.

## 23. CH.LIST button

Press to display the channel list.

## 24. ASPECT button

Press to shift the aspect ratio of the screen among 16:9, Zoom1, Zoom2, Auto and 4:3.

## 25. EPG button

Press to display the EPG (Electronic Program Guide) in DTV mode.

## 26. +10 button

In DVD mode, press to select numbers greater than 10.

## 27. PICTURE button

Press to select the picture mode: choose from Standard, Dynamic, User or Mild.

## 28. CH ▲/▼ button

In TV or DTV mode, press to select analog channel or digital channel.

## 29. SLEEP button

This feature allows you to set the sleep time. Press the button repeatedly to select the desired time to sleep or select Off to close the function.

## 30. MENU button

Press to enter or exit the setup menu.

## 31. EXIT button

Press to exit all the OSD on the screen.

## 32. ■ STOP button

Press to stop disc playback in DVD mode.

## 33. EJECT button

Press to eject the disc from the unit.

## 34. ◀/▶ Next Skip button


Press to skip to the previous or next chapter/track in DVD mode.

In TV mode, press the yellow button to move a channel and use the blue button to skip a channel (see P22 for details).

In teletext mode, they are the teletext colour buttons.

# Remote Control

## Remote Control Drawing

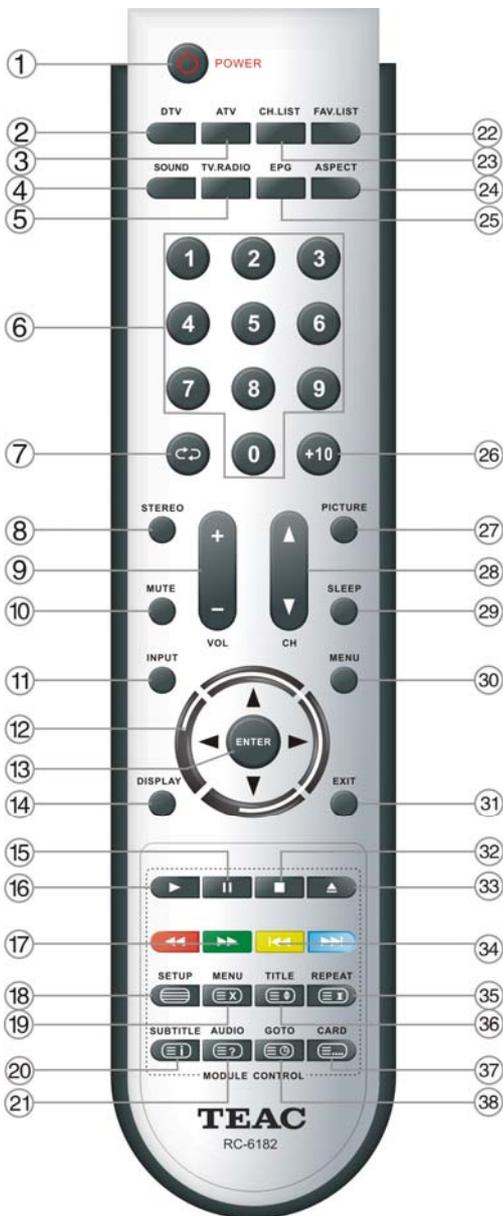

### 35. REPEAT button

Press to repeat a chapter, track, title or all program content in DVD mode.

In teletext mode, press to hold the current page and press again to resume.

### 36. TITLE button

During disc normal playback, press to go to display the title menu.

In teletext mode, press the button first time to double the size of teletext letters in the upper half of the screen, second to double the size of teletext letters in the lower half of the screen and third to resume normal status.

### 37. CARD button

Press to shift among disc playback, USB playback and SD/MS/MMC playback.

In teletext mode, press to select four groups of 3-digit numbers that are displayed in different colours at the bottom of the screen. Press the colour buttons on the remote control to select, then use the number buttons to input the corresponding number to display the page.

Repeat the above procedures for each page to be stored, using a different colour button each time.

### 38. GOTO button

Press to select the desired disc starting time, title or chapter in DVD mode.


In TV mode, press to display the real clock and press the EXIT button to exit.

# Remote Control

---

## Preparation of Remote Control

Softly push the back cover to open the battery compartment.

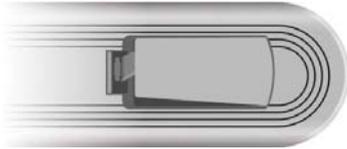

Insert two batteries (1.5V, size AAA), please make sure the polarity matches the marks inside the compartment.



Softly press the back cover to close it.



- Under normal use the battery will last for six months.
- Take out battery when the remote is not in use for a long time.

## Using of Remote control

Point the remote control unit from no more than about 7 meters from the remote control sensor and within about 60 degrees of the front of the unit.



- The operating distance may vary depending on the brightness in the room.

### **Notes:**

- Do not point bright lights directly at the remote control sensor.
- Do not place objects between the remote control unit and the remote control sensor.
- Do not use this remote control unit while simultaneously operating the remote control unit of any other equipment.


# System Connections

---

- Open the back cover on the right side of the unit's rear panel.
- Do not connect the power cord until all other connections have been made.
- Ensure that you observe the color code when connecting audio and video cables.


## Connecting to the Power Supply

Connect the power supply cord to the wall AC outlet, see the figure below.

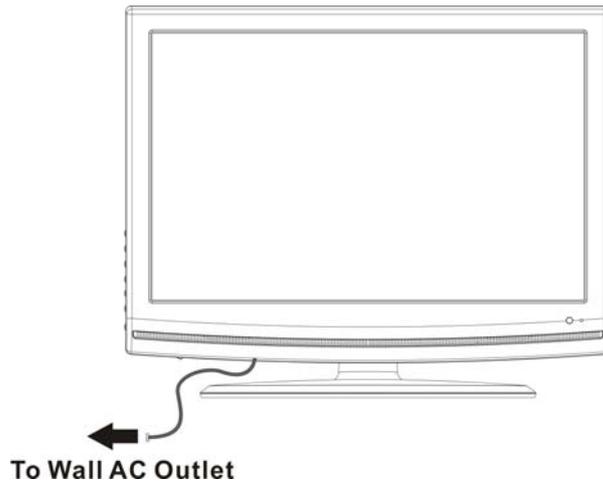

## Connecting to the Power Adapter

Power is also supplied through the provided appropriate power adapter, one end is connected to the DC 12V IN jack on the rear panel of the unit, the other end to the AC100~240V wall outlet.

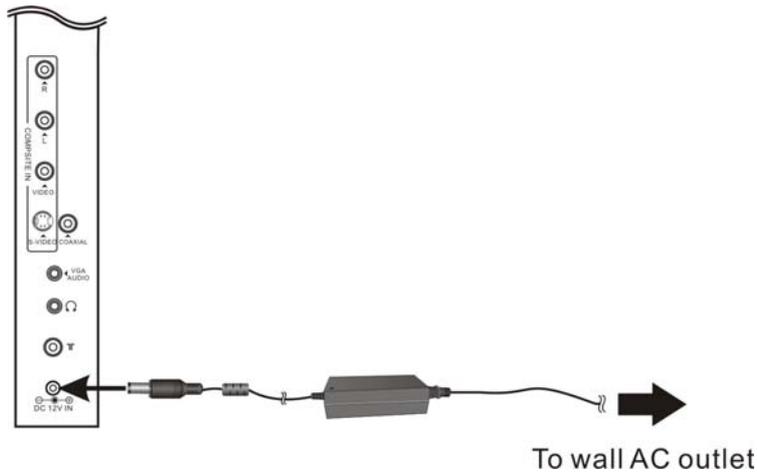


- *It could damage the TV set that if the power supply cord and the power adapter are used simultaneously.*

# System Connections

## Connecting to an External AV Signal Source

Use the AV cables to connect the external AV signal source to the AV input jacks on the rear panel of the unit. Use a S-VIDEO cable (not supplied) to connect the external AV signal source to the S-VIDEO input jack on the rear panel of the unit.

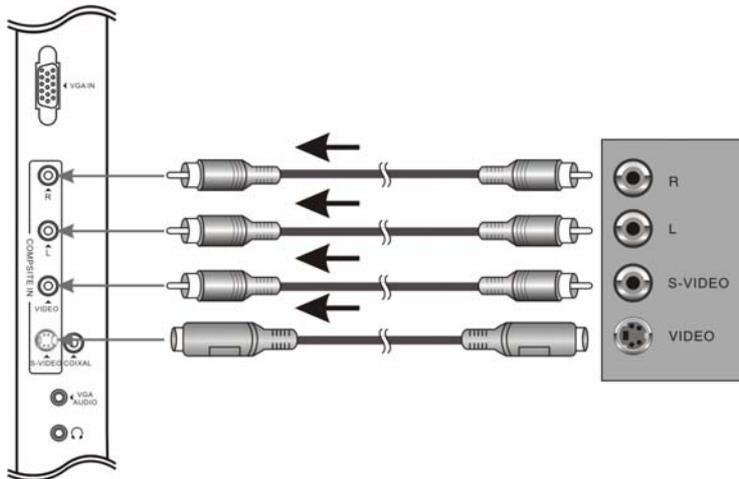


After connection, turn on the power of the unit and the external AV signal source and use the **INPUT** and the direction buttons to select **COMPOSITE** or **S-Video** mode, and then press the **ENTER** button to confirm.

➤ *The L/R audio input jacks can be used in both AV and S-VIDEO modes.*

## Connecting to an External AV Signal Source (YPbPr)

Use AV cables to connect an external AV signal source to the Y/Pb /Pr (Component) input jacks on the rear panel of the unit.

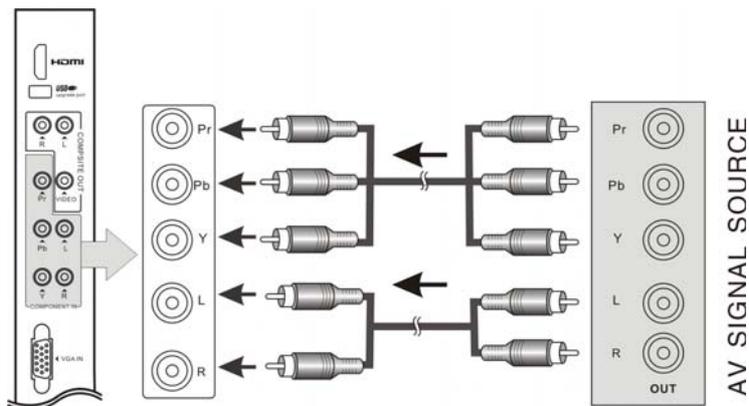

After connection, turn on the power of the unit and the external AV signal source and use the **INPUT** and the direction buttons to select **Component** mode, and then press the **ENTER** button to confirm.

# System Connections

## Connecting to an External AV Signal Source(HDMI)

Follow the figure below to connect an HDMI signal source to the HDMI jack on the rear panel of the unit.




After connection, turn on the power of the unit and the external AV signal source and use the **INPUT** and the direction buttons to select **HDMI** mode, and then press the **ENTER** button to confirm.

- *HDMI provides both audio and video signals and typically provides superior image quality to component, S-Video or composite.*

## Connecting to an External Signal Source(AV Output)

Use the AV cables to connect the external AV input device to the AV output jacks on the rear panel of the unit.

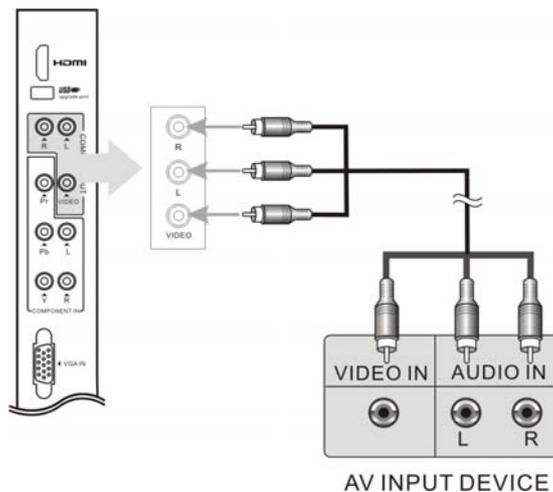


After connection, turn on the power of the unit and the external AV signal source and use the **INPUT** and the direction buttons to select the corresponding mode, and then press the **ENTER** button to confirm.

# System Connections

## Connecting a Coaxial Digital Output

This unit is designed with a coaxial digital audio jack, can be connected to the digital amplifier, see the figure below:

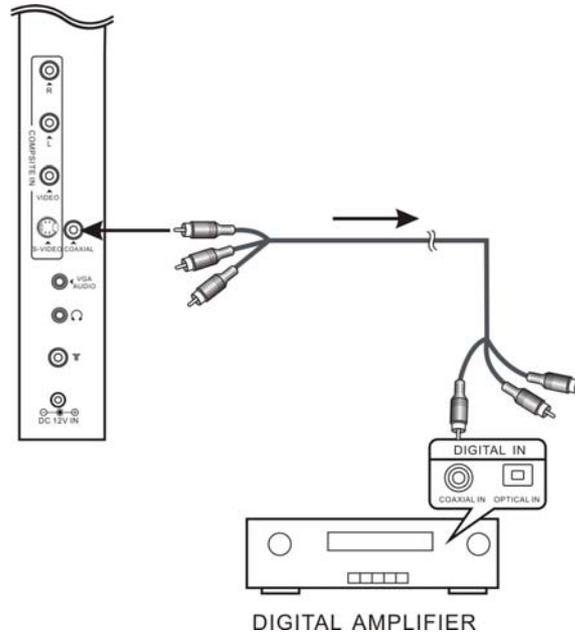


### **Note:**

This feature is available only for amplifiers equipped with coaxial digital audio input connectors. For TVs with a built-in DVD player (optional) and an amplifier with Dolby Digital decoding function, set the digital audio signal output format in DVD setup menu to “RAW”.

## Connecting a USB Device for Upgrading

This unit is designed with a USB upgrade port, can be connected to the USB device for upgrading the software, see the figure below:

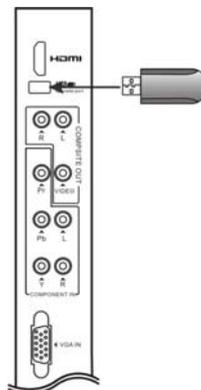


- *Make sure that upgrading files are stored in the USB device before connection.*

# System Connections

## Connecting to a PC

Follow the steps and figure below to connect PC to the unit.

1. Connect one end of the VGA cable to the VGA input jack on the jack panel of the unit and the other end to the PC VGA output.
2. Connect one end of the audio cables to the PC audio input jack on the jack panel of the television and the other end to the PC audio output jack.
3. Set the PC video resolution to match that of the television (typically **1680 x 1050@60Hz**).

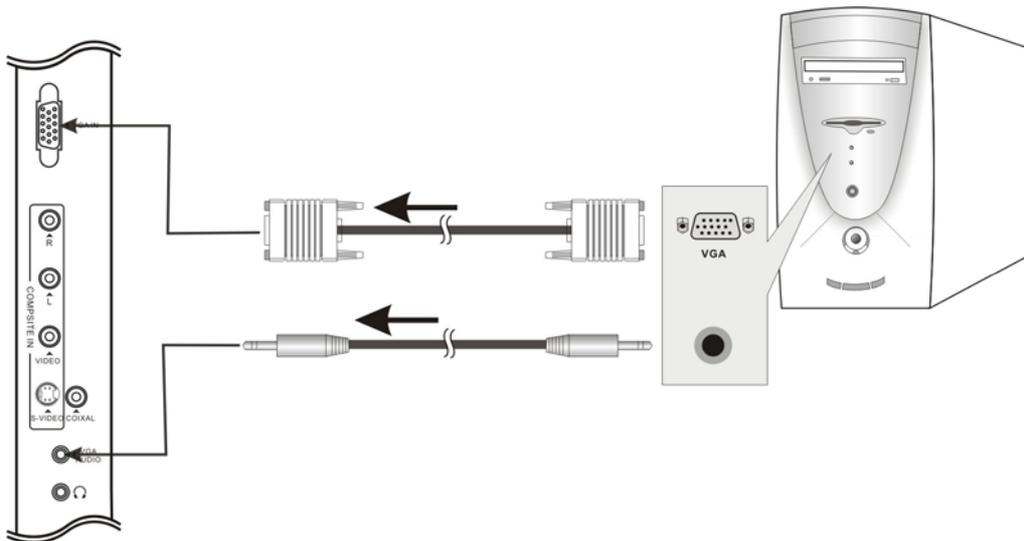


After connection, turn on the power of the unit and the external AV signal source and use the **INPUT** and the direction buttons to select **VGA** mode, and then press the **ENTER** button to confirm.

# System Connections

## Connecting to a TV Antenna


Connect TV signal input source from the aerial to the TV jack on the rear panel of the unit.

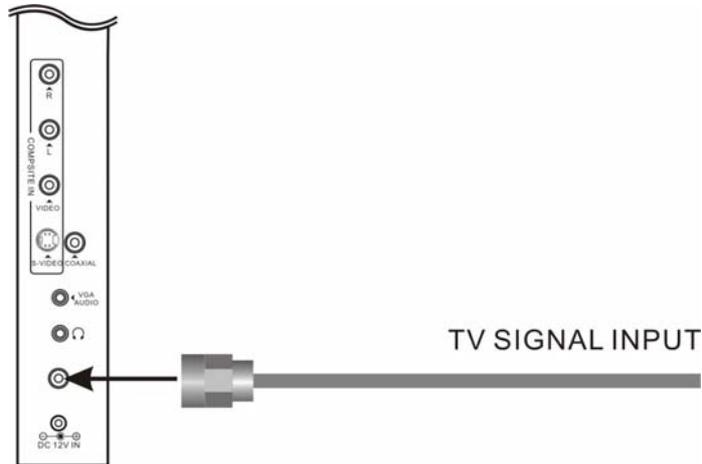

After connection, turn on the power of the unit. Then press the **INPUT** button and the direction buttons to select **TV** or **DTV** mode, press the **ENTER** button to confirm and conduct program selection.

## Connecting to Earphones

Connect earphones (headphones) to the earphone jack on the rear panel of the unit for listening to the audio output in seclusion.

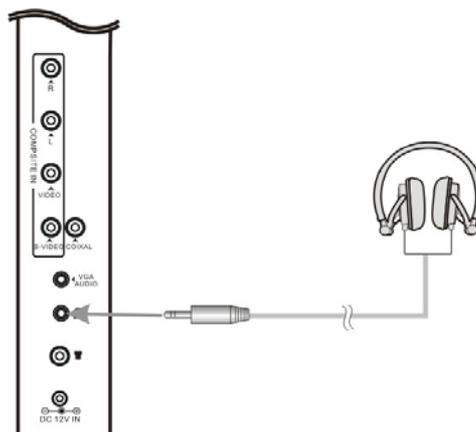

The internal speakers output will turn off automatically after the earphones have been connected. Excessively loud volume could damage your hearing. Turn down the volume before you connect the headphones and then raise the volume to a comfortable level.

# Input Source Selecting

The unit incorporates multiple video modes which can be selected via the Input button on the television or remote.

Press the **INPUT** button to enter Input menu. The screen will display as shown below:



✧ **Use the ▲▼ direction buttons and ENTER button**

On the input menu, press the ▲▼ direction button to select the desired video mode. After several seconds, you can enter the selected mode.

Or after you selected the desired mode press the ENTER button to enter the selected mode immediately.

✧ **Use the INPUT button and ENTER button**

On the input menu, press the INPUT button repeatedly to select the desired video mode. After several seconds, you can enter the selected mode.

Or after you selected the desired mode press the ENTER button to enter the selected mode immediately.

# TV Function

## Preparations

1. After connection, press the **POWER** button to turn on the unit.
2. Press the **INPUT** button to select TV mode and you can then conduct the following operations:

**Note: In other mode, you can refer to the following instructions in TV mode to go on with some settings.**

## Installation Guide

The first time when you turn on the TV or after you reset all the settings to their original status, the Installation Guide page appears automatically. Please follow the instructions to finish the installation guide setup. It helps to quick set the language and get the channels.

- ✧ The Installation Guide menu shown on the right will be displayed on the screen after you press the SOURCE button to select TV mode.
- ✧ The Language option is highlighted and the default is English. You can select the desired OSD language you want by pressing the ◀▶ button.



- ✧ Press the ▼ button to highlight Auto Tuning option and press the ENTER or ▶ button to prompt a information box, as shown on the right:
- ✧ Press the ◀▶ button to select a desired country.



- ✧ Press the ▼ button to highlight Start and press the ENTER button to start auto searching the available channels. The menu on the right will be displayed on the screen to show the progress of the search for TV, DTV and Radio programs.
- ✧ During searching, press the MENU button to skip some range of available channels. Press the EXIT button to exit.



# TV Function

If you did not use the unit for the first time or if your setup has changed, you can setup the unit from Channel Setup menu. Please follow the instructions below:

## Channel Setting

Press the MENU button once to enter **CHANNEL** setup menu as shown on the right.

Press the ENTER button or ▼ button to enter the menu.

In the **CHANNEL** setup menu, press the ▲▼ button to select the desired item. Press the MENU button to return to the previous menu. Press the EXIT button to exit.



## Auto Tuning

Press the ▲▼ button to select **Auto Tuning** and press the ENTER button, the screen will display as shown on the right:

Press the ◀▶ button to select desired country and press the ▼ button to highlight "Start". To cancel auto tuning, press the ENTER button after highlight "Cancel" by pressing the ◀▶ button.



To start auto tuning, press the ENTER button after highlighting "Start". The screen will display as shown:

When auto tuning is over, all searched channels will be stored automatically and it will return to the first searched channel.

During searching, press the MENU button to skip some range of available channels. Press the EXIT button to exit.

## Notes:

- ✧ Channel Tuning scans the analog channels, digital channels and Radio programs.
- ✧ Please allow a few minutes for this feature to scan the entire range of available channels to insure accurate programming of available channels.



# TV Function

## DTV Manual Tuning

Press the ▲▼ button to select **DTV Manual Tuning** and press the ENTER button, the screen will display as shown on the right: Press the ◀▶ button to select desired channel number and press the ENTER button to start tuning.



## ATV Manual Tuning

Press the ▲▼ button to select **ATV Manual Tuning** and press the ENTER button, the screen will display as shown on the right: Within this menu, press the ▲▼ button to select desired item and press the ◀▶ button to set or activate. Press the red button to save the settings.



## Programme Edit

Press the ▲▼ button to select **Programme Edit** and press the ENTER button, the screen will display as shown on the right: Within the menu, press the ▲▼ button to select a channel and press the FAV.LIST button to set it as your favorite channel, press the FAV.LIST button again to cancel.



**Delete:** Press the ▲▼ button to select a channel you want to delete and press the red button to set a symbol “” on the channel. Press the red button again to delete the selected channel, press the MENU button to return.

**Rename:** Press the ▲▼ button to select a channel you want to rename and press the green button to set a symbol “” on the channel. Press the ◀▶ button to highlight the character position of channel name and press the ▲▼ button to select desired character, press the MENU button to confirm and return.

# TV Function

**Move:** Press the ▲▼ button to select a channel you want to move and press the yellow button to set a symbol “**MOVE**” on the channel. Press the ▲▼ button to select the desired position and press the MENU button to move the selected channel to the position you select.

**Skip:** Press the ▲▼ button to select a channel you want to skip and press the blue button to set the channel skipped. A symbol “**SKIP**” is appear on the skipped channel. Press the blue button again to cancel, press the MENU button to return.

✧ A skipped channel is skipped when using the CH▲/▼ button to browse the channels but can be watched by selecting in the channel list or using the number buttons.

## Picture Setting

Press the MENU button once to enter **CHANNEL** setup menu and press the ◀▶ button to select **PICTURE**, the screen will display as shown.

Press the ENTER button or ▼ button to enter the menu.

In the **PICTURE** setup menu, press the ▲▼ button to select the desired item. Press the MENU button to return to the previous menu.



### Picture Mode

Press the ▲▼ button to select **Picture Mode** and press the ◀▶ button to select Standard, Mild, User or Dynamic.

### Contrast

Press the ▲▼ button to select **Contrast** and press the ◀▶ button to enter the contrast adjusting bar. Press the ◀▶ button to adjust the difference between the brightest and darkest regions of the picture.



### Brightness

Press the ▲▼ button to select **Brightness** and press the ◀▶ button to enter the brightness adjusting bar. Press the ◀▶ button to darken or brighten the picture.



### Color

Press the ▲▼ button to select **Color** and press the ◀▶ button to enter the color adjusting bar. Press the ◀▶ button to adjust the level.



# TV Function

---

## Sharpness

Press the ▲▼ button to select **Sharpness** and press the ◀▶ button to enter the sharpness adjusting bar. Press the ◀▶ button to adjust the level.



## Tint

Press the ▲▼ button to select **Tint** and press the ◀▶ button to enter the adjusting bar. Press the ◀▶ button to adjust the level.



### Notes:

- ✧ This item is only available under NTSC signal mode.
- ✧ The items Contrast, Brightness, Color, Sharpness and Tint are only available when Picture Mode is set to User.
- ✧ Within the adjusting bar, you can select Contrast, Brightness, Color, Sharpness and Tint by pressing the ▲▼ button.

## Color Temperature

Press the ▲▼ button to select **Color Temperature** and press the ◀▶ button to select User, Warm, Medium or Cool.

## Red

Press the ▲▼ button to select **Red** and press the ◀▶ button to enter the adjusting bar. Press the ◀▶ button to select adjust the level.



## Green

Press the ▲▼ button to select **Green** and press the ◀▶ button to enter the adjusting bar. Press the ◀▶ button to select adjust the level.



## Blue

Press the ▲▼ button to select **Blue** and press the ◀▶ button to enter the adjusting bar. Press the ◀▶ button to select adjust the level.



### Note:

- ✧ The items Red, Green and Blue are only available when Color Temperature is set to User.
- ✧ Within the adjusting bar, you can select Red, Green and Blue by pressing the ▲▼ button.

# TV Function

---

## Aspect Ratio

Press the ▲▼ button to select **Aspect Ratio** and press the ◀▶ button to select Auto, 4:3, 16:9, Zoom1 or Zoom2.

## Noise Reduction

Press the ▲▼ button to select **Noise Reduction** and press the ◀▶ button to select Auto, High, Standard or Off.

## Screen

This item is only available in VGA mode.

Press the ▲▼ button to select **Screen** and press the ▶ or ENTER button to enter its sub menu, as shown on the right:

Within this sub menu, press the ▲▼ button to select desired item and press the MENU button to return.



## Auto Adjust

Press the ▲▼ button to select **Auto Adjust** and press the ▶ or ENTER button to start auto adjusting the screen.

## Horizontal Pos.

Press the ▲▼ button to select **Horizontal Pos.** and press the ◀▶ button to adjust the level.

## Vertical Pos.

Press the ▲▼ button to select **Vertical Pos.** and press the ◀▶ button to adjust the level.

## Size

Press the ▲▼ button to select **Size** and press the ◀▶ button to adjust the level.

## Phase

Press the ▲▼ button to select **Phase** and press the ◀▶ button to adjust the level.

# TV Function

## Sound Setting

Press the MENU button once to enter **CHANNEL** setup menu and press the ◀▶ button to select **SOUND**, the screen will display as shown.

Press the ENTER button or ▼ button to enter the menu.

In the **SOUND** setup menu, press the ▲▼ button to select the desired item. Press the MENU button to return to the previous menu.



## Sound Mode

Press the ▲▼ button to select **Picture Mode** and press the ◀▶ button to select Standard, Music, Movie, Sports or User.

### Note:

✧ The items Treble and Bass are only available when Sound Mode is set to User.

## Treble

Press the ▲▼ button to select **Treble** and press the ◀▶ button to adjust the level.

## Bass

Press the ▲▼ button to select **Bass** and press the ◀▶ button to adjust the level.

## Balance

Press the ▲▼ button to select **Balance** and press the ◀▶ button to adjust the level.

## Auto Volume

Press the ▲▼ button to select **Auto Volume** and press the ◀▶ button to select On or Off.

## Surround Sound

Press the ▲▼ button to select **Surround Sound** and press the ◀▶ button to select Surround or Off.

## Spdif

Press the ▲▼ button to select **Spdif** and press the ◀▶ button to select Off, RAW or PCM.

# TV Function

## Time Setting

Press the MENU button once to enter **CHANNEL** setup menu and press the ◀▶ button to select **TIME**, the screen will display as shown.

Press the ENTER button or ▼ button to enter the menu.

In the **TIME** setup menu, press the ▲▼ button to select the desired item. Press the MENU button to return to the previous menu.

### Clock

Press the ▲▼ button to select **Clock** and press the ▶ button or ENTER button to prompt a information box, as shown:

Press the ▲▼ button to select Date, Month, Year, Hour or Minute, press the ◀▶ button to set.

Press the ENTER button to confirm after selecting Close.

### Off Time

Press the ▲▼ button to select **Off Time** and press the ENTER or ▶ button to prompt a information box, as shown:

Press the ▲▼ button to select Repeat, Hour or Minute, press the ◀▶ button to set.

Press the ENTER button to confirm after selecting Close.

### On Time

Press the ▲▼ button to select **On Time** and press the ENTER or ▶ button to prompt a information box, as shown:

Press the ▲▼ button to select Activate, Hour, Minute, Volume or Mode, press the ◀▶ button to set.

Press the ENTER button to confirm after selecting Close.



# TV Function

## Sleep Timer

Press the ▲ ▼ button to select **Sleep Timer** and press the ◀ ▶ button to select the time to turn off the TV.

## Auto Sleep

Press the ▲ ▼ button to select **Auto Sleep** and press the ◀ ▶ button to select On or Off.

## Time Zone

Press the ▲ ▼ button to select **Time Zone** and press the ◀ ▶ button to select desired time zone.

## Option Setting

Press the MENU button once to enter **CHANNEL** setup menu and press the ◀ ▶ button to select **OPTION**, the screen will display as shown.

Press the ENTER button or ▼ button to enter the menu.

In the **OPTION** setup menu, press the ▲ ▼ button to select the desired item. Press the MENU button to return to the previous menu.



## Language

Press the ▲ ▼ button to select **Language** and press the ◀ ▶ button to select desired language.

## Audio Languages

Press the ▲ ▼ button to select **Audio Languages** and press the ENTER or ▶ button to prompt a information box, as shown:

Press the ▲ ▼ button to select Primary or Secondary, press the ◀ ▶ button to select desired language.

Press the ENTER button to confirm after selecting Close.



# TV Function

## Subtitle Language

Press the ▲▼ button to select **Subtitle Language** and press the ENTER or ► button to prompt a information box, as shown:

Press the ▲▼ button to select Primary or Secondary, press the ◀▶ button to select desired language.

Press the ENTER button to confirm after selecting Close.



## Hearing Impaired

Press the ▲▼ button to select **Hearing Impaired** and press the ◀▶ button to select On or Off.

## Country

This item is used to shown the current country.

## Restore Factory Default

Press the ▲▼ button to select **Restore Factory Default** and press the ENTER or ► button to prompt a confirmation information box, as shown:

Press the ◀▶ button to highlight Yes or No, press the ENTER button to reset the settings to their default status or cancel.



# EPG Function

In DTV mode, press the EPG button to display the EPG information as shown below:



Within this menu, press the ▲ ▼ button to select a desired channel.

Press the DISPLAY button to display the detail information of the selected channel.

Press the yellow button to check the current date.

Press the green button to display the Schedule List.

Within the SCHEDULE LIST menu, press the ▲ ▼ button to select desired item and press the red button to delete it.

Press the blue button to enter the Reminder menu, as shown on the right:

Within this menu, press the ▲ ▼ button to select desired item and press the ◀ ▶ button to set.

Press the green button to display the Schedule List.

Press the ENTER button to save your settings.

Press the EXIT button to exit.



# NICAM Function

---

The unit supports NICAM function **when in TV mode**.

## Under NICAM TV broadcast:

1. When receiving stereo audio signals, press the STEREO button on the remote control repeatedly to select the sound tracks between **Nicam Stereo** and **Mono** and the screen will show the corresponding display as shown below:



2. When receiving bilingual audio signals, press the STEREO button on the remote control repeatedly to shift the sound tracks **between Nicam I, Nicam II, Nicam I+II** and **Mono** and the screen will show the corresponding display as shown below:



3. When receiving mono audio signals, press the STEREO button on the remote control repeatedly to shift the sound tracks between **Nicam Mono** and **Mono** and the screen will show the corresponding display as shown below:



## Under A2 TV broadcast:

1. When receiving stereo audio signals, press the STEREO button on the remote control repeatedly to shift the sound tracks between **Stereo** and **Mono** and the screen will show the corresponding display as shown below:



2. When receiving bilingual audio signals, press the STEREO button on the remote control repeatedly to shift the sound tracks **between I** and **II** and the screen will show the corresponding display as shown below:




3. When receiving mono audio signals, press the STEREO button on the remote control to display sound track **Mono** on the screen.



# DVD Playback Operation

## Preparation

1. Connect the unit to the power supply and press the **POWER** button to turn on the unit.
2. Repeatedly press the **INPUT** button on the remote control to select DVD mode and press the **ENTER** button to enter.
3. Gently insert the disc, with the label side toward the front of the television, into the disc tray slot until about half of the disc is in the tray and then the disc will be drawn into the disc tray and loaded automatically.
4. Press the **EJECT** button to eject the disc, but the disc can not be drawn into the disc tray by pressing the **EJECT** button again. You must push the disc until it is drawn into the disc tray automatically.

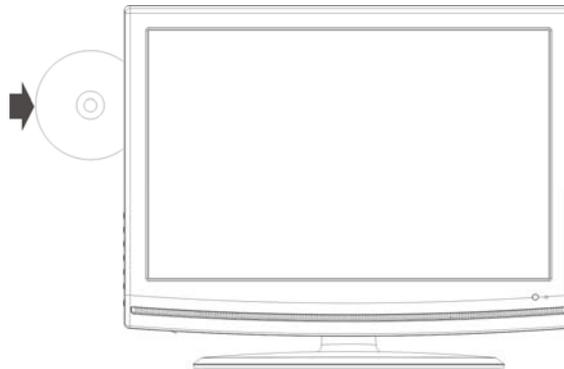

**Warning:** Use of poor quality discs could result in damage to the television.

## DVD Playback

### **Region Code**

DVD players and discs are coded by region. These regional codes must match the played discs. If the codes don't match, the disc cannot be played. This player's default code is 4.

### **Play**

Press the **PLAY** button to start playback.

### **Stop**

During playback, press the **■ STOP** button once to stop playback and press the **▶ PLAY** button to resume normal playback. Press the **■ STOP** button twice to stop playback completely.

### **Pause**

During playback, press the **PAUSE** button once to pause the playback; press it repeatedly to start step-by-step playback. Press the **▶ PLAY** button to resume normal playback.

# DVD Playback Operation

---

## Previous ⏪ and Next ⏩

Press the ⏩ button to go to the next chapter. Press the ⏪ button once to return to the beginning of the current chapter or track; press it twice to go to the previous chapter.

## Fast Playback

During playback, press the ⏮ ⏭ button to activate fast backward or forward playback. During fast playback, press the ▶ **PLAY** button to resume normal playback.

## Repeat

Press the **REPEAT** button repeatedly to repeat a chapter, title or all.

- **Some discs do not support the repeat function.**

## Menu

Normally there is a selecting menu for DVD discs. You can press the **MENU** button (under DVD mode) to enter the menu, and use the direction buttons to highlight an item. Then press the **ENTER** button to confirm.

## Title & Chapter

Normally there are several titles in a DVD disc, and several chapters (sections) in a title. Press the **TITLE** button to enter the title menu, and you can select any title or chapter quickly by entering the relevant number.

- **Some discs do not support the function by inputting the number button but the ▲▼◀▶ direction buttons.**

## Language (Audio)

There can be up to 8 audio languages on a DVD disc. When you play a multi-language DVD disc you can use the **AUDIO** button on the remote control to select a desired language.

## GOTO

During DVD disc playback, press the **GOTO** button on the remote control once, there will be a menu displayed on the screen. You can set or select items for your preference. Use the ▲▼ direction buttons to select items and press the **ENTER** button to enter and use the ▲▼ direction buttons to select the desired item. Press the ◀ direction button to return. When selecting the Title/Chapter, TT Time/CH Time, use the number buttons to input the desired title/chapter, time.

- **Some DVD discs do not support the search function.**

## Subtitle

The DVD player can support multiple kinds of subtitles. When you play a multi-subtitle disc you can press the **SUBTITLE** button on the remote control to select different subtitles.

- **Some discs do not support the shifting subtitle function.**

# DVD Playback Operation

---

## CD Playback

The player will play all tracks on a CD disc by default. You can use the ◀▶ buttons, or number buttons to select a track.

### **Stop**

Press the ■ **STOP** button once to stop playback and press the ▶ **PLAY** button to resume normal playback. Press the ■ **STOP** button twice to stop playback completely.

### **Pause**

Press the **PAUSE** button to pause the playback and then press the **PAUSE** button again or ▶ **PLAY** button to resume normal playback.

### **Previous and Next**

Press the ◀ button to go the beginning of the current track. Press twice repeatedly to go the previous track.

Press the ▶ button to play from the beginning of the next track.

### **Fast Playback**

Press the ◀▶ button on the remote control to activate fast backward or forward playback.

### **Repeat**

Press the **Repeat** button repeatedly to repeat a single track, all tracks, or to exit repeat mode.

- **Some discs do not support the repeat function.**

### **Audio**

During playback, press the **Audio** button to toggle audio output between Mono Left, Mono Right, Mix-Mono or Stereo.

### **GOTO**

Press the **GOTO** button to access the time-selected state. You can select *Disc Go To*, *Track Go To* or *Select Track* respectively by pressing this button repeatedly. Use the 0-9 buttons to enter the desired time and then the player will play according to the selected time. Use the 0~9 number buttons and the -/--/+10 button to enter the desired track number, then the player will play the selected track.

# DVD Playback Operation

---

## **JPEG Playback**

JPEG is a common picture format that requires small amounts of storage per image and has low loss in resolution. Hundreds of pictures can be stored on a disc in this format. In order to view JPEG photo albums, you can ask your film development company to make a "PICTURE CD" when they develop your film.

### **Normal Playback**

Load a JPEG disc in. For JPEG disc, there will be a root menu displayed on the screen. Use the **ENTER** button and the direction button to select a submenu, and then use the **▲▼◀▶** direction button to select the contents. Many discs have other contents besides pictures.

For Picture CD disc, it will display the pictures automatically.

During playback, press the **◀▶** button to select the picture.

- **Many discs have other contents besides pictures.**

### **Stop**

Press the **■ STOP** button to preview the pictures behind currently playing picture in the way of small pictures. Press the **▶ PLAY** button to resume normal playback.

### **Pause**

Press the **PAUSE** button to pause playback, press the **PAUSE** button again or **▶ PLAY** button to resume playback.

### **Repeat**

During playback, press the **REPEAT** button repeatedly, and the repeat modes are Shuffle, Random, Single, Repeat One, Repeat All and Repeat Off.

### **Menu**

Press the **MENU** button once to stop playback and return to the root menu.

### **GOTO**

During playback, press the **GOTO** button on the remote control once, use the number buttons to input the file number.

### **Picture Rotation**

During playback, press the **◀▶** button to rotate the currently displayed picture. This function only activates for the current picture; once another picture is displayed, rotation will be cancelled automatically.

- **Note: Some JPEG discs may not support the rotation function.**

# DVD Playback Operation

---

## **DIVX Playback**

DIVX is the name of a revolutionary new video code, which is based on the new DIVX compression standard for video.

1. Load a DIVX disc in the disc tray, the player will enter the reading mode.
2. The screen displays the root menu. Use the ▲ ▼ buttons to select desired item and press the **ENTER** button to play.

## **Stop**

During playback, press the ■ **STOP** button to stop playback and return to root menu and press the ► **PLAY** button to play the file from the beginning.

## **Pause**

During playback, press the **PAUSE** button once to pause the playback and press it again or press the ► **PLAY** button to resume normal playback.

## **Previous ◀◀ and Next ▶▶**

Press the ◀◀ button to go to the previous file; press the ▶▶ button to play the next file

## **Fast Playback**

During playback, press the ◀▶ button to activate fast backward or forward playback. During fast playback, press the ► **PLAY** button to resume normal playback.

## **REPEAT**

During playback, press the **REPEAT** button repeatedly to select repeat mode.


## **GOTO**

Press the **GOTO** button repeatedly to select *Select:---* or *Go To:-:--:--*. Use the 0-9 buttons to enter the desired time or and then the player will play according to the selected time. Use the 0~9 number buttons and the *-/-/+10* button to enter the desired track number, then the player will play the selected track.

# USB and SD/MS/MMC Card Function


## Preparation

In DVD mode, connect USB device to the USB port or insert SD/MS/MMC card into the SD/MS/MMC card slot on the right side of the unit.

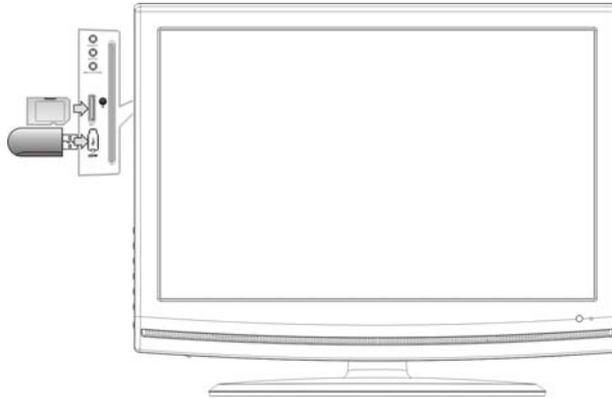

➤ *Make sure that files are stored in the USB and SD/MS/MMC card before connection.*

1. Press the **CARD** button to shift between Disc playback, USB playback and SD/MS/MMC playback. The default state is disc playback. Please see the figure below:

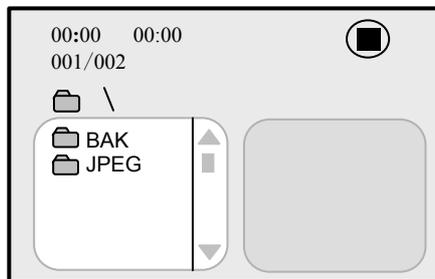

2. Press the ▲▼ buttons to select the folder. Press the ENTER button to enter.
3. Press the ▲▼ buttons to select the desired track. Then press the PLAY ► button to start playback.
4. Press the ■ STOP button to stop playback. Press the ◀ button to return to the folder menu.

## **Note:**

1. The screen display will vary from disc to disc.
2. Pull out the USB or SD/MS/MMC card directly after the files are played. The unit will now return to disc playback mode.


# DVD System Setup

## Preparation

1. In DVD mode, press the **SETUP** button to enter DVD system setup menu.
2. Press the ◀▶ button to select setup menu.
3. Press the **SETUP** button again to exit DVD system setup menu.


## General Setup Page

Press the **SETUP** button to enter the General Setup Page. The screen will display as below:

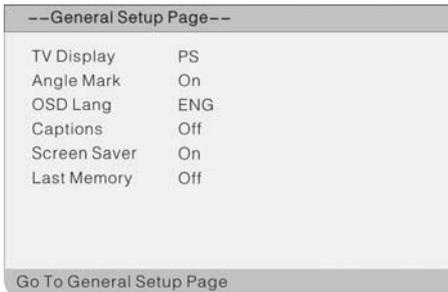


On the menu, use the ▲▼ direction buttons to select the desired item. Press the ENTER button to enter the item. Press the ◀ button to return.

## TV Display

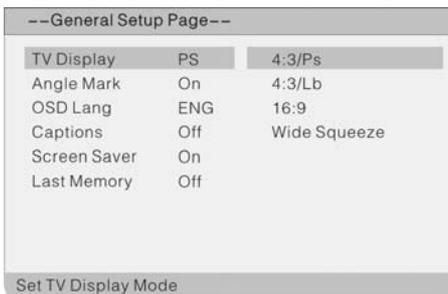

1. Press the ▲▼ direction buttons to select **TV Display**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select items.
4. Press the ENTER button again to confirm selection and return.

## Angle Mark

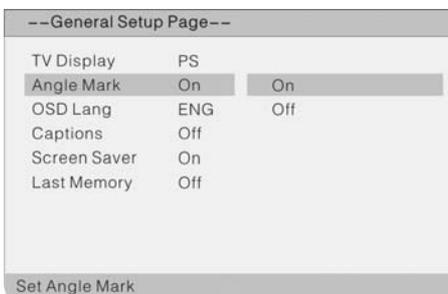


1. Press the ▲▼ direction buttons to select **Angle Mark**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select On or Off.
4. Press the ENTER button again to confirm selection and return.

# DVD System Setup


---

## OSD Lang

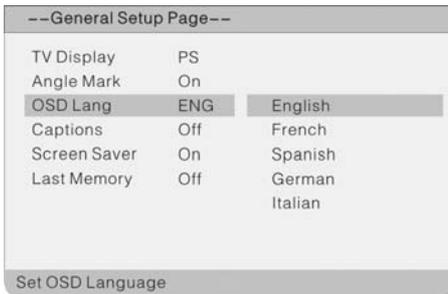


1. Press the ▲▼ direction buttons to select **OSD Lang**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select desired OSD language.
4. Press the ENTER button again to confirm selection and return.

## Captions

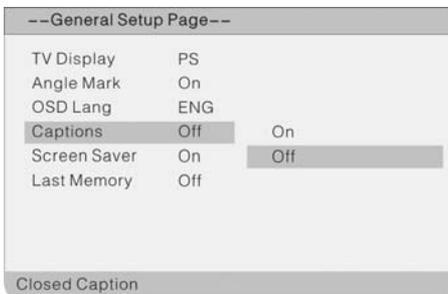


1. Press the ▲▼ direction buttons to select **Captions**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select On or Off.
4. Press the ENTER button again to confirm selection and return.

## Screen Saver

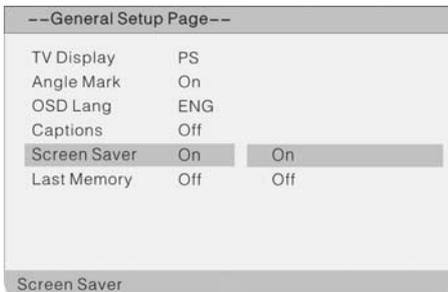

1. Press the ▲▼ direction buttons to select **Screen Saver**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select On or Off.
4. Press the ENTER button again to confirm selection and to return.

## Last Memory

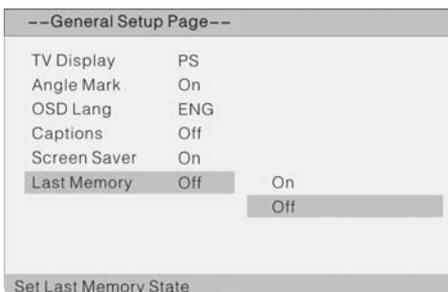


1. Press the ▲▼ direction buttons to select **Last Memory**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select On or Off.
4. Press the ENTER button again to confirm selection and return.

# DVD System Setup

## Audio Setup Page

Press the **SETUP** button to enter the General setup menu, then use the ◀▶ direction buttons to select Audio Setup Page, the screen will display as the below:

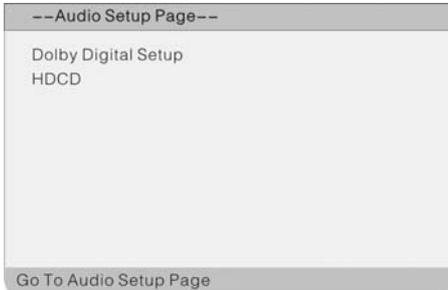


On the menu, Use the ▲▼ direction buttons to select the desired item. Press the ENTER button to enter the item. Press the ◀ button to return.

## Dolby Digital Setup


Press the ▲▼ direction buttons to select **Dolby Digital** in the Audio Setup Page and press the ENTER button to enter the setup.

## Dual Mono

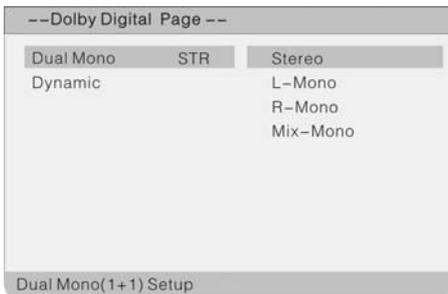

1. Press the ▲▼ direction buttons to select **Dual Mono**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select items.
4. Press the ENTER button again to confirm selection and return.

## Dynamic

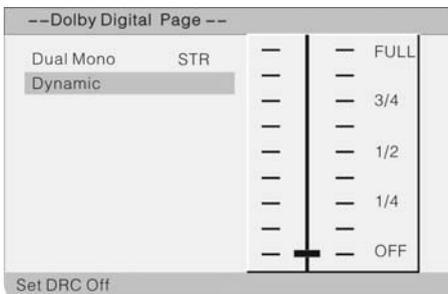


1. Press the ▲▼ direction buttons to select **Dynamic**.
2. Press the ENTER button to enter.
3. Use the ▲▼ direction buttons to adjust.
4. Press the ENTER button again to confirm setting and return.
5. Press the ◀ button to return.

# DVD System Setup

---

## HDCD Setup


In the Audio Setup Page, use the ▲▼ direction buttons to select **HDCD Setup**. Press the ENTER button to enter the menu as shown below:

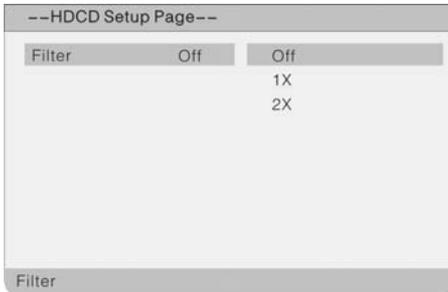

1. On the menu, press the ENTER button to enter the setup.
2. Use the ▲▼ direction buttons to select items.
3. Press the ENTER button again to confirm selection and return.
4. Press the ◀ button to return.

## Video Setup

Press the **SETUP** button to enter the General setup menu, then use the ◀▶ direction buttons to select Video Setup Page, the screen will display as the below:

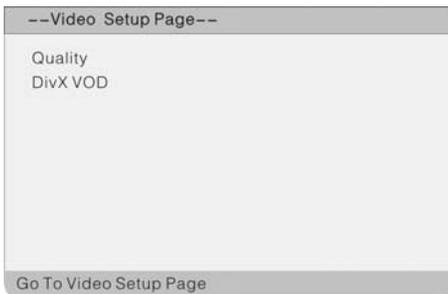

On the menu, Use the ▲▼ direction buttons to select the desired item. Press the ENTER button to enter the item. Press the ◀ button to return.

## Video Quality Setup

Select **Quality** in the Video Setup Page and press the ENTER button to enter the menu. Within this menu, press the ▲▼ direction buttons to select desired item.

## Sharpness



1. Press the ▲▼ direction buttons to select **Sharpness**.
2. Press the ENTER button to enter the setup.
3. Use the ▲▼ direction buttons to select High, Medium or Low.
4. Press the ENTER button again to confirm selection and return.

# DVD System Setup

---

## Brightness



1. Press the ▲▼ direction buttons to select **Brightness**.
2. Press the ENTER button to enter the setup
3. Use the ◀▶ direction buttons to adjust the level.
4. Press the ENTER button again to confirm setting and return.


## Contrast



1. Press the ▲▼ direction buttons to select **Contrast**.
2. Press the ENTER button to enter the setup.
3. Use the ◀▶ direction buttons to adjust the level.
4. Press the ENTER button again to confirm setting and return.

## DivX VOD Setup

Select **DivX VOD**, press the ENTER button to enter the menu as shown:

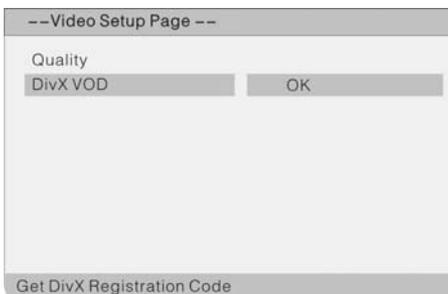

### Note:


Your registration code is: XXXXXX.

Please use this code to register this player with the DivX(R) video On Demand Service.

This will allow you to rent and purchase videos using the DivX(R) video On Demand format. To learn more go to [www.divx.com/vod](http://www.divx.com/vod).

## Preference Setup

Press the **SETUP** button to enter the General setup menu, then use the ◀▶ direction buttons to select Preference Page, the screen will display as the below:

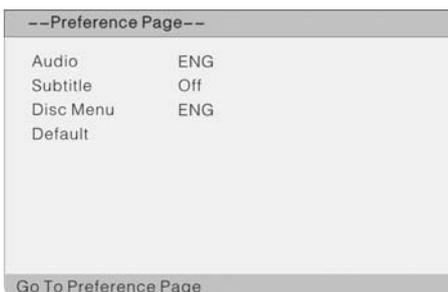

On the menu, Use the ▲▼ direction buttons to select the desired item. Press the ENTER button to enter the item. Press the ◀ button to return.

# DVD System Setup

---

## Audio



1. Press the ▲▼ direction buttons to select **Audio**.
2. Press the ENTER button to enter the setup.
3. Press the ▲▼ direction buttons to select audio language.
4. Press the ENTER button again to confirm setting and return.

## Subtitle




1. Press the ▲▼ direction buttons to select **Subtitle**.
2. Press the ENTER button to enter the setup.
3. Press the ▲▼ direction buttons to select Subtitle language.
4. Press the ENTER button again to confirm setting and return.

## Disc Menu



1. Press the ▲▼ direction buttons to select **Disc Menu**.
2. Press the ENTER button to enter the setup.
3. Press the ▲▼ direction buttons to select Menu language.
4. Press the ENTER button again to confirm setting and return.

## Default

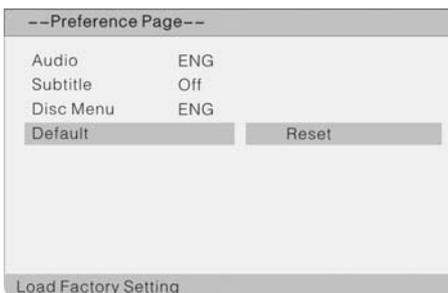

1. Press the ▲▼ direction buttons to select **Default**.
2. Press the ENTER button to select Reset.
3. Press the ENTER button, all the settings will return to the default status.

# Troubleshooting

SYMPTOM	CHECK ITEM
The player cannot play.	<p>Make sure the disc is loaded in.</p> <p>Make sure the disc is not dirty or warped.</p> <p>Make sure the player's region code is the same as the region code of the DVD disc.</p> <p>Make sure water condensation has not occurred. If it occurs, take out the disc and leave the player on for at least one hour.</p>
There is no sound.	<p>Make sure the system connection is correct.</p> <p>Make sure the sound setup of the DVD disc is correct.</p> <p>Make sure the disc is not dirty or warped.</p> <p>Clean or replace the disc.</p> <p>Make sure the speakers are not muted.</p> <p>In the TV mode, set the correct sound mode.</p>
LCD has no display	<p>Make sure the unit is turned on and the connections are correct.</p> <p>Make sure the power adapter is correctly connected.</p>
Cannot continue to play and play a section repeatedly.	<p>Make sure it is not in repeat status.</p> <p>Make sure the disc is not dirty or damaged.</p>
There is no picture or picture jitters up and down Unsteady.	<p>Check if the connections with the external AV signal source are correct.</p> <p>Correctly set the items in the picture menu.</p> <p>Check if the video type input signal is not corresponding to the unit.</p> <p>Make sure the unit is turned on and in the correct video type.</p>
The remote control does not work.	<p>Make sure there are no obstructions between the remote control and the player.</p> <p>Make sure the remote control is pointing at the player.</p> <p>Make sure the batteries are inserted and the polarity is correct.</p> <p>Make sure the battery is not weak.</p>

## Other Notes:

Static or other external interference may cause the player to behave abnormally. If this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician.

# Specifications

Model	LCDV2255HD
Screen Size	21.6-inch TFT LCD TV
Native Resolution	1680 × 1050 Pixels
Brightness	300cd/m <sup>2</sup>
Contrast Ratio	1000 :1
Response time (ms)	5ms
Color System	PAL
Sound System	BG//DK
Tuner	VHF/UHF: 48.25~863.25MHz
Antenna	75Ω VHF/UHF input
Stereo	NICAM/A2
<b>VIDEO INPUT</b>	
CVBS input	PAL/SECAM/NTSC
S-VIDEO input	Y/C separate video signal Y...1 Vp-p/negative sync/75Ωinput C...0.283 Vp-p/75Ωinput(NTSC) 0.3 Vp-p/75Ωinput(PAL)
COMPONENT	RCA,0.7Vp-p/75Ω input (480I/60Hz,480P/60Hz,576I/50Hz,576P/50Hz,720P/50Hz,720P/60Hz,1080I/50,1080I/60Hz)
Audio in	RCA Stereo audio input
<b>OTHERS</b>	
DVD Player	DVD+/-RW, DVD-R, CD, CD-R, CD-RW, JPEG, DivX 3.11/4.x/5.x/6.x
Multi Media USB Card Reader	MS, SD, MMC 3 in 1 Card reader and USB compatible Max Volume up to 2GB
VGA	15 Pin, Analog RGB signal, 0.7Vp-p, 75Ωinput(VGA, SVGA, XGA, WXGA computer signal compatibility), 1680*1050@60Hz, 1440*900@60Hz, 1024*768@60Hz, 800*600@60Hz, 640*480@ 60Hz
Teletext	1000 pages
Audio in	headphone audio input
<b>TV SET OUT</b>	
AV output	monitor
Speaker Output	5W+5W
Power Requirement	AC100 to 240V, 50/60Hz
Power Consumption	< 60W
Standby Power	< 2W
Dimension	529mm × 184mm × 412mm (LXWXD)
Net Weight	About 9 Kg
Ambient Temperature	10~45°C

Note: Specifications subject to change without pre-notice. Weight and dimensions are approximate.

TEAC AUSTRALIA PTY.,LTD.  
A.B.N.: 11 113 998 048

# TEAC®

Service Providers in Australia

please contact one of the following service providers in your area if you require service for your product.

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
Associated Electronics	7 Molonglo Mall	FYSHWICK	2609	(02)62 80 4698	(02)62 80 5437
TEAC Perth Service Centre	273 Great Eastern Highway	BELMONT	6104	(08)94 79 6499	(08)94 79 6544
Inpulse Electronics	3 Sloane Street	MARIBYRNONG	3032	(03)93 17 4000	(03)39 17 4040
Jav Electronics	65 Mackie Road	BENTLEIGH EAST	3165	(03)95 70 4911	(03)95 63 8722
Watpace Electronics	62 Wingara Avenue	KEILOR EAST	3033	(03)93 36 4042	(03)93 36 3768
QQ Electronics Pty Ltd	Unit 5, 14-38 Bellona Avenue	REGENTS PARK	2143	1300 883 229	(02)97 38 1311
Maxwell Electronics	106 Bath Road	KIRRAWEE	2232	(02)95 42 3000	(02)95 42 3377
TCS (Total Care Services)	62 Leader Street	FORESTVILLE	5035	(08)83 51 1044	(08)83 51 1043

## NSW

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
B & H Electronics	466 David Street	ALBURY	2640	(02)60 41 3911	(02)60 21 7455
Border Video & TV Service	Shop 3, 339 Urana Road	LAVINGTON	2641	(02)60 40 2229	(02)60 40 2184
Bourkes Video & Tv Service	111 Danger Street	ARIMDALE	2350	(02)67 71 1513	(02)67 71 1696
Nichols Electronics	Shop 4/70 River Street	BALLINA	2478	(02)66 86 9422	(02)66 81 4999
Baytech Electronics	Shop 3, 270 Beach Road	BATEHAVEN	2536	(02)44 72 7023	(02)44 72 7354
Sapphire Electronics	U5B/85 Bega Street	BEGA	2550	(02)64 92 2522	(02)64 93 2062
Lawson Radio & TV	298 Great Western Highway	LAWSON	2783	(02)47 59 1254	(02)47 59 2312
Iwac Repairs Pty Ltd	Shop 8, 12 Statham Street	BENNETTS GREEN	2290	(02)49 48 1067	(02)49 48 1069
Visual Audio Services	510 Chapple Street - PO BOX 76	BROKEN HILL	2880	(08)80 87 4055	(08)80 87 4055
T K Electronics	Unit 2 10 O'Hart Close	CHARMHAVEN	2263	(02) 43 92 0828	(02)43 93 1018
TV Technologies	20 Marcia Street	COFFS HARBOUR	2450	(02)66 51 7366	(02)66 50 0152
Coogee Electronic Service	261 Arden Street	COOGEE	2034	(02)93 15 8566	(02)66 50 0152
Electronics 2000	Shop 3/190 Sharp Street	COOMA	2630	(02)64 52 4179	(02)64 52 4179
Lachlan Valley TV	49 Vaux Street	COWRA	2794	(02)63 42 2189	(02)63 42 2189
Greg's TV	2 Bingalong Street	DALMENY	2546	(02)44 76 7544	(02)44 76 7544
Deniliquin Hi-Tech	44 Hardinge Street	DENILIKUIN	2710	(03)58 81 1444	(03)58 81 1444
Western Electronic Service	437 Hopkins Parade	DUBBO	2830	(02)68 82 3905	(02)68 82 3870
Con Carr Retravision	126-128 Murray Street	FINLEY	2713	(03)58 83 1611	(03)58 83 2114
Forbes TV & Video Repairs	132 Rankin Street	FORBES	2871	(02)68 52 2921	(02)68 52 2921
Forster Electronic Services	Shop 15, Forster Tower, Wallis Street	FORSTER	2428	(02)65 54 5352	(02)65 54 5352
V.J. & C.M. Davey TV &	137 Meade Street	GLEN INNES	2370	(02)67 32 2260	(02)67 32 2260
Ray White Television Repairs	2 Taylor Street	GOULBURN	2580	(02)48 22 4050	
Repairs & Spares	140 Fitzroy Street	GRAFTON	2460	(02)66 42 1911	(02)66 43 3961
Griffith Home Appliance	94-98 Yambil Street	GRIFFITH	2680	(02)69 62 1826	
S & K Electronics	111 Banna Avenue	GRIFFITH	2680	(02)69 62 2847	(02)69 64 7774
Ron Burns Electrical	8 Hillcrest Road	GUNNEDAH	2380	(02)67 42 3299	
Tele – Fridge Electronics	82 Conadilly Street	GUNNEDAH	2380	(02)67 42 0022	(02)67 42 3878

Inverlec Electronics	Shop 1,20 Glen Innes Road	INVERELL	2360	(02)67 22 4522	(02)67 22 4522
<b>Maxwell Electronics</b>	<b>106 Bath Road</b>	<b>KIRRAWEE</b>	<b>2232</b>	<b>(02)95 42 3000</b>	<b>(02)95 42 3377</b>
Jag Electronics	59 Tambourine Bay Road	LANE COVE	2066	(02)94 27 5478	(02)94 28 2634
AVL Electronics	2/87 Bold Street	LAURIETON	2443	(02)65 59 6330	(02)65 59 6330
Leeton Appliances	99 Grevillia Street	LEETON	2705	(02)69 53 4151	(02)69 53 4151
Hans Electronic Services	147 Magellan Street	LISMORE	2480	(02)66 21 9311	(02)66 21 9711
Robert Peatfield	2 West Street	MACKSVILLE	2447	(02)65 68 2867	(02)65 68 2867
Mullumbimby TV Service	Shop 3 97-99 Stuart Street	MULLUMBIMBY	2482	(02)66 84 2335	(02)66 84 3554
John Rice TV Service	13 Park Avenue	MURWILLUMBAH	2484	(02)66 72 3292	(02)66 72 3292
Spencer Electronics	Unit 2, 26 Somerset Avenue	NARELLAN	2567	(02)46 47 2046	(02)46 47 2046
Newcastle Quickfix/ J P Electronics	Shop 5, 468 Pacific Hwy	BELMONT	2280	(02)49 45 4699	(02)49 45 5696

## NSW

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
Vidotel	Unit 1/17 Quinns Lane	SOUTH NOWRA	2541	(02)44 21 5250	(02)44 23 3280
Ideal Electronics	145 Woodward Street	ORANGE	2800	(02)63 62 8270	(02)63 62 8270
Parkes Sight 'n' Sound	67 Clarinda Street	PARKES	2870	(02)68 62 4475	(02)68 63 4209
Vickery Sound	171 Brisbane Water Drive	POINT CLARE	2250	(02)43 23 3623	(02)43 23 1581
Quickfix Repairs	118 Stafford Street	PENRITH	2750	(02)47 22 8550	(02)47 22 9949
BJRAE Electronics	2/199 Adelaide Street	RAYMOND TERRACE	2324	(02)49 87 7032	(02)49 87 6194
<b>QQ Electronics Pty Ltd</b>	<b>Unit 5, 14-38 Bellona Avenue</b>	<b>REGENTS PARK</b>	<b>2143</b>	<b>1300 883 229</b>	<b>(02)97 38 1311</b>
Quickfix Repairs	Shop 17 West Market Street	RICHMOND	2754	(02)45 78 2111	(02)45 78 2021
Tech 1 Electronic Repairs	Shop1/12 Sunset Ave	WARILLA	2528	(02)42 97 5397	(02)42 97 5398
Cherries Electronics	Unit 3, 8 Walter Street	SINGLETON	2330	(02)65 71 2488	(02)65 71 2488
Vidotel Video, TV & Monitor	232 Marius Street	EAST TAMWORTH	2340	(02)67 61 3788	(02)67 61 3388
Peel Television Service	1 Macquarie Street	TAMWORTH	2340	(02)67 66 3928	(02)67 66 9932
Colour Fix TV & Video Service	172 Bridge Street	TAMWORTH WEST	2340	(02)67 65 5539	(02)65 62 0561
Hawkins Electronic Service	94 Manning Street	TAREE	2430	(02)65 52 2288	(02)65 52 4059
Household Electronics	3/39 Shearwater Drive	TAYLORS BEACH	2316	(02)49 19 0344	(02)49 19 0355
That Repair Shop	122 Fitzmaurice Street	WAGGA WAGGA	2650	(02)69 21 5200	(02)69 25 9491
Schuberts Electronics	53 Hastings Street	WAUCHOPE	2446	(02)65 85 1533	(02)65 85 3816
ILLAWARRA Electronics Solution	Shop 3, 60 Lakeside Drive	KANAHOOKA	2530	(02)42 61 9234	(02)42 61 9227
United Television Service Pty Ltd	390 Keira Street	WOLLONGONG	2500	(02)42 28 4555	(02)42 26 3453
Vac Shak Pty Ltd	16 Lovell Street	YOUNG	2594	(02)63 82 5700	(02)63 82 7366

**QLD**

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
McMahon Electrical Traders	23 Mabel Street	ATHERTON	4883	(07)40 91 1788	(07)40 91 1741
Beerwah Electronics	Peachester Road	BEERWAH	4519	(07)54 94 0466	(07)54 94 0416
Bremer Television Service	36 Station Road	BOOVAL	4304	(07)32 82 3593	(07)32 82 1214
Bowen Retravision (Northern Elect)	40 George Street	BOWEN	4805	(07)47 86 1633	(07)47 86 2257
TV Doctor	Unit 2, 11 Breene Place	MORNINGSIDE	4170	(07)38 99 9644	(07)33 99 9019
Telefix	Unit 9, 19 Lensworth Street	COOPERS PLAINS	4108	(07)33 23 2700	(07)33 23 2730
Nielsons Radio & TV Service	68 Gavin Street	BUNDABERG	4670	(07)41 53 1377	(07)41 53 1534
A1 Sound & TV Service	14 Gloucester Road	BUDERIM	4556	(07)54 45 4777	(07)54 45 1311
Caboolture Video & Microwave	4/125 Morayfield Road	CABOOLTURE	4510	(07)54 95 3477	(07)54 95 3477
Digital TV Service	197 Lyons Street	WESTCOURT	4870	(07)40 51 1711	(07)40 51 1771
Garrows Video & TV Service	4/74 Omrah Avenue	CALOUNDRA	4551	(07)54 91 3238	(07)54 91 7457
Charleville Radio & TV	14 Wills Street	CHARLEVILLE	4470	(07)46 54 1633	(07)46 54 2266
Moss Electronics (form Caboolture Video)	Unit 2, 25 Redcliffe Gardens Dr	CLONTARF	4019	(07)3283 6749	(07)3283 6750
Precise Electronics	1 / 4 Northview Street	MERMAID BEACH	4218	(07)55 75 1377	(07)55 72 4689
Ready Electronics	Shop 3/1 Tibbing Street	NERANG	4211	(07)55 96 6359	(07)55 02 2734
Tweed Television	Shop 3/12 Machinery Drive	SOUTH TWEED HEADS	2486	(07)55 24 4483	
Bakers TV & Electronics Pty Ltd	Unit 15, 388 Newman Road	GEEBUNG	4185	(07)32 16 5495	(07)32 16 5598
Harbour City TV & Video	Shop 3/1 Mellefont Street	GLADSTONE	4680	(07)49 72 9495	(07)49 72 9495
Lloyd Lawrence Electronics	Shop 8-9, 5 Torquay Road	HERVEY BAY	4655	(07)41 24 3787	(07)41 24 3787
Professional VCR Sales Service	90 Mourilyan Road	INNISFAIL	4860	(07)40 61 4720	(07)40 61 4720
Dunstans SBTv	37 Kingaroy Street	KINGAROY	4619	(07)41 62 1547	(07)41 62 2343
Nev Robert Electronics	31 Hart Street	MACKAY	4740	(07)49 57 6498	(07)49 51 3737
Sunland TV Service	Unit 5 Centre One, Norval Court	MAROOCHYDORE	4558	(07)54 43 6444	(07)54 43 6464
Telefix	Unit 1, 96 Aerodrome Road	MAROOCHYDORE	4558	(07)33 23 2700	(07)33 23 2730
Noosa TV & Video Repairs	Shop 2, 9 Commerce Court	NOOSAVILLE	4566	(07)54 47 1752	(07)54 47 1753
Sunland TV Service	Shop 4, 54 Rene Street	NOOSAVILLE	4566	(07)54 74 2101	
Cumners Electronics	Shop 4, 131 Old Pacific Highway	OXENFORD	4210	(07)55 73 5250	(07)55 73 5403
N & M TV & Video Service	47a Yandilla Street	PITTSWORTH	4356	(07)46 93 2886	(07)46 93 2886
C.Q. Video & TV Service	227 Berserker Street	ROCKHAMPTON	4701	(07)49 28 8811	(07)49 28 2698
Matthew's TV & Video Service	176 Main Street	ROCKHAMPTON	4701	(07)49 28 5377	(07)49 28 5608
WSR Electronics	542 Sherwood Road	SHERWOOD	4075	(07)33 79 5400	(07)32 78 5655
Top Beat Entertainment & Elec	97A Folkestone Street	STANTHORPE	4380	(07)46 81 0681	(07)46 81 0682
T.I. TV Repairs	11 Summer Street	THURSDAY ISLAND	4875	(07)40 90 2139	(07)40 69 2577
Clark & Webb TV & Radio	14 Grange Street	TOOWOOMBA	4350	(07)46 32 7290	(07)46 32 9244
Downs Radio & TV Service (DR TV)	35 Dent Street	TOOWOOMBA	4350	(07)46 32 1044	(07)46 32 1224
Townsville Electronics	197 Ingham Road	WEST END	4810	(07)47 75 7774	(07)47 79 6867
Top Beat Entertainment & Electrical	46 Wood Street	WARWICK	4370	(07)46 61 2690	

**NT**

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
The Television Workshop	Shop 4 Elder St Centre	ALICE SPRINGS	0870	(08)89 52 8555	(08)89 52 5557
New Age Electronics	Unit 1/21 Delatour Street	COCONUT GROVE	0810	(08)89 48 1755	(08)89 48 1766
Eletech Service	13 Sandalwood Ave	NHULUNBUY	0880	(08)89 87 3828	(08)89 87 3828

**SA**

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
<b>TCS (Total Care Services)</b>	<b>62 Leader Street</b>	<b>FORESTVILLE</b>	<b>5035</b>	<b>(08)83 51 1044</b>	<b>(08)83 51 1043</b>
Haynes Electronic Service	Shop 3, 7 Verrall Crescent	BERRI	5343	(08)85 82 4677	(08)85 82 5294
E.K. Dunstan & Co	255 Main Street	CLARE	5453	(08)88 42 2144	(08)88 42 3942
Peter's Electronics	25 Lorna Street	LOXTON	5333	(08)85 84 6920	(08)85 84 6920
Gambier Sound& Vision Repairs	16-18 Watson Tce	MT GAMBIER	5290	(08)87 23 3955	(08)87 23 3855
Portside Technologies	28 Hallet Place	PORT LINCOLN	5606	(08)86 82 1500	
Pirie Antenna & TV	283B Senate Road	PORT PIRIE	5540	(08)86 32 2565	(08)86 33 0091
Riverland Electronics Services	113 Renmark Avenue	RENMARK	5341	(08)85 86 5600	(08)85 86 5533
Victor Electronic Service	44 Torrens Street	VICTOR HARBOR	5211	(08)85 52 1471	(08)85 52 1098
Eyre Electronics	15B Forsyth Street	WHYALLA	5600	(08)86 45 4764	(08)86 45 5576

## TAS

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
R.M Electronics	32 Strahan Street	BURNIE SOUTH	7320	(03)64 31 8922	(03)64 31 89 22
Somerset Electronics	16 Douglas Street	EAST DEVONPORT	7310	(03)64 27 0016	
D.J. Hingston	95 James Road	SPREIGHTON	7310	(03)64 27 2145	(03)64 27 2145
Integrated Components	54A Albert Road	MOONAH	7009	(03)62 78 1932	(03)62 78 8387
K.T. National Electronics	1 Hobart Road	SANDHILL	7249	(03)63 44 5665	(03)63 43 0466

## VIC

<i>Name</i>	<i>Address</i>			<i>Phone</i>	<i>Fax</i>
Border Video & TV Service	362 Griffith Road	LAVINGTON	2641	(02)60 40 2229	(02)60 40 2184
Greene's Television Services	149 Hummfray Street	BALLARAT	3350	(03)53 32 6256	(03)53 32 7597
Ted Rivett Services	145 Creswick Road	BALLARAT	3550	(03)53 32 6371	(03)53 33 4002
Proud's Hi Fi	78- 80 Pall Mall	BENDIGO	3550	(03)54 42 2722	(03)54 42 2522
<b>Jav Electronics</b>	<b>65 Mackie Road</b>	<b>BENTLEIGH EAST</b>	<b>3165</b>	<b>(03)95 70 4911</b>	<b>(03)95 63 8722</b>
B M Tronics	197 Murray Street	COLAC	3250	(03)52 32 1504	(03)52 32 1935
Unitech Services	72 Maroondah Highway	CROYDON	3136	(03)97 25 2222	(03)97 25 2804
T & C Electronics Service	31 Pegleg Road	EAGLEHAWK	3556	(03)54 46 3000	(03)54 46 3022
Echuca TV & Video Service	1/7 Mitchell Street	ECHUCA	3564	(03)54 80 7874	
Fawkner TV Service	123 Jukes Road	FAWKNER	3060	(03)93 59 5836	(03)93 59 5048
Central Appliance Service	222 Moorabool Street	GEE LONG	3200	(03)52 22 1418	(03)52 22 1418
RTD Services Pty Ltd	25-29 Fairlie Street	GEE LONG NORTH	3215	(03)52 78 9766	(03)52 78 3545
Linke Electrical Repairs	82 Lonsdale Street	HAMILTON	3300	(03)55 72 5788	(03)55 72 4090
Frank Ritchie Electrical P/L	9 Victoria Street	KERANG	3579	(03)54 52 2908	(03)54 52 2908
<b>Watpace Electronics</b>	<b>62 Wingara Avenue</b>	<b>KEILOR EAST</b>	<b>3033</b>	<b>(03)93 36 4042</b>	<b>(03)93 36 3768</b>
Harold Hurren	26 Fitzroy Street	KILMORE	3764	(03)57 82 1327	(03)57 82 1487
Soundwave Electronics	2B Holt Street	LEONGATHA	3953	(03)56 62 3665	(03)56 62 3665
<b>Inpulse Electronics</b>	<b>3 Sloane Street</b>	<b>MARIBYRNONG</b>	<b>3032</b>	<b>(03)93 17 4000</b>	<b>(03)39 17 4040</b>
Sunshine Electronics Aust	Shop 2, 17 Moore Street	MOE	3825	(03)51 26 1110	(03)51 26 1275
Peninsula VCR Repairs	1/8 Virginia Street	MORNINGTON	3931	(03)59 75 0800	(03)59 76 2300
Ferguson Electronics	116 Orange Avenue	MILDURA	3500	(03)50 23 5846	(03)50 21 2690
Bensi TV Electrical Pty. Ltd.	128 Nicholson Street	ORBOST	3888	(03)51 54 1454	(03)51 54 1344
G & R Video & TV Services Pty.	24 Dunkirk Avenue	SHEPPARTON	3630	(03)58 21 0258	(03)58 21 8187
<b>Inpulse Electronics</b>	<b>496 Whitehorse Road</b>	<b>SURREY HILLS</b>	<b>3027</b>	<b>(03)93 17 4000</b>	<b>(03)98 36 5922</b>
Swantronics	45 Campbell Street	SWAN HILL	3585	(03)50 33 1633	(03)50 33 1287
Earl & Becker	4-26 Shakespeare Street	TRARALGON	3844	(03)51 74 8454	(03)51 74 8454
Tellycare (Nugents)	105 Queen Street	WARRAGUL	3820	(03)56 22 1102	(03)56 22 1102
John B. Electronics	Shop 94 High Street	WODONGA	3690	(02)60 56 1066	(03)57 28 7299

**WA*****Name******Address******Phone******Fax***

Albany TV Service	Shop 8 35-37 Campbell Road	ALBANY	6330	(08)98 41 1573	(08)98 42 5958
Excel Electronics	3 Newman Court	NICKOL	6725	(08)91 44 1266	(08)91 44 1266
North West Electronics	42 Fredrick Street	BROOME	6725	(08)91 92 5003	(08)91 92 6003
Elricks TV Service	62 Spencer Street	BUNBURY	6230	(08)97 21 4047	(08)97 21 1161
Busselton TV & Video	65B Strelley Street	BUSSELTON	6280	(08)97 54 4457	(08)97 54 4824
Electronic Plus	Unit 3/11 Egan Street	CARNARVON	6701	(08)99 41 3690	(08)99 41 3660
Esperance Communications	33 Norseman Road	ESPERANCE	6450	(08)90 71 3344	(08)90 71 4545
Bird Electronics	14 Abraham Street	GERALDTON	6530	(08)99 64 1631	(08)99 21 7584
Geraldton Radio & TV Service	26 Anzac Terrace	GERALDTON	6530	(08)99 64 2777	(08)99 64 2776
Oz West Electronics	6/200 Winton Road	JOONDALUP	6027	(08)93 00 1066	
Printek Electronics	1 Lesueur Drive	JURIEN BAY	6516	(08)96 52 1664	(08)96 52 1664
Kalgoorlie Electronics	395 Hannan Street	KALGOORLIE	6430	(08)90 21 1420	(08)90 21 1420
J & P Electronics	3/88 Albany Hwy	KOJONUP	6395	(08)98 31 1991	(08)98 31 1991
Tuckerbox Retravision	White Gum Street/P.O. BOX 941	KUNUNNURRA	6743	(08)91 68 1100	(08)91 68 2491
Waytec Electronics	Unit 3, 10 Thornborough Road	MANDURAH	6210	(08)95 82 0882	(08)95 82 0352
Manjimup TV Service	88 Giblett Street / P.O. BOX 370	MANJUMUP	6258	(08)97 71 1598	(08)97 72 4025
Chris's TV & Satelite	66 Barrack Street	MERREDIN	6415	(08)90 41 1484	(08)90 41 1484
G & J Suckling Radio & TV	1 Hale Street	NARROGIN	6312	(08)98 81 2148	(08)98 81 3129
Proton	21A Charles Street	NORTHAM	6401	(08)96 22 3168	(08)96 22 3168
<b>TEAC Perth Service Centre</b>	<b>273 Great Eastern Highway</b>	<b>BELMONT</b>	<b>6104</b>	<b>(08)94 79 6499</b>	<b>(08)94 79 6544</b>
Charles Hunt Electronics	25 Brodie Court	BALDIVIS	6171	(08)63 63 5593	(08)95 24 2890

Please find a more up to date list on our website [www.teac.com.au](http://www.teac.com.au)

**TEAC<sup>®</sup>**

TEAC CUSTOMER CARE CENTRE (TCCC)

Free call: 1800 656 700

Between Monday to Friday – EST 9AM to 5PM