 



SC30764


**•** SC30764-100




4. Using the correct length hardware, mount the rails to the TV or LCD panel. Determine the amount of tilt you need before tightening.

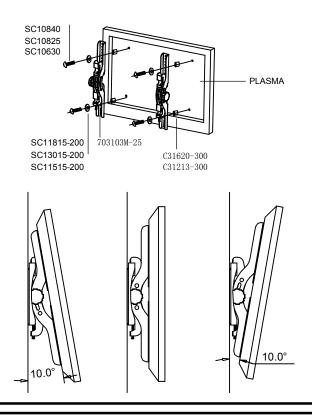

5. Mount the plate to the arm assembly. Level the plate and tighten the mounting hardware.

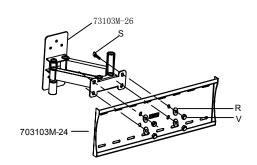


6. Put the TV or LCD panel onto the plate using the hooks. Once positioned, tighten the lower screws shown to lock the rails into place.

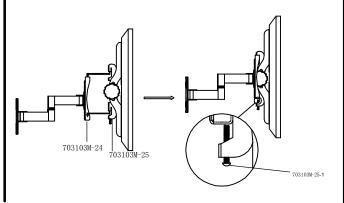

## WARNING:

- It is not recommended to use this mount on hollow walls. Always mount to concrete, brick or wall studs.
- 2. Do not over tighten the mounting hardware.
- Completely remove the the TV or LCD panel before loosening any of the mounting screws.
- 4. For added security, always use the included Allen wrench to tighten the hardware by hand.

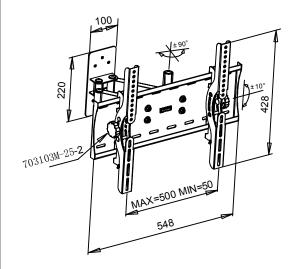

The viewing angle can be adjusted by loosen or tighten 703103M-25-2.