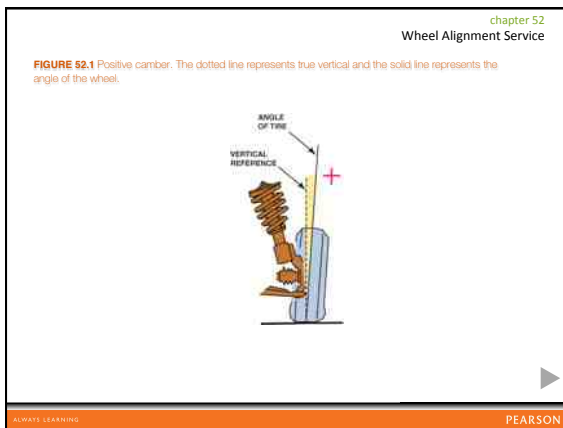







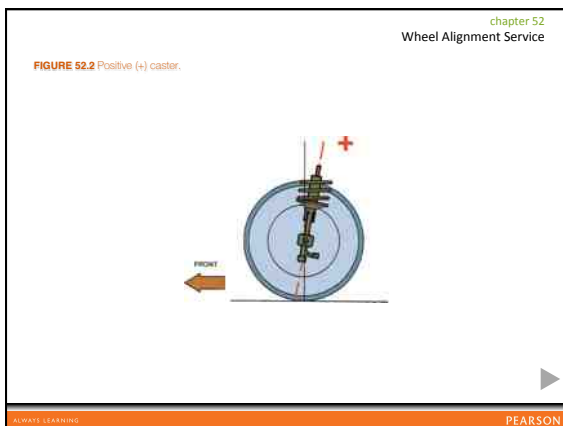



FIGURE 52.3 Toe-in, also called positive (+) toe.

 

ALWAYS LEARNING

PEARSON


FIGURE 52.4 Typical tire wear chart as found in a service manual. Abnormal tire wear usually indicates a fault in a steering or suspension component that should be corrected or replaced before an alignment is performed.

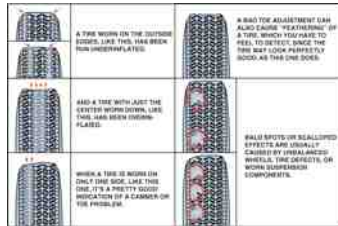

ALWAYS LEARNING

PEARSON

 FIGURE 52.5 Measuring points for ride (trim) height vary by manufacturer.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.6 Measuring to be sure the left and right sides of the vehicle are of equal height. If this measurement is not equal side to side by as little as 1/8 inch (3 mm), it can affect the handling of the vehicle.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.7 The bulge in this tire was not noticed until it was removed from the vehicle as part of a routine brake inspection. After replacing this tire, the vehicle stopped pulling and vibrating.




ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.8 Equal outer CV joint angles produce equal steer torque (toe-in). If one side receives more engine torque, that side creates more toe-in and the result is a pull toward one side, especially during acceleration.

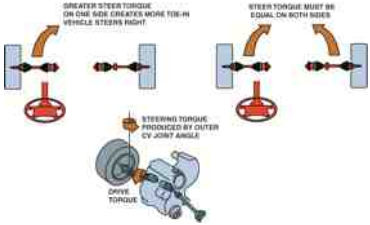

ALWAYS LEARNING

PEARSON

FIGURE 52.9 Broken or defective engine or transaxle mounts can cause the powertrain to sag, causing unequal drive axle shaft CV joint angles.



ALWAYS LEARNING

PEARSON

CHART 52.1

FRACTIONS	DECIMAL DEGREES	MINUTES-SECONDS
1/4"	0.25°	0°15'
1/2"	0.50°	0°30'
3/4"	0.75°	0°45'
1"	1.0°	1° or 60'

CHART 52-1

Conversion chart for switching from fractional inches to decimal degrees or minutes and seconds.

ALWAYS LEARNING

PEARSON

FIGURE 52.10 This alignment chart indicates the preferred setting with a plus or minus tolerance.

WHEEL ALIGNMENT SPECIFICATIONS					
	DRIVER'S CAMBER	DRIVER'S CASTER	DRIVER'S CROSS Camber	DRIVER'S TOTAL DR. DEGREES	STEERING WHEEL ANGLE
FRONT	+0° to 0.5°	+0° to 0.5°	+0.5° to 1.0°	+0° to 0.5°	+0° to 0.5°
REAR	+0° to 0.5°	+0° to 0.5°	+0.5° to 1.0°	+0° to 0.5°	+0° to 0.5°

ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.11 Using the alignment rack hydraulic jacks, raise the tires off the rack so that they can be rotated as part of the compensating process.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.12 An optical-type wheel sensor. Compensation is achieved by simply rolling the vehicle backward and forward.




ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.13 If toe for an oversize tire is set by distance, the toe angle will be too small. Toe angle is the same regardless of the size.

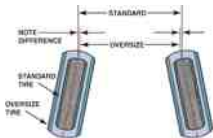

ALWAYS LEARNING

PEARSON


FIGURE 52.14 The protractor scale on the front turn plates allows the technician to test the turning radius by turning one wheel to an angle specified by the manufacturer and observing the angle of the other front wheel. Most newer alignment machines can display turning angle based on sensor readings, and therefore the protractor scale on the turn plate is not needed or used.



FIGURE 52.15 By checking the SAI, camber, and included angle, a damaged suspension component can be determined by using this chart.


STANDARD, CARRIER AND INCLUDED RISKS			
BUS AND STRUCTURE DISPOSITIONS			
S&I	CARRIER	INCLUDED RISKS	DISPOSITIONS
General liability	Commercial general liability	Auto liability	Auto liability coverage
Auto liability	Commercial auto liability	Auto liability	Auto liability coverage
Workers compensation	Commercial workers compensation	Workers compensation	Workers compensation coverage
Professional liability	Commercial professional liability	Professional liability	Professional liability coverage
Umbrella liability	Commercial umbrella liability	Umbrella liability	Umbrella liability coverage
Directors and officers liability	Commercial directors and officers liability	Directors and officers liability	Directors and officers liability coverage
Health and dental	Commercial health and dental	Health and dental	Health and dental coverage
Life insurance	Commercial life insurance	Life insurance	Life insurance coverage
Disability insurance	Commercial disability insurance	Disability insurance	Disability insurance coverage
Retirement plan	Commercial retirement plan	Retirement plan	Retirement plan coverage
Other insurance	Commercial other insurance	Other insurance	Other insurance coverage
FINANCIAL DISPOSITIONS			
S&I	CARRIER	INCLUDED RISKS	DISPOSITIONS
General liability	Commercial general liability	Auto liability	Auto liability coverage
Auto liability	Commercial auto liability	Auto liability	Auto liability coverage
Workers compensation	Commercial workers compensation	Workers compensation	Workers compensation coverage
Professional liability	Commercial professional liability	Professional liability	Professional liability coverage
Umbrella liability	Commercial umbrella liability	Umbrella liability	Umbrella liability coverage
Directors and officers liability	Commercial directors and officers liability	Directors and officers liability	Directors and officers liability coverage
Health and dental	Commercial health and dental	Health and dental	Health and dental coverage
Life insurance	Commercial life insurance	Life insurance	Life insurance coverage
Disability insurance	Commercial disability insurance	Disability insurance	Disability insurance coverage
Retirement plan	Commercial retirement plan	Retirement plan	Retirement plan coverage
Other insurance	Commercial other insurance	Other insurance	Other insurance coverage
PROPERTY AND CASUALTY DISPOSITIONS			
S&I	CARRIER	INCLUDED RISKS	DISPOSITIONS
General liability	Commercial general liability	Auto liability	Auto liability coverage
Auto liability	Commercial auto liability	Auto liability	Auto liability coverage
Workers compensation	Commercial workers compensation	Workers compensation	Workers compensation coverage
Professional liability	Commercial professional liability	Professional liability	Professional liability coverage
Umbrella liability	Commercial umbrella liability	Umbrella liability	Umbrella liability coverage
Directors and officers liability	Commercial directors and officers liability	Directors and officers liability	Directors and officers liability coverage
Health and dental	Commercial health and dental	Health and dental	Health and dental coverage
Life insurance	Commercial life insurance	Life insurance	Life insurance coverage
Disability insurance	Commercial disability insurance	Disability insurance	Disability insurance coverage
Retirement plan	Commercial retirement plan	Retirement plan	Retirement plan coverage
Other insurance	Commercial other insurance	Other insurance	Other insurance coverage

FIGURE 52.16 In this example, both SAI and camber are far from being equal side to side. However, both sides have the same included angle, indicating that the frame may be out of alignment. An attempt to align this vehicle by adjusting the camber on both sides with either factory or aftermarket kits would result in a totally incorrect alignment.

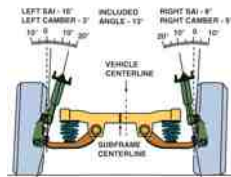

chapter 52
Wheel Alignment Service

FIGURE 52.17 This is the same vehicle as shown in Figure 52-16, except now the frame (cradle) has been shifted over and correctly positioned. Notice how both the SAI and camber become equal without any other adjustments necessary.

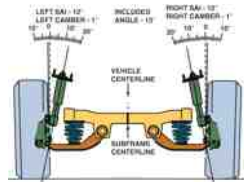


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.18 Geometric-centerline-type alignment sets the front toe readings based on the geometric centerline of the vehicle and does not consider the thrust line of the rear wheel toe angles.

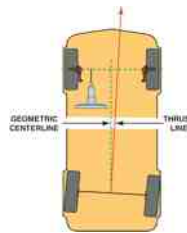


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service


FIGURE 52.19 Thrust line alignment sets the front toe parallel with the rear-wheel toe.

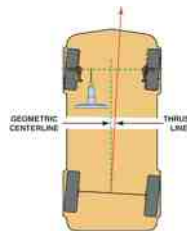

ALWAYS LEARNING

PEARSON

FIGURE 52.20 Four-wheel alignment corrects for any rearwheel toe to make the thrust line and the geometric centerline of the vehicle both the same.

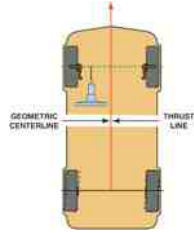

ALWAYS LEARNING

PEARSON


FIGURE 52.21 The rear camber is adjustable on this vehicle by rotating the eccentric cam and watching the alignment machine display.



ALWAYS LEARNING

PEARSON

FIGURE 52.22 Some vehicles use a threaded fastener similar to a tie rod to adjust camber on the rear suspension.

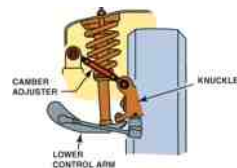


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.23 Aftermarket alignment parts or kits are available to change the rear camber.

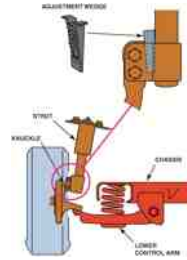


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.24 Full-contact plastic or metal shims can be placed between the axle housing and the brake backing plate to change rear camber, toe, or both.

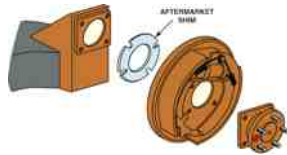


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.25 The rear toe was easily set on this vehicle. The adjusting nuts were easy to get to and turn. Adjusting rear toe is not this easy on every vehicle.

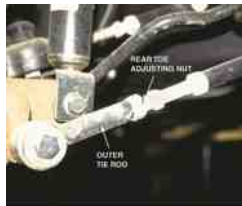


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.26 By moving various rear suspension members, the rear toe can be changed.

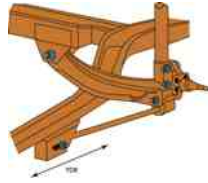


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

 FIGURE 52.27 The use of these plastic or metal shims requires that the rear wheel as well as the hub assembly and/or backing plate be removed. Proper torque during reassembly is critical to avoid damage to the shims.




ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.28 Many struts allow camber adjustment at the strut-to-knuckle fasteners. Here a special tool is being used to hold and move the strut into alignment with the fasteners loosened. Once the desired camber angle is achieved, the strut nuts are tightened and the tool is removed.

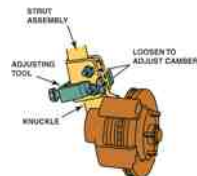

ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.29 Some struts require modification of the upper mount for camber adjustment.

ELONGATE HOLE
STRUT TOWER
TOP STRUT MOUNT

ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.30 An example of the many methods that are commonly used to adjust front caster and camber.

ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

FIGURE 52.31 If there is a nut on both sides of the strut rod bushing, then the length of the rod can be adjusted to change caster.


LENGTHEN OR SHORTEN STRUT ROD TO CORRECT CASTER
FRONT WHEEL

ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.32 Placing shims between the frame and the upper control arm pivot shaft is a popular method of alignment for many SLA suspensions. Both camber and caster can be easily changed by adding or removing shims.

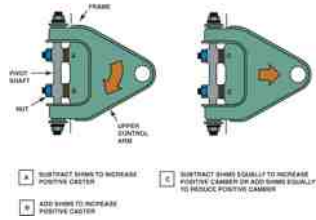

ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.33 The general rule of thumb is that a 1/8 inch shim added or removed from both shim locations changes the camber angle about 1/2 degree. Adding or removing a 1/8 inch shim from one shim location changes the caster by about 1/4 degree.




ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.34 Some SLA-type suspensions use slotted holes for alignment angle adjustments. When the pivot shaft bolts are loosened, the pivot shaft is free to move unless held by special clamps as shown. By turning the threaded portion of the clamps, the camber and caster can be set and checked before tightening the pivot shaft bolts.

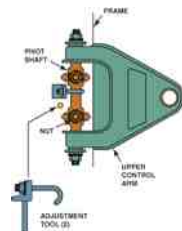

ALWAYS LEARNING

PEARSON

FIGURE 52.35 When the nut is loosened and the bolt on the eccentric cam is rotated, the upper control arm moves in and out. By adjusting both eccentric cams, both camber and caster can be adjusted.

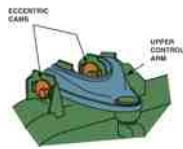


FIGURE 52.36 Typical shim alignment chart. As noted, 1/8 inch (0.125) shims can be substituted for the 0.120 inch shims; 1/32 inch (0.0625) shims can be substituted for the 0.060 inch shims; and 1/32 inch (0.03125) shims can be substituted for the 0.030 inch shims.

[illegible]

1. **Define the problem.** The problem is to determine the optimal solution to the problem of finding the shortest path from a source node to a destination node in a weighted graph.
2. **Formulate the problem as a graph.** The graph is a directed graph with nodes representing locations and edges representing roads. The weight of each edge is the distance between the two locations.
3. **Choose a starting node.** The starting node is the source node, which is the node from which the journey begins.
4. **Choose a goal node.** The goal node is the destination node, which is the node to which the journey ends.
5. **Find the shortest path.** The shortest path is the path from the source node to the destination node with the minimum total weight.


[illegible]

FIGURE 52.37 Many procedures for setting toe specify that the steering wheel be held in the straight-ahead position using a steering wheel lock, as shown. One method recommended by Hunter Engineering sets toe without using a steering wheel lock.



chapter 52
Wheel Alignment Service

FIGURE 52.38 Adjusting toe by rotating the tie rod on a vehicle equipped with rack-and-pinion steering.

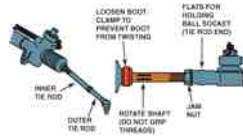


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.39 Toe is adjusted on a parallelogram-type steering linkage by turning adjustable tie rod sleeves. Special tie rod sleeve adjusting tools should be used that grip the slot in the sleeve and will not crush the sleeve while it is being rotated.

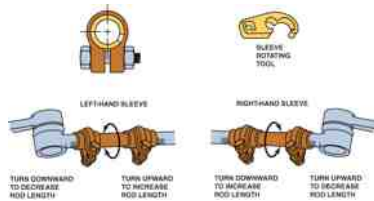

ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.40 Special tie rod adjusting tools should be used to rotate the tie rod adjusting sleeves. The tool grips the slot in the sleeve and allows the service technician to rotate the sleeve without squeezing or damaging the sleeve.



ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.41 Most vehicles have alignment marks made at the factory on the steering shaft and steering wheel to help the service technician keep the steering wheel in the center position.




ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

FIGURE 52.42 A puller being used to remove a steering wheel after the steering wheel retaining nut has been removed.

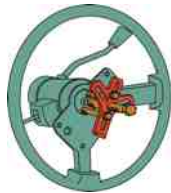


ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

 FIGURE 52.43 The toe-in on the right wheel creates a turning force toward the right.



ALWAYS LEARNING

PEARSON

FIGURE 52.44 An aftermarket camber shim can be added to change the front camber on this Honda.



ALWAYS LEARNING

PEARSON

FIGURE 52.45 An aftermarket kit for this Ford is installed at the top of the strut tower and allows more camber and caster adjustment than is possible with the factory adjustment.



ALWAYS LEARNING

PEARSON

FIGURE 52.46 A typical tire temperature pyrometer. The probe used is a needle that penetrates about 1/4 inch (7 mm) into the tread of the tire for most accurate readings.




ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

 FIGURE 52.47 Jig holes used at the assembly plant to locate suspension and drivetrain components. Check service information for the exact place to measure and the specified dimensions when checking for body or frame damage.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.1 Begin the alignment procedure by first driving the vehicle onto the alignment rack as straight as possible.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.2 Position the front tires in the center of the turn plates. These turn plates can be moved inward and outward to match a vehicle of any width.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.3 Raise the vehicle and position the alignment rack following the rack manufacturer's instructions.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.4 Check and adjust tire pressures and perform the pre alignment checks necessary to be assured of proper alignment.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.5 Select the exact vehicle on the alignment machine.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.6 Securely mount the alignment heads or target wheels.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.7 If mounting a transmitter-type alignment head, be sure to attach the retaining wire to the tire valve.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.8 After installation of the heads, follow the specified procedure for compensation, which allows accurate alignment readings.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.9 Rolling compensation is used on machines that use lasers and wheel targets.



Rolling Compensation
Adjust the laser in the left corner and the right corner.
Adjust the laser in the right corner and the left corner.
Adjust the laser in the left corner and the right corner.
Adjust the laser in the right corner and the left corner.
Adjust the laser in the left corner and the right corner.
Adjust the laser in the right corner and the left corner.

ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.10 An alignment reading is displayed even though caster has not yet been measured. The readings marked in red indicate that they are not within specifications.



Left Right
Caster 0.0 0.0
Camber 0.0 0.0
Toe 0.0 0.0
Steering Axis Inclination 0.0 0.0
Sway Bar Link Angle 0.0 0.0
Sway Bar Link Angle 0.0 0.0
Sway Bar Link Angle 0.0 0.0
Sway Bar Link Angle 0.0 0.0
Sway Bar Link Angle 0.0 0.0
Sway Bar Link Angle 0.0 0.0

ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.11 Before performing a caster sweep, install a brake pedal depressor to keep the front wheels from rotating when the steering wheel is turned.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.12 Perform the caster sweep by turning the front wheels inward, and then outward following the instructions on the screen.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.13 Most alignment machines will display where to make the alignment correction and will often include drawings and live action videos that show the procedure.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.14 The rear toe is being adjusted by rotating the eccentric cam on the lower control arm while watching the display.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.15 The alignment machine display indicates that front caster is not a factory-adjustable angle.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.16 Adjusting the front toe on this vehicle involves loosening the jam nut (left wrench) and rotating the tie rod using the right wrench.



ALWAYS LEARNING

PEARSON

chapter 52

Wheel Alignment Service

UNFIGURE 52.17 One last adjustment of the left front toe is needed to achieve a perfect alignment. The final alignment reading can be printed and attached to the work order.



ALWAYS LEARNING

PEARSON

chapter 52
Wheel Alignment Service

UNFIGURE 52.18 After disconnecting all of the attachments, reinstalling the valve caps, and removing the steering wheel holder, the vehicle should be test-driven to check for proper alignment before returning it to the customer.



ALWAYS LEARNING

PEARSON
