


SUBJECT: VL2000™ MCB Jumper Settings	SERIES: 2000
DISTRIBUTION: Service Centers, End Users	STATUS: Routine

Introduction

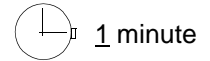

Purpose

When installing a new Main Controller PCB Assembly (MCB), the jumper at J11 must be configured according to the luminaire type.

This technical bulletin provides guidelines for setting this jumper. (For additional information on the Main Controller PCB Assembly replacement, refer to the appropriate Series 2000™ service manual.)

Procedures

Identifying MCB Jumpers

The Main Controller Board (MCB) contains two blue jumpers.

Programming Jumper - J1 (For Vari-Lite engineering use.)

The jumper at J1 is necessary and must be in the correct position in order for the luminaire to operate. Do not change the configuration of jumper J1.

(Figure 1).

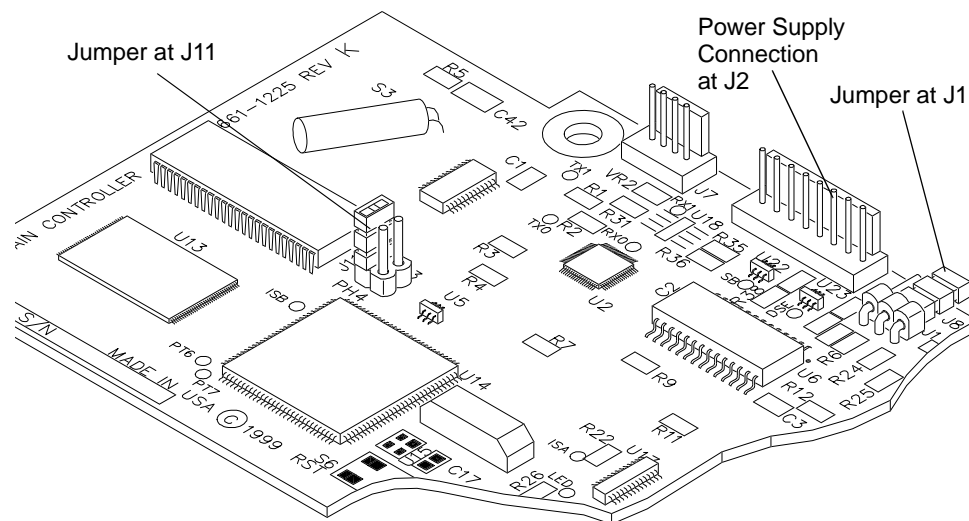


Figure 1: Jumper Locations on MCB

Luminaire Type Jumper - J11

The jumper at J11 configures the luminaire type between VL220X and VL2402™ luminaires. For VL220X or VL241X luminaires, it is fitted to non-active pins. (This inactive setting is the default or shipping configuration.) For VL2402 luminaires, it is fitted to the active pins.

Power Supply Connection - J2

The power supply connection at J2 sets the luminaire type according to the power supply output. (VL2416™ luminaire- 1200W, VL2201™ luminaire- 400W, VL2202™ luminaire and VL2402 luminaire- 700W). If the power selection setting and the luminaire type setting jumper (J11) do not correspond, the luminaire will not operate properly.

How Software Checks Jumper Positions

The luminaire software checks the jumper position and if it is incorrect for the luminaire type then the WRNG SW PROG message will appear. This message indicates an incorrect combination of jumper setting and software. The luminaire will not calibrate in this condition.

Jumper Configuration

To configure jumper:

Determine which type luminaire the MCB is to be installed in, and configure jumper according to **Figure 2**.

Note: If luminaire will not calibrate or operate after MCB replacement, check jumper setting and download new software.

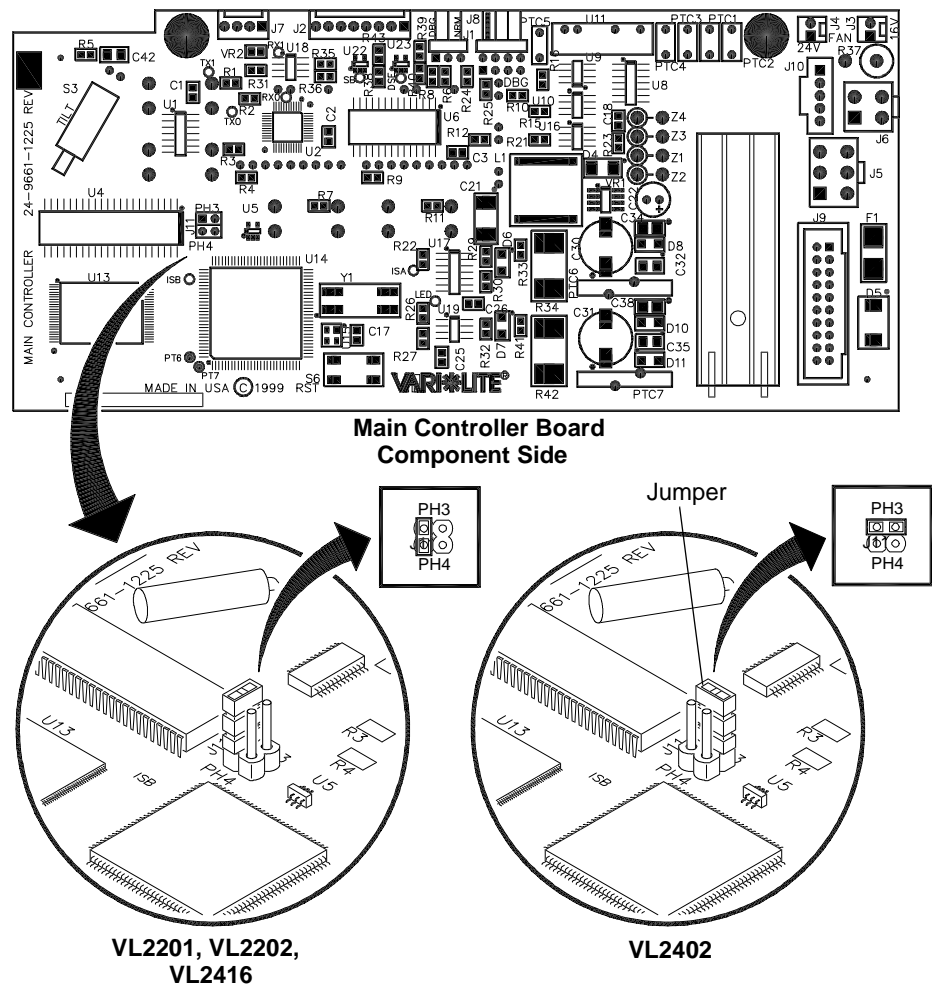


Figure 2: MCB Jumper Configuration.

(This page intentionally blank.)