ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

Honda Civic (2 Door) 1996-2000

To ensure proper installation of the window regulator assembly you should ensure that the window is properly aligned within the window glass run channels.

STEP 1: After installation of the window regulator assembly, raise the window glass as far up as possible and hold it against the window glass run channel.


STEP 2: Loosen, but do not remove, the window regulator roller guide hardware, then adjust the window glass to ensure that it is parallel to the top window glass run channel.


STEP 3: With the window glass parallel to the top window glass run channel, proceed to tighten the window regulator assembly roller guide bolts.

STEP 4: Loosen, but do not remove, the front window glass run channel mounting bolt at the bottom of the channel.

STEP 5: Lower the window glass.

STEP 6: Push the front window glass run channel against the window glass, and then tighten the hardware.

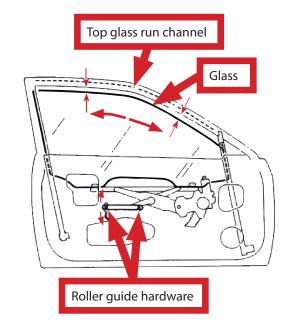

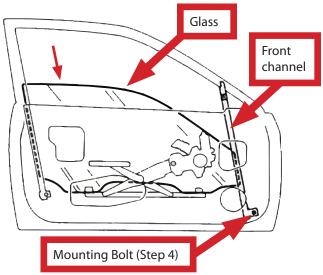

STEP 7: Actuate the window regulator assembly completely up and down to ensure the window glass moves smoothly within the window glass run channels.

Be sure to check for gaps and to ensure that the weather-stripping did not fold underneath the window glass at any point of the window glass run channels.

Failure to do so can result in the window popping out of the window glass run channels or can add additional resistance on the window regulator assembly.

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.