
System User Manual

AKC 55 Rack Controller

This User's Manual contains installation, start-up, and operating instructions for all parts of the Danfoss AKCESS System. Use the Table of Contents to find the section you need right now. You'll probably find it useful later to browse through the entire manual.

Additional copies are available from your Danfoss Representative or from the Danfoss Automatic Controls Literature Department.

At Danfoss, continuous improvement to documentation goes hand-in-hand with the product refinement and quality for which Danfoss is world famous. We welcome your suggestions for additions or improvements to any of our manuals or other literature. Please address your comments to:

DANFOSS Inc.
Literature Department
7941 Corporate Drive
Baltimore, MD 21236
Telephone:(410) 931-8250
FAX:(410) 931-8256

Copyright © 1999, 2003, 2004 Danfoss Inc.

Contents

CHAPTER 1 Introduction

| | |
|--|-----|
| Overview of the AKCESS Network | 1-1 |
| System Capacities | 1-2 |
| System Components | 1-4 |
| AKA 65 Network Supervisor Software | 1-4 |
| AKC 55 Controller | 1-4 |
| Input and Output Boards | 1-5 |
| RO8 Relay Output Board | 1-5 |
| RO8S Relay Output Board with Override Switches | 1-5 |
| OI8 & OIL8 On-Off Input Boards | 1-5 |
| SI8 Sensor Input Board | 1-6 |
| VO2 Variable Output Board | 1-6 |
| OVR Override Box | 1-7 |
| OAB-1 Office Alarm Box | 1-7 |
| AKC 164 Smart Case Controllers | 1-8 |

CHAPTER 2 Control Network Layout

| | |
|------------------------------------|-----|
| Overview of the Host Network | 2-1 |
| Overview of the I/O Network | 2-2 |

CHAPTER 3 Installing and Setting Up the Components

| | |
|---|------------|
| Chapter 3 - 1 Installing an AKC 55 Controller | 3-1 to 3-9 |
|---|------------|

| | |
|--|------------|
| AKC 55 with Enclosure | 3-1 to 3-5 |
| Mounting | 3-1 |
| AKC 55 Addressing | 3-2 |
| CPU Battery Enable | 3-2 |
| Modem Installation | 3-3 |
| Telephone Line Installation | 3-3 |
| Ethernet Adapter Connection | 3-3 |
| Host Network Cabling & Termination | 3-4 |
| I/O Network Cabling & Termination | 3-5 |
| Power Wiring | 3-5 |
| AKC 55 Installer Final Inspection | 3-6 |

| | |
|--------------------------|-------------|
| AKC 55 Panel Mount | 3-7 to 3-11 |
|--------------------------|-------------|

| | |
|--|----------|
| Mounting | 3-7 |
| AKC 55 Addressing | 3-7 |
| CPU Battery Enable | 3-7, 3-8 |
| Modem Installation | 3-8 |
| Telephone Line Installation | 3-8 |
| Ethernet Adapter Connection | 3-8 |
| Host Network Cabling & Termination | 3-9 |
| I/O Network Cabling & Termination | 3-10 |
| Power Wiring | 3-10 |
| AKC 55 Installer Final Inspection | 3-11 |

Contents (continued)

| | | |
|--|---|-------------------|
| Chapter 3 - 2 Installing I/O Network Boards: | Power Supplies, Enclosures, and Alternative Mounting | 3-12, 3-13 |
| Load Factors and Power Supplies | 3-12 | |
| The IOPS Power Supply | 3-12 | |
| The IOPS2 Power Supply | 3-13 | |
| The IOPSWM Power Supply | 3-13 | |
| IO4R and IO12 Enclosures | 3-13 | |
| Alternative Mounting for I/O Boards | 3-13 | |
| Chapter 3 - 3 Installing RO8 and RO8S Relay Output Boards | 3-14 to 3-16 | |
| RO8 and RO8S Description and Identification | 3-14 | |
| RO8 and RO8S Mounting | 3-14 | |
| RO8 and RO8S Addressing | 3-15 | |
| RO8 and RO8S Network Connections | 3-15 | |
| RO8 and RO8S Controlled Load Connections | 3-16 | |
| RO8 and RO8S Power Connections | 3-16 | |
| Inspection of the Installed RO8 or RO8S | 3-16 | |
| Chapter 3 - 4 Installing OI8 and OIL8 On-Off Input Boards | 3-17 to 3-19 | |
| OI8 and OIL8 Description and Identification | 3-17 | |
| OI8 and OIL8 Mounting | 3-17 | |
| OI8 and OIL8 Addressing | 3-17, 3-18 | |
| OI8 and OIL8 Network Connections | 3-18 | |
| OI8 and OIL8 Monitored Load Connections | 3-18 | |
| OI8 and OIL8 Power Connections | 3-19 | |
| Inspection of the Installed OI8 or OIL8 | 3-19 | |
| Chapter 3 - 5 Installing SI8 Sensor Input Boards | 3-20 to 3-24 | |
| SI8 Description and Identification | 3-20 | |
| SI8 Mounting | 3-20 | |
| SI8 Addressing | 3-20 | |
| SI8 Network Connections | 3-21 | |
| SI8 Sensor Connections | 3-21 | |
| Setting Up and Connecting Compressor Current Sensors | 3-21, 3-22 | |
| SI8 Sensors: Types of Sensors | 3-23 | |
| Sensors from Other Manufacturers | 3-24 | |
| SI8 Power Connections | 3-24 | |
| Inspection of the Installed SI8 | 3-24 | |
| Chapter 3 - 6 Installing VO2 Analog Output Boards | 3-25 to 3-27 | |
| VO2 Description and Identification | 3-25 | |
| VO2 Mounting | 3-25 | |
| VO2 Addressing | 3-25 | |
| VO2 Network Connections | 3-26 | |
| VO2 Controlled Load Connections | 3-26 | |
| VO2 Power Connections | 3-26 | |
| Inspection of the Installed VO2 | 3-27 | |

Contents (continued)

| | |
|--|---------------------|
| Chapter 3 - 7 Installing RTC Rooftop Controllers | 3-28 to 3-31 |
| RTC Description | 3-28 |
| RTC Capabilities and Capacities | 3-28, 3-29 |
| RTC Mounting | 3-29 |
| RTC Addressing | 3-29 |
| RTC Network Connections | 3-30 |
| RTC Sensor Connections | 3-30 |
| RTC On/Off Input Connections | 3-31 |
| RTC Relay Output Connections | 3-31 |
| RTC Power Connections | 3-31 |
| Inspection of the Installed RTC | 3-31 |
| Chapter 3 - 8 Installing AKC 164SC Smart Case Controllers | 3-32 to 3-42 |
| AKC 164 SC Description and Identification | 3-32 |
| AKC 164 SC Mounting | 3-32 |
| AKC 164 SC Addressing | 3-33 |
| AKC 164 SC Network Connections | 3-33 |
| AKC 164 SC Sensor Connections | 3-34 |
| AKC 164 SC Temperature Sensor Mounting Locations, Liquid Side Control | 3-35 |
| AKC 164 SC Drain Sensor Location and Mounting | 3-36 |
| AKC 164 SC AKV 10 and AKV 15 Valve Connection | 3-36 |
| AKC 164 SC Temperature Sensor Mounting Locations, Suction Side Control | 3-37 |
| AKC 164 SC Power Module (PM 164) Connection | 3-38 |
| AKC 164 SC Controlled Load Connections (Lights, Fans, and Anti-sweats) | 3-38 |
| AKC 164 SC Defrost Module (DF 164) Connection | 3-39 |
| AKC 164 SC Controlled Load Connections (Defrost) | 3-39 |
| AKC 164 SC Typical Connection Diagram | 3-40 |
| AKC 164 SC KVQ Electronic Evaporator Pressure Regulating Valve Connections | 3-41 |
| AKC 164 SC Multi-Purpose Input Connections | 3-41 |
| AKC 164 SC Power Connections | 3-42 |
| Inspection of the Installed AKC 164 SC | 3-42 |
| Chapter 3 - 9 Installing an OVR Override Box | 3-43 to 3-45 |
| OVR Description and Identification | 3-43 |
| OVR Mounting | 3-43 |
| OVR Addressing | 3-44 |
| OVR Network Connections | 3-44 |
| OVR Power Connections | 3-44 |
| Inspection of the Installed OVR | 3-45 |
| Chapter 3 - 10 Installing an OAB-1 Office Alarm Box | 3-46, 3-47 |
| OAB-1 Description and Identification | 3-46 |
| OAB-1 Mounting | 3-46 |
| OAB-1 Network and Power Connections | 3-47 |
| Inspection of the Installed OAB-1 | 3-47 |

Contents (continued)

CHAPTER 4 Initial Configuration of an AKC 55

| | |
|--|--------------|
| Introduction to Configuration | 4-1 |
| Check battery | 4-1 |
| Authorization codes | 4-1 |
| Selection of Units and Languages | 4-2 |
| Chapter 4 - 1 Configuring Refrigeration 4-3 to 4-21 | |
| Starting with a Partially Configured AKC 55 | 4-3 |
| Starting with a Completely Un-configured AKC 55 | 4-4 |
| Navigation and making changes, entering numerals, entering labels | 4-4 |
| Constrained fields | 4-4 |
| Selecting from list boxes | 4-5 |
| Rack Info configuration 4-5 to 4-6 | |
| Adding a rack | 4-4 |
| Suction Info Configuration 4-6 to 4-9 | |
| Two-stage systems and de-superheaters | 4-9 to 4-10 |
| Compressor Configuration 4-10 to 4-15 | |
| Additional compressors in a suction group | 4-12 |
| Compressor oil and safety information | 4-12 |
| Neutral Zone control | 4-13 to 4-14 |
| Compressor capacity staging patterns | 4-14 |
| Evaporator configuration 4-15 to 4-24 | |
| Case lights button (Case lights override) | 4-16 to 4-17 |
| AKC 55 subcooling circuits | 4-17 to 4-18 |
| AKC 55 refrigeration circuits | 4-18 to 4-21 |
| Defrost | 4-22 to 4-23 |
| Shutdown schedules | 4-23 |
| Evaporator alarms | 4-23 to 4-24 |
| Condenser configuration 4-24 to 4-36 | |
| Aircooled condensers | 4-25 to 4-31 |
| Split condensers | 4-29 to 4-30 |
| Reaction zone and time | 4-30 |
| Enviroguard systems | 4-30 to 4-31 |
| Evaporative condensers | 4-31 to 4-36 |
| Pump, louver, and sump settings | 4-34 |
| Inverter settings; freeze protection; dump valve | 4-34 to 4-36 |
| Receiver configuration 4-36 to 4-37 | |
| Heat reclaim configuration 4-37 to 4-38 | |
| Alarms configuration for refrigeration 4-38 to 4-40 | |
| Alarm levels | 4-39 |
| What You Can Change in a Standard Alarm | 4-39 |
| System alarms | 4-40 |
| Board & Points configuration 4-40 to 4-51 | |
| Relay Outputs (DIGITAL OUTPUTS) | 4-40 to 4-41 |
| Sensor Inputs (ANALOG INPUTS) | 4-41 to 4-43 |
| On-off Inputs (DIGITAL INPUTS) | 4-43 to 4-44 |
| Variable Outputs (ANALOG OUTPUTS) | 4-45 |

Contents (continued)

| | |
|--|---------------------|
| Board & Points configuration (continued) | 4-40 to 4-51 |
| Other controllers (AKC 16x, EKC, DegreeMaster, VLT and AKD drives, DCU | 4-45 to 4-51 |
| AKC 16x circuit board & points | 4-46, 4-47 |
| Network re-scan and initialization | 4-47 |
| Navigation | 4-47 |
| EKC circuits board & points | 4-47 to 4-49 |
| Network re-scan and initialization | 4-48 |
| Wink (EKC) | 4-49 |
| Degree Master board & points | 4-49, 4-50 |
| Locate procedure | 4-50 |
| Activating the service pin from the display | 4-50 |
| Initialization | 4-50 |
| Wink (Degree Master) | 4-50 |
| VLT and AKD drives board & points | 4-4, 4-5 |
| DCU circuits board & points (SECTION TO BE ADDED) | 4-51 |
| Chapter 4 - 2 Configuring HVAC | 4-52 to 4-97 |
| Introduction to HVAC Configuration | 4-52, 4-53 |
| RTU Configuration | 4-53 to 4-64 |
| RTU fan configuration | 4-53, 4-55 |
| RTU cooling configuration | 4-55 to 4-57 |
| RTU heating configuration | 4-57 to 4-61 |
| Analog valve strategy | 4-60, 4-61 |
| RTU dehumidification configuration | 4-61 to 4-63 |
| RTU air damper configuration | 4-63, 4-64 |
| RTU alarms configuration | 4-64 |
| RTU board & points | 4-64 |
| AHU Configuration | 4-65 to 4-69 |
| AHU fan configuration | 4-65 to 4-67 |
| AHU outside air coil configuration | 4-67 to 4-69 |
| RTC Configuration | 4-69 to 4-82 |
| RTC fan configuration | 4-69 to 4-71 |
| RTC cooling configuration | 4-71 to 4-72 |
| RTC dehumidification configuration | 4-74, 4-75 |
| RTC air damper configuration | 4-75 to 4-77 |
| RTC schedules | 4-77 |
| RTC alarm configuration | 4-77 |
| RTC I/O points configuration | 4-77 to 4-82 |
| Configuring RTC relay outputs (RTC DIGITAL OUTPUTS) | 4-78 |
| Configuring RTC sensor inputs (RTC ANALOG INPUTS) | 4-78 to 4-79 |
| Configuring RTC on-off inputs (RTC DIGITAL INPUTS) | 4-79 to 4-80 |
| Configuring RTC variable outputs (RTC ANALOG OUTPUTS) | 4-80 to 4-81 |
| RTC address and init | 4-81, 4-82 |
| ClimaTECH configuration | 4-82 to 4-91 |
| ClimaTECH fan configuration | 4-83, 4-84 |
| ClimaTECH cooling configuration | 4-84 |
| ClimaTECH heating configuration | 4-84 to 4-86 |
| ClimaTECH dehumidification configuration | 4-86 |
| ClimaTECH economizer configuration | 4-87 |
| ClimaTECH alarm configuration | 4-87 |
| ClimaTECH schedule configuration | 4-88 |
| ClimaTECH I/O configuration | 4-88 to 4-90 |
| ClimaTECH relay output configuration (ClimaTECH DIGITAL OUTPUTS) | 4-88 |

Contents (continued)

| | |
|---|-----------------------|
| ClimaTECH sensor input configuration (ClimaTECH ANALOG INPUTS) | 4-89 |
| ClimaTECH on-off input configuration (ClimaTECH DIGITAL INPUTS) | 4-90 |
| ClimaTECH address and init | 4-90, 4-91 |
| Uploading to the AKC 55 | 4-91 |
| | |
| Seasons Smart Coil HVAC unit configuration..... | 4-91 to 4-97 |
| Beginning configuration | 4-91 to 4-92 |
| SC4 cooling configuration..... | 4-93, 4-94 |
| SC4 heating configuration..... | 4-94, 4-95 |
| SC4 dehumidification configuration | 496, 4-97 |
| SC4 condenser configuration | 4-97 |
| SC4 alarms configuration | 4-97 |
| SC4 board & points configuration | 4-97 |
| | |
| Chapter 4 - 3 Configuring Lighting | 4-97 to 4-102 |
| Introduction to lighting configuration | 4-97, 4-98 |
| AKC 55 lighting zone setup | 4-98 to 4-101 |
| Lighting board & points configuration | 4-101 |
| Powerlink (R) configuration | 4-101 |
| Cutler-Hammer configuration | 4-101 |
| Powerlink and Cutler-Hammer board & point configuration | 4-101, 4-102 |
| Locate procedure | 4-102 |
| | |
| Chapter 4 - 4 Energy Meter Configuration | 4-102 to 4-108 |
| Installation | 4-102 |
| Configuration | 4-102 to 4-108 |
| Soft starts | 4-106 |
| Demand limiting | 4-106 to 4-108 |
| HVAC demand limiting | 4-107 |
| Lighting demand limiting | 4-108 |
| How demand limiting works | 4-108 |
| | |
| Chapter 4 - 5 Configuring Alarms | 4-108 to 4-127 |
| Configure Alarms Menu | 4-108, 4-109 |
| Configuring Refrigeration Alarms | 4-109 to 4-122 |
| Alarms suspended | 4-111 |
| Suspending rack alarms | 4-111 |
| Configuring alarm settings | 4-112, 4-113 |
| Analog alarms | 4-113, 4-114 |
| Field limits and units | 4-114 |
| Disabling | 4-114 |
| What alarms are needed | 4-114 |
| Frequently Asked Questions | 4-114, 4-115 |
| Types of suction alarms, listed | 4-115 |
| Compressor alarms | 4-115, 4-116 |
| Circuit alarms | 4-116, to 4-119 |
| AKC 55 circuits | 4-117, 4-118 |
| AKC 164 alarms | 4-118, 4-119 |
| EKC, DCU, Degree Master, and AKC 165 Subcooling Controller alarms | 4-119 |
| Condenser alarms | 4-120 |
| “Other” rack alarms | 4-121, 4-122 |
| Bitzer rack alarms | 4-122 |
| HVAC Alarms | 4-122 to 4-125 |

Contents (continued)

| | |
|--|-----------------------|
| AHU, RTU, and SC4 alarms | 4-123 |
| RTC alarms | 4-124 |
| ClimaTECH alarms | 4-124, 4-125 |
| Miscellaneous alarms | 4-125 to 4-127 |
| Example miscellaneous alarm | 4-126, 4-127 |
| Chapter 4 - 6 Miscellaneous Points Configuration | 4-128 to 4-140 |
| Introduction | 4-128 |
| Starting Configuration | 4-128 |
| Plan Strategy First | 4-128 |
| Miscellaneous relay outputs (DIGITAL OUTPUTS) | 4-128, 4-129 |
| Miscellaneous sensor inputs (ANALOG INPUTS) | 4-129 |
| Miscellaneous on-off inputs (DIGITAL INPUTS) | 4-129 |
| Specifying miscellaneous conversions | 4-129, 4-130 |
| Miscellaneous calculations | 4-130 |
| Point creation | 4-130 to 4-132 |
| Custom Strategy example | 4-132 to 4-140 |
| Creating the miscellaneous points sensor inputs | 4-132, 4-133 |
| Writing the custom strategy | 4-133 to 4-137 |
| Data definitions | 4-133 to 4-135 |
| The rules area | 4-136 to 4-138 |
| Writing rules | 4-136, 4-137 |
| Creating the miscellaneous points relay output | 4-138 to 4-140 |
| Units | 4-140 |
| Style | 4-140 |
| Undo, Cancel, Redo | 4-140 |
| CHAPTER 5 Using the System | |
| Introduction; Authorization | 5-1 |
| Getting Authorized to Make Changes | 5-1 |
| Chapter 5 - 1 Navigation and Making Changes | 5-3 to 5-8 |
| Introduction | 5-1 to 5-5 |
| Getting Back to the Icon Menu | 5-6 |
| Viewing and Changing Settings | 5-6 |
| Changing Numeric Values | 5-7 |
| Changing List Fields | 5-7 |
| Changing the From and To Times | 5-7 |
| Changing the Days of the Week and Holidays | 5-7 |
| Changing Name Fields | 5-8 |
| Chapter 5 - 2 Using the Service Screens | 5-9 to 5-11 |
| Introduction | 5-9 |
| Auto/Manual Relays | 5-9, 5-10 |
| Sensor Adjustment | 5-10 |
| Maintenance Hours | 5-11 |
| Bd/Pt Locations | 5-11 |
| Chapter 5 - 3 Using the Smart Case Controller Screens | 5-12 to 5-17 |
| AKC 16x Status Screen Fields and Terms | 5-12 to 5-14 |
| Evaporator Settings Screen | 5-15 |

Contents (continued)

| | |
|---|---------------------|
| Evaporator Schedules | 5-15 |
| Evaporator Service Screens | 5-16 to |
| Service: Manual Operation | 5-16, 5-17 |
| Service: AKC 16x Shutdown | 5-17 |
| Service: Case Cleaning | 5-17 |
| Chapter 5 - 4 Using the Refrigeration Screens for Refrigeration Circuits Controlled Directly from AKC 55's | 5-18, 5-19 |
| Evaporator Status Screen | 5-18 |
| Evaporator Settings Screen | 5-18, 5-19 |
| Evaporator Schedules, Alarms, and Service Screens | 5-19 |
| Chapter 5 - 5 Using the Communications Screens | 5-20 to 5-27 |
| Introduction | 5-20 |
| Host Network Screen | 5-20 |
| I/O Network Status Menu | 5-20 |
| Status Screens (for each type of I/O board) | 5-21 |
| IP Network (Ethernet) | 5-21 to 5-23 |
| IP Network Status Screen | 5-21, 5-22 |
| Alarm Routing for Ethernet | 5-22, 5-23 |
| Printer Settings Screens | 5-24 |
| Modem Status Screen | 5-25, 5-26 |
| Messages | 5-27 |
| Chapter 5 - 6 Using the History Screens (for History Retrieval) | 5-28 to 5-32 |
| Introduction | 5-28 |
| Selecting Points to View | 5-29 |
| History Stats | |
| 5-31, 5-32 | |
| Chapter 5 - 7 Using the Miscellaneous Points Screens | 5-33, 5-34 |
| Relay Output Status | 5-33, 5-34 |
| Chapter 5 - 8 Using the Alarms Screens | 5-35 to 5-38 |
| The Alarms Menu | 5-35 |
| The Active Alarms Screen | 5-36 |
| The Cleared Alarms Screen | 5-37 |
| The Alarm Status Screen | 5-37 |
| The Network Alarms Screen | 5-37 |
| The Alarm Service Screen | 5-38 |
| Chapter 5 - 9 Overrides | 5-39, 5-40 |
| Overrides Using Service Screens | 5-39 |
| Overriding Sensor Values | 5-40 |
| Overriding Using RO8S Switches | 5-40 |
| Overrides Using the Manager's Override Box | 5-40 |
| Keyswitch Override for Refrigeration High Temperature Alarms | 5-40 |

Contents (continued)

CHAPTER 6 Configuring and Using Non-AKCESS Nodes

| | |
|---|---------------------|
| Introduction | 6-1 |
| Chapter 6-1 Echelon-capable Utility Meters | 6-1 |
| Installation | 6-1 |
| Configuration | 6-1, 6-2 |
| Using Utility Meter Status Screens | 6-2, 6-3 |
| History for Utility Meters | 6-3 to 6-5 |
| Demand Limiting | 6-5 to 6-8 |
| How Demand Limiting Works | 6-8 |
| Chapter 6 - 2 Bitzer Screw Compressor Echelon Interface | 6-9 to 6-12 |
| Bitzer Configuration | 6-9, 6-10 |
| Compressor Status and Bitzer Status | 5-40 |
| Alarms | 6-11, 6-12 |
| Resetting Shutdowns with the Bitzer Reset RO | 6-12 |
| Chapter 6 - 3 VLT® Electronic Drives | 6-13 to 6-17 |
| VLT® Configuration for Compressors | 6-13 |
| VLT® Resets, Proof, and Faults | 6-13 |
| Continuing Configuration | 6-13 to 6-15 |
| VLT® Status Screens for Compressors | 6-15 |
| Inverter Status | 6-15 to 6-17 |
| VLT®'s and Air-Cooled Condensers | 6-17 |
| VLT®'s and Air Handler Motors | 6-17 |
| Chapter 6 - 3 Square D Powerlink® Circuit Breaker Panels | 6-18 |
| Powerlink® Configuration | 6-18, 6-19 |
| Continuing Configuration | 6-19 to 6-21 |
| Lighting Status for Zones with Powerlink® Panels | 6-15 |

APPENDIX A Dimensions and Specifications

Physical Dimensions, Operating Environmental Limits, and Electrical Specifications for each component.

ENCLOSED:

User Manual for AK2 (Second Generation ADAP-KOOL®) Input and Output Modules