
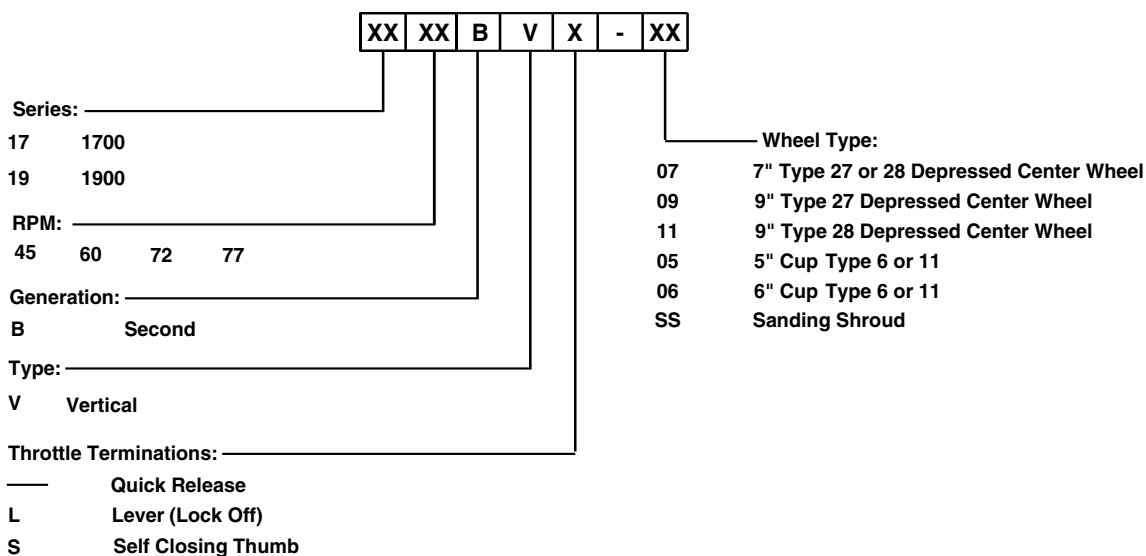


**Cleco®**

## 1700 & 1900 Series Vertical Grinders

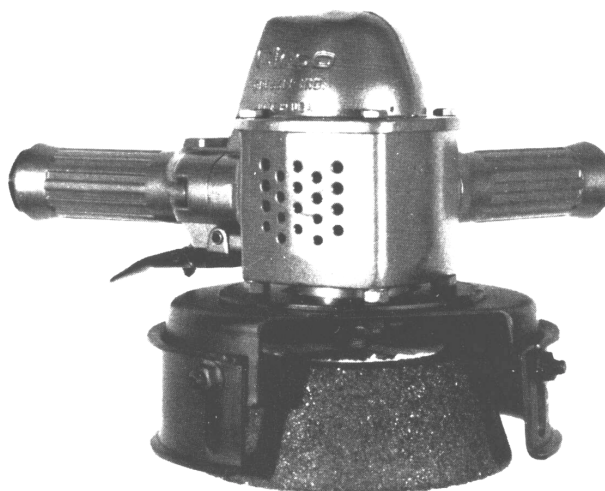

For additional product information visit our website at <http://www.clecotools.com>

NORTH AMERICA

**CooperTools**  
P.O. Box 1410  
Lexington, SC 29071

EUROPE

**Cooper Power Tools GmbH & Co.**  
Postfach 30  
D-73461 Westhausen


# Safety Recommendations

For your safety and the safety of others, read and understand the safety recommendations before operating any grinder.

**Always wear protective equipment and clothing.**



**Caution:** Faceshields do not provide unlimited protection against flying particles and are not to be considered as eye protection. ANSI Z87.1 states that separate eyewear shall be used. For additional information on eye protection, refer to Federal OSHA Regulations, 29 CFR, Section 1910.133, Eye and Face Protection, and ANSI Z87.1, Occupational and Educational Eye and Face Protection. This standard is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.

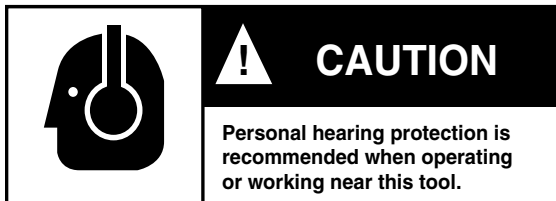

Hearing protection is recommended in high noise areas (above 85 dBA). Close proximity of additional tools, reflective surfaces, process noises, and resonant structures can substantially contribute to the sound level experienced by the operator. Excessive air pressure (greater than 90 psig) or worn components can also increase sound level emitted by the tool. Proper hearing conservation measures, including annual audiograms and training in the use and fit of hearing protection devices may be necessary. For additional information on hearing protection, refer to Federal OSHA Regulations, 29 CFR, Section 1910.95, Occupational Noise Exposure, and American National Standards Institute, ANSI S12.6, Hearing Protectors.

- **Gloves and other protective clothing should be worn as required.**
- **Do not wear clothing that may restrict movement, become entangled or in any way interfere with the safe operation of grinders.**



Grinding or other applications of this tool may produce hazardous fumes and/or dust. To avoid adverse health effects utilize adequate ventilation and/or a respirator. Respirators should be selected, fitted, used and maintained in accordance with Occupational Safety and Health Administration and other applicable regulations. Read the material safety data sheet of any materials involved in the grinding process.

Cleco grinders should be operated with 90 psig (6.2 bar) max. air pressure. Excessive air pressure increases the loads and stresses on the tool parts and may result in breakage. Installation of a filter-regulator-lubricator in the air supply line is highly recommended.


Never use the air hose for supporting, lifting, or lowering the tool. Use a safety line or cable on the tool when working in elevated areas.

Before tool is connected to air supply, check throttle for proper operation, i.e., throttle moves freely and returns to closed position. Being careful not to endanger adjacent personnel, clear air hose of accumulated dust and moisture. Use protective barriers where necessary — hot sparks can burn. Barriers also help reduce noise levels. Before removing tool from service or changing accessories, make sure air line is shut off and drained of air to prevent the tool from operating if the throttle is accidentally engaged. The use of a self-relieving valve for this purpose is highly recommended.

Wheel guards are used to prevent serious injury to the operator in the event of wheel failure and must not be modified in any way. Any wheel guard that is damaged or bent must be replaced. Grinders must be held so that the opening in the guard is away from the operator.

The guard must be attached to the grinder with all bolts, nuts and lockwashers in place and torqued to 144 - 156 in. lbs..

# Safety Recommendations

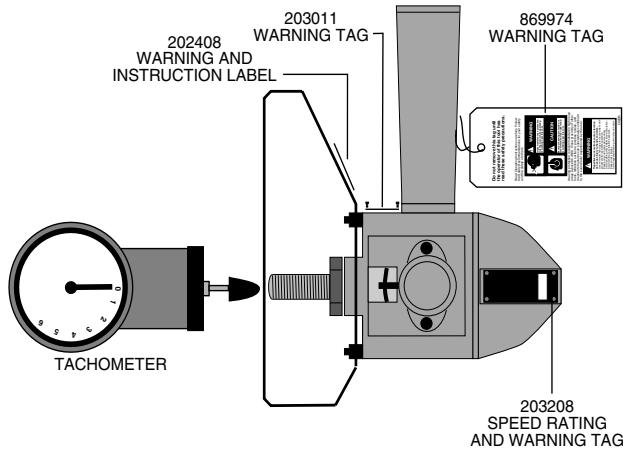

Speed rating, warning tags and warning labels should be maintained or replaced for legibility in the event of damage. Speed rating, warning tags, and warning labels are available from the manufacturer.

Before mounting a wheel, after all tool repairs, and whenever a grinder is issued for use, check the free speed of the grinder with a tachometer to make certain that the actual free speed at 90 psig (6.2 bar) does not exceed the rated free speed stamped on the tool. Grinders in use on the job must be checked at least once every twenty hours of operation, or once every week, whichever is more frequent. Checking free speed after the removal of each worn wheel and before mounting a new wheel is highly recommended.

## INSPECT THE GRINDING WHEEL!

Check the maximum safe RPM marked on the wheel. **Never use a wheel rated below the actual tool speed.** Inspect the wheel for cracks or chips, water stains, or signs of abuse or improper storage. **Cracked, chipped or faulty grinding wheels are dangerous and must not be used.** They must be destroyed rather than risk their use by someone who may not notice that they are damaged.



Causes of abrasive wheel failures have been traced to such factors as:

- Dropping, bumping, or abuse (careless handling of the grinder or wheel)
- Improper mounting
- Imbalance

- Improper shipment or storage
- Exposure to water, solvents, high humidity, freezing and extreme temperatures
- Mismatched speed ratings
- Age

**Abrasive wheels known to have been subjected to any of the above conditions can violently disintegrate. Never operate a vertical grinder without proper wheel guard in place.**

## CHECK FLANGE

Check the grinder spindle and driving flange for signs of damage or abuse. A vertical grinder driving flange must be flat, unrelieved, and free of nicks and burrs. The spindle must not be bent, and the threads should be free of any damage that might keep an abrasive wheel and its mount from locating centrally or seating properly against the driving flange.

## ABRASIVE WHEEL MOUNTING & BEGINNING GRINDING OPERATION

Sufficiently tighten wheel to prevent spin-off. Do not over-tighten, and do not install wheel by spinning it on by throttling the tool. This is a dangerous practice and can cause spindle damage or breakage. Always use a wheel retainer on a Type 6 or 11 cup wheel.

Before beginning operations or after mounting a wheel, run the tool for one (1) minute in a protected enclosure to check the integrity of the wheel. During this time or any other time, no one should stand in front of or in line of the wheel. When starting work with a cold wheel, apply it gradually to the workpiece until the wheel becomes warm.


When the remaining portion of a Type 6 or 11 cup wheel can no longer be used, do not use a hammer to break up the remaining "rock" so that it can be removed. This is a dangerous practice and can lead to spindle damage or breakage. Instead use a back-up wrench on the flange, and a strap wrench.

## DO NOT CONTINUE TO USE A GRINDER IF:

- It is not equipped with the proper wheel guard
- The speed rating of the wheel is less than the speed of the grinder
- It starts to vibrate
- You sense any changes in tool speed or an unusual increase in noise output that would indicate the tool is running at excessive speed
- You notice excessive end play in the spindle
- You hear any unusual sound from the grinder

**RETURN THE TOOL TO THE TOOL CRIB FOR SERVICE IMMEDIATELY!**

# Safety Recommendations

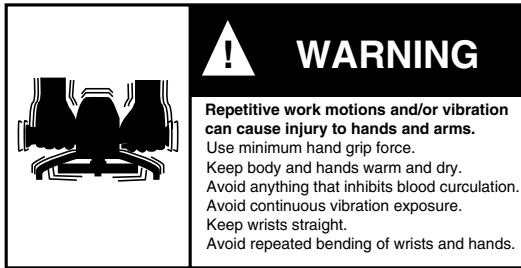


Some individuals may be susceptible to disorders of the hands and arms when performing tasks consisting of highly repetitive motions and/or exposure to extended vibration. Cumulative trauma disorders such as carpal tunnel syndrome and tendonitis may be caused or aggravated by repetitious, forceful exertions of the hands and arms. Vibration may contribute to a condition called Raynaud's Syndrome. These disorders develop gradually over periods of weeks, months, and years. It is presently unknown to what extent exposure to vibrations or repetitive motions may contribute to the disorders. Hereditary factors, vasculatory or circulatory problems, exposure to cold and dampness, diet, smoking and work practices are thought to contribute to the conditions.

Tool operators should be aware of the following warning signs and symptoms so that a problem can be addressed before it becomes a debilitating injury. Any user suffering prolonged symptoms of tingling, numbness, blanching of fingers, clumsiness or weakened grip, nightly pain in the hand, or any other disorder of the shoulders, arms, wrists, or fingers is advised to consult a physician. If it is determined that the symptoms are job related or aggravated by movements and postures dictated by the job design, it may be necessary for the employer to take steps to prevent further occurrences. These steps might include, but are not limited to, repositioning the workpiece or redesigning the workstation, reassigning workers to other jobs, rotating jobs, changing work pace, and/or changing the type of tool used so as to minimize stress on the operator. Some tasks may require more than one type of tool to obtain the optimum operator/tool/task relationship.

The following suggestions will help reduce or moderate the effects of repetitive work motions and/or extended vibration exposure:

- Use a minimum hand grip force consistent with proper control and safe operation
- Keep body and hands warm and dry (cold weather is reported to be a major factor contributing to Raynaud's Syndrome)
- Tasks should be performed in such a manner that the wrists are maintained in a neutral position, which is not flexed, hyperextended, or turned side to side

- Avoid anything that inhibits blood circulation
  - Smoking Tobacco (another contributing factor)
  - Cold Temperatures
  - Certain Drugs

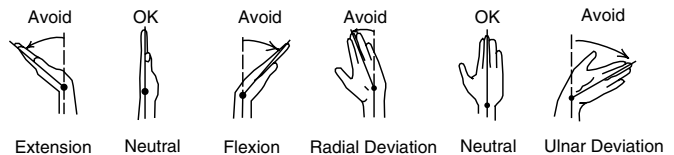

- Stressful postures should be avoided — select a tool appropriate for the job and work location
- Avoid highly repetitive movements of hands and wrists, and continuous vibration exposure (after each period of operation, exercise to increase blood circulation)
- Use quality abrasive wheels
- Keep tool well maintained and replace worn parts

Work gloves with vibration reducing liners and wrist supports are available from some manufacturers of industrial work gloves. Tool wraps and grips are also available from a number of different manufacturers. These gloves, wraps, and wrist supports are advertised claiming to reduce and moderate the effects of extended vibration exposure and repetitive wrist trauma. Since they vary widely in design, material, thickness, vibration reduction, and wrist support qualities, it is recommended that the glove, tool wrap, or wrist support manufacturer be consulted for items designed for your specific application. **WARNING! Proper fit of gloves is important. Improperly fitted gloves may restrict blood flow to the fingers and can substantially reduce grip strength.**

## USE QUALITY ABRASIVE WHEELS

The primary source of vibration when using a portable grinder is an abrasive wheel that is out of balance, out of round, untrue, or possibly any combination of all three.

The use of quality abrasive wheels which are well balanced, round, and true is highly recommended as they have been found to significantly reduce vibration. Some abrasive wheels lose their balance, roundness, and trueness as they wear from use. Because of the abusive nature of the vibration caused by out of balance, out of round, and untrue condition of some abrasive wheels, it is felt that these wheels are more susceptible to failure. Excessive vibration may signal imminent wheel failure. Flat spotting of the abrasive wheel, caused by grinding the wheel to a stop after the power has been shut off can result in changes to the balance and shape of the wheel. Be sure the grinding wheel has stopped before setting the tool down. Set the tool in a tool rest or tool holder when not in use.


# Safety Recommendations

## WIRE BRUSHES

If a grinder is used for wire brushing applications the same problems of balance, roundness, and trueness as experienced with abrasive wheels prevail. Use quality wire brushes.

## USE A PREVENTIVE MAINTENANCE PROGRAM

Tool abuse or poor maintenance procedures can amplify and contribute to the vibration produced by the abrasive wheel. A preventive maintenance program featuring scheduled periodic inspections and proper maintenance is the best way to assure safety in your portable grinding operations. A well managed program can detect such things as speed variations due to wear, flanges or spindles that have been damaged from abuse, or bad bearings damaged by foreign matter or lack of lubrication. Problems such as these can affect the wheel trueness when the grinder is running and contribute to the vibration. Rotor blades that are worn or chipped can lock up motor and result in grinding wheel spinoff, and should be replaced. Rotor blades should be checked periodically and replaced if they measure less than 7/16" (11mm) at either end.

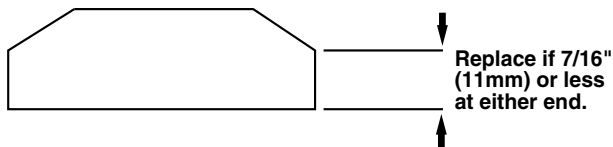

## PROPER LUBRICATION

An automatic in-line filter-regulator-lubricator is recommended to increase tool life and keep the tool in service. The in-line lubricator should be regularly checked and filled with a good grade of 10W machine oil. Proper adjustment of the in-line lubricator is performed by placing a sheet of paper next to the exhaust ports and holding the throttle open approximately 30 seconds. The lubricator is properly set when a light stain of oil collects on the paper. Excessive amounts of oil should be avoided.

## STORAGE

In the event that it becomes necessary to store the tool for an extended period of time (overnight, weekend, etc.), it should receive a generous amount of lubrication at that time and be run for several seconds to distribute the oil before disconnecting the air supply. This will reduce the possibility of corrosion and displace any water that may be trapped in the tool. Water trapped in the tool could cause the governor to freeze and malfunction if tool is exposed to freezing temperatures.

Note: Water in the air system increases tool maintenance costs and can cause the tool to malfunction when it is stored and/or operated in freezing conditions.

Proper repair procedures and the use of original Cleco service parts and bearings rather than substitutes will return the tool to factory specifications of precision and balance, and minimize vibration.


The governor should be checked periodically to be sure the governor mechanism is clean, in good operating condition, and functioning properly. The 1700 and 1900 Series grinders are equipped with the CLECO SHUT-OFF disc which is designed to shut the tool down in the event of excessive overspeed. Although it adds a measure of safety, it should not be considered a substitute for a wheel guard.

If the tool fails to run it may be due to the overspeed shut-off disk. Have the tool serviced and check for an overspeed condition. After a problem causing overspeed is corrected, the disc must be reset by clicking it to its normal position.


This information is a compilation of general safety practices obtained from various sources available at the date of production. However, our company does not represent that every acceptable safety practice is offered herein, or that abnormal or unusual circumstances may not warrant or require additional procedures. Your work may require additional specific safety procedures. Follow these procedures as required by your company.

For more information, see the latest edition of ANSI B186.1, Safety Code for Portable Air Tools, and ANSI B7.1 Safety Requirements for the Use, Care, and Protection of Abrasive Wheels available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.

# WHEEL GUARDS, WRENCHES AND ADAPTORS

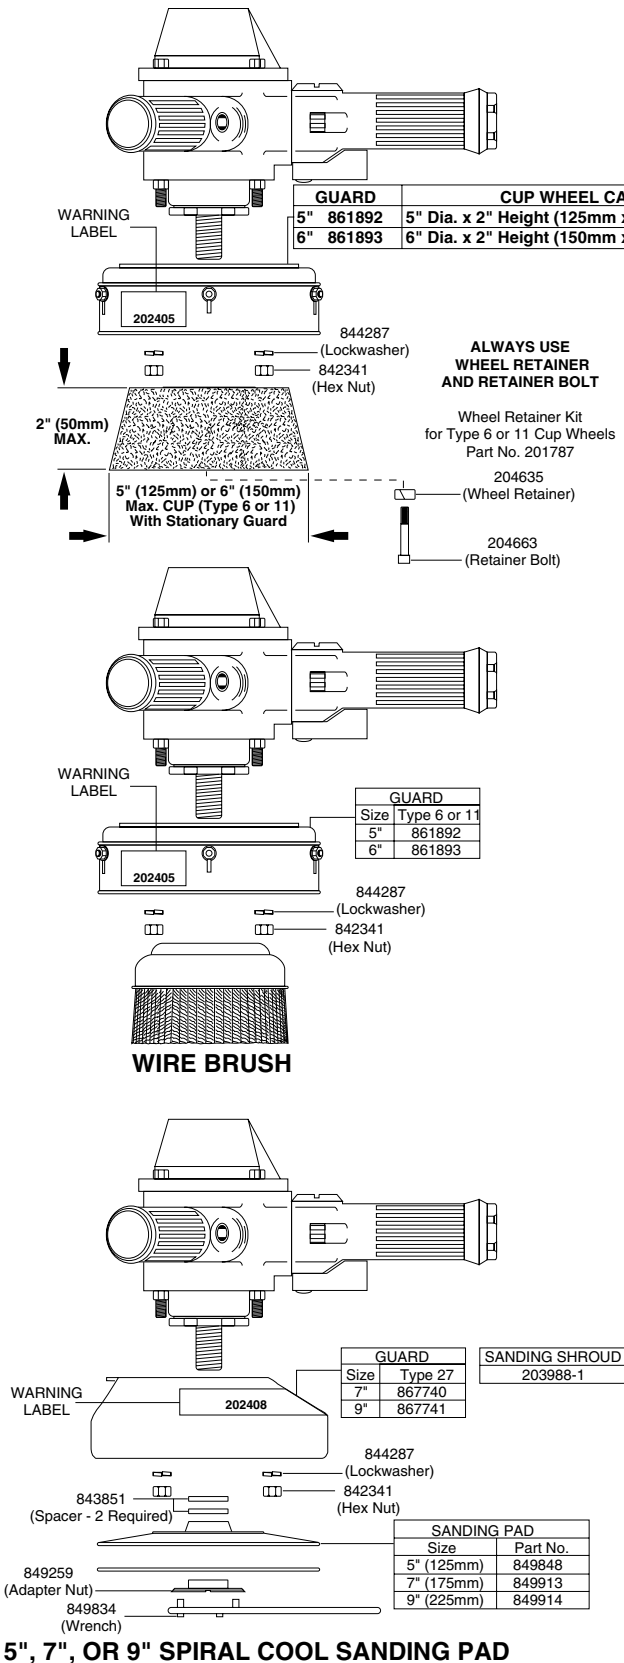


GUARD			DEPRESSED CENTER WHEEL CAPACITY
Size	Type 27	Type 28	
7"	867740	867740	7" Dia. x 1/4" Thick Max. (175mm x 6.4mm)
9"	867741	869067	9" Dia. x 1/4" Thick Max. (225mm x 6.4mm)

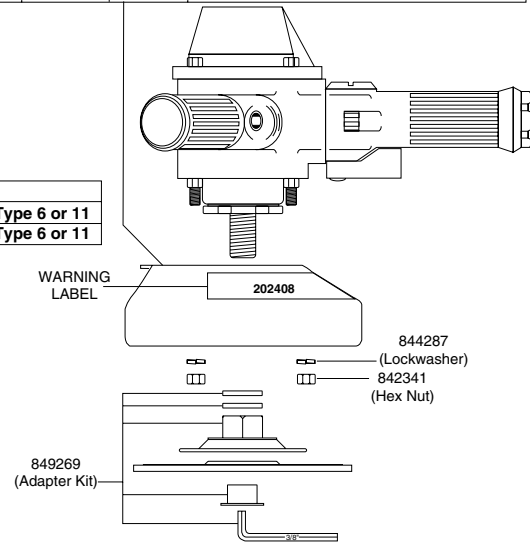


## 7" or 9" DEPRESSED CENTER (Type 27 or 28) WHEEL GUARD and ADAPTOR KIT

**NOTE:** For wheels with throw away adaptors, No. 843851 spacers, should be used to properly space the wheel within the guard.

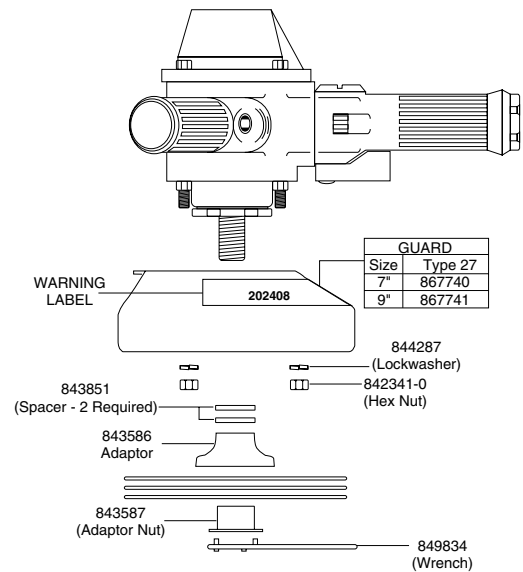

## STACKED ABRASIVE DISCS

 

**DRIVING  
FLANGE WRENCH**  
Part No. 889381



**GOVERNOR  
ADJUSTING WRENCH**  
Part No. 204729

# OPERATING INSTRUCTIONS

## READ SAFETY RECOMMENDATIONS BEFORE CONNECTING TOOL.

The 1700 and 1900 Series Grinders are designed to operate on 90 psig (6.2 bar) maximum air pressure, using a 3/4" hose up to 8' in length. If additional length is required, the next larger hose size may be connected to the 8' whip hose.

## LUBRICATION

An automatic in-line filter-lubricator is recommended as it increases tool life and keeps the tool in sustained operation. The in-line lubricator should be regularly checked and filled with a good grade of 10W machine oil. Proper adjustment of the in-line lubricator is performed by placing a sheet of paper next to the exhaust ports and holding the throttle open approximately 30 seconds. The lubricator is properly set when a light stain of oil collects on the paper. Excessive amounts of oil should be avoided.

## STORAGE

In the event that it becomes necessary to store the tool for an extended period of time (overnight, weekend, etc.), it should receive a generous amount of lubrication at that time and be run for several seconds to distribute the oil before disconnecting from the air supply.

# SERVICE INSTRUCTIONS

## DISASSEMBLY-GENERAL

Disconnect the tool from the air supply and remove the grinding wheel and guard from the front of the tool.

## REMOVING THE MOTOR UNIT FROM THE MOTOR HOUSING:

Insert a 5/16" hex wrench (clamped in a vise) in the spindle shaft and unscrew the driving flange. Removing the housing bolts will allow the governor housing 867832, to be removed from the housing. Remove the motor unit from the rear of the motor housing.

## DISASSEMBLY OF THE MOTOR UNIT:

Unscrew the governor assembly (left hand threads) from the rear of the motor unit. Clamping on the cylinder, hold the motor unit in the vise with the rear bearing plate up. Using a soft 1/4" (6.5mm) rod and a suitable hammer, drive the rotor shaft out of the overspeed shut-off disc and rear rotor bearing, 869820. This will allow the various motor unit components to be removed from the rotor. **IMPORTANT NOTE:** The overspeed shut-off disc is an assembly and must not be disassembled. Do not remove the disc seal plate unless the rear bearing plate needs to be replaced.

## DISASSEMBLY OF THE GOVERNOR:

Remove the governor pin retainer, No. 867770, and using a 3/32" (2mm) punch, drive out the governor weight pins, No. 413050. After removing the weights and two washers, the governor cone pin, No. 413047, may be driven out using the 3/32" (2mm) punch. It is important that a new governor cone pin is used during reassembly of the governor (SEE GOVERNOR RE-ASSEMBLY). Unscrewing the governor adjusting nut, No. 204730, will allow the removal of the governor spring.

## THROTTLE HANDLE MAINTENANCE:

Should the throttle valve seal, No. 869539, need replacing, unscrew the throttle valve cap, No. 867753, for removal of the throttle valve and components.

The tool is equipped with two (2) air screens for protection of the internal motor parts from foreign material. The air screen located in the inlet bushing may be removed for cleaning and inspection by unscrewing the inlet bushing, No. 867758. If the screen is torn or damaged, the inlet bushing should be replaced. The air screen, No. 867729, located between the throttle handle and motor housing may be removed for cleaning and inspection by unscrewing the two (2) socket head cap screws, No. 813041. If the screen cannot be cleaned or if it is torn, it should be replaced.

## REASSEMBLY—GENERAL

The tool is reassembled in the reverse order of disassembly. All parts should be thoroughly cleaned and inspected before reassembly. Particular attention should be paid to the rotor blades and rotor bearings as failure of these parts could cause damage to more expensive components. Rotor blades should be replaced at every repair cycle or if they measure 7/16" (11 mm) or less at either end (See Fig. 1). Rotor bearings should be replaced if they are rough or show excessive looseness.

 


Fig. 1

## MOTOR UNIT REASSEMBLY:

During reassembly of the motor unit, the rotor must be positioned by the front rotor collar, No. 869608, so that when assembled, the rotor will have .0015" (.038mm) to .0025" (.063mm) clearance between it and the front bearing plate. Install the front rotor bearing, No. 869818, in the front bearing plate, No. 869814, and measure the depth of the bearings inner race from the face of the bearing plate. Select, or fit by sanding, a rotor collar .0015" (.025mm) to .0025" (.062mm) larger than this dimension (See Fig. 2).

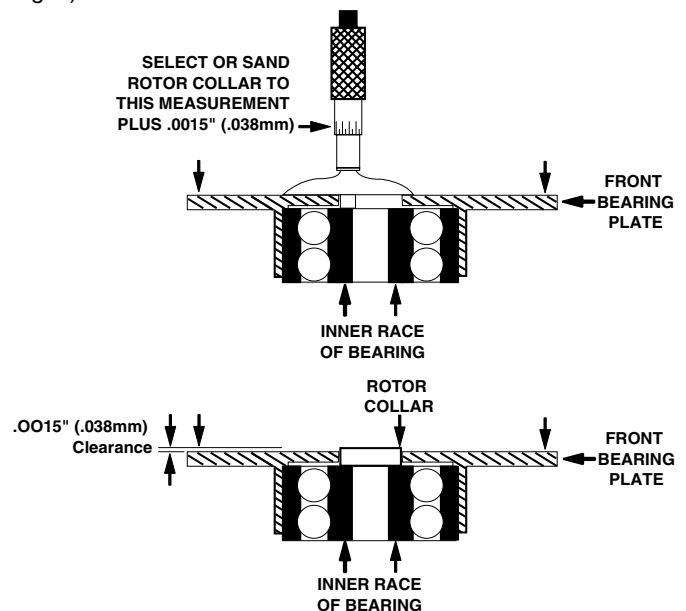


Fig. 2

Slip the rotor collar, chamfered side first, on the rotor spindle and drive the bearing plate and bearing (drive on the bearing's inner race) down on the rotor. Place the assembly on a 5/16" hex wrench clamped in a vise. Install the rotor blades, cylinder, rear rotor collar, rear bearing plate, wavy washer, and rear rotor bearing (drive on the bearing's inner race).

If disassembled earlier, install the "O"-ring, No. 867745, onto the disc seal plate, No. 867765, and press the seal plate, No. 867765, (undercut side up) onto the rear bearing plate.

Before reassembly, the overspeed shut-off disc should receive a close inspection for wear and/or damage. Also check the rpm rating etched on the disc against the rpm rating stamped on the tool; they must be the same.

The complete overspeed shut-off disc assembly must be assembled to the rotor shaft using a suitable flat driver 7/8" (22.5mm) O.D. min. resting against the assembly. Drive the disc assembly down until it stops against the rear bearing inner race (See Fig. 3).

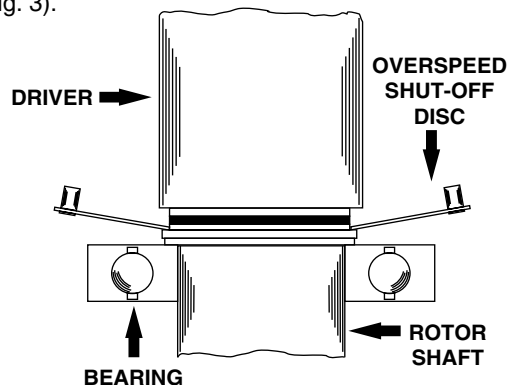


Fig. 3

### GOVERNOR REASSEMBLY

It is imperative that all parts be clean and free of foreign material. A new governor cone pin, No. 413047 should be installed and both ends of the pin must be upset to secure it. The governor cone, No. 413048 should be checked to be sure that it moves freely on the governor spider, No. 869099 after installation of the cone pin.


Check the fit between the governor weights and governor weight pins, No. 413050, and replace all parts that show excessive wear.

Install the governor spring on the governor spider being sure the tang on the spring engages the hole in the spider. Screw the governor adjusting nut, No. 204730 on the governor screw approximately six (6) turns. Final speed adjustment is made after the tool is completely assembled using the governor adjustment wrench, No. 204729.

**IMPORTANT:** After the governor is completely assembled, install it (left hand threads) on the rear of the rotor shaft and torque to 40 - 45 ft. lbs. (54 - 60 Nm). In cases where a torque wrench is not available, the governor should be hand tightened to a snug position, then tightened by going beyond the hand tight condition 180°.

### MOTOR INSTALLATION

The spring washer, No. 869817 should be placed in the housing with the large diameter against the motor housing (cone side up). Slip the motor into the housing making sure the rear cylinder pin and motor air inlet are positioned as shown in (Fig 4). This positions the exhaust slots for minimum sound level. The "O" ring, No. 834619 should be inserted into the governor housing, and the governor housing placed on the motor housing. Insert the four casing bolts and tighten the nuts snugly, but not to full torque. Install the driving flange, No. 204636; torque to 50 - 60 ft-lbs. (68 - 80 Nm). Attach the air hose, and run the tool. The spindle must turn freely. Tighten the housing bolts to 60 - 70 in-lbs (6.8 - 7.9 Nm) and run the tool again, checking to see that the spindle turns freely.

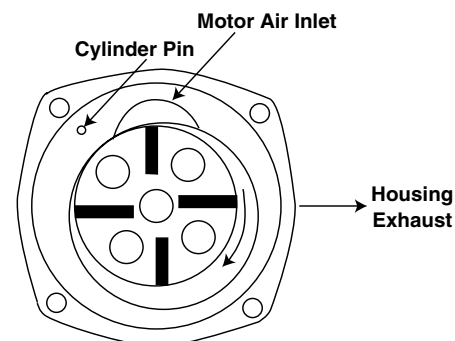

Rear View of Motor in Housing  
Fig. 4

### FINAL SPEED ADJUSTMENT

Check the free speed of the tool with a dependable tachometer with the grinding wheel removed.

To make an adjustment, turn the air supply off and remove (using a 9/64" hex wrench) the spindle plug, No. 622060, and insert the governor adjustment wrench, No. 204729 to engage the governor adjustment nut, No. 204730. Looking from the front of the spindle, a clockwise adjustment will increase the rpm and a counterclockwise adjustment will decrease the rpm. Replace the spindle plug before turning the air supply on. Check the rated rpm of the tool stamped on the governor housing and set the free speed to a speed less than the rated rpm at 90 psig.


### ALWAYS USE A GUARD!

Install the proper wheel guard (see page 6). Tighten the wheel guard retainer nuts to the proper torque as shown on page 3. Read the Safety Recommendations before mounting a wheel and operating this tool.



## OPTIONAL EQUIPMENT

### MUFFLER

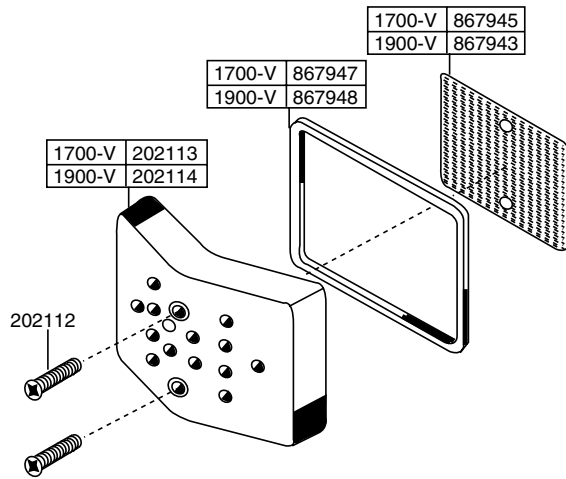

#### PARTS LIST - MUFFLER ASSEMBLY

PART NO.	NAME OF PART	QTY.
202112	Muffler Screw (self tapping)	2
202113	Muffler (incl. 867947)	1
202114	Muffler (incl. 867948)	1
867943	Baffle Plate	1
867945	Baffle Plate	1
867947	Muffler Gasket	1
867948	Muffler Gasket	1

The complete muffler subassembly can be purchased as a subassembly:


1700-V Part No. 861996

1900-V Part No. 861997

#### INSTALLATION PROCEDURE:

The muffler is installed on the tool by aligning the muffler assembly over the exhaust and screwing the two (2) self-tapping screws into the mating exhaust holes.

### PIPED AWAY EXHAUST

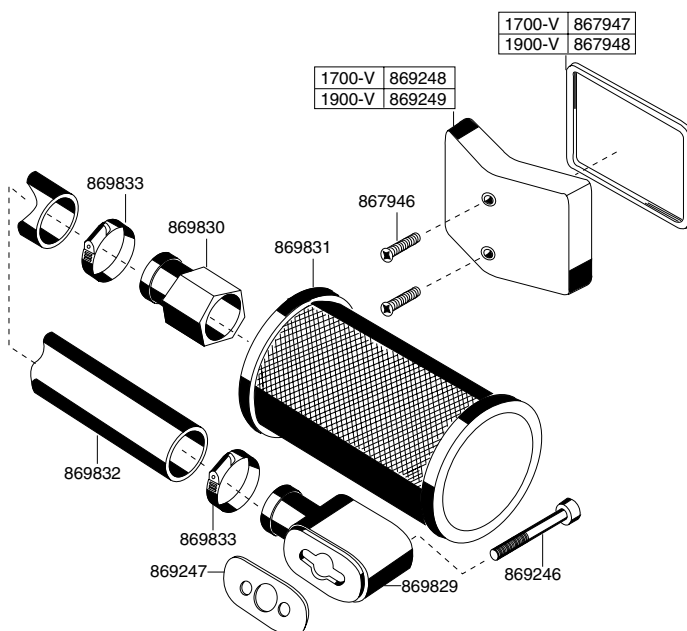

#### PARTS LIST—PIPED AWAY EXHAUST SYSTEM

PART NO.	NAME OF PART	QTY.
867946	Exhaust Cover Screw	2
867947	Cover Gasket (1700-V)	1
867948	Cover Gasket (1900-V)	1
869246	Socket Head Cap Screw	2
869247	Gasket	1
869248	Exhaust Cover (1700-V) incl. 867947	1
869249	Exhaust Cover (1900-V) incl. 867948	1
869829	Housing Adapter	1
869830	Muffler Adapter	1
869831	Muffler	1
869832	Exhaust Hose (10')	1
869833	Hose Clamp	2

The complete piped away exhaust system can be purchased as a subassembly.

1700-V Part No. 861917

1900-V Part No. 861918

#### INSTALLATION PROCEDURES:



Align the exhaust cover over the exhaust holes and screw the two (2) self-tapping screws into the mating exhaust holes. Remove the dead handle and dead handle gasket from the tool. Drill 5/8" hole in motor housing to align with housing adapter. Install the piped away exhaust gasket, housing adapter, original gasket, and dead handle. Connect the hose to the housing adapter and the muffler adapter and tighten the hose clamps securely.

## VERTICAL GRINDERS GOVERNOR & SHUT-OFF DISC


### COMPLETE GOVERNOR ASSEMBLY NO.

PART NO.	RPM
201788	4,500
201789	6,000
201790	7,200
201790	7,700

Part No.	Name of Part	Quantity			
		4 5 0 0	6 0 0 0	7 2 0 0	7 7 0 0
204187	Washer	4	4	4	4
204730	Governor Adjusting Nut	1	1	1	1
413041	Governor Spring (Green)	1	-	1	1
413042	Governor Spring (No Color)	-	1	-	-
413047	Governor Cone Pin	1	1	1	1
413048	Governor Cone	1	1	1	1
413050	Governor Weight Pin	2	2	2	2
413210	Governor Weight	-	-	2	2
413270	Governor Weight	2	2	-	-
867770	Governor Pin Retainer	1	1	1	1
869099	Governor Spider	1	1	1	1

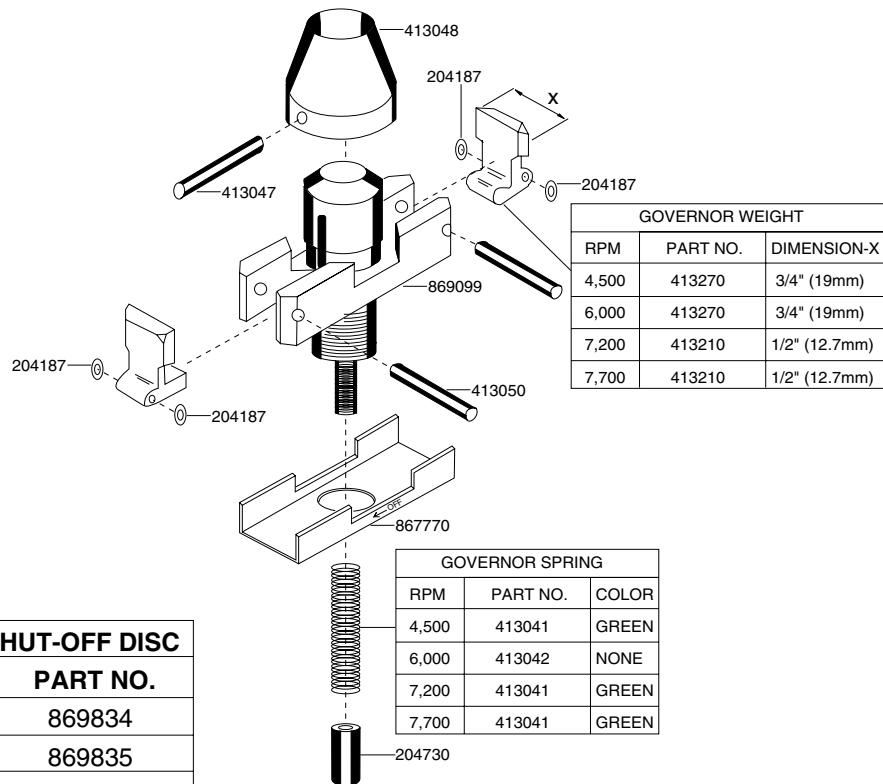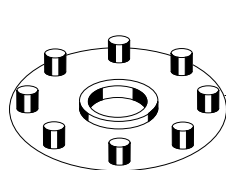OVERSPEED SHUT-OFF DISC	
RPM	PART NO.
4,500	869834
6,000	869835
7,200	869836
7,700	869837

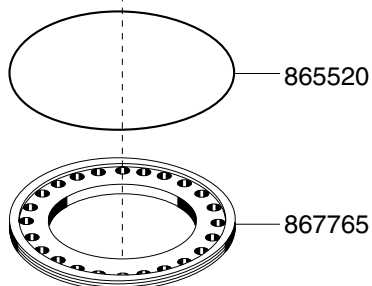


### PART LIST OVERSPEED SHUT-OFF DISC AND RELATED COMPONENTS

PART NO.	NAME OF PART	QTY.
865520	"O"-Ring 2-1/4" x 2-3/8"	1
867765	Disc Seal Plate	1
869834	4,500 RPM Overspeed Shut-off Disc	1
869835	6,000 RPM Overspeed Shut-off Disc	1
869836	7,200 RPM Overspeed Shut-off Disc	1
869837	7,700 RPM Overspeed Shut-off Disc	1


**IMPORTANT NOTE:** The RPM rating and part number are etched on the surface of the disc.

# VERTICAL GRINDERS MOTOR UNIT

* Available Rotor Collars	
Part No.	Thickness
869608	.1525" - .1520"
869609	.1515" - .1510"
869610	.1505" - .1500"
869892	.1495" - .1490"
869893	.1485" - .1480"

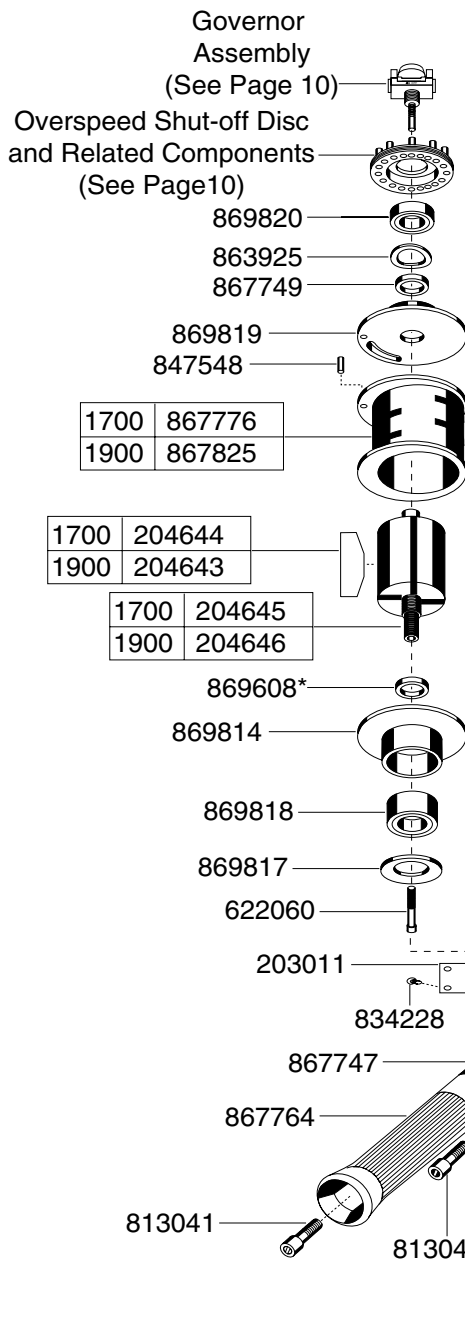


Part No.	Name of Part	Qty.
201787	Wheel Retainer Kit (incl. 204635, 204732 & 204663)	1
202020	Drive Screw	4
203011	Instruction Plate	1
203208	Instruction Plate	1
204635	Adaptor	1
204636	Driving Flange	1
204643	Rotor Blade (1900)	4
204644	Rotor Blade (1700)	4
204645	Rotor (1700)	1
204646	Rotor (1900)	1
204663	Adaptor Screw	1
204732	Instruction Tag	1
622060	Spindle Plug	1
813041	Dead Handle Bolt	2
832899	Flat Washer	4
834228	Drive Screw	2
834619	"O"-Ring 13/16" x 15/16"	1
842341	Hex Nut	8
844287	Lock Washer	4
847548	Cylinder Pin	1
863925	Wavy Washer	1
867503	Motor Housing (1900)	1
867504	Motor Housing (1700)	1
867746	Housing Bolt (1700)	4
867747	Dead Handle Gasket	1
867749	Rotor Collar (Rear)	1
867764	Dead Handle	1
867776	Cylinder (1700) - (incl. 847548)	1
867822	Housing Bolt (1900)	4
867825	Cylinder (1900) - (incl. 847548)	1
867832	Governor Housing - (incl. 202020, 203208)	1
869608	Rotor Collar (Front)	1
869814	Front Bearing Plate	1
869817	Spring Washer	1
869818	Front Rotor Bearing	1
869819	Rear Bearing Plate	1
869820	Rear Rotor Bearing	1

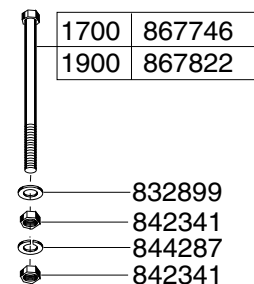


C-Model Only  
Wheel Retainer Kit 201787  
(Instruction Tag 204732 included)

## VERTICAL GRINDERS HANDLE SUBASSEMBLIES

### LOCK OFF LEVER HANDLE

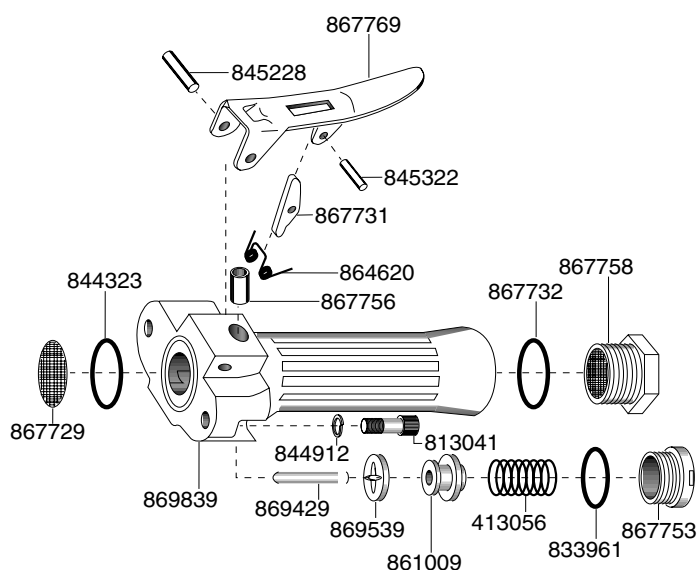

### SELF CLOSING THUMB LEVER & QUICK RELEASE THUMB LEVER HANDLE

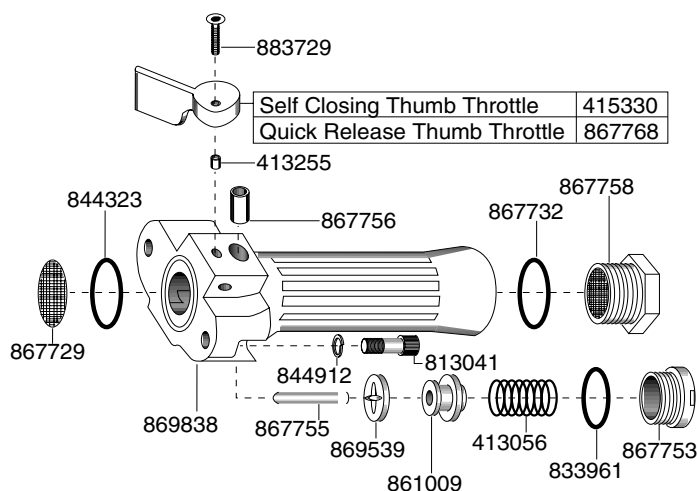

PART NO.	NAME OF PART	QTY.		
		S. C. T H U M B	Q. R. T H U M B	L. O. L E V E R
	Type Handle			
413056	Throttle Valve Spring	1	1	1
413255	Lever Bushing	1	1	-
415330	Self Closing Thumb Throttle	1	-	-
813041*	Socket Head Cap Screw	2	2	2
833961	"O"-Ring 13/16" x 1"	1	1	1
844323*	"O"-Ring 1-1/4" x 1-1/2"	1	1	1
844912*	Lock Washer	2	2	2
845228	Throttle Lever Pin	-	-	1
845322	Pawl Pin	-	-	1
861009	Throttle Valve (incl. 869539)	1	1	1
864620	Pawl Spring	-	-	1
867729*	Air Screen	1	1	1
867731	Pawl	-	-	1
867732	"O"-Ring 1-1/8" x 1-5/16"	1	1	1
867753	Throttle Valve Cap	1	1	1
867755	Throttle Pin	1	1	1
867756	Throttle Pin Bushing	1	1	1
867758	Inlet Bushing	1	1	1
867768	Quick Release Thumb Throttle	-	1	-
867769	Lock Off Lever	-	-	1
869429	Throttle Pin	-	-	1
869539	Throttle Valve Seal	1	1	1
869838	Throttle Handle (incl. 867756)	1	1	-
869839	Throttle Handle (incl. 867756)	-	-	1
883729	Throttle Lever Screw	1	1	-

\* Denotes parts not included in subassemblies listed Below.

The complete throttle handles can be purchased as a subassembly using the code numbers listed below.

Self Closing Thumb Throttle — 861898  
 Quick Release Thumb Throttle — 861897  
 Lock Off Lever Throttle — 861896

NOTES

NOTES

# NOTES



**CooperTools**  
670 Industrial Drive  
Lexington, SC 29072  
Phone: (803) 359-1200  
Fax: (803) 359-2013  
[www.clecotools.com](http://www.clecotools.com)