Operation and Service Manual for HERMetic Sampler GTX Chem

Portable Closed Sampling Device



Note: Before using the instrument please read this book.



This document is subject to changes without notice. Check updates on <u>www.tanksystem.com</u> or contact us at <u>tanksystem@honeywell.com</u>

	1 Table of contents	
<u>1</u>	TABLE OF CONTENTS	2
<u>2</u>	RECOMMENDATION FOR SAFE USE	3
<u>3</u>	GENERAL INFORMATION	4
	3.1 SHIPMENT NOTE	4
	3.2 INITIAL INSPECTION	4
	3.3 DOCUMENTATION DISCREPANCIES	4
	3.4 WARRANTY 3.5 CERTIFICATION	4 5
	3.6 SPARE PARTS	5
	3.7 SERVICE AND REPAIR	5
<u>4</u>	WORLDWIDE SERVICE STATIONS NETWORK	7
<u>5</u>	DESCRIPTION	9
	5.1 GENERAL	9
	5.1 GENERAL 5.2 SAMPLING TYPES	9
	5.3 SAMPLING PRINCIPLE	10
	5.3.1 CONNECTION AND GROUNDING SYSTEM	10
	5.3.2 SAMPLING METHOD	11
	5.3.3 LIQUID TRANSFER	11
<u>6</u>	OPERATION	12
	6.1 CHECKING BEFORE USE	12
	6.2 OPERATING THE ZONE SAMPLING BOTTLE	13
	6.3 OPERATING THE BOTTOM SAMPLING BOTTLE	14
	6.4 OPERATING THE SPOT SAMPLING BOTTLE	15
	6.5 OPERATING THE RUNNING SAMPLING BOTTLE	16
<u>7</u>	CARE & MAINTENANCE	17
	7.1 SAFETY WARNING	17
	7.2 CARE	17
	7.3 SAMPLER CLEANING	18
	7.3.1 CARTER WINDER7.3.2 TAPE CLEANING	18 18
	7.5.2 TAPE CLEANING 7.4 TAPE WIPER ADJUSTMENT OR REPLACEMENT	18
	7.5 TAPE REPLACEMENT	18
	7.6 BEARINGS	18
	7.7 STORAGE OF HERMETIC DEVICES	19
	7.8 TRANSPORTATION OF HERMETIC DEVICES	19
	7.9 RECYCLING OF HERMETIC DEVICES	19
<u>8</u>	SPECIFICATIONS	20
<u>9</u>	DRAWINGS & DECLARATION OF CONFORMITY	21
	9.1 SAMPLER	21
	9.2 VALVES	21
	9.3 DECLARATION OF CONFORMITY	21

2 Recommendation for safe use

- I. This Operation and Service Manual is a guide in order to help the user to operate the instrument to safely and correctly.
- II. Nevertheless the maker disclaims all responsibility and liability for damage resulting from the use of the equipment regardless of the cause of the damage.
- III. Attention is drawn to the possible hazard due to electrostatic charges which may be present in the tank. This may happen in particular with static accumulator liquids, i.e. liquids which have low conductivity of 50 picoSiemens/metre (pS/m) or less.

IV. It is very important that the instrument is grounded to the tank before the bottle is introduced into the tank and remains grounded until after complete withdrawal from the tank.

- A. If the instrument is installed with the quick connect coupler, grounding is effected through the quick connect coupler and the mating nipple of the valve provided that these parts are kept clean and free from corrosion in order to guarantee electrical conductivity. If a grease is used for this purpose, it must be one which contains graphite.
- B. If the instrument is not connected to the mating deck valve, the instrument has to be also earthed by means of the grounding cable and clamp.
- V. It is anticipated that the user will have specific operating methods laid down to ensure safety when using this type of apparatus. In this case the user's instructions shall be strictly observed.

VI. In the absence of such instructions the following should be noted:

- A. If a metal sounding pipe is fitted beneath the deck valve or tank is inerted, then sampling, etc. is permissible at any time with no restriction.
- B. If there is no sounding tube or tank is not inerted, the following precautions shall be taken:
 - 1. If the cargo is not a static accumulator liquid, i.e. its conductivity is more than 50pS/m, then sampling is permitted provided that the instrument is properly grounded and earthed before the bottle is inserted into the tank and remains earthed until the bottle has been removed from the tank.
 - 2. If the cargo is a static accumulator liquid, i.e. its conductivity is less than 50 pS/m, then sampling is permitted provided that:
 - a) The instrument is properly grounded and earthed before the bottle is inserted into the tank and remains earthed until the bottle has been removed from the tank.
 - b) The apparatus is not introduced into a tank until at least 30 minutes have elapsed after completion of any loading operation or stopping the injection of inert gas.
- C. For further guidance refer to International Safety Guide for Oil Tankers and Terminals (ISGOTT), ISBN 10 85609 291 7, Fith Edition 2006, or consult the appropriate Legislative Authority for the installation.
- VII. This product and his use is / may be related to international, national, local or company regulations or standards. It is the customer / user responsibility to ensure that the way to use the device complies with such applicable regulations or standards.
- VIII. This device is a portable product. It must not be permanently installed on the tank and must be disconnected after use and stored in a safe and dry area.

3 General information

3.1 Shipment note

The following parts should be included in the shipment:

- 1 instrument;
- 1 Allen key 1.3 mm;
- 1 pump;
- 1 or more bottles as ordered;
- 1 Operation and Service Manual.

3.2 Initial inspection

Check the contents of the shipment for completeness and note whether any damage has occurred during transport. Carry out the "Initial test before installing the instrument" to verify the good functioning. If the contents are incomplete, or if there is damage, do not use the device. A claim should be filled with the carrier immediately, and Enraf Tanksystem SA Sales or Service organization should be notified in order to facilitate the repair or replacement of the instrument.

3.3 **Documentation discrepancies**

The design of the instrument is subject to continuous development and improvement. Consequently, the instrument may incorporate minor changes in detail from the information contained in the manual.

3.4 <u>Warranty</u>

12 months after installation but max. 18 months after delivery ex works.

The Vendor undertakes to remedy any defect resulting from faulty design materials or workmanship. The Vendor's obligation is limited to the repair or replacement of such defective parts by his own plant or one of his authorized service stations. The Purchaser shall bear the cost and risk of transportation of defective parts and repaired parts supplied in replacement of such defective parts. When returned to Enraf Tanksystem SA or any of its agreed Service Stations equipment must be contamination-free. If it is determined that the Purchasers equipment is contaminated, it will be Purchaser returned to the at the Purchasers expense. Contaminated equipment will not be repaired, replaced, or covered under any warranty until such time the said equipment that is decontaminated by the Purchaser.

The Purchaser shall notify by fax, telex or in writing of any defect immediately upon discovery, specifying the nature of the defect and/or the extend of the damage caused thereby.

Where no other conditions have been negotiated between the Vendor and the Purchaser "General Conditions 188" of United Nations shall apply.

This equipment has been certified as nonelectrical equipment for potentially explosive atmospheres for only those classes or categories of hazardous areas stated on the instrument label, bearing the mark of the applicable approval authority. No other usage is authorized.

Unauthorized repair or component replacement by non original spare parts by the Purchaser will void this guarantee and may impair the good functioning of the instrument.

In no event shall Enraf Tanksystem SA be liable for indirect, incidental or consequential loss or damage or failure of any kind connected with the use if its products or failure of its products to function or operate properly.

Enraf Tanksystem SA do not assume the indemnification for any accident or damage caused by the operation of its product and the warranty is limited to the replacement of parts or complete goods.

3.5 <u>Certification</u>

MED-D



Enraf Tanksystem SA is an ISO 9001 certified company by Intertek and MED-D by Det Norske Veritas Certification GmbH.



The equipment has been approved as nonelectrical equipment for potentially explosive atmospheres by the following authorities:

ATEX

KEMA 06ATEX 0027 II 1 G c IIB T6 (Ta -20 to +80°C)

If you need a copy of any of this certificate please contact:

Enraf Tanksystem SA Rue de l'industrie 2 1630 Bulle, SWITZERLAND

Telephone	: +41-26-91 91 500
Telefax	: +41-26-91 91 505
Web site	: www.tanksystem.com
E-mail	: <u>tanksystem@honeywell.com</u>

3.6 Spare parts

Substitution of components may impact safety. Use only original spare parts.

When ordering spares identify the spare part by TS number and description. Refer to section "Drawings".

Some spares might be repairable; in this case send part to any authorized service center or to the factory.

In case of urgency replacement units can be available while stocks last.

3.7 Service and Repair

The customer should take care of the freight and customs clearance charges. If units are sent on "freight collect» the charges will be invoiced to the customer.

When returning units or parts for repair to the factory please fill out a service request form (see next page).

Traceability information is engraved on a plate fixed to the sampler. The serial number of the unit is as follows: SX followed by a 4 digits number.

When returned to Enraf Tanksystem SA equipment must be contamination-free. If it is determined that the customers equipment is contaminated, it will be returned to the customer at the customers expense. Contaminated equipment will not be repaired until such time that the customer decontaminates the said equipment.

Service Request

Customer's address:
Telephone:
Telex:
_
Fax:
— • •
Type of unit or part:
Serial number : . SX
Short description of defective unit or part:
De very went a swetching before repair is started.
Do you want a quotation before repair is started:yes / no
Densing durations to be not unable to the following a data as
Repaired unit has to be returned to the following address:

4 Worldwide Service Stations network

The updated list can be found on our website <u>www.tanksystem.</u> com				
COUNTRY	ADDRESS	TELEPHONE/FAX/E-MAIL		
SWITZERLAND	ENRAF TANKSYSTEM SA 2, rue de l'Industrie CH-1630 BULLE	Tel : +41-26-91 91 500 Fax : +41-26-91 91 505 Tanksystem <u>@honeywell.com</u>		
CANADA	PYLON ATLANTIC A Div. Of Pylon Electronics Inc. 31 Trider Crescent., DARTMOUTH, N.S. B3B 1V6	Tel : +1-902-4683344 Fax : +1-902-4681203 halifax <u>csr@pylonelectronics.com</u>		
CHINA	HUA HAI EQUIPMENT & ENGINEERING CO LTD Factory 7, Lane 1365, East Kang Qiao Road Kang Qiao Industrial Zone, Pu Dong SHANGHAI, P.C. 201315	Tel : +86-21-68183183 Fax : +86-21-68183115 huahaish <u>@huahaiee.com</u>		
GERMANY	CHRISTIAN BINDEMANN MARINE TECHNICAL SERVICES Antonie-Möbis-Weg 4 HAMBURG 2523	Tel : +49-40-41918846 Fax : +49-40-41918847 <u>service@mkecb.com</u>		
GREECE	SPANMARIN 86, Filonos Street GR-185 36 PIRAEUS	Tel : +30-210-4294498 Fax : +30-210-4294495 spanmarin <u>@ath.forthnet.gr</u>		
JAPAN	DAIWA HANBAI CORPORATION LTD 2-10-31, Mitejima, Nishiyodogawa-ku OSAKA 555-0012	Tel : +81-6-64714701 Fax : +81-6-64729008 daiwa471 <u>@silver.ocn.ne.jp</u>		
KOREA	World Ocean CO., LTD Rm1001, Hae-deok Bldg., 1212-11 Choryang-dong Dong-Gu BUSAN	Tel : +82-51-462-2554/5 Fax : +82-51-462-0468 info <u>@worldocean.co.kr</u>		
MEXICO	URBAN DEL GOLFO SA DE CV Julian Carrillo No. 709 Nte. COL. LOS MANGOS 89440 Cd. MADERO, Tamps, MEXICO	Tel : +52-833-2170190 Fax : +52-833-2170190 urbansa <u>@prodigy.net.mx</u>		
NETHERLANDS & BELGIUM	B.V. TECHNISCH BUREAU UITTENBOGAART Brugwachter 13 NL-3034 KD ROTTERDAM	Tel : +31-10-4114614 Fax : +31-10-4141004 info <u>@tbu.nl</u>		

The	updated list can be found on our website v	www <u>.tanksystem.com</u>
COUNTRY	ADDRESS	TELEPHONE/FAX/E-MAIL
PORTUGAL	CONTROLIS, Lda. Rua Conceição Sameiro Antunes, 26-E Cova da Piedade 2805-122 – Almada	Tel : +351-21-2740606 Fax : +351-21-2740897 <u>controlis.port@g</u> mail.com
RUSSIA	NPP "GERDA" Vilisa Latsisa str. 17 Building 1 125480 MOSCOW	Tel : +7-495-7558845 Fax : +7-495-7558846 info <u>@gerda.ru</u>
SINGAPORE	HUBBELL INT'L (1976) PTE LTD 322 Thomson Road SINGAPORE 307665	Tel : +65-6-2557281 Tel : +65-6-2550464 Fax : +65-6-2532098 <u>hubbell@</u> mbox2.singnet.com.sg
SPAIN	E.N.I. Electronica y Neumatica Industrial, S.A. C/Jon Arrospide, 20 (Int.) 48014 BILBAO	Tel : +34-94-4746263 Fax : +34-94-4745868 <u>eni.tecnica@</u> eni.es
SWEDEN	INSTRUMENTKONTROLL Lars Petersson AB Varholmsgatan 1 414 74 GÖTEBORG	Tel : +46-31-240510 Tel : +46-31-240525 Fax : +46-31-243710 Info@instrumentkontroll <u>.se</u>
TURKEY	YEDI DENIZ Setustu, Izzetpasa Yok.1 TR 34427 Kabatas ISTANBUL	Tel : +90.212.251 64 10 / 3 lines Fax : +90.212.251 05 75 servicestation@ <u>yedideniz.net</u> <u>dmgistanbul@yahoo.com</u>
UNITED ARAB EMIRATES	MARITRONICS TRADING L.L.C. P.O. Box 6488 Shed # 72, Jadaf Ship Docking Yard DUBAI	Tel : +971-4-3247500 Fax :+971-4-3242500 <u>service@maritronics.com</u>
UNITED KINGDOM	ENERGY MARINE (INTERNATIONAL) LTD. 12 Clipstone Brook Industrial Estate Cherrycourt Way LEIGHTON BUZZARD, BEDS, LU7 4TX	Tel : +44-1525-851234 Fax :+44-1525-852345 info@engmar.com
U.S.A / TEXAS	HONEYWELL HERMETIC 4522 Center Street DEER PARK, TX 77536	Tel : +1-281-930 1777 Fax : +1-281-930 1222 Toll free call in the USA: 1-800-900 1778 hermetic@honeywell.com

5 Description

5.1 <u>General</u>

The **HERMetic Samplers** are designed for closed sampling of liquids or chemicals, which present a Fire-, Health- or Air pollution Hazard. The gas tight construction of these units avoids a pressure release from the tank and exposure to fumes during operation.

The equipment is designed and certified for use in potentially explosive atmospheres area.

5.2 Sampling types

Several kinds of samples can be realised with this sampler. To get different samples, 4 bottles are available: Zone bottle, Spot bottle, Running bottle and Bottom bottle.


The Zone bottle allows sampling of the upper level inside the tank.

The Spot bottle allows sampling at a determinate height.

The running bottle allows sampling all along the displacement of the bottle inside the tank.

The Bottom bottle allows sampling of the tank bottom.

As far as the kinds of sampling are concerned, please refer to ISO 3170 "Petroleum liquids – Manual sampling".

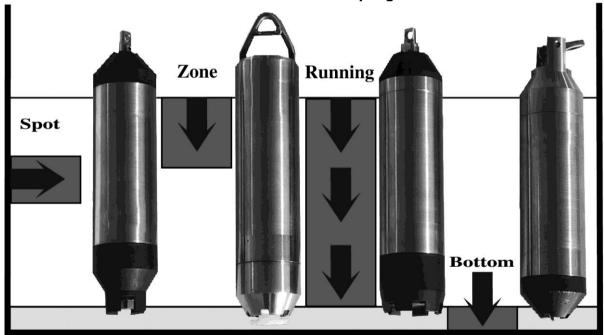

Different kinds of samplings

All these bottle are interchangeable, please refer to § 6.1. For specific application, other bottles exist. For further information, please contact.

The sampler is delivered as standard with zone sampling bottle. All other sampling bottles are available as option.


5.3 <u>Sampling principle</u>

5.3.1 Connection and grounding system

All HERMetic products are easy to connect. Indeed, all HERMetic devices are equipped with a quick coupler for connection on a HERMetic ball valve.

Place the unit on the appropriate valve and activate the locking system. Depending on the locking system, either rotate the collar and actuate the lever or pull on the sleeve.

If the instrument is connected to genuine HERMetic valve, grounding is effected through the quick connect coupler and the mating nipple of the valve. No additional grounding strap is necessary. For further information, please refer to §2 "Recommendation for safe use".

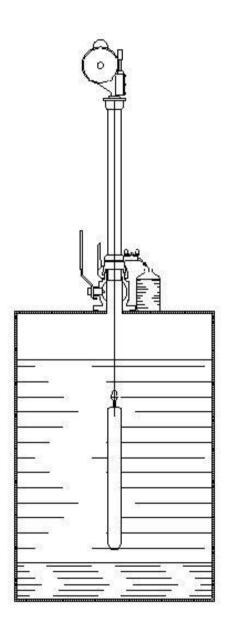

5.3.2 Sampling method

The sample is taken by a vertical move of the bottle inside the fluid.

The bottle is linked with a graduated tape. A reading window allows monitoring the bottle location.

For complete explanation of sampling procedures, please refer to §6 "Operation".

<u>Important note</u>: to avoid contamination of the sample taken by the sampler itself, check and clean the unit and the bottle prior to use. Clean the unit with an appropriate cleaner without impacting the unit or contamination risk of the next sample.

5.3.3 Liquid transfer

After sampling, the liquid can be transferred into a laboratory bottle through a transfer valve.

The transfer of the liquid from the sampling bottle to a laboratory bottle occurs by gravity.

The opening of the bottle valve is realized by lowering the sampling bottle until its sitting on the ball of the valve.

A pump can be used to accelerate and complete the transfer of the fluid.

6 Operation

6.1 Checking before use

Before using the sampler:

- Check the good state of the device.
- Check the cleanliness of the unit (sampler and bottle) to prevent any contamination of the sample.
- Inspect the bottle tape end for breaks, kinks and wear. If there is some damage, replace the tape before use.
- Check of the attachment of the hook locking device on the tape.
- Check the closure of the hook locking device according to Fig. 1. The swivel hook has to be locked in use.

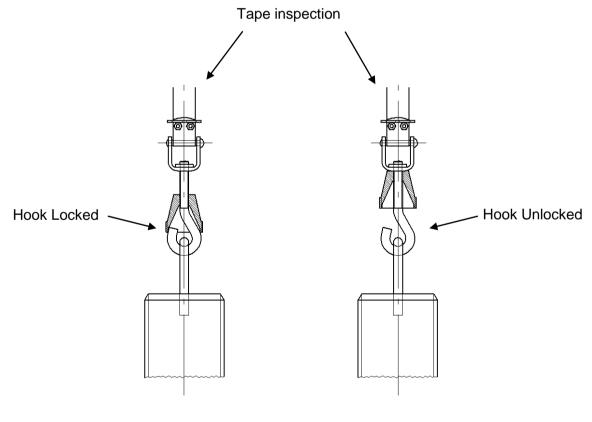


Fig. 1

Nota: Clean the instrument of any excess of liquid after use. Remove the carter winder and clean the storage tube. This cleaning must be done very properly, in particular when corrosive liquids are gauged, such as strong acids or caustic soda for instance.

Store the instrument in a dry location.

6.2 **Operating the ZONE SAMPLING BOTTLE**

ND	TS	DESCRIPTION
30293	10374	Zone bottle 0,43 I. FFKM assy

1. Install the HERMetic Sampler GTX Chem with the sampling bottle on top of the HERMetic 2" ball valve by means of the quick connect coupling.

In case the air which is inside the HERMetic Sampler housing can contaminate the sample it is recommended to purge the Sampler after it has been installed on the HERMetic 2" ball valve but **before** <u>opening it</u>.

- 1.1. Check that the HERMetic 2" ball valve is closed.
- 1.2. Open the transfer valve.
- 1.3. Install an inert gas bottle to the pump connector. The inert gas pressure shall not exceed 0.3 bar.
- 1.4. Apply the inert gas through the pump connector to purge the HERMetic Sampler.
- 1.5. After purging close the transfer valve.
- 2. Prepare the hose connection from the transfer valve to the laboratory bottle. Check that its capacity is at least 0.5 l.
- 3. Open the HERMetic 2" ball valve.
- 4. Lower the bottle at a speed of at least 0,5 m/sec. If the lowering speed is too low the liquid will not flow through the bottle as the resistance of the ball to flowing needs to be higher than the its weight to keep open the bottom of the container.
- 5. Stop the bottle at the level where the sample is to be taken.
- 6. Lift the bottle back into the HERMetic Sampler housing; turn the crank until getting a catch that keeps the tape fully tight.
- 7. Close the HERMetic 2" ball valve.
- 8. Lower the sampling bottle until sitting on the ball of the HERMetic 2" ball valve. This will open the valve of the sampling bottle.
- 9. Open the transfer valve.
- 10. Install the pump to the pump connector. If the liquid is air oxygenating install the inert gas bottle set up at 0.3 bar maximum.
- 11. With the pump (or with the inert gas) transfer the liquid from the sampling bottle to the laboratory bottle.
- 12. When the transfer is completed, close the transfer valve.
- 13. Remove the pump or the inert gas bottle.
- 14. Lift the sampling bottle and lock the crank.
- 15. Open the HERMetic 2" ball valve **no more than 30**° to drain any residual liquid back into the tank.
- 16. After draining close the HERMetic 2" ball valve.
- 17. Remove the HERMetic Sampler GTX Chem from the HERMetic 2" ball valve.

6.3 **Operating the BOTTOM SAMPLING BOTTLE**

	ND	TS	DESCRIPTION
0	20247	20132	Bottom bottle 0.40 I FFKM assy

1. Install the HERMetic Sampler GTX Chem with the sampling bottle on top of the HERMetic 2" ball valve by means of the quick connect coupling.

In case the air which is inside the HERMetic Sampler housing can contaminate the sample it is recommended to purge the Sampler after it has been installed on the HERMetic 2" ball valve but <u>before</u> opening it.

- 1.1. Check that the HERMetic 2" ball valve is closed.
- 1.2. Open the transfer valve.
- 1.3. Install an inert gas bottle to the pump connector. The inert gas pressure shall not exceed 0.3 bar.
- 1.4. Apply the inert gas through the pump connector to purge the HERMetic Sampler.
- 1.5. After purging close the transfer valve.
- 2. Prepare the hose connection from the transfer valve to the laboratory bottle. Check that its capacity is at least 0.5 l.
- 3. Open the HERMetic 2" ball valve.
- 4. Lower the bottom bottle to reach the tank bottom.
- 5. When the bottle bottom valve hits the tank bottom the bottle fills up automatically.
- 6. Lift the bottle back into the HERMetic Sampler housing; turn the crank until getting a catch that keeps the tape fully tight.
- 7. Close the HERMetic 2" ball valve.
- 8. Lower the sampling bottle until sitting on the ball of the HERMetic 2" ball valve. This will open the valve of the sampling bottle.
- 9. Open the transfer valve.
- 10. Install the pump to the pump connector. If the liquid is air oxygenating install the inert gas bottle set up at 0.3 bar maximum.
- 11. With the pump (or with the inert gas) transfer the liquid from the sampling bottle to the laboratory bottle.
- 12. When the transfer is completed, close the transfer valve.
- 13. Remove the pump or the inert gas bottle.
- 14. Lift the sampling bottle and lock the crank.
- 15. Open the HERMetic 2" ball valve **no more than 30°** to drain any residual liquid back into the tank.
- 16. After draining close the HERMetic 2" ball valve.
- 17. Remove the HERMetic Sampler GTX Chem from the HERMetic 2" ball valve.

6.4 **Operating the SPOT SAMPLING BOTTLE**

	ND	TS	DESCRIPTION
0	20253	20134	Spot bottle 0.40 I. FFKM

1. Install the HERMetic Sampler GTX Chem with the sampling bottle on top of the HERMetic 2" ball valve by means of the quick connect coupling.

In case the air which is inside the HERMetic Sampler housing can contaminate the sample it is recommended to purge the Sampler after it has been installed on the HERMetic 2" ball valve but <u>before</u> opening it.

- 1.1. Check that the HERMetic 2" ball valve is closed.
- 1.2. Open the transfer valve.
- 1.3. Install an inert gas bottle to the pump connector. The inert gas pressure shall not exceed 0.3 bar.
- 1.4. Apply the inert gas through the pump connector to purge the HERMetic Sampler.
- 1.5. After purging close the transfer valve.
- 2. Prepare the hose connection from the transfer valve to the laboratory bottle. Check that its capacity is at least 0.5 l.
- 3. Open the HERMetic 2" ball valve.
- 4. Lower the spot bottle to the level where the sample is to be taken.
- 5. Stop the bottle at this level and shake it rapidly up and down about 10 times on a 100 mm stroke. This movement has a pumping effect as the bottom ball of the container opens and closes quickly.
- 6. Lift the bottle back into the HERMetic Sampler housing; turn the crank until getting a catch that keeps the tape fully tight.
- 7. Close the HERMetic 2" ball valve.
- 8. Lower the sampling bottle until sitting on the ball of the HERMetic 2" ball valve. This will open the valve of the sampling bottle.
- 9. Open the transfer valve.
- 10. Install the pump to the pump connector. If the liquid is air oxygenating install the inert gas bottle set up at 0.3 bar maximum.
- 11. With the pump (or with the inert gas) transfer the liquid from the sampling bottle to the laboratory bottle.
- 12. When the transfer is completed, close the transfer valve.
- 13. Remove the pump or the inert gas bottle.
- 14. Lift the sampling bottle and lock the crank.
- 15. Open the HERMetic 2" ball valve **no more than 30**° to drain any residual liquid back into the tank.
- 16. After draining close the HERMetic 2" ball valve.
- 17. Remove the HERMetic Sampler GTX Chem from the HERMetic 2" ball valve.

6.5 **Operating the RUNNING SAMPLING BOTTLE**

	ND	TS	DESCRIPTION
0	20216	20117	Running bottle 0.40 I. FFKM

- 1. The calibration plug on top of the running bottle has to be adjusted according to the liquid to be sampled. The plug is properly set up when the transferred quantity of liquid falls between 70 and 85% of the capacity of the sampling bottle, i.e. between 0.3 and 0.35 I (API MPMS Chapter 8.1, § 8.3.3.3).
- 2. Install the HERMetic Sampler GTX Chem with the sampling bottle on top of the HERMetic 2" ball valve by means of the quick connect coupling.

In case the air which is inside the HERMetic Sampler housing can contaminate the sample it is recommended to purge the Sampler with inert gas after installation on the HERMetic 2" ball valve but **before** opening the valve.

- 2.1. Check that the HERMetic 2" ball valve is closed.
- 2.2. Open the transfer valve.
- 2.3. Install an inert gas bottle to the pump connector. The inert gas pressure shall not exceed 0.3 bar.
- 2.4. Apply the inert gas through the pump connector to purge the HERMetic Sampler.
- 2.5. After purging close the transfer valve.
- 3. Prepare the hose connection from the transfer valve to the laboratory bottle. Check that its capacity is at least 0.5 l. Draw two marks on the lab bottle at 0.3 and 0.35l.
- 4. Open the HERMetic 2" ball valve.
- 5. Lower the running bottle regularly to the appropriate depth but do not hit the tank bottom in order to keep the bottom plug closed all the time.
- 6. When the appropriate depth has been reached lift the running bottle back into the HERMetic Sampler GTX at the same regular speed. Turn the crank until getting a catch that keeps the tape fully tight.
- 7. Close the HERMetic 2" ball valve.
- 8. Lower the sampling bottle until sitting on the ball of the HERMetic 2" ball valve. This will open the valve of the sampling bottle.
- 9. Open the transfer valve.
- 10. Install the pump to the pump connector. If the liquid is air oxygenating install the inert gas bottle set up at 0.3 bar maximum.
- 11. With the pump (or with the inert gas) transfer the liquid from the sampling bottle to the laboratory bottle.
- 12. When the transfer is completed, check that the transferred liquid falls between the two marks 0.3 and 0.35 I in order to comply with API MPMS Chapter 8.1 requirements. Close the transfer valve.
- 13. Remove the pump or the inert gas bottle.
- 14. Lift the sampling bottle and lock the crank.
- 15. Open the HERMetic 2" ball valve **no more than 30**° to drain any residual liquid back into the tank.
- 16. After draining close the HERMetic 2" ball valve.
- 17. Remove the HERMetic Sampler GTX Chem from the HERMetic 2" ball valve.

7 Care & Maintenance

7.1 <u>Safety warning</u>

As this equipment has been certified as non-electrical equipment for potentially explosive atmospheres. Specific precautions have to be taken regarding maintenance of the device. The user can exchange parts and modules if following points are observed:

- 1. Never carry out any repair or trouble shooting in a hazardous area.
- 2. Substitution of components may impact safety. Use only original spare parts.
- 3. Work shall be done only by maintenance personnel who has experience with equipment certified for use in potentially explosive atmosphere.

The design of the equipment is modular, i.e. in case of damage, check which modules or spare parts have to be replaced. Order new parts according to enclosed drawings and specific item number TS -----. The instrument consists of the following modules:

- Mechanical parts
- Tape assembly
- Tape cleaner

7.2 <u>Care</u>

Clean the instrument of any excess of liquid after use. Remove the carter winder and clean the storage tube. <u>This cleaning must be done very properly, in particular when corrosive liquids are sampled, such as strong acids or caustic soda for instance</u>.

Store the instrument in a dry location.

Check periodically whether the general state of the device is still OK.

Check periodically whether all the sealings are still OK. Check periodically the gas-tightness of the unit up to 0.3 bars with an appropriate leak detector.

Check the tape wiper for wear. If necessary tighten it with the hexagonal key 1.3 mm.

Clean periodically the sampling bottle. Check the valves of sampling bottles for liquid leakage.

Check periodically the tape for kinks.

Check periodically the bearings state. Bearings have limited lifespan.

Check periodically (at least every 6 months) the continuity of grounding by measuring the electrical resistance between the hook lock (or the sampling bottle) and the quick connect coupler. Resistance should not exceed 100 Ω .

7.3 Sampler cleaning

It is required to fit the cleanliness level with the sample goals. Where appropriate, dismantle the sampler and clean the parts with an appropriate cleaner to prevent any contamination of the sample by the sampler itself.

7.3.1 Carter winder

To clean HERMetic Sampler, carter winder can be easily removed as well and sampling bottle detached from tape.

7.3.2 Tape cleaning

If tape requires cleaning it has to be unwound, preferably on another reel.

7.4 <u>Tape wiper adjustment or replacement</u>

Check the wear of the wiper. If necessary, adjust it or replace it.

- Unscrew the 2 wing screws to remove the carter winder.
- Dismantle the wiper holder by unscrewing the 2 screws.
- Remove the wiper of its box.
- Use the Allen key 1.3 mm to set the 2 wipers screws properly or exchange it.
- Put back the wiper holder and tighten the 2 screws.
- Reassemble the carter winder on the storage tube and tighten the 2 wing screws.

7.5 <u>Tape replacement</u>

- Remove the carter winder from the sampler (2 wing screws M5x20);
- Remove the tape wiper;
- Unwind totally the old tape;
- Remove the cover for winder (5 screws M4x10 side <u>opposite</u> to crank);
- Slacken the tape from the core:
- Remove it and unscrew the screw M4x30 tightening to the core;
- Put the new tape;
- Fasten the tape to the core with screw M4x30;
- Wind the new tape;
- Put back the cover for winder and tighten the 5 screws M4x10;
- Put back and adjust the tape wiper;
- Put back the carter winder and tighten the 2 wing screws M5x20;
- Check the tape winder for gas tightness (0.3 bar, 4.4 psi) before using again.

7.6 <u>Bearings</u>

Bearings are involved in the electrical safety of this device. In case of exchange, use only original spare parts.

7.7 <u>Storage of HERMetic devices</u>

For a proper storage of HERMetic products (UTImeter, Sampler, Thermometer and related spare-parts...), we recommend:

- Clean the devices after use,
- Remove batteries for prolonged storage,
- Store batteries in a dry and cold location,
- Store the goods in a safe, dry and dust free location with an ambient temperature between +5°C to +45°C.

7.8 <u>Transportation of HERMetic devices</u>

For transportation of the device, always strecht out the tape to avoid any move of the the bottle inside its storage tube.

7.9 <u>Recycling of HERMetic devices</u>

Equipment does not contain any dangerous materials inside which can harm the environment and people health during normal use or disposal. However the utilization and recycling of the equipment after the end of its life must be implemented by an authorized organization in accordance to local legislation.

8 Specifications

General Specifications

Tape length Tape graduation Tape resolution Tape accuracy	up to 35 m/115 ft Metric/English 1 mm / 1/16" ±6.3mm/35 m (±1/4"/115 ft approx.)
Maximum tank pressure	Atmospheric pressure ±0.3 bar (4.4 psi)
Liquid density	up to 8kg/dm ³
Ambient temperature range Maximum liquid temperature	-20°C to 80 °C (-4°F to 176°F) 80°C (176°F)
Mechanical coupling	Q2 (2")
Weight	5.6 kg approx.
Dimensions	801 x 118 mm approx.
Meets ISO 3170 "Petroleum liquids – Manual sam	pling"
Hazardous environments approvals	
ATEX	KEMA 06ATEX 0027 II 1 G c IIB T6 (Ta -20 to +80°C)

Tape cleaning device

Available bottles

Zone, bottom, spot, running sampling bottles

Adjustable tape cleaner

Maintenance

modular design / easy exchange of parts

Specifications subject to change without notice.

9 Drawings & Declaration of Conformity

These documents are enclosed in following pages.

9.1 Sampler

	ND	TS	DESCRIPTION
	20324	10086	Sampler GTX Chem
0	20336	98113	Sampler GTX Chem 35 m
	20281	10316	Carter winder FFKM assy
0	20330	98112A	Carter winder FFKM assy 35 m
	30610	20148	Storage tube assy
	30545	10314	Crank assy FFKM
	30237	10535	Wiper PTFE
	40520	10368	Tape assy w/o winder 30m
0	40803	10389	Tape assy w/o winder 35m
	41021	20611	Kit pump connector FFKM
	30293	10374	Zone bottle 0,43 I. FFKM assy
0	20247	20132	Bottom bottle 0.40 I FFKM assy
0	20253	20134	Spot bottle 0.40 I. FFKM
0	20216	20117	Running bottle 0.40 I. FKKM


O = Option, according to specific order.


9.2 Valves

<u>Important</u>: Valves are supplied separately from Samplers. There are not included in Sampler scope of supply.

ND	TS	DESCRIPTION
20291	10083	Valve C2-SS-W, 2" flange DUJ, weather cap
20287	10082	Valve C2-SS-SEC, 2" flange DUJ, security cover
20288	10081	Valve C2-SS-BL, 2" flange DUJ, blind cover
30391	10076	Valve C2-SS-W, 2" female, weather cap
30374	10078	Valve C2-SS-SEC, 2" female, security cover
30596	10085	Valve C2-SS-BL G2" Female, blind cover

9.3 Declaration of Conformity

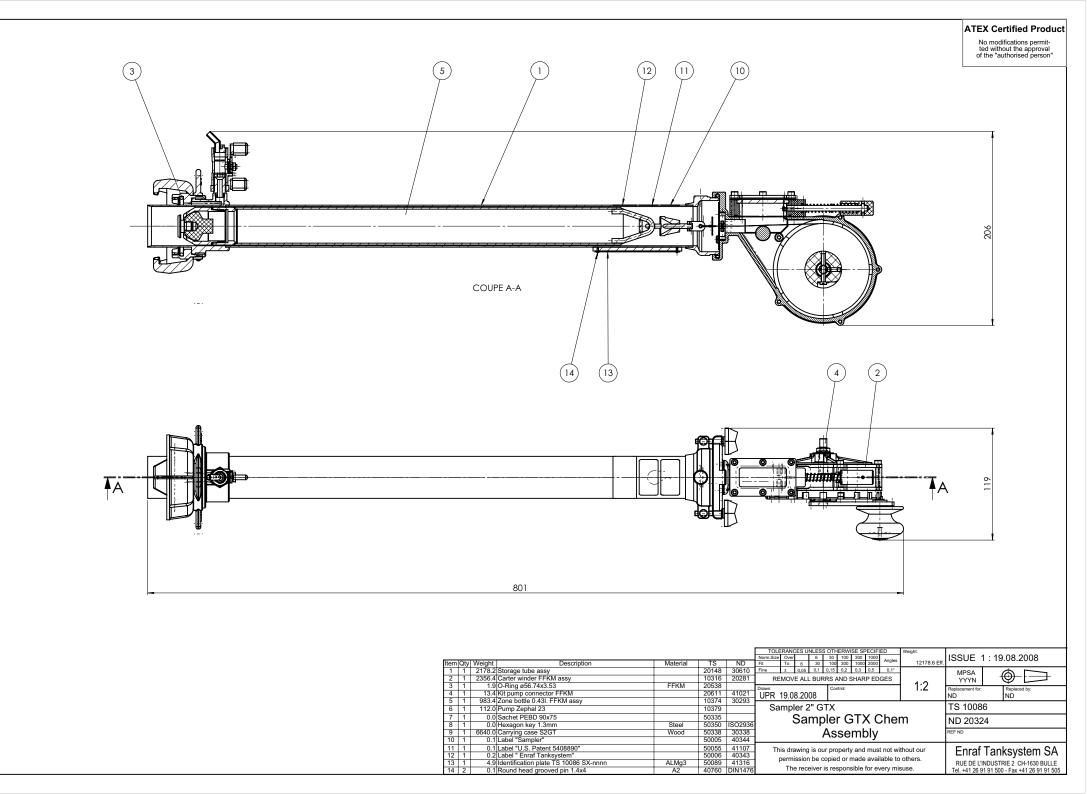

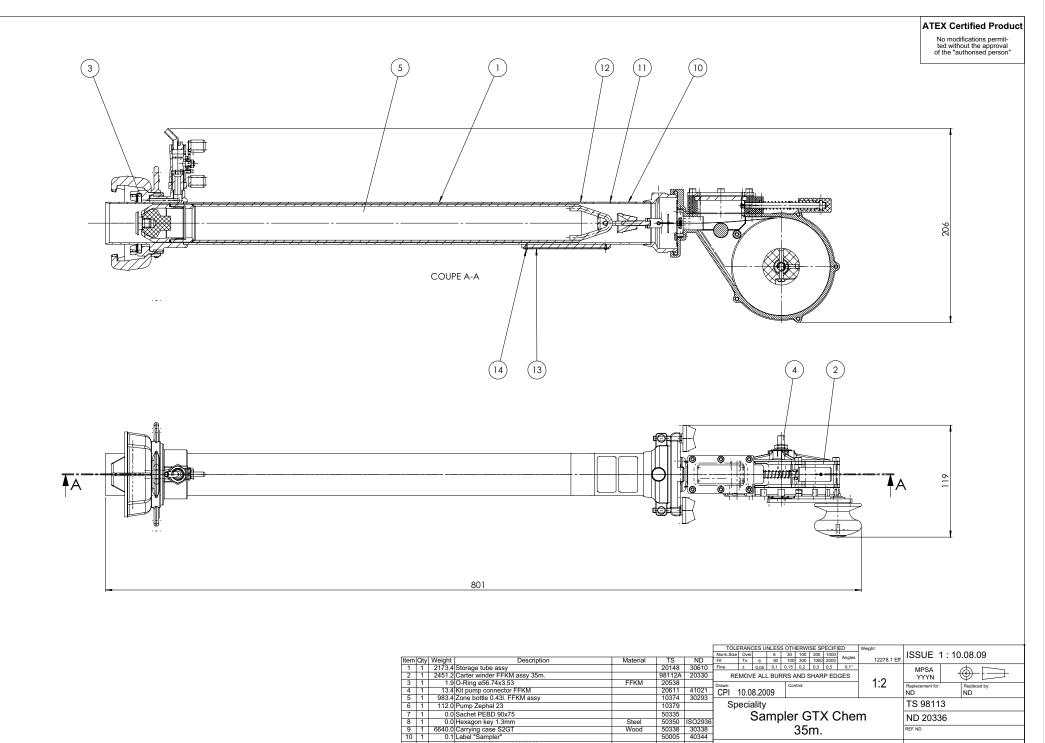

11 1 12 1

13 1 14 2 0.1 Label "U.S. Patent 5408890 0.2 Label " Enraf Tanksystem"

0.1 Round head grooved pin 1.4x4

14.4 Identification plate TS 10086 SX-nnnn

 00000
 40344

 50055
 41107

 50066
 40343

 50069
 41316


 90760
 DIN1476


 The receiver is responsible for every misuse.


1.4301


A2


Enraf Tanksystem SA RUE DE L'INDUSTRIE 2 CH-1630 BULLE Tel. +41 26 91 91 500 - Fax +41 26 91 91 505

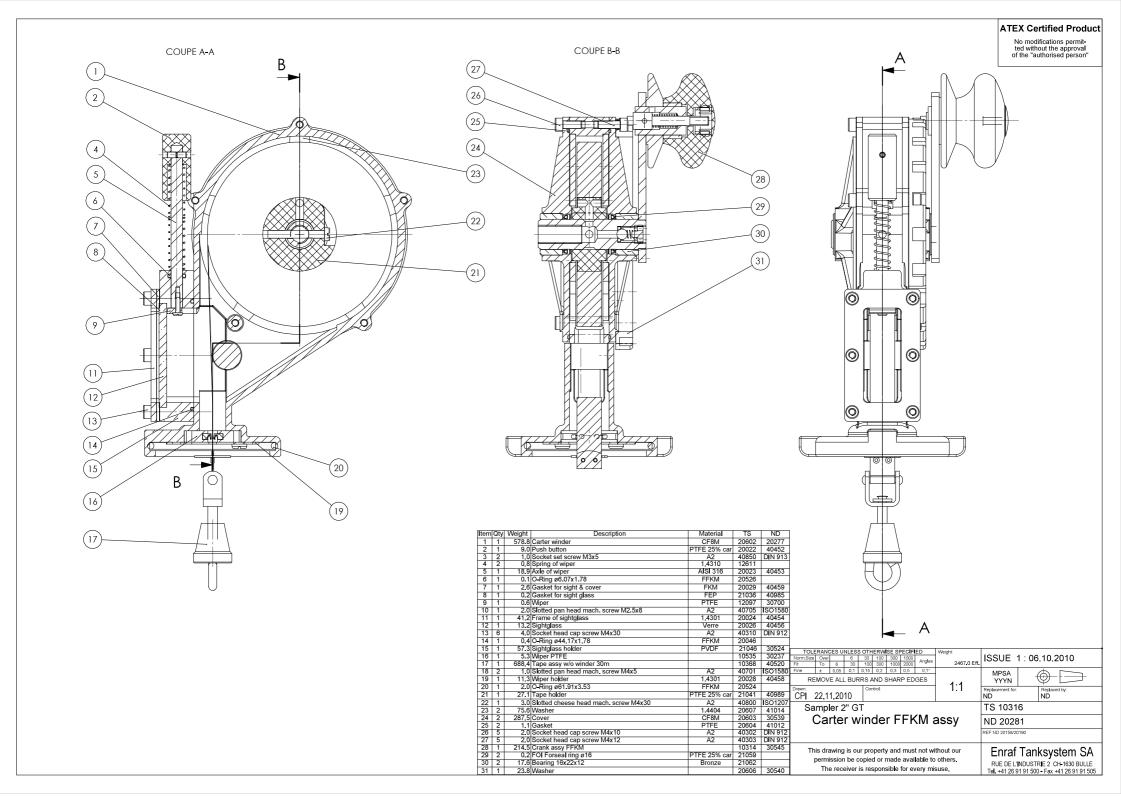


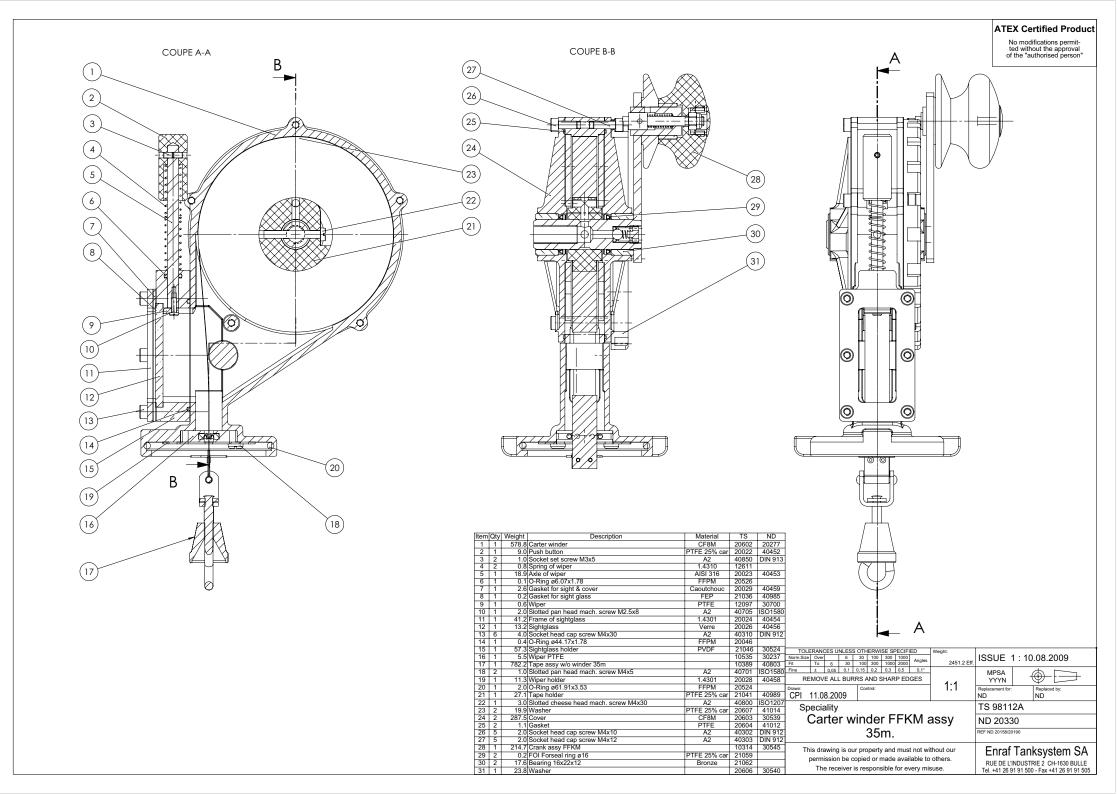


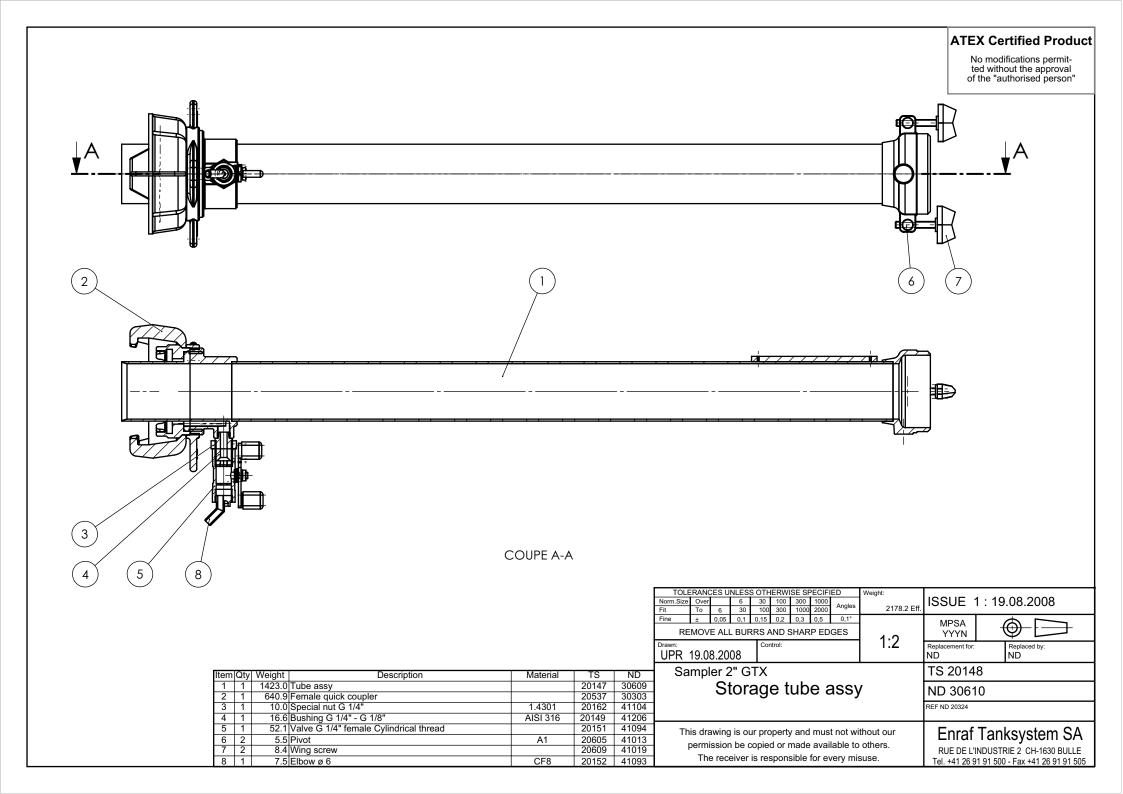

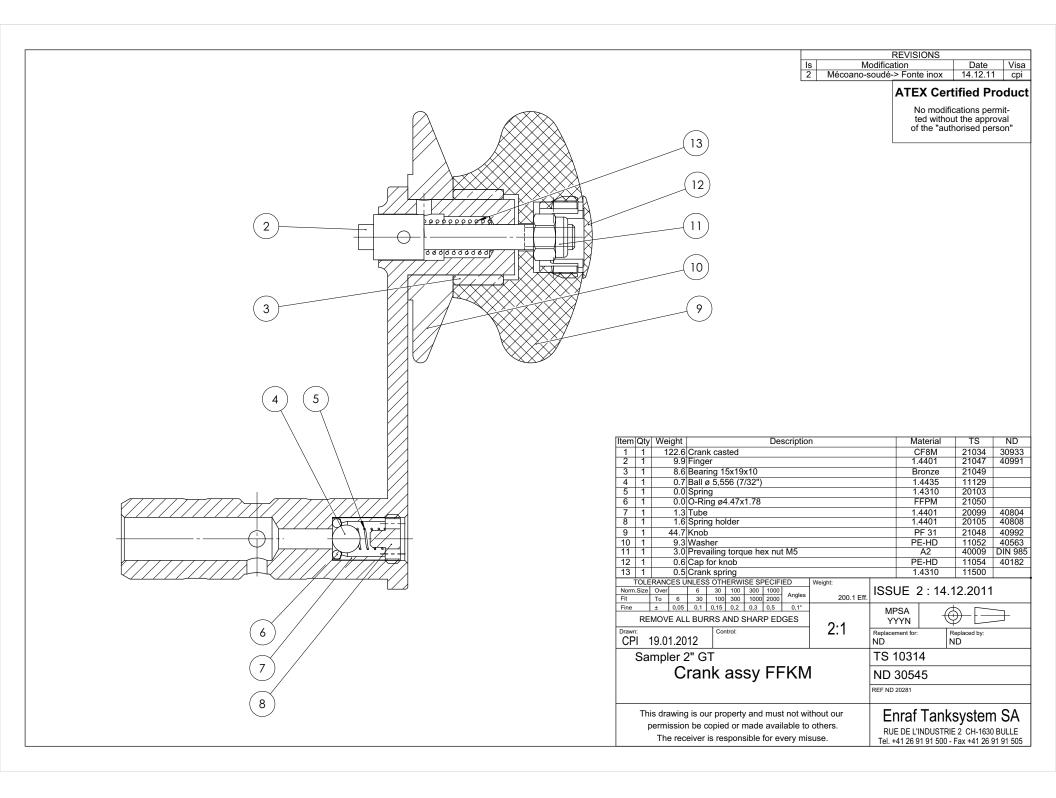

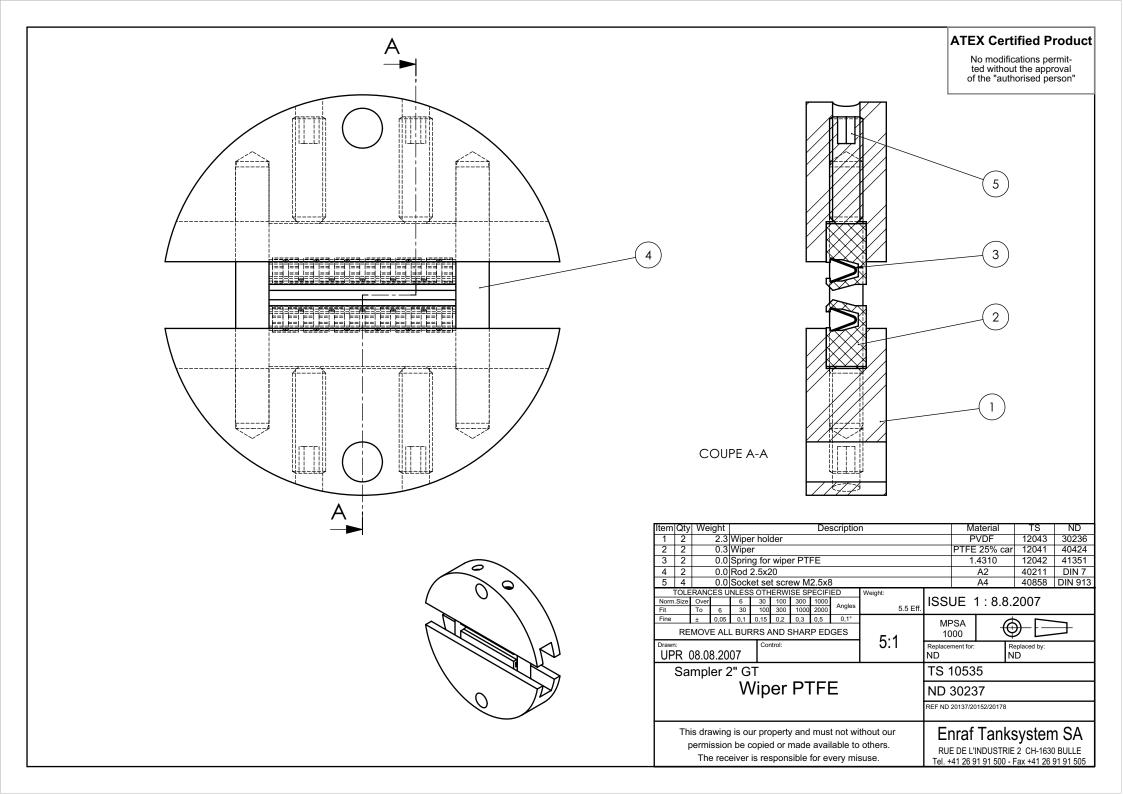


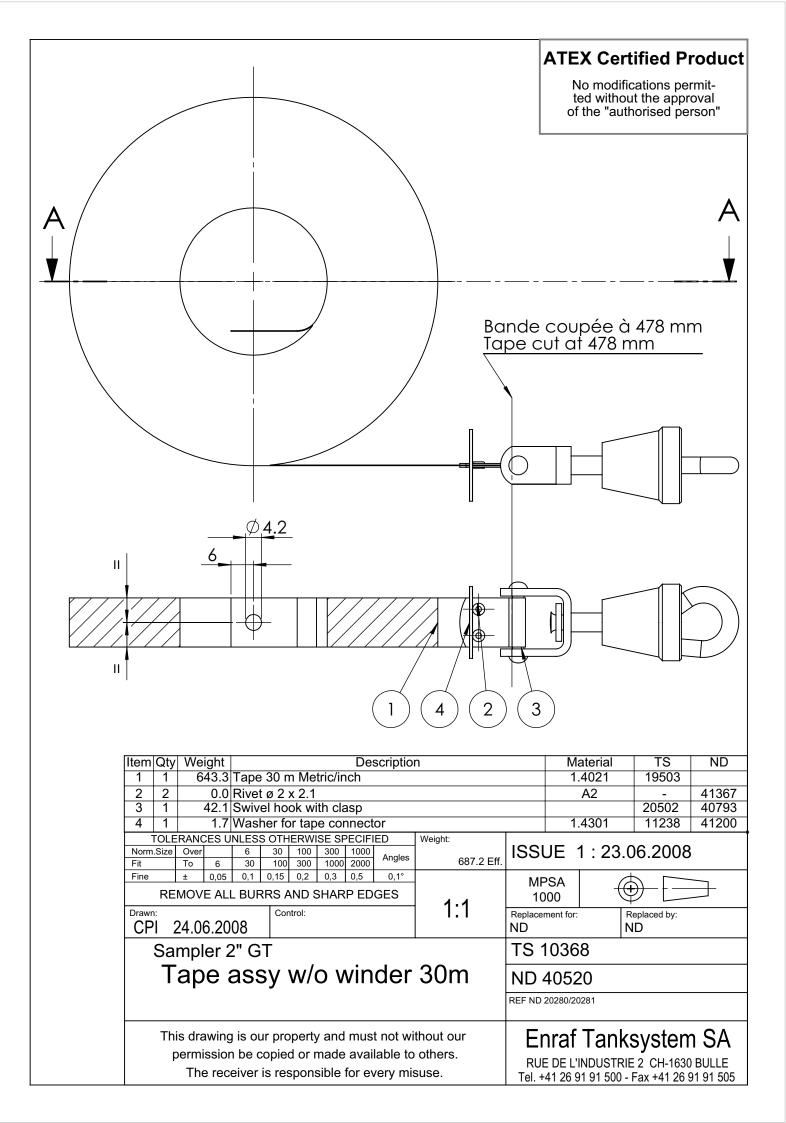

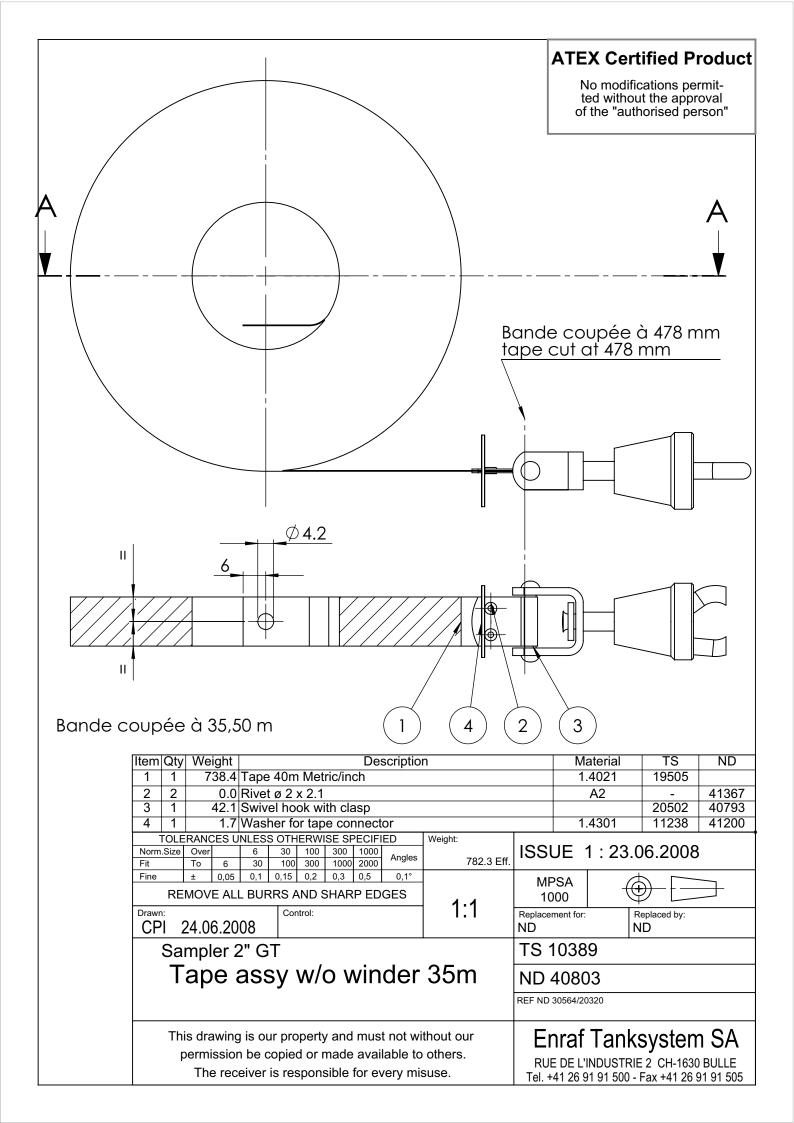


ATEX Certified Product


No modifications permitted without the approval of the "authorised person"

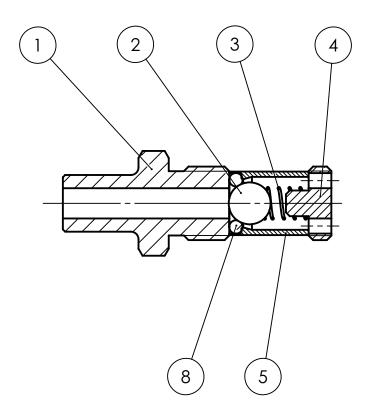

Item	Qty	Weigh	nt	Description							M	aterial	TS	ND
1	1	9	.7 Che	Check valve seat							1.4401		20100	40805
2	1			Ball ø 5,556 (7/32")							1.4435		11129	
3	1		.0 Spri								1.4310		20103	
4	1		.6 Spri	<u> </u>	lder						1.	4401	20105	40808
5	1		.3 Tub								1.4401		20099	40804
8	1	0	.0 0-R	ing ø⁄	4.47x	1.78					F	FPM	21050	
7	1	6	.0 Sac	het Pl	EBD	90x7	5						50335	
		RANCES				<u> </u>		IED	Weight:			4 40		
Norm Fit	.Size	Over To 6	6 30 100 300 1000 6 30 100 300 1000 Angles						13.4 Eff.	ISSI	JE	1:12.	8.2008	
Fine ± 0,05 0,1 0,15 0,2 0,3 0,5 0,1°							ME							
	REMOVE ALL BURRS AND SHARP EDGES							YYYN U						
Drawn: UPR 12.08.2008							Replace ND	ment for:		Replaced by: ND				
	Sampler 2" GT TS 20611													
Kit pump connector FFKM									ND 4	ND 41021				
										REF ND	20158			
	This drawing is our property and must not without our permission be copied or made available to others. The receiver is responsible for every misuse.								RUE	E DE L'	NDUSTRI	System E 2 CH-1630 Fax +41 26 S	BULLE	

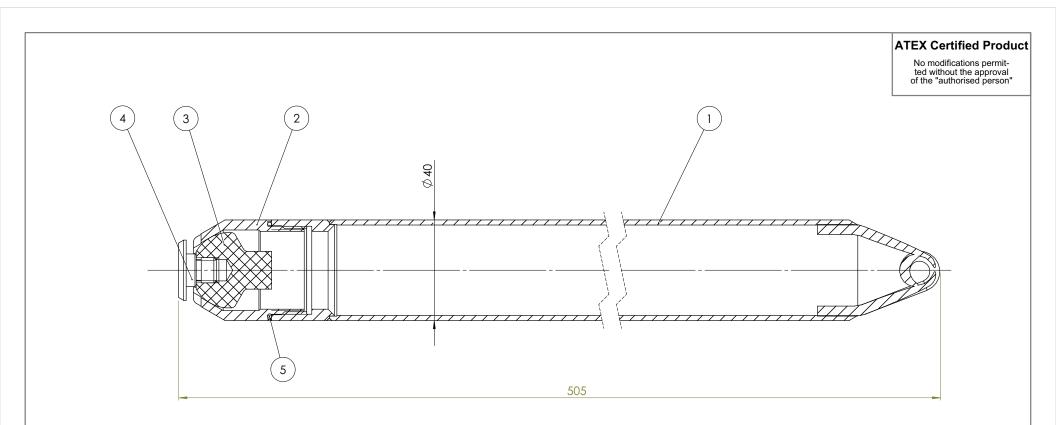



Item	Qty	Weight					De	scriptio	n		М	aterial	TS	ND
1	1	872.3	Bottle	Bottle 0,43 I.							1.4404		20048	30294
2	1	113.1	Seat								1	.4435	20049	40592
3	1	24.7	Bottor	n val	ve						P	TFE	20050	41062
4	1	4.2	Valve	scre	w						P	VDF	20051	40593
5	1	0.3	O-Rin	g ø34	4.65	x1.7	8				F	FKM	20045	
-		RANCES L						ED	Weight:					
Norm. Fit	Size	Over To 6	6	30 100	100 300	300	2000	Angles	1014.6 Eff.	ISSU	SSUE 2:13.8.2008			
Fine	-	10 6 ± 0.05			0.2	0.3	0.5	0.1°	1014.0 LII.			-		
1 110	REMOVE ALL BURRS AND SHARP EDGES								MPSA					
			L BUR					GES	1.1	YYYN 9				
	oonao.						1.1	Replacer	ment for:		eplaced by:			
CPI 30.05.2011 ND								N	D					
	Sampler 2" GT									TS 10374				
						21			1					
Z	20	ne p	ottie	эu).4	31.		-KI\	/I assy	ND 30293				
										REF ND 20158				
	This drawing is our property and must not without our Enraf Tanksystem SA													
	Er									Enraf Tanksystem SA				
	permission be copied or made available to others.									RUE DE L'INDUSTRIE 2 CH-1630 BULLE				
		The rec	eiver is	s res	pons	sible	for ev	/ery mi	suse.				ax +41 26 9	

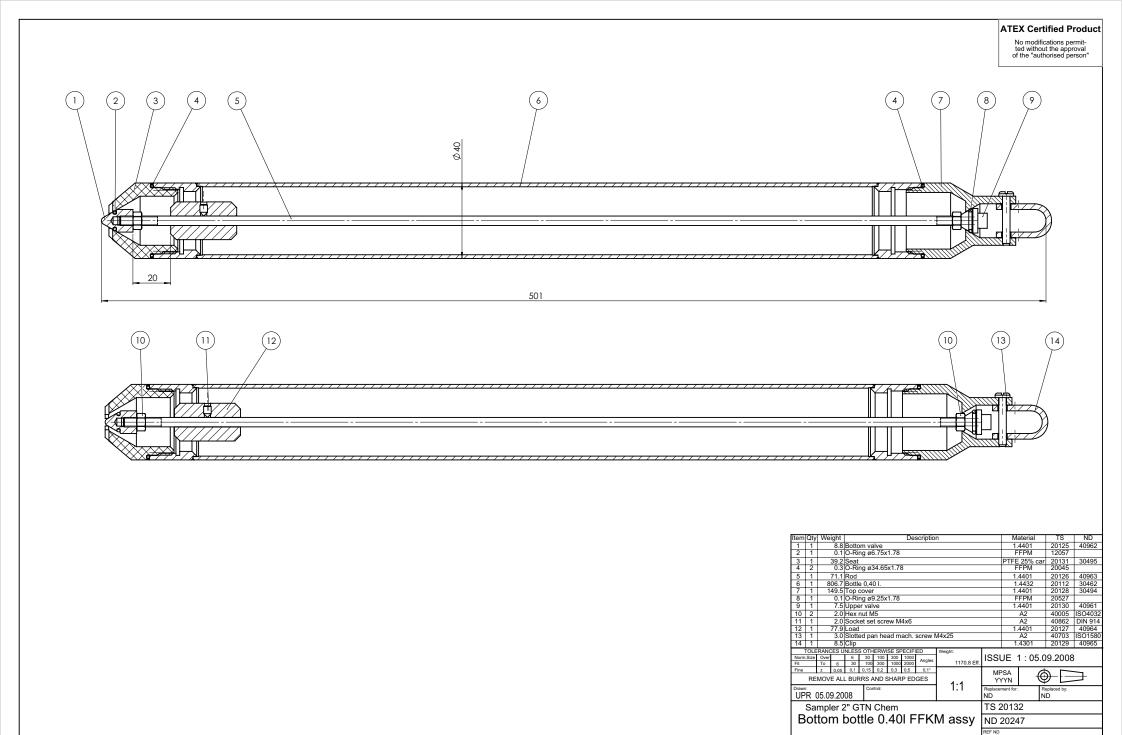



Enraf Tanksystem SA RUE DE L'INDUSTRIE 2 CH-1630 BULLE Tel. +41 26 91 91 500 - Fax +41 26 91 91 505


This drawing is our property and must not without our permission be copied or made available to others. The receiver is responsible for every misuse.

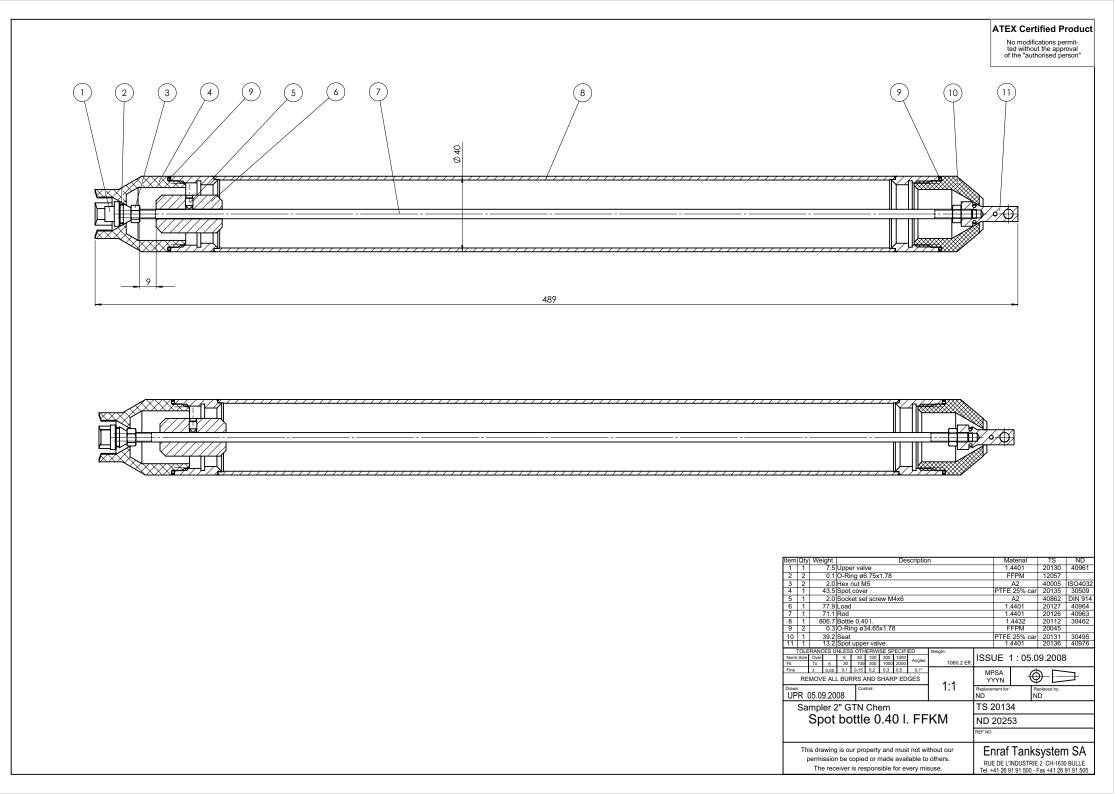


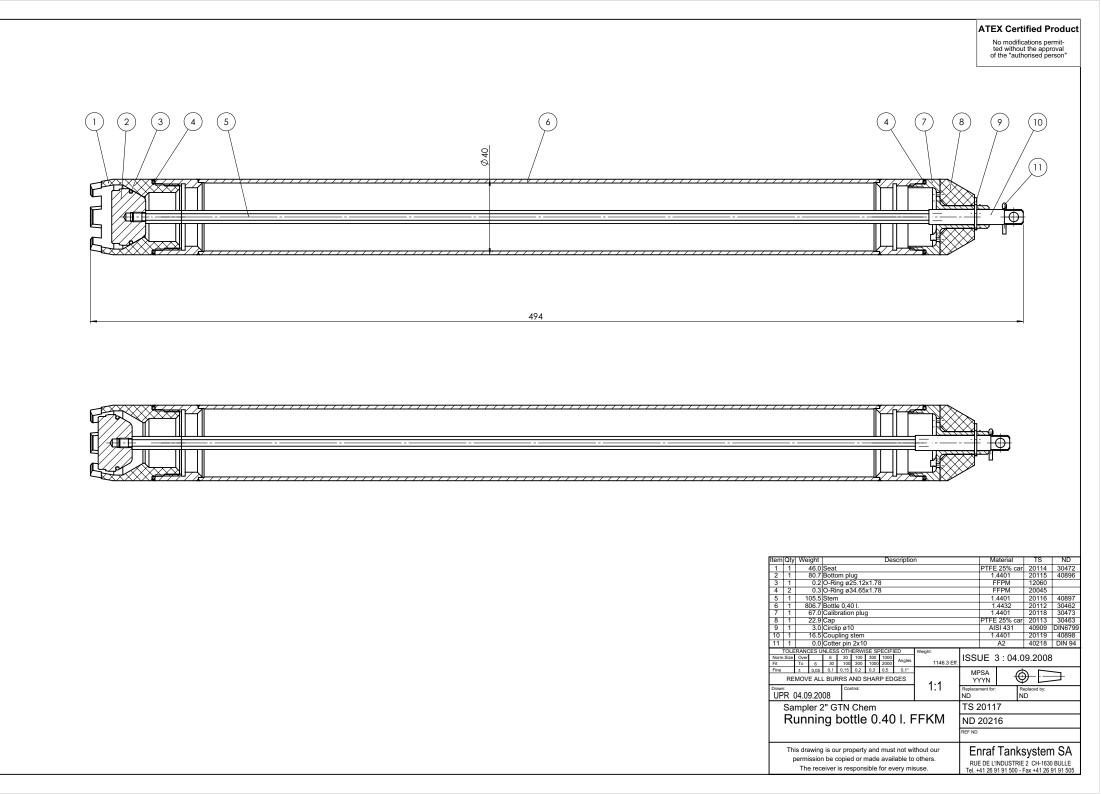


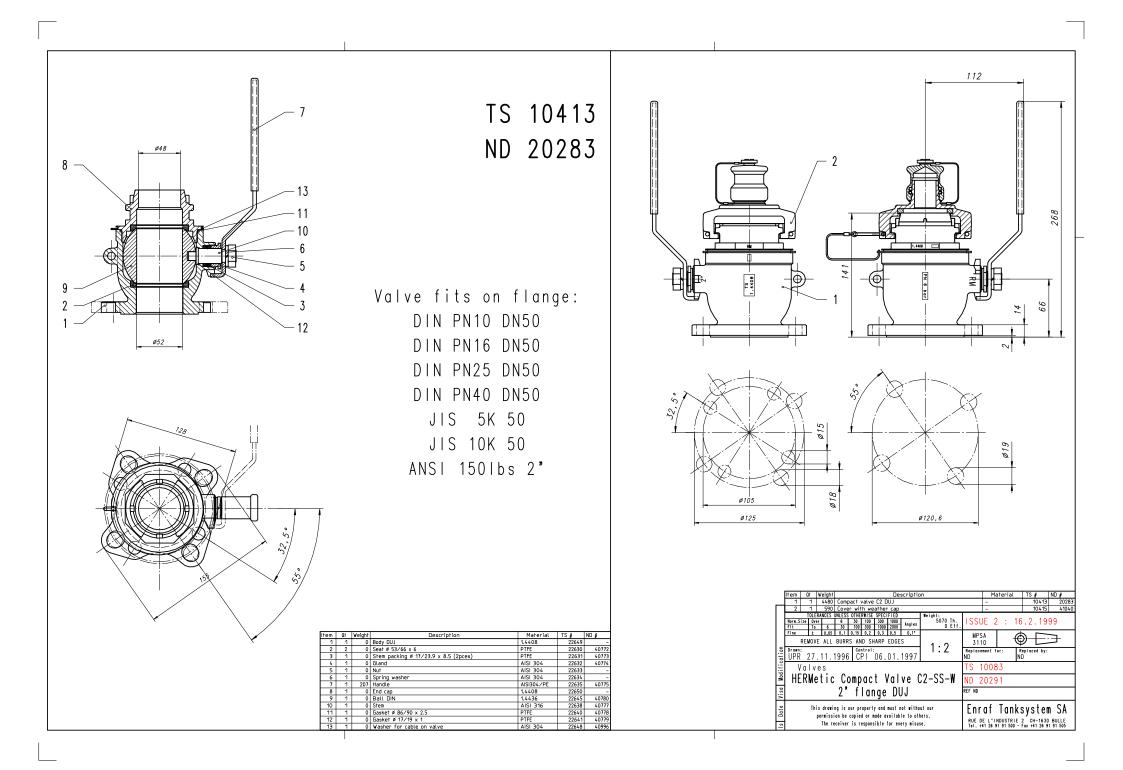


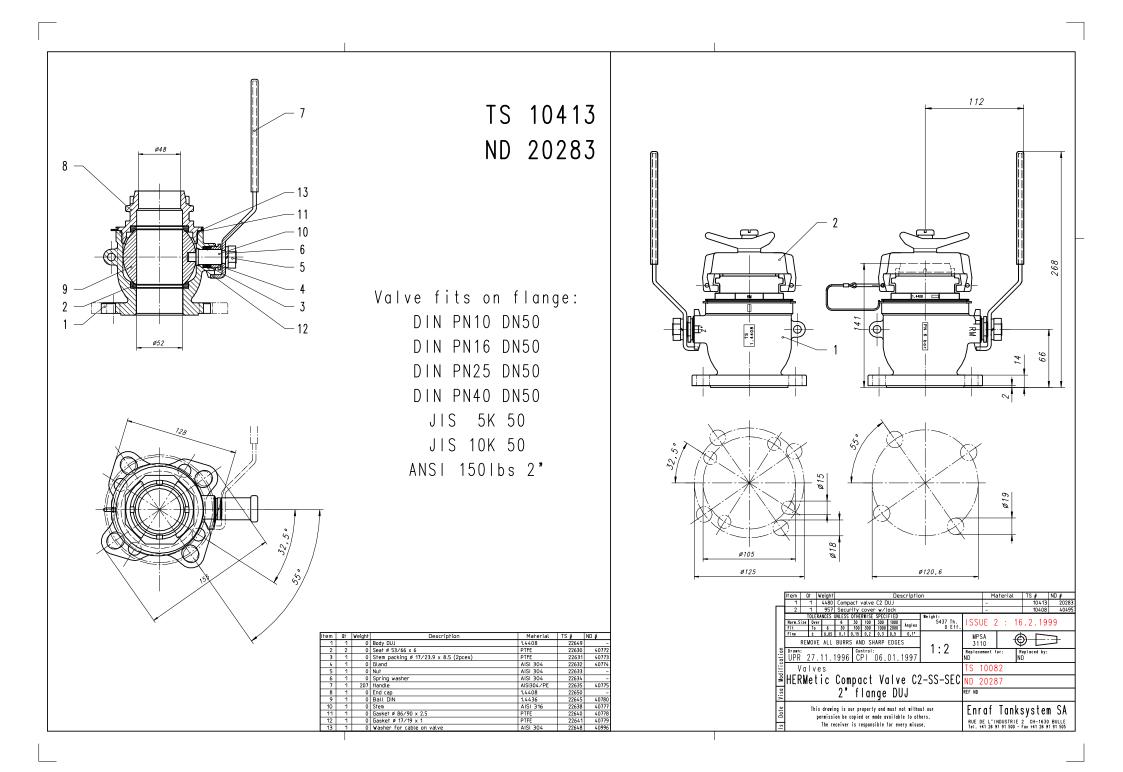

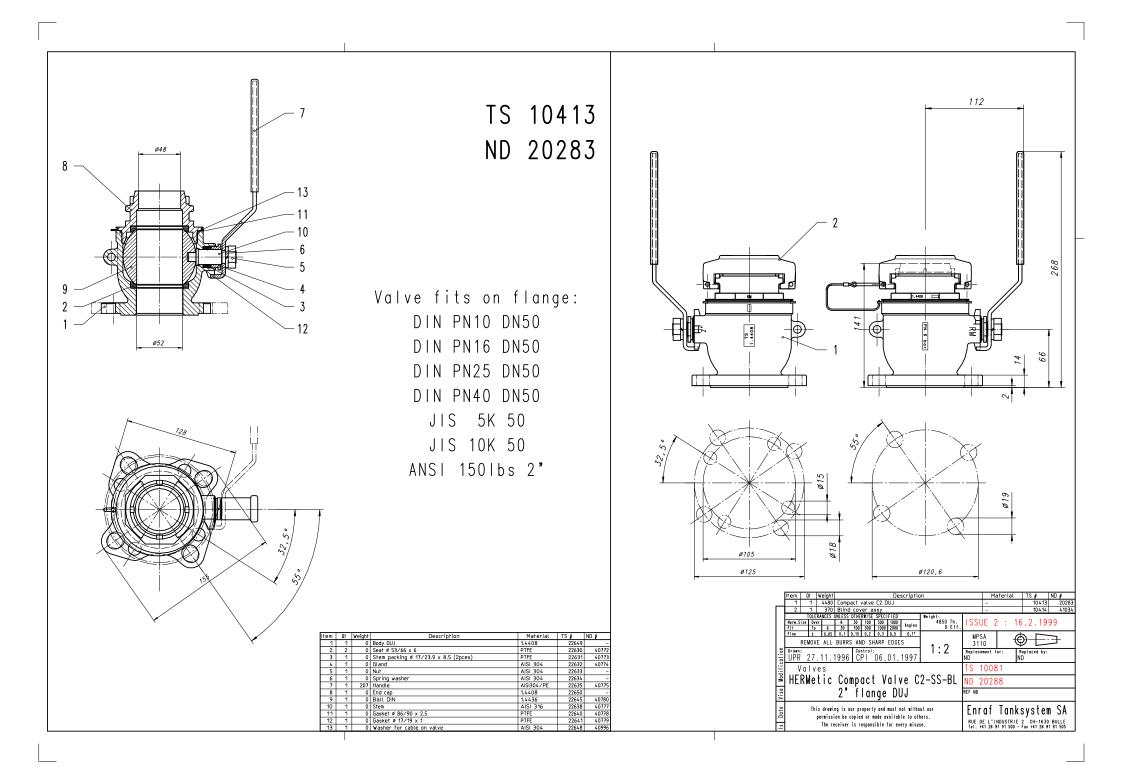

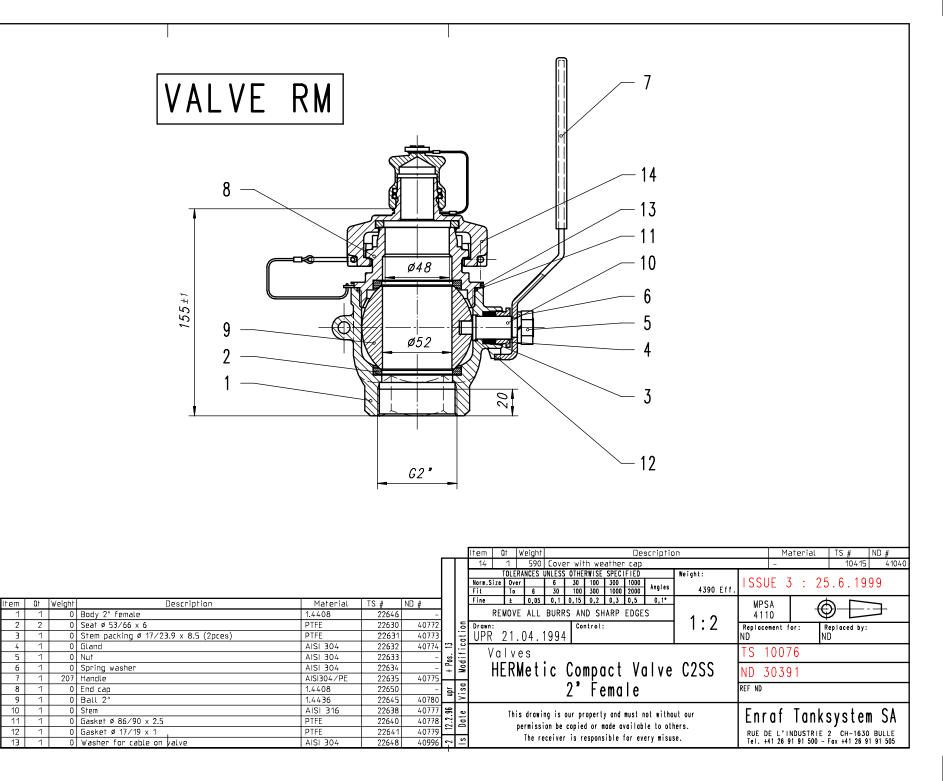

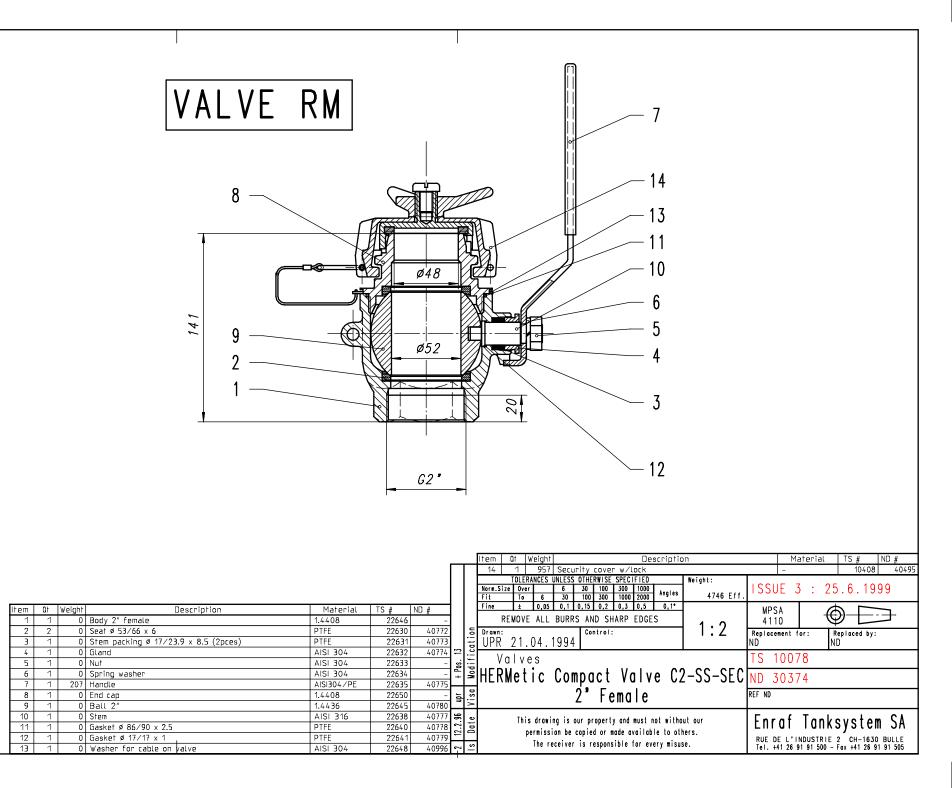

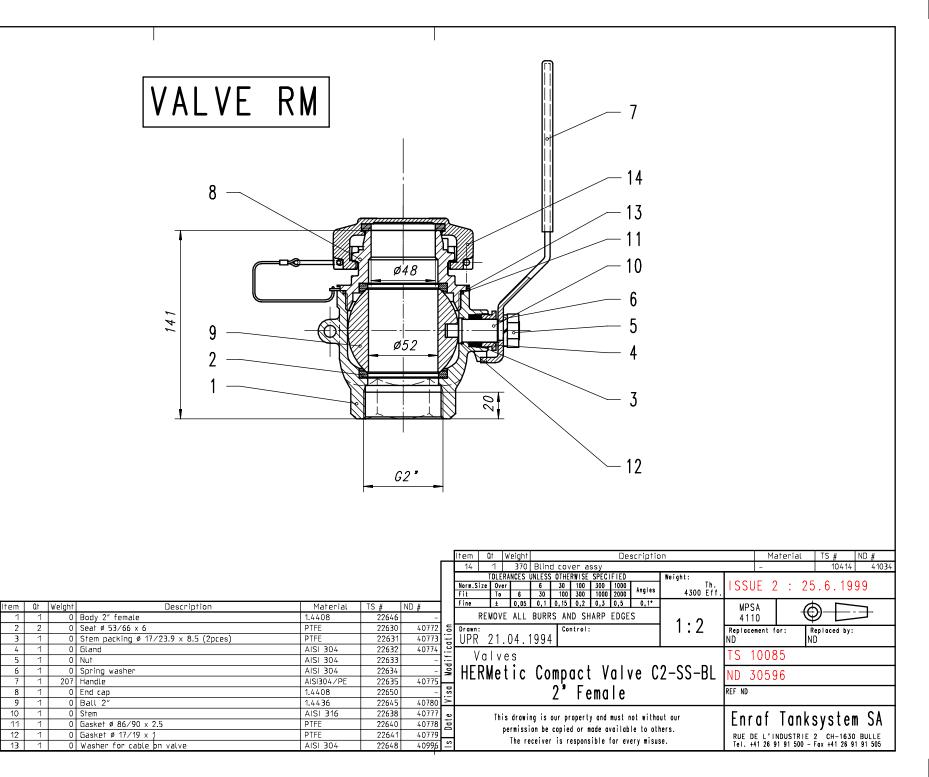

Honeywell Enraf Tanksystem SA	Declaration of Conformity	Issue: 3	TSB_7021	_E.doc
Author: QD	CE	September 3,	2008	1 of 1

Apparatus Identification HERMetic Sampler Type GT / GT Chem / GTX Chem / GTN Chem / A4 / GT4

Apparatus Classification Sampling Equipment

Statement of Conformity

Based on sample product test results using appropriate standards (industrial environment), and in accordance with the following EC Directives, we, Enraf Tanksystem SA, hereby declare under our sole responsibility that the above HERMetic Samplers are in conformity with:

EC ATEX Directive 94/9/EC, Equipment and protective systems intended for use in potentially explosive atmospheres (ATEX). EC Type Examination Certificate: KEMA 06ATEX0027 II 1 G c IIB T6

Sample Product Testing for ATEX

Tested by	Kerna Quality B.V., Utrechtseweg 310, P.O. Box 5185, 6812 AR Arnhem, The Netherlands
Standards Used	EN13463-1:2001, Non-electrical equipment for potentially explosive atmopheres – Part 1: Basic method and requirements EN13463-5:2003, Non-electrical equipment for potentially explosive atmopheres – Part 5: Protection by constructional safety
Notified Body	Kema Quality B.V., Utrechtseweg 310, P.O. Box 5185, 6812 AR Arnhem, The Netherlands
Notified Body Number	0344
Report ID	KEMA 2090419
Quality Assurance notification	Baseefa ATEX 1536
Notified Body	Baseefa, Rockhead Business Park, Staden Lane, Buxton, Derbyshire, SK17 9RZ. United Kingdom
Notified Body Number	1180

Manufacturer

ENRAF TANKSYSTEM SA, Rue de l'Industrie 2, 1630 BULLE, Switzerland

Philippe Despagne General Manager

C	reated / modified	Approved	Released	Remarks				
1 2006/06/01		2006/06/08	2006/06/12	Creation				
2	2007/04/02	2007/04/02	2007/04/02	Update of the ATEX references				
3	3 2008/08/28 2008/09/03 2008/09/03 Update of the company logo - Honeywell							
	The prints of this document are not controlled under the quality management system, unless printed on "ORIGINAL" paper							