

750,253M REV. NC 06/2008 Cat. No Model H5775 ADAGIO-IG

ADAGIO-CPD

H5776

Description

Garden Gate, Vintage Iron Facade Garden Gate, Vintage Copper Facade

INSTALLATION INSTRUCTIONS FOR FACADE KITS FOR USE WITH ADAGIO™ DIRECT-VENT GAS FIREPLACES

DAVE LENNOX

SIGNATURE

COLLECTION

KIT CONTENTS:


1 ea. Facade Assembly

1 ea. Left Gate

1 ea. Right Gate

TOOLS / SUPPLIES NEEDED:

None

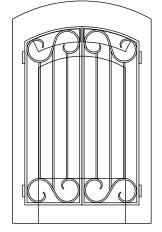

Iron Garden Gate Facade Copper Garden Gate Facade

Installer: Leave This Instruction Sheet With The Appliance. Consumer: Retain This Instruction Sheet For Future Reference.


GENERAL INFORMATION

These decorative facade kits are offered in two attractive styles, Iron Garden Gate and Copper Garden Gate. If you encounter any problems or need clarification of these instructions, contact you local distributor or dealer.

Note: The framing of the appliance will need to be elevated by 3/4" minimum above the floor to allow for the proper fit of the facade (i.e. 3/4" board as platform). See Installation Instructions Manual.

INSTALL ONLY WHEN FIREPLACE IS OFF AND COOL.


ALL WARNINGS, PRECAUTIONS AND INSTRUCTIONS PROVIDED IN THE INSTALLATION INSTRUCTIONS MANUAL AND THE CARE AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS. THOROUGHLY READ AND FOLLOW THE INSTRUCTIONS PROVIDED WITH THE APPLIANCE BEFORE PROCEEDING TO THE FOLLOWING INSTRUCTIONS.

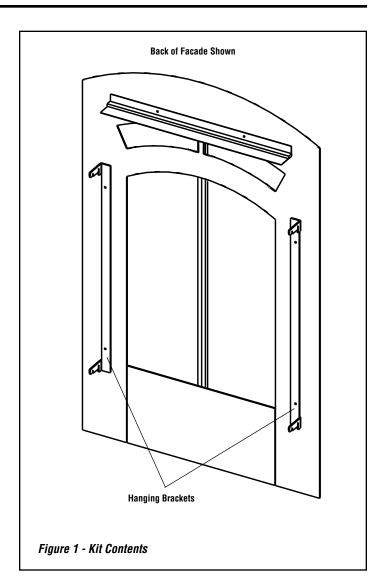

INSTALLATION INSTRUCTIONS

1. Install the appliance, firebox liner and logs per the *Installation Instructions Manual* provided with appliance and the *Installation Instruction Sheet* provided with the firebox liner kit (sold separately).

2. Install the facade onto the fireplace face per instructions in *Figure 2*.

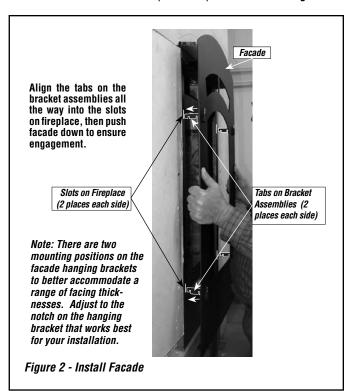

3. Install the left and right side gates as shown in *Figures 3 and 4*. The hinges on the gates hang on the hinge pins on the facade.

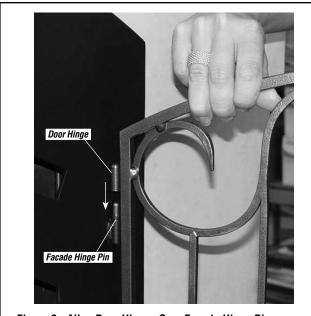


Figure 3 - Align Door Hinges Over Facade Hinge Pins



Figure 4 - Lower Door Over Pins Until Fully Seated

See Figure 5 for instructions on accessing the control compartment.
 The gated doors must be open to access the control compartment door. To open; pull doors open until magnet latches release.


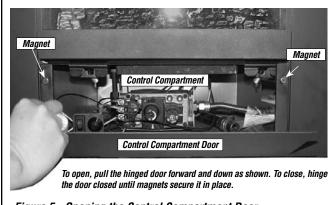


Figure 5 - Opening the Control Compartment Door

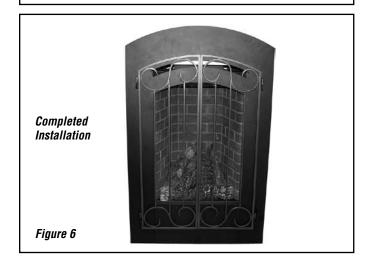

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and the discontinuance of colors, styles and products. Consult your local distributor for fireplace / insert code information.