


# stanton

## STR8-150 DIGITAL TURNTABLE

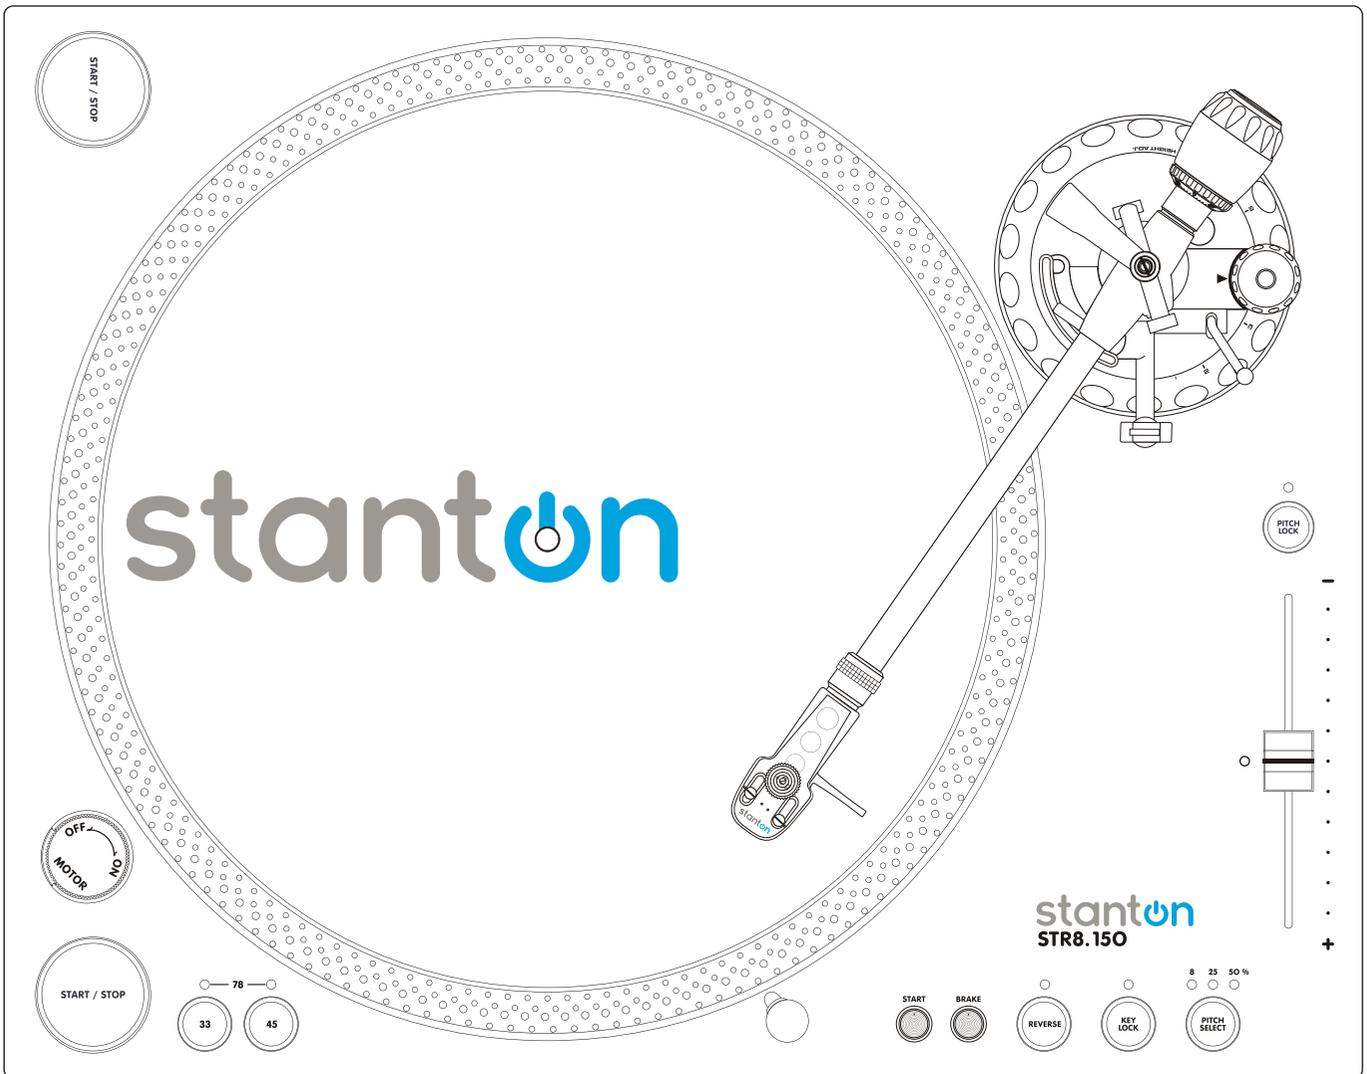

## OWNER'S MANUAL

## IMPORTANT SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before this product is operated.
  2. Retain Instructions – The safety and operating instructions should be retained for future reference.
  3. Heed Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
  4. Follow Instructions – All operating and use instructions should be followed.
  5. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
  6. Carts and Stands – The appliance should be used only with a cart or stand that is recommended by the manufacturer.  
An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 
7. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
  8. Heat – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
  9. **Power Sources – This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer the operating instructions.**
  10. Grounding or Polarization – This product may be equipped with a polarized alternation-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
  11. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the cord in correspondence of plugs, convenience receptacles, and the point where they exit from the appliance.
  12. Cleaning – The appliance should be cleaned only as recommended by the manufacturer.  
Clean by wiping with a cloth slightly damp with water. Avoid getting water inside the appliance.
  13. For AC line powered units – Before returning repaired unit to user, use an ohm-meter to measure from both AC plug blades to all exposed metallic parts. The resistance should be more than 100,000 ohms.
  14. Non-use Periods – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
  15. Object and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
  16. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
    - A. The power-supply cord or the plug has been damaged; or
    - B. Objects have fallen, or liquid has been spilled into the appliance; or
    - C. The appliance has been exposed to rain; or
    - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
    - E. The appliance has been dropped, or the enclosure damaged.
  17. Servicing – The user should not attempt any service to the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.
  18. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is the manufacturer's instructions have been adhered to.
  19. Attachments – do not use attachments not recommended by the product manufacturer as they may cause hazards.
  20. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

## IMPORTANT SAFETY INSTRUCTIONS

21. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
22. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
25. Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, Table-cloths, curtains, etc.
26. Do not place naked flame sources, such as lighted candles the apparatus.
27. Use the apparatus only in moderate climates (not in tropical climates)



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** To reduce the risk of electric shock, do not remove any cover. No user-serviceable parts inside. Refer servicing to qualified service personnel only.



The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying this appliance.

### CAUTION

To prevent electric shock, do not use this polarized plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.


This device complies with Part 15 of the FCC Rules Operation is Subject to the following two conditions (1) This device may not Cause harmful interference, and (2) this device must accept any Interference received. Including interference that may cause Undesired operation.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Unauthorized modification of this unit may cause it to no longer comply with FCC regulations and void your authority to use this device.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## PART NAMES & FUNCTIONS

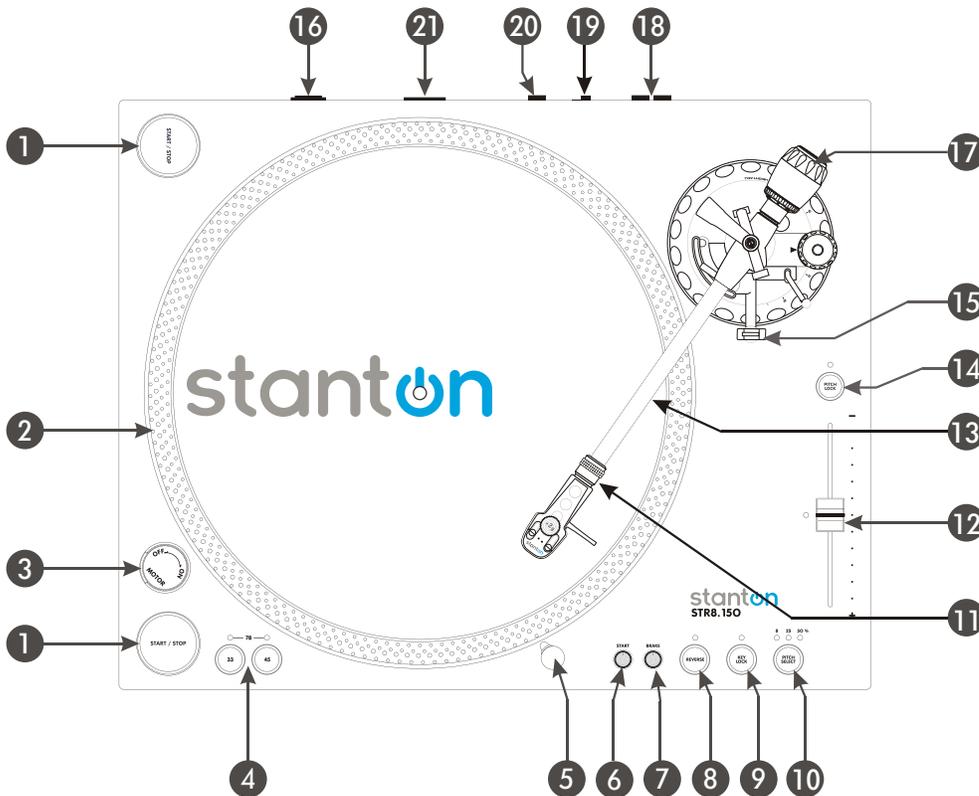

### 1) START/STOP

Press this button to start or stop the platter.

### 2) STROBE DOTS

The dots around the edge of the platter are used in conjunction with the light located inside the motor ON/OFF switch. While the platter is in rotation, the dots help to indicate the speed of rotation. The speed is lower than the displayed speed (33,45,78) when the dots are flowing to the right. It is higher than the displayed speed (33,45,78) when the dots are flowing to the left. When the strobe is stopped, the platter is rotating at the displayed speed.

### 3) MOTOR ON/OFF SWITCH

As opposed to fully analog turntables, this is not the power switch. This switch only turns on or off the motor. Rotate clockwise to turn on the motor. The platter will not start spinning until the start/stop button has been pressed. Rotate counter-clockwise during playback (off position) for a slow winding down effect.

### 4) PLATTER REVOLUTION SPEEDS (rpm)

33 rpm - Press 33

45 rpm - Press 45

78 rpm - Press 33 and 45 buttons simultaneously. To return to 33 or 45-rpm play mode, just press the desired button.

### 5) TARGET LIGHT

Insert target light to the deck and it will light up.

### 6) START

The Start time is adjustable from 0.2~6 sec.

### 7) BRAKE

The Brake time is adjustable from 0.2~6 sec.

### 8) REVERSE

This button is used to reverse the direction of the platter rotation.

### 9) KEY LOCK

Press to enable key lock. When key lock is on, the pitch slider will only affect the speed of the platter. The key (tone) will remain at 0%

Note: Key lock processing is only available when the LINE output is used.

### 10) PITCH SELECT

Press the button to switch between +/-8%, +/-25%, or +/-50% pitch range.

### 11) HEADSHELL LOCKING NUT

Attach the headshell by inserting into the front end of the tone arm. Turn the locking nut clockwise with the head shell firmly held horizontally.

### 12) PITCH SLIDER

The pitch slider is used to speed up or slow down the turntable platter.

### 13) TONE ARM

This is a fully manual tone arm. To start

playback, gently place the stylus on the record using the headshell finger support. Do not drop the stylus onto the record as it may cause damage to the diamond tip and to the record.

### 14) PITCH ON/OFF

The ON setting will allow use of the pitch adjust. When set of OFF, the pitch control will be locked at 0%.

### 15) TONE ARM BASE

The tone arm base includes the height adjustment and tone arm rest. See itone arm and cartridge settingsi for proper adjustments.

### 16) POWER SWITCH

This switch turns the power on or off, including the motor and audio signal.

### 17) COUNTERWEIGHT

Use this to balance the tone arm and to adjust the stylus pressure. See itone arm and cartridge settingsi for proper adjustments.

### 18) LINE OUT L & R

This is the standard analog output (RCA jacks) which can be connected either to a phono or line input on any DJ mixer, depending on the setting of the phono / line selector.

Note: Key lock processing is only available when the LINE output is used.

### 19) PHONO/LINE SWITCH

Note: Key lock and digital output processing is only available when the LINE output is used.

### 20) DIGITAL OUT

Use this output to connect your STR8-150 to any SPDIF in equipped digital device such as a CD-R or Computer.

### 21) POWER CORD CONNECTOR

Used to connect the included power cord.

## SPECIFICATIONS

### TURNTABLE SECTION

---

Starting Torque:	More than 4.5kgf.cm
Motor:	16pole, 3phase, brushless DC motor
Platter:	332mm dia. Aluminum diecast
Pitch:	+/-8%, +/-25%, +/-50%
Brake:	Electronic brake

### STONE ARM SECTION

---

Tone arm type	Static balanced straight shaped tone arm with cardanis suspension
Effective Arm Length	194mm
Tracking Force Adjust Range	0-3g
Applicable Cartridge Weight	13-18g
Frequency Response	20 - 20 KHz
Channel Separation	More than 15 dB
Channel Balance	Within 2.5dB at 1 KHz
Wow & Flutter:	Less than 0.1% WRMS (JIS WTD) with 33 1/3rpm
S/N ratio:	More than 60dB (DIN-B)
Needle Pressure range	2-5g

### GENERAL SPECIFICATIONS

---

Dimensions:	450(W) x 353 (D) x 146 (H)mm
Weight:	16.4Kg
Power supply:	AC 100V, 50Hz (For Japan) AC 110V, 60Hz (For Taiwan) AC 120V, 60Hz (For U.S.A., Canada) AC 127V, 60Hz (For Mexico) AC 220V, 50Hz (For United Arab Emirates, Chile, Aegentina) AC 220V, 60Hz (For Philippines) AC 230V, 50Hz (For Europe, U.K., New Zealand, South Africa, Singapore, Israel) AC 240V, 50Hz (For Australia)
Power consumption:	14W

# **Stanton Magnetics, Inc. – Warranty Provision – Returns for Repairs or Replacement**

## **WARRANTY**

Through Stanton's authorized dealers around the World, Stanton, or one of Stanton's authorized distributors outside the U.S., will, without charge, repair or replace, at the sole discretion of the entity responsible for making the repair or providing the replacement, any Stanton merchandise proved defective in material or workmanship for a period of one (1) year (three (3) years for C.D. players) following the date of original purchase. Exceptions to this warranty are as noted below:

The warranty for mechanical parts which are subject to wear and tear are limited to the earlier to occur of thirty (30) days following the date of original purchase or the following number of cycles: Faders - 15,000; Rotary potentiometers - 10,000; and Switches - 10,000.

Stanton will warrant all replacement parts and repairs for ninety (90) days from the date of original shipment. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

## **RETURNS**

Authorized Stanton dealers are only authorized to sell and distribute merchandise within a specific country. All goods requiring warranty repair or replacement must be returned (freight prepaid if not hand-delivered) to the authorized Stanton dealer from whom the merchandise was purchased and in the same country where the merchandise was purchased. For purposes of purchases made via the Internet, the merchandise must be returned to the authorized Stanton dealer in the country where the authorized Stanton dealer which sold the merchandise to purchaser is located and not the authorized Stanton dealer in the country where the purchaser is located or the country in which the merchandise was received. Any returns to a non-authorized dealer or to an authorized Stanton dealer not in the same country as the merchandise was intended to be sold or as set forth above will void this warranty.

To initiate a warranty repair, you must contact the authorized Stanton dealer from whom you purchased the merchandise, and follow such authorized Stanton dealer's return policy.

Stanton assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the merchandise. Stanton's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party, or product liability, and relating to the merchandise shall not exceed the price received by Stanton from your purchase of such merchandise. In no event will Stanton be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Stanton or otherwise. To the extent permitted by law and except as otherwise provided above, Stanton disclaims any express or implied warranties of merchantability or fitness for a particular purpose.

The above warranty provides you with specific legal rights. You may also have additional rights, which are subject to variation from state to state and country to country.

If there is a dispute regarding the warranty of merchandise that does not fall under the warranty conditions stated above, please include a written explanation with the merchandise when returned pursuant to the terms and conditions set forth herein.

Please register your product online at [www.stantondj.com](http://www.stantondj.com) or mail your completed warranty card to:

Stanton Magnetics, Inc, 3000 SW 42 St. Hollywood, Florida 33312.

## Ground lift Operation

Due to the variety of power sources available to the DJ, Stanton has included a ground lift switch to be used on the ST- 150/STR8-150 turntables. This will allow the DJ to have the capability of changing the grounding scheme of the phono cartridge to avoid ground hum that may occur when using the turntable. The ST-150/STR8-150 Turntable has been designed to operate with third pin safety ground, and should always be used when available. NEVER REMOVE THIRD PIN GROUND FROM THE POWER CORD PROVIDED, IF NECESSARY, USE THE APPROPRIATE ADAPTER FOR PLUGGING INTO OUTLETS WHICH DO NOT PROVIDE THIRD PIN GROUND TERMINALS.

For best operation of the ground lift, the following rules should be applied

When third pin safety ground is used, set the ground lift switch to the lift position. This position will isolate the cartridge ground from connection to earth ground.

When third pin safety ground is unavailable, set the ground lift switch to the connected position. This will place the cartridge ground in connection with the chassis ground, but since third pin grounding is not used, the cartridge ground will not be in connection with earth.

## STANTON WARRANTY REGISTRATION CARD

If you have internet access, please register your product at [www.stantondj.com](http://www.stantondj.com). Otherwise, return this card completely filled out in order to validate your warranty.

### PERSONAL INFO

\_\_\_\_\_

**Name**

\_\_\_\_\_

**Address**

\_\_\_\_\_

**City**                      **State**    **Zip**

\_\_\_\_\_

**Country**

\_\_\_\_\_

**Telephone**

### PRODUCT INFO

\_\_\_\_\_

**Model Number**

\_\_\_\_\_

**Serial Number**

\_\_\_\_\_

**Date of Purchase**

\_\_\_\_\_

**Where did you buy this product?**

-----

cut along dotted line

---

---

---

**PLACE  
STAMP  
HERE**

**Stanton Magnetics, Inc.  
3000 SW 42nd Street  
Hollywood, FL 33312  
U.S.A.**